


Vogue

wren

WALL UNIT

600, Microwave Assembly Guide

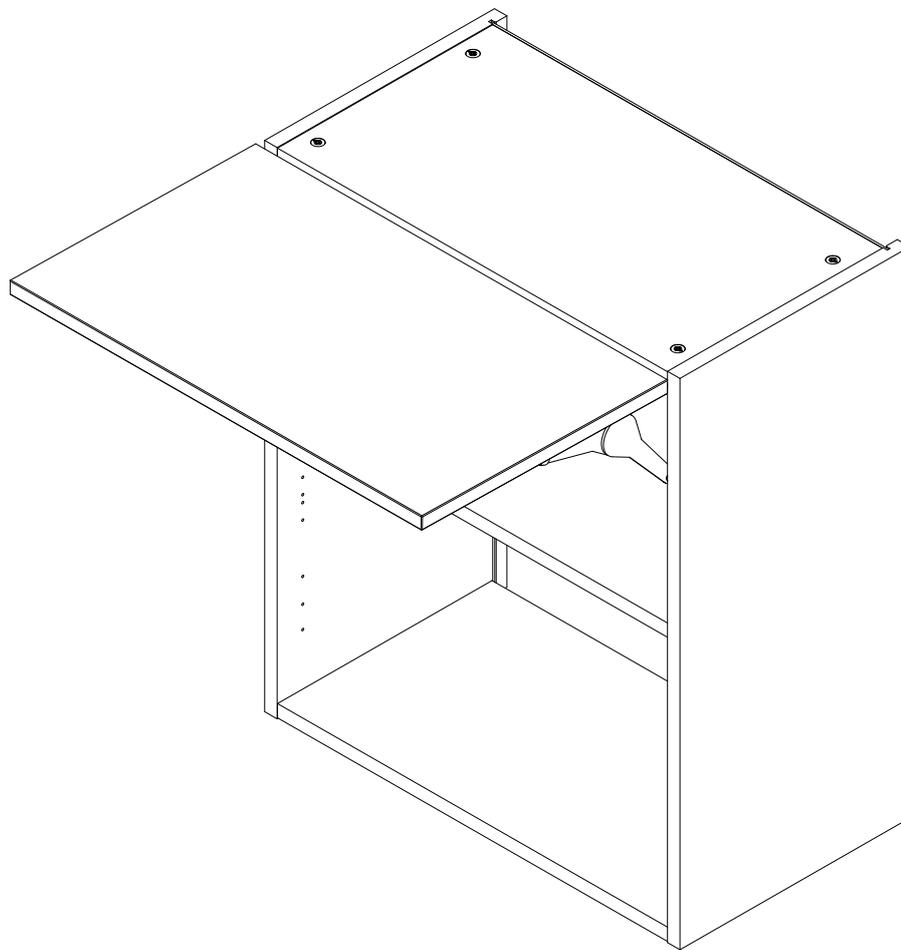

600 WALL

WALL UNIT


600, Microwave Assembly Guide



BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

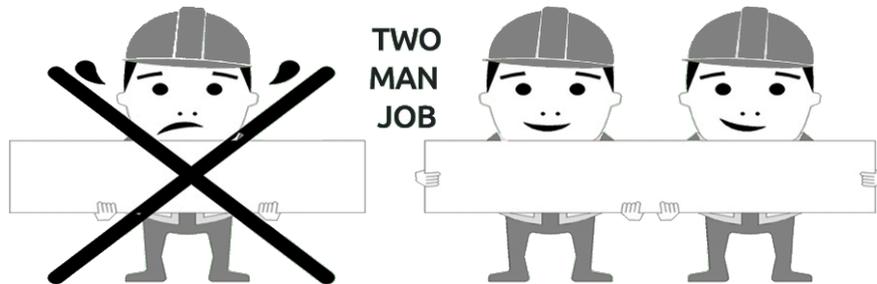


Vogue


wren

WALL UNIT


600, Microwave Assembly Guide

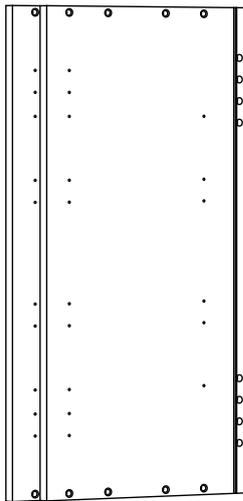

Panel A
x2 End Panel

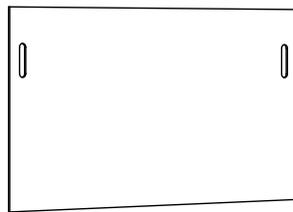

Panel B
x1 Back Panel

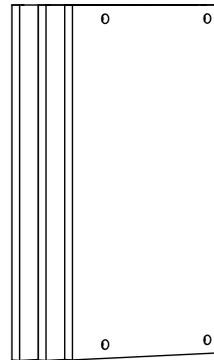


Panel C
x3 Fixed Shelf



Frontal
x1 Front Panel
(Packed Separately)

WALL UNIT


600, Microwave Assembly Guide




(F) x12
Wooden Dowel




(L) x2
15mm Screw




(S) x4
20mm Screw




(K) x8
30mm Screw




(G) x12
Cam Dowel (Expanding)




(H) x12
Cam Lock




L Bracket SML
x2




(M) x4
Cover Cap

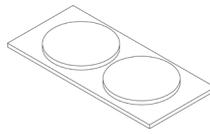


(N) x1
Door Buffer




(T) x4
Back Panel Support Clip

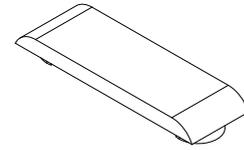


Hanging Bracket Cover Cap
x 2

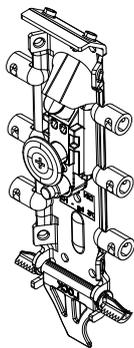


Hanging Bracket
x 2 Inc Screws

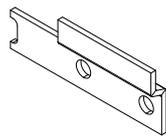


Hanging Bracket Plate
x 2

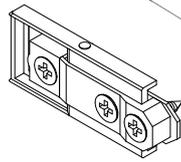

Hinge Mounting Plate

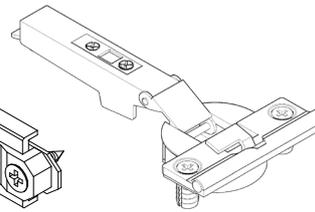

Hinge
Inc Screws & Cover Plate

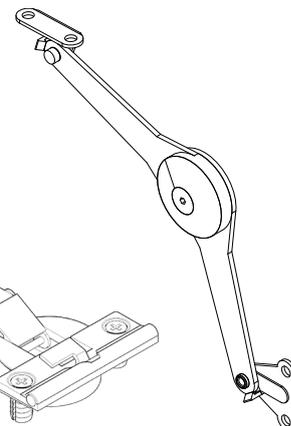


Lift Hinge
2x Inc Screws

WALL UNIT

600, Microwave Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

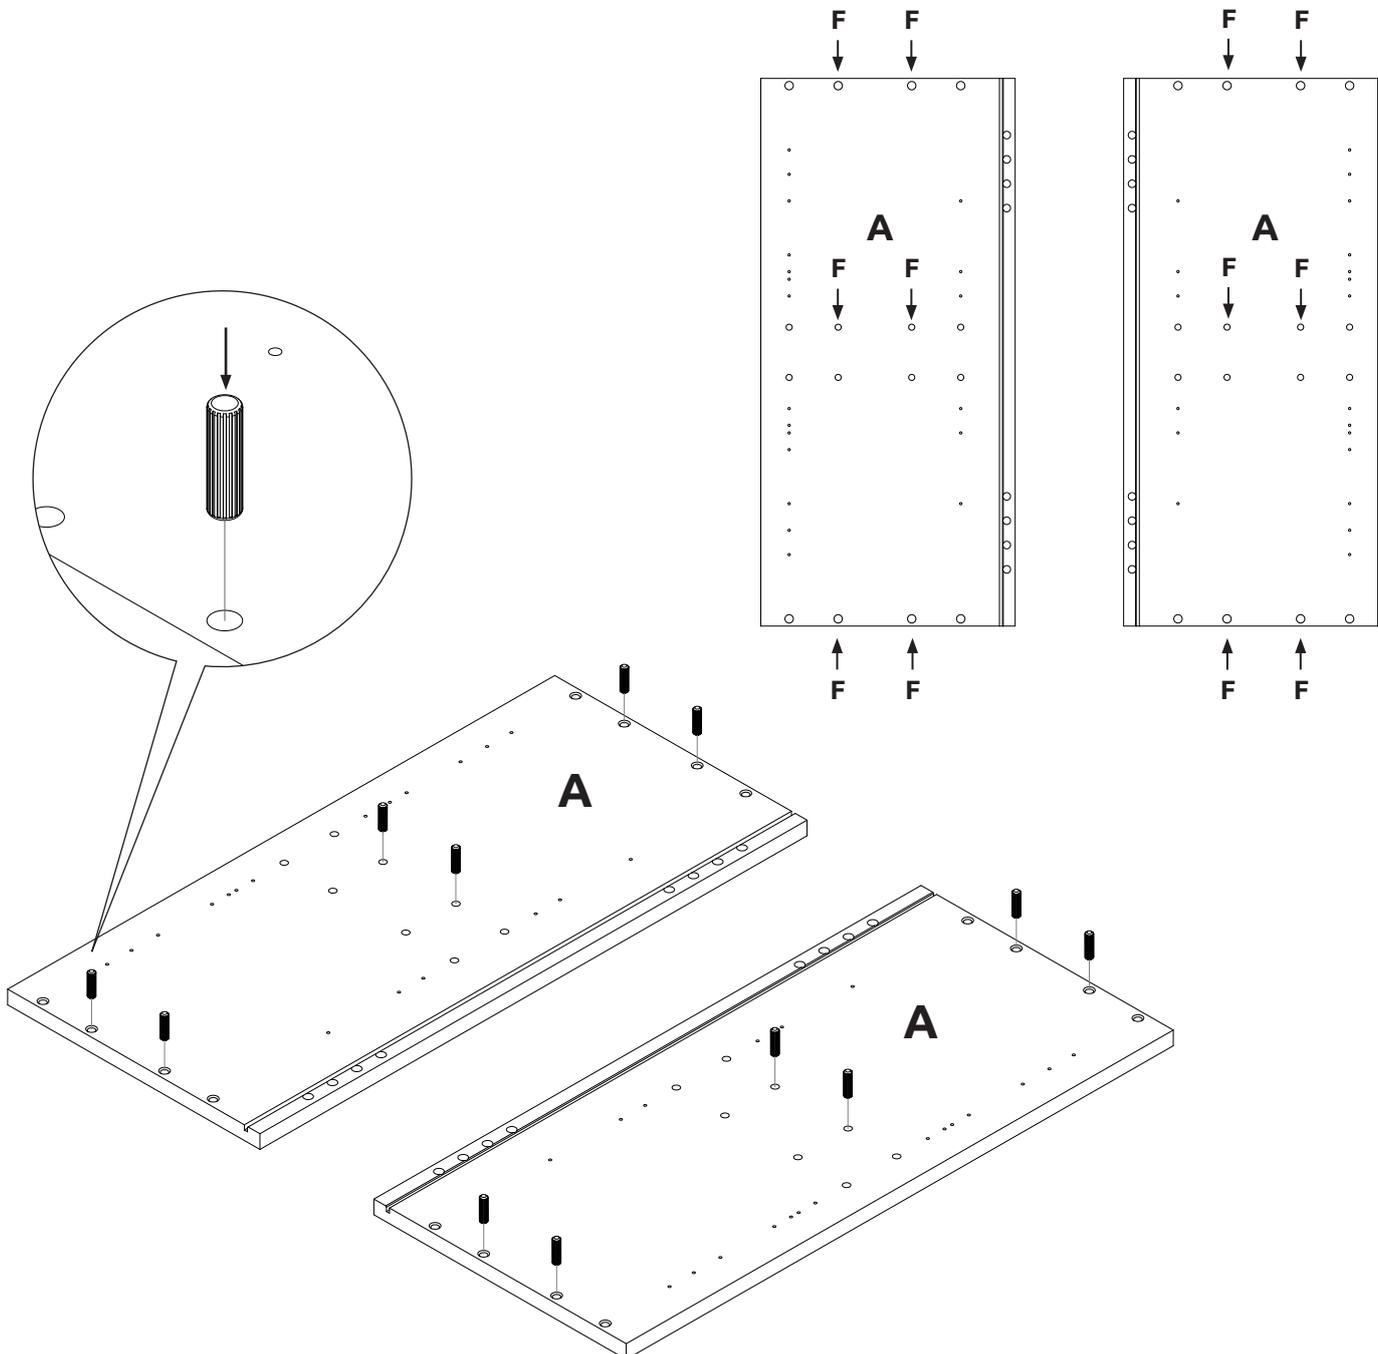


WALL UNIT

600, Microwave Assembly Guide

Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

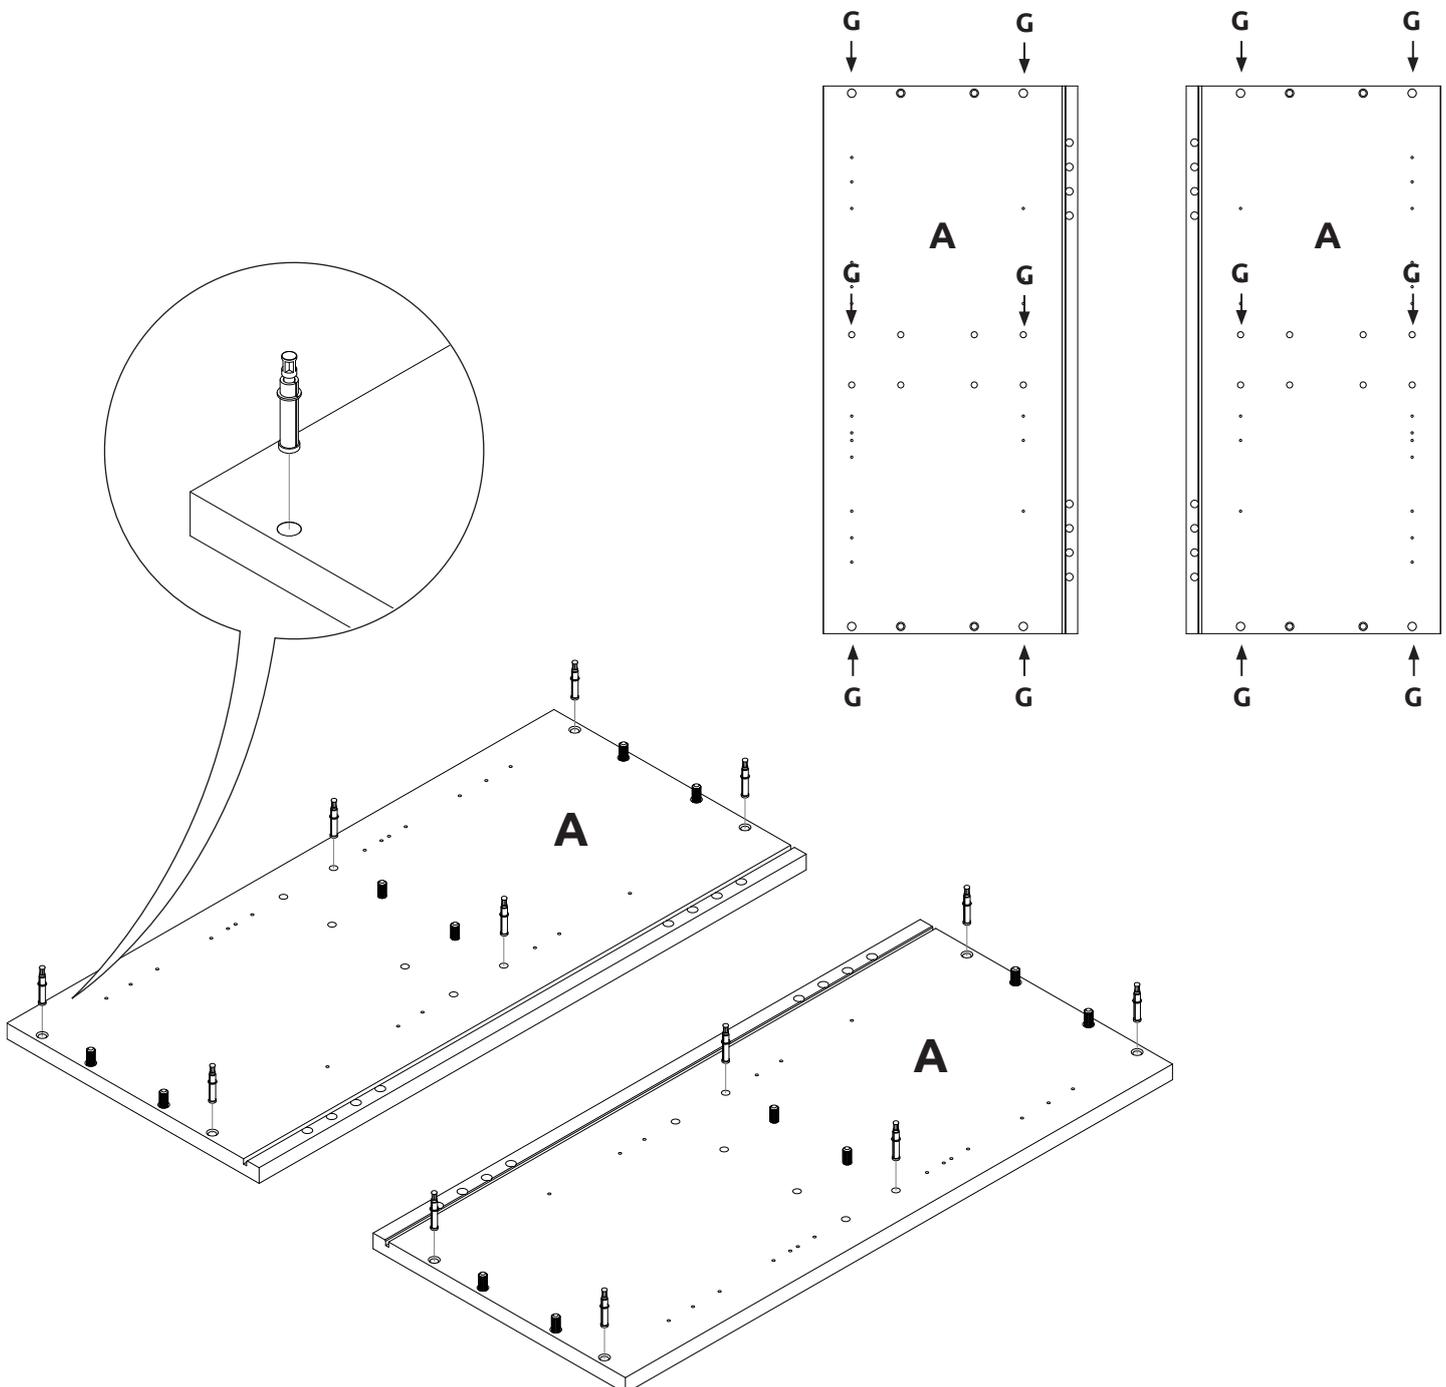

WALL UNIT


600, Microwave Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam locks **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening. Middle fixed shelf cam lock holes **(H)** to face down.


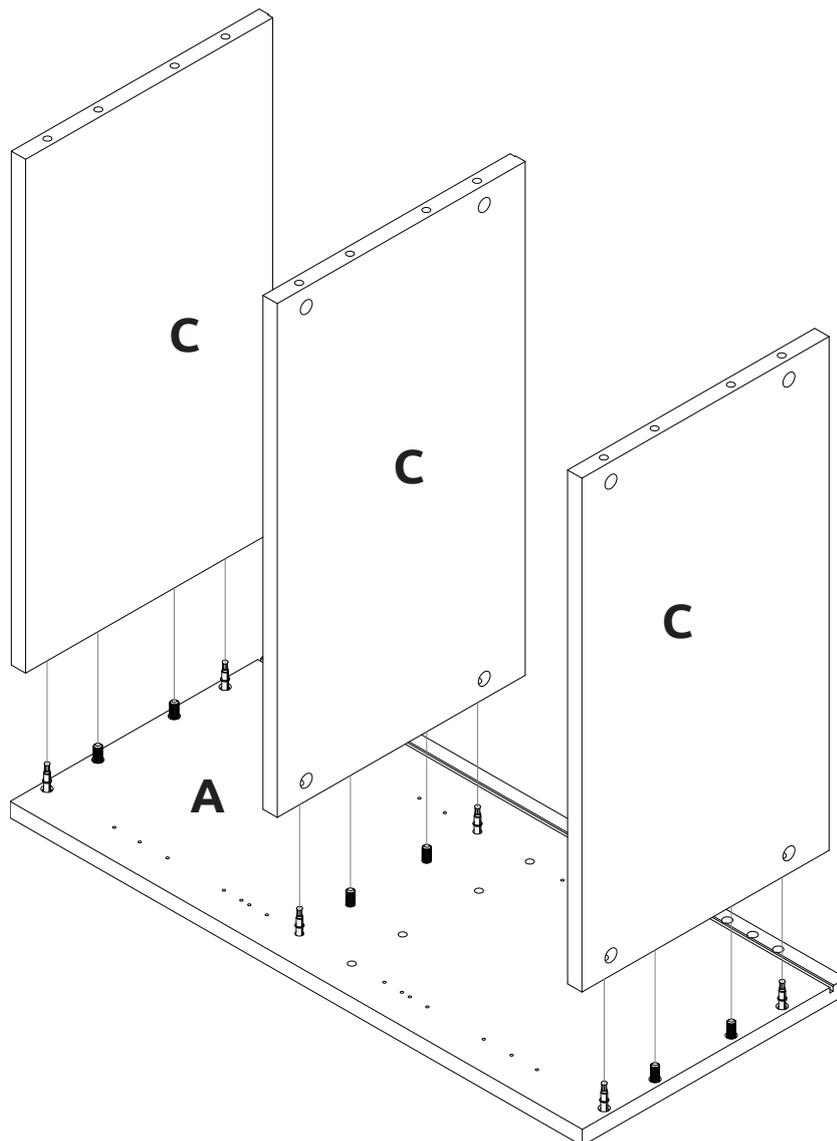


WALL UNIT

600, Microwave Assembly Guide

Step 4.

Slide back panel **(B)** into groove of end panel **(A)**. *Fig 1.*

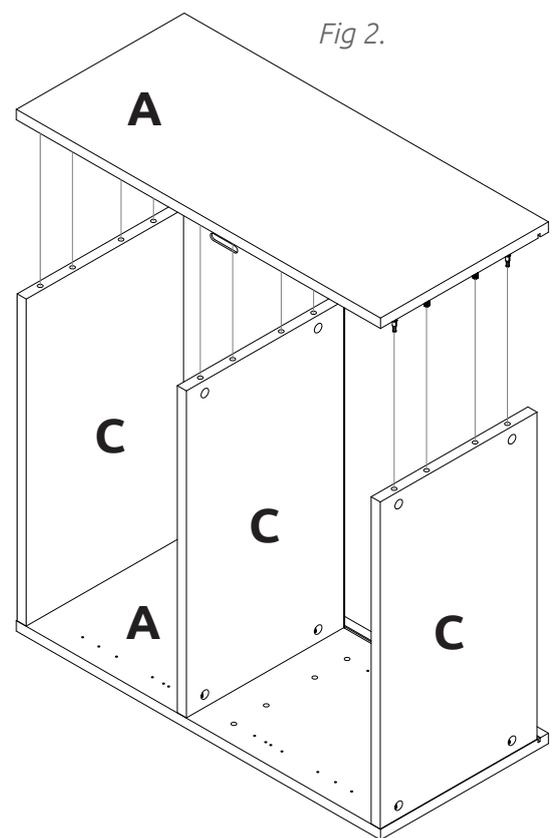
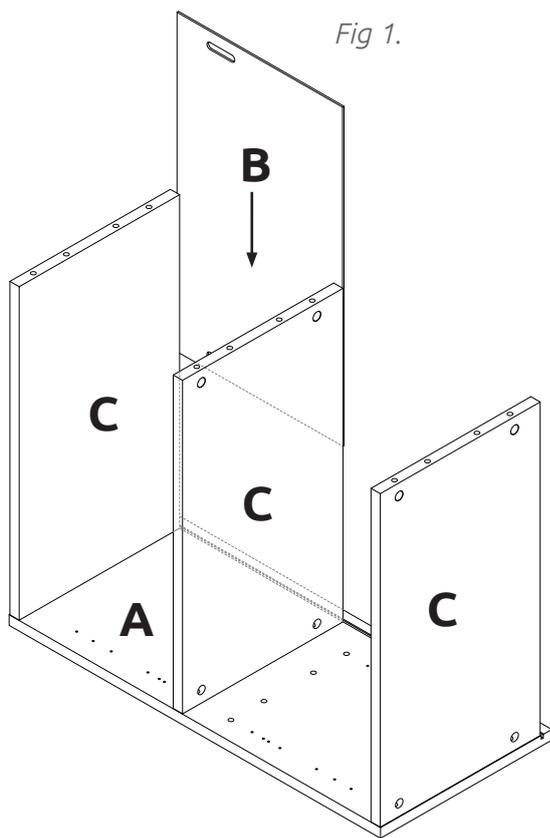


Step 5.

Attach end panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown. *Fig 2.*

WALL UNIT

600, Microwave Assembly Guide

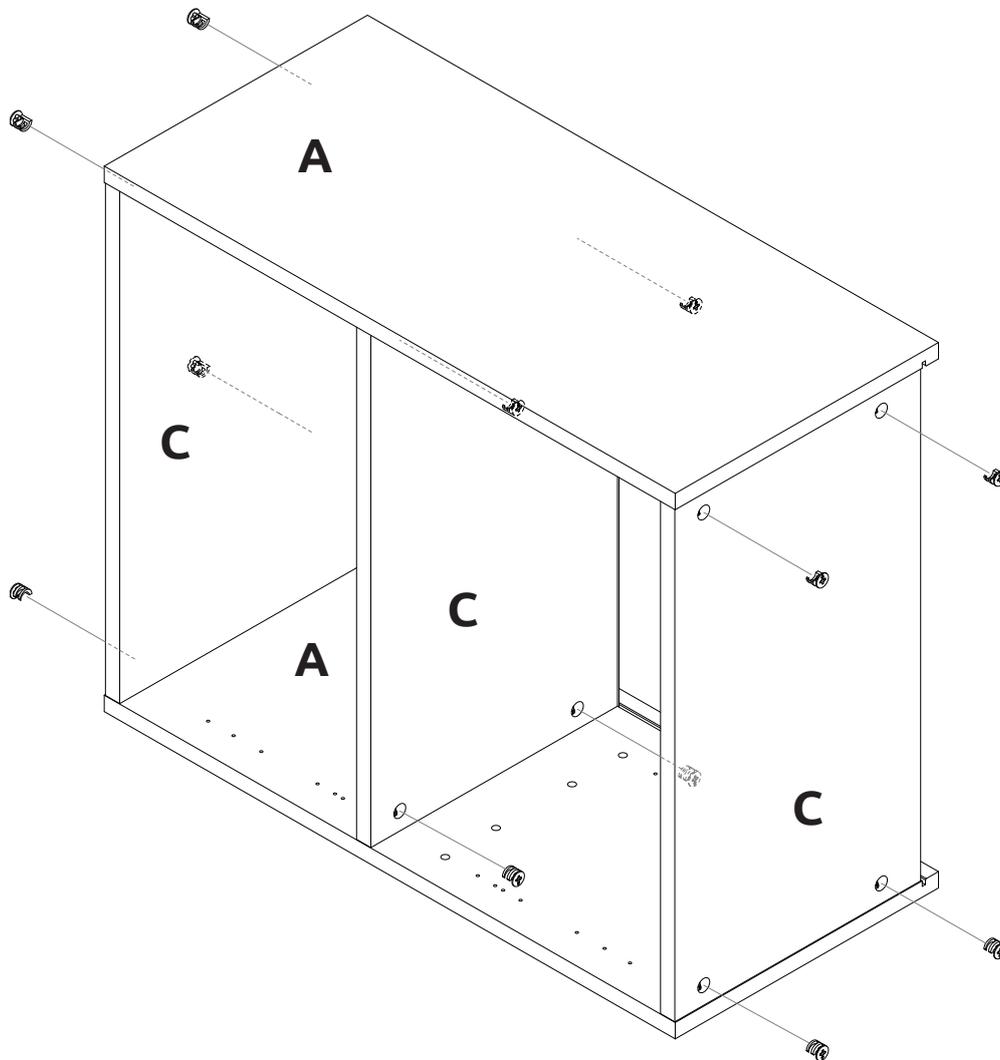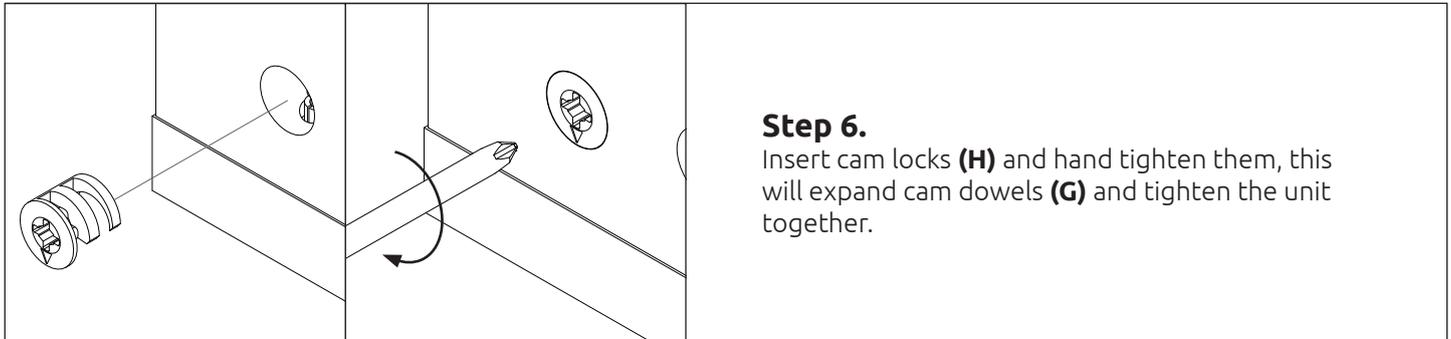


Do **not** use power tools with cam lock **(H)**

WALL UNIT

600, Microwave Assembly Guide

Step 7.

Ensure the unit is square. Secure back panel **(B)** with 4 x 30mm screws **(K)** equally spaced at the top and bottom of back panel **(B)** into base panel **(C)**, as shown. Ensure you screw into the centre of base panel **(C)** (9mm from the edge).

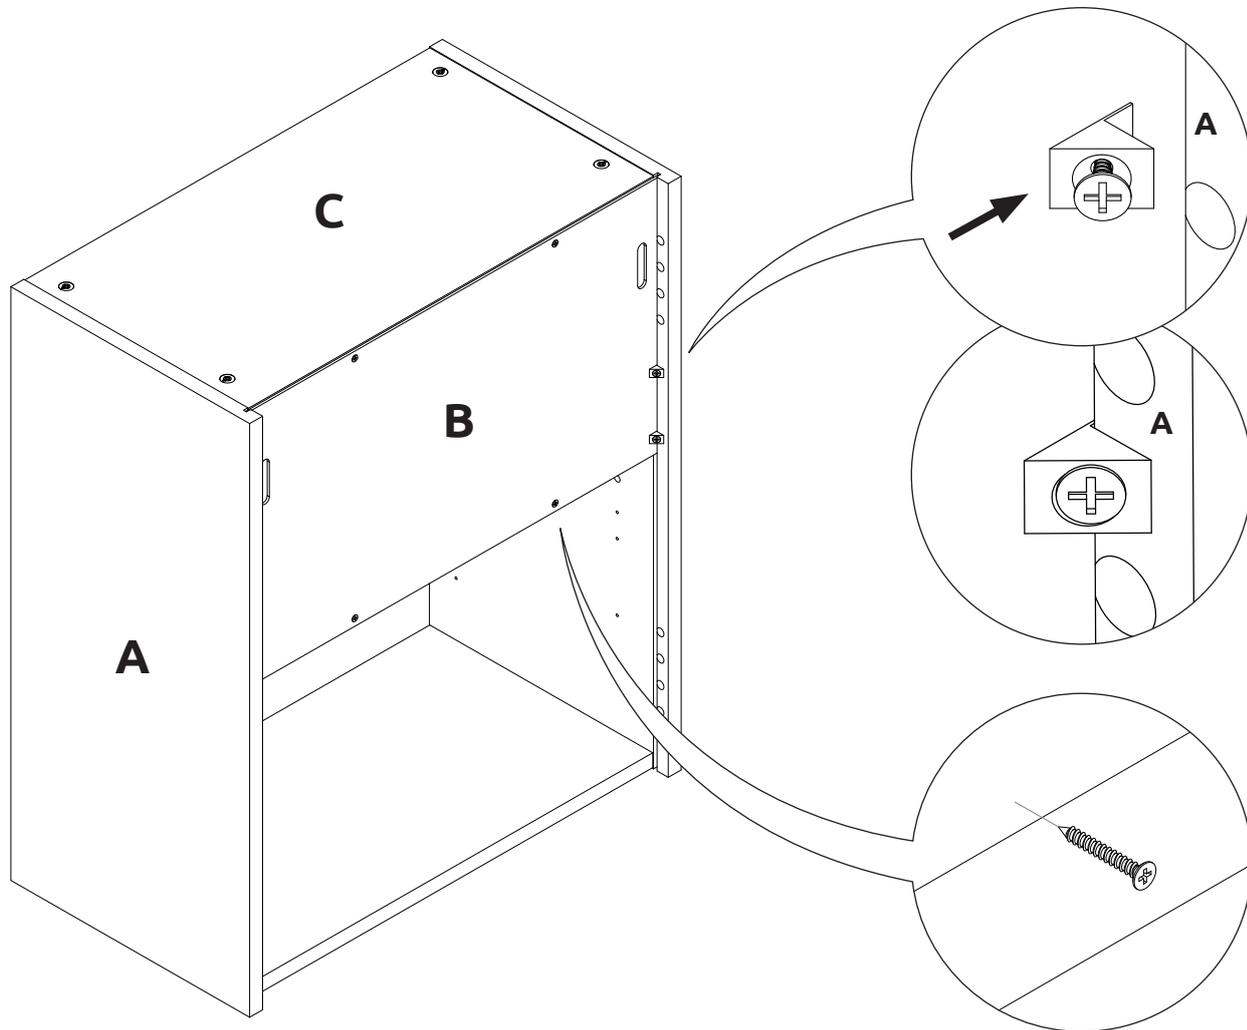

Step 8.

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket to be fitted. Once in place, tighten screw.

WALL UNIT

600, Microwave Assembly Guide



Step 9.

Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

A. Insert hanging bracket into pre-drilled holes.

B. Rotate locking lever 180 degrees.

C. Secure with provided 2 x 20mm screws (**S**) per bracket.

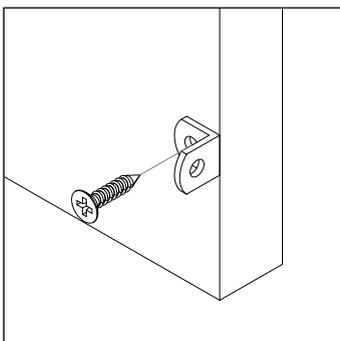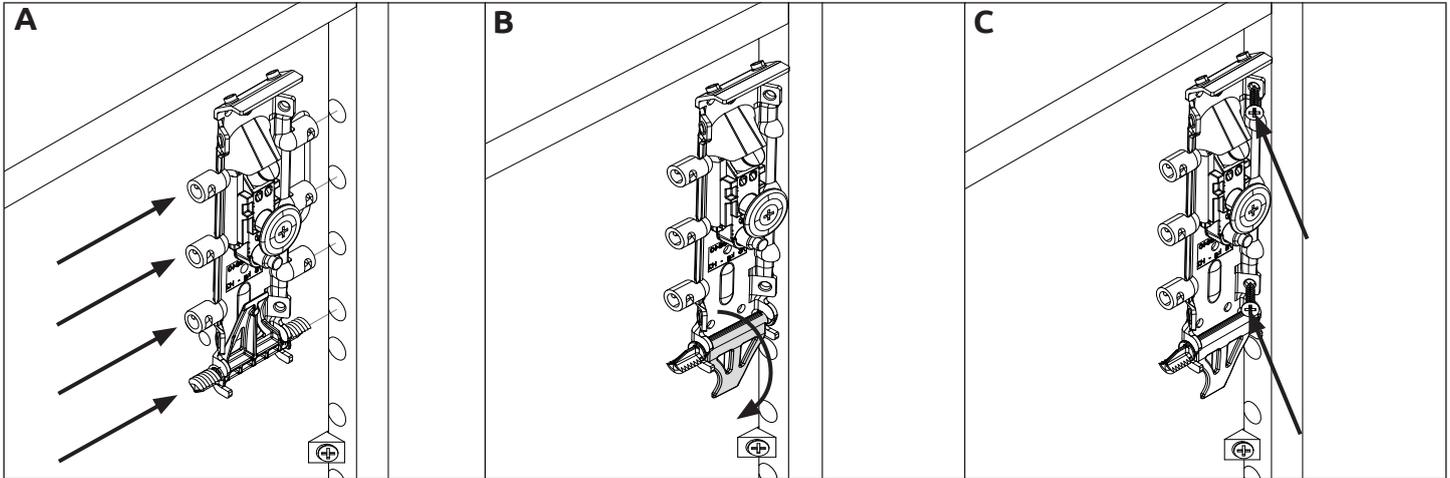

Step 10.



Secure L brackets SML to the bottom left and right hand side of the unit using 1 x 15mm screws (**L**) per bracket.

WALL UNIT

600, Microwave Assembly Guide

Step 11.


Measure and attach hinge mounting plate onto fixed shelf (C) as shown, using screws already positioned within hinge plates.

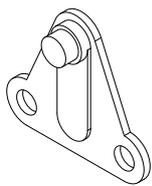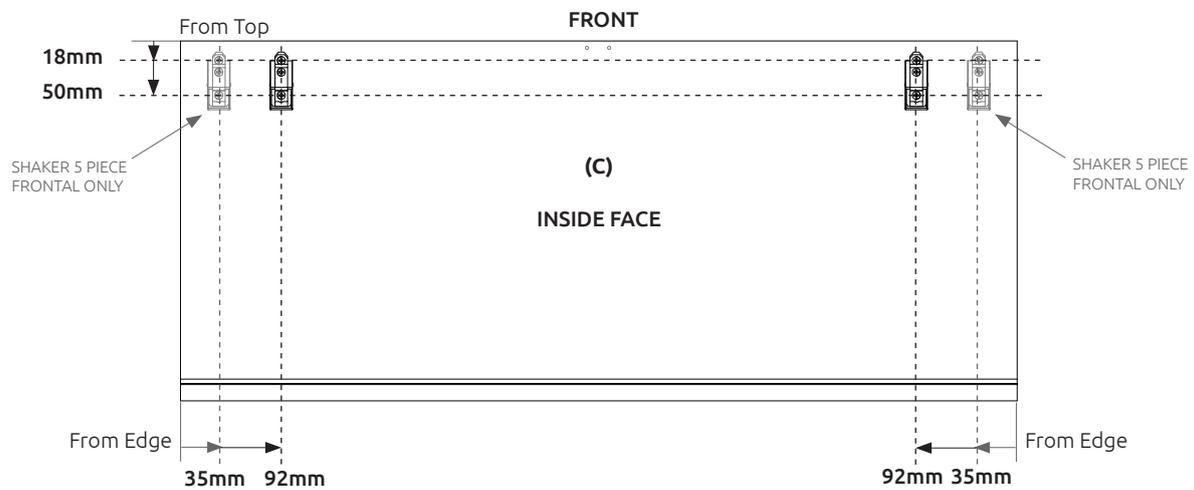

Lift hinge bracket


Step 12.

Measure and attach lift hinge brackets onto both end panels (A), using 2 x screws per bracket which are already included within lift hinge pack.

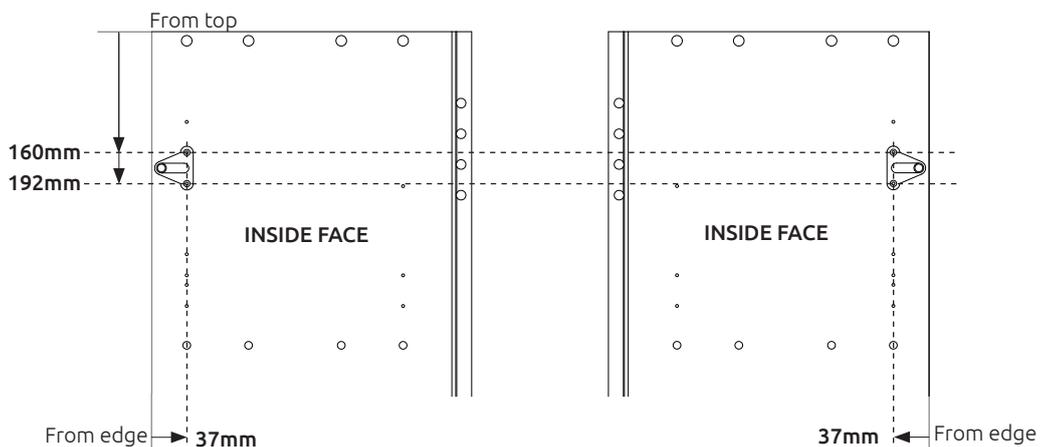

WALL UNIT



600, Microwave Assembly Guide

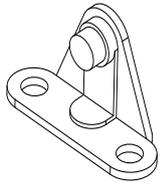

Lift hinge bracket

Step 13.

Measure and attach lift hinge brackets to the frontal using 2x screws per bracket which are already included within the lift hinge pack.

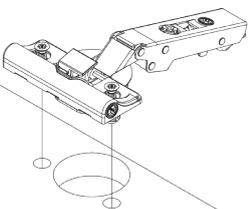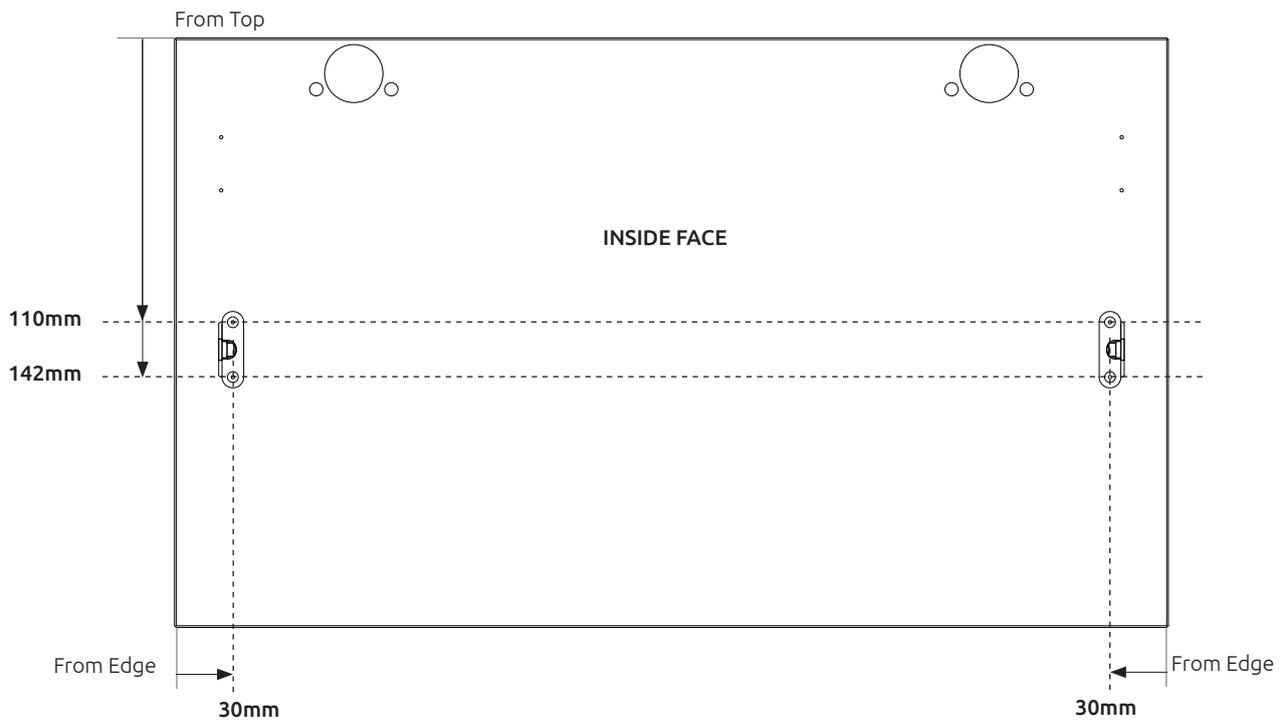

Step 14.

Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.



WALL UNIT


600, Microwave Assembly Guide



Care to be taken. Hanging procedure is necessary for a safe installation.



Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

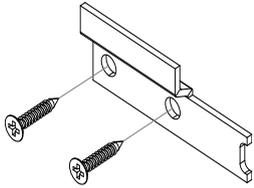


Step 15.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

Step 16.

Hang the unit using the brackets to hook onto the plate as shown.

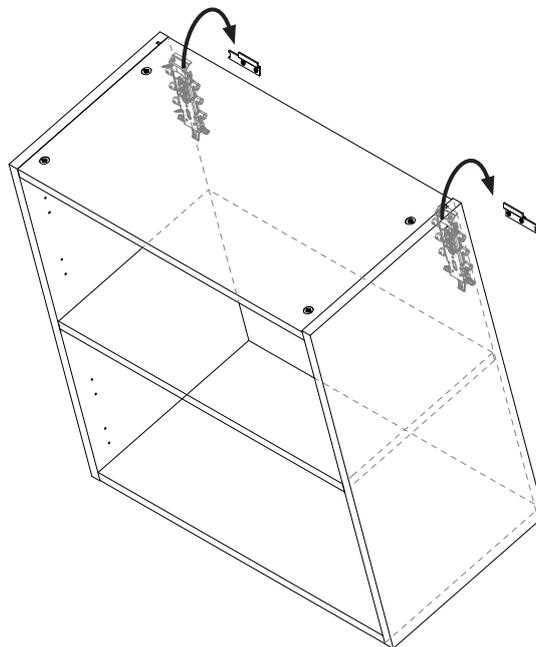


WALL UNIT


600, Microwave Assembly Guide

Step 17.

Using points **a**, **b** & **c** adjust the unit to suit.

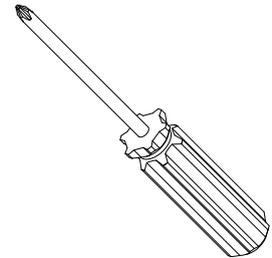

a



Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

b

Point b.

Adjust the depth using centre screw.


c

Point c.

Turn the bottom screw until it touches the plate to lock in position.



Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.




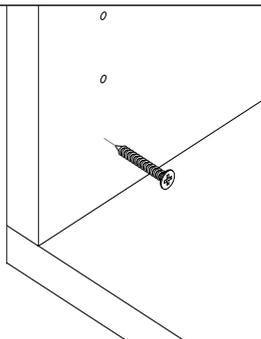



Step 18.



Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw at the top and bottom, place cover caps **(M)** on the heads to conceal them.

WALL UNIT

600, Microwave Assembly Guide

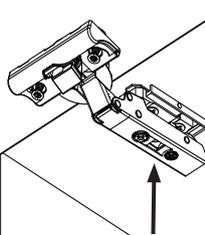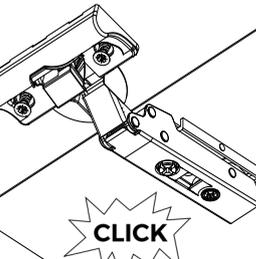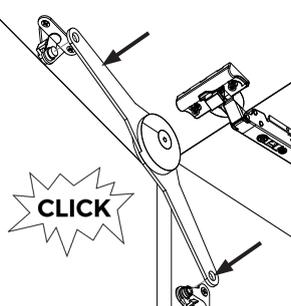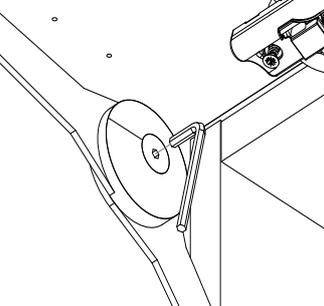		<p>Step 19. Clip hinges into hinge mounting plates on the unit.</p>
		<p>Step 20. Clip lift hinge mechanisms into each bracket. Use a 4mm allen key to adjust the strength of the lift hinge for the door weight.</p>
<p>Step 21. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

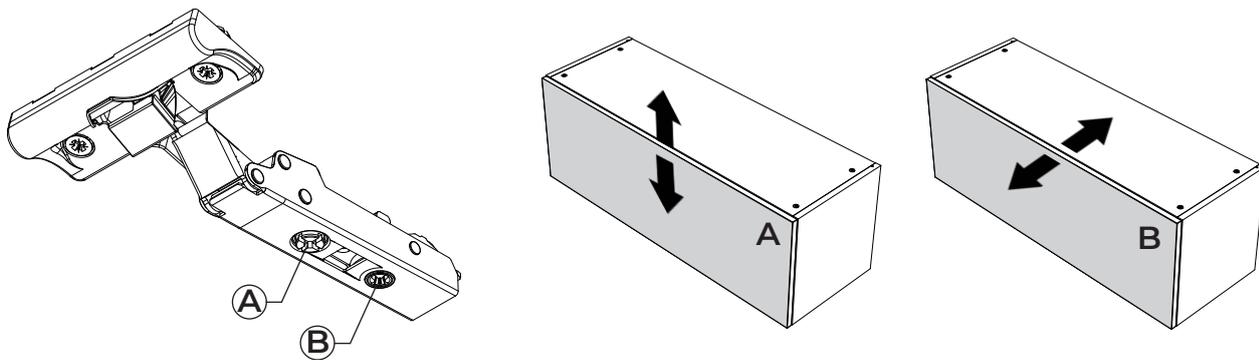

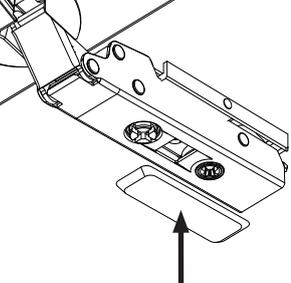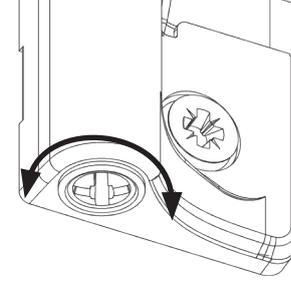	<p>Step 22. Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	--	---

	<p>Hinges MUST be adjusted to the SAME STRENGTH.</p>
---	--