


Vogue


wren

WALL UNIT

1000, Lift Assembly Guide

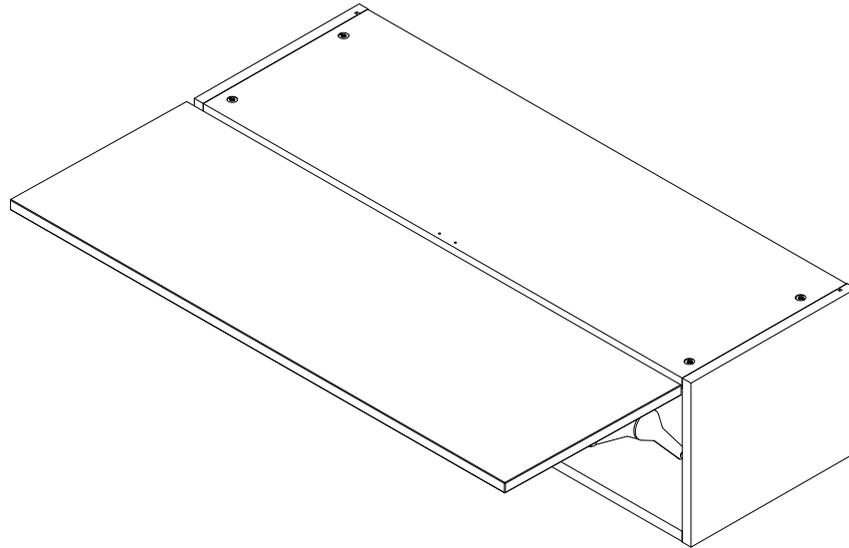

288 x 1000

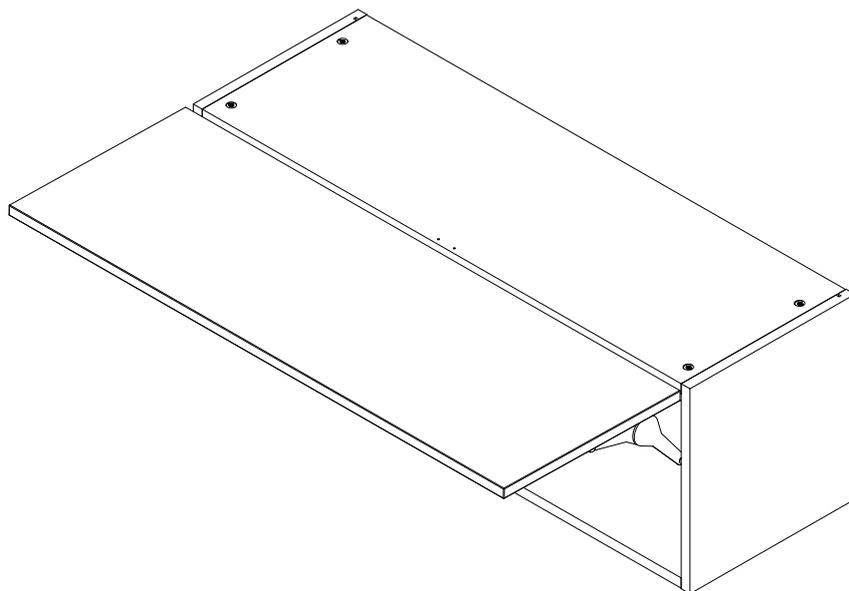

360 x 1000

WALL UNIT


1000, Lift Assembly Guide



BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

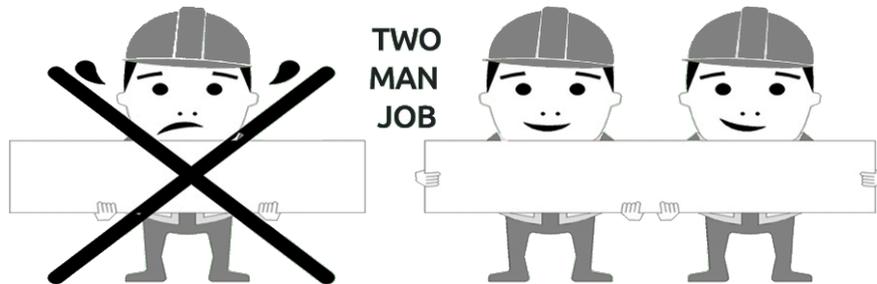


Vogue

wren

WALL UNIT


1000, Lift Assembly Guide

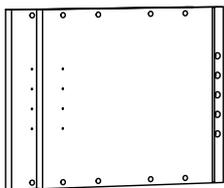


Panel A
x2 End Panel



Panel B
x1 Back Panel

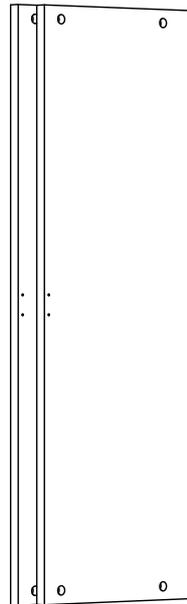

Panel C
x2 Fixed Shelf

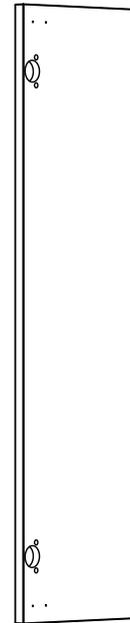


Frontal
x1 Front Panel
(Packed Separately)



Panel E
x1 Muntin

WALL UNIT


1000, Lift Assembly Guide




(F) x8
Wooden Dowel



(L) x8
15mm Screw




(S) x4
20mm Screw




(K) x4
30mm Screw




(P) x4
45mm Screw




(G) x8
Cam Dowel (Expanding)




(H) x8
Cam Lock




(M) x8
Cover Cap

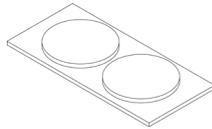


(N) x1
Door Buffer

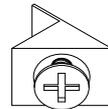


(T) x10
Back Panel Support Clip

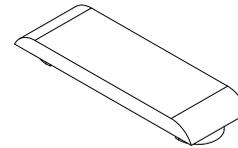


Hanging Bracket Cover Cap
x 2

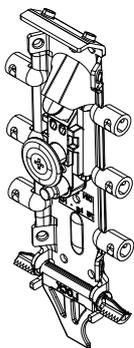


Hanging Bracket
x 2 Inc Screws

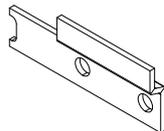


Hanging Bracket Plate
x 2

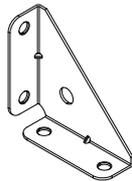


Corner Gusset
x 2

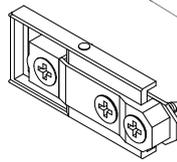

Hinge Mounting Plate

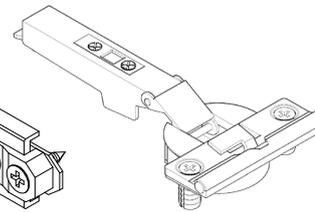

Hinge
Inc Screws & Cover Plate

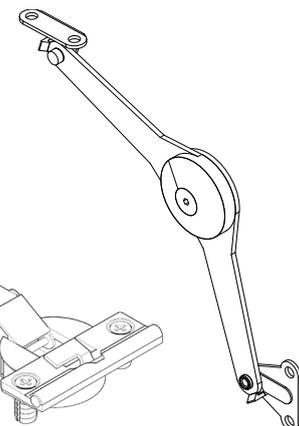


Lift Hinge
2x Inc Screws

WALL UNIT

1000, Lift Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

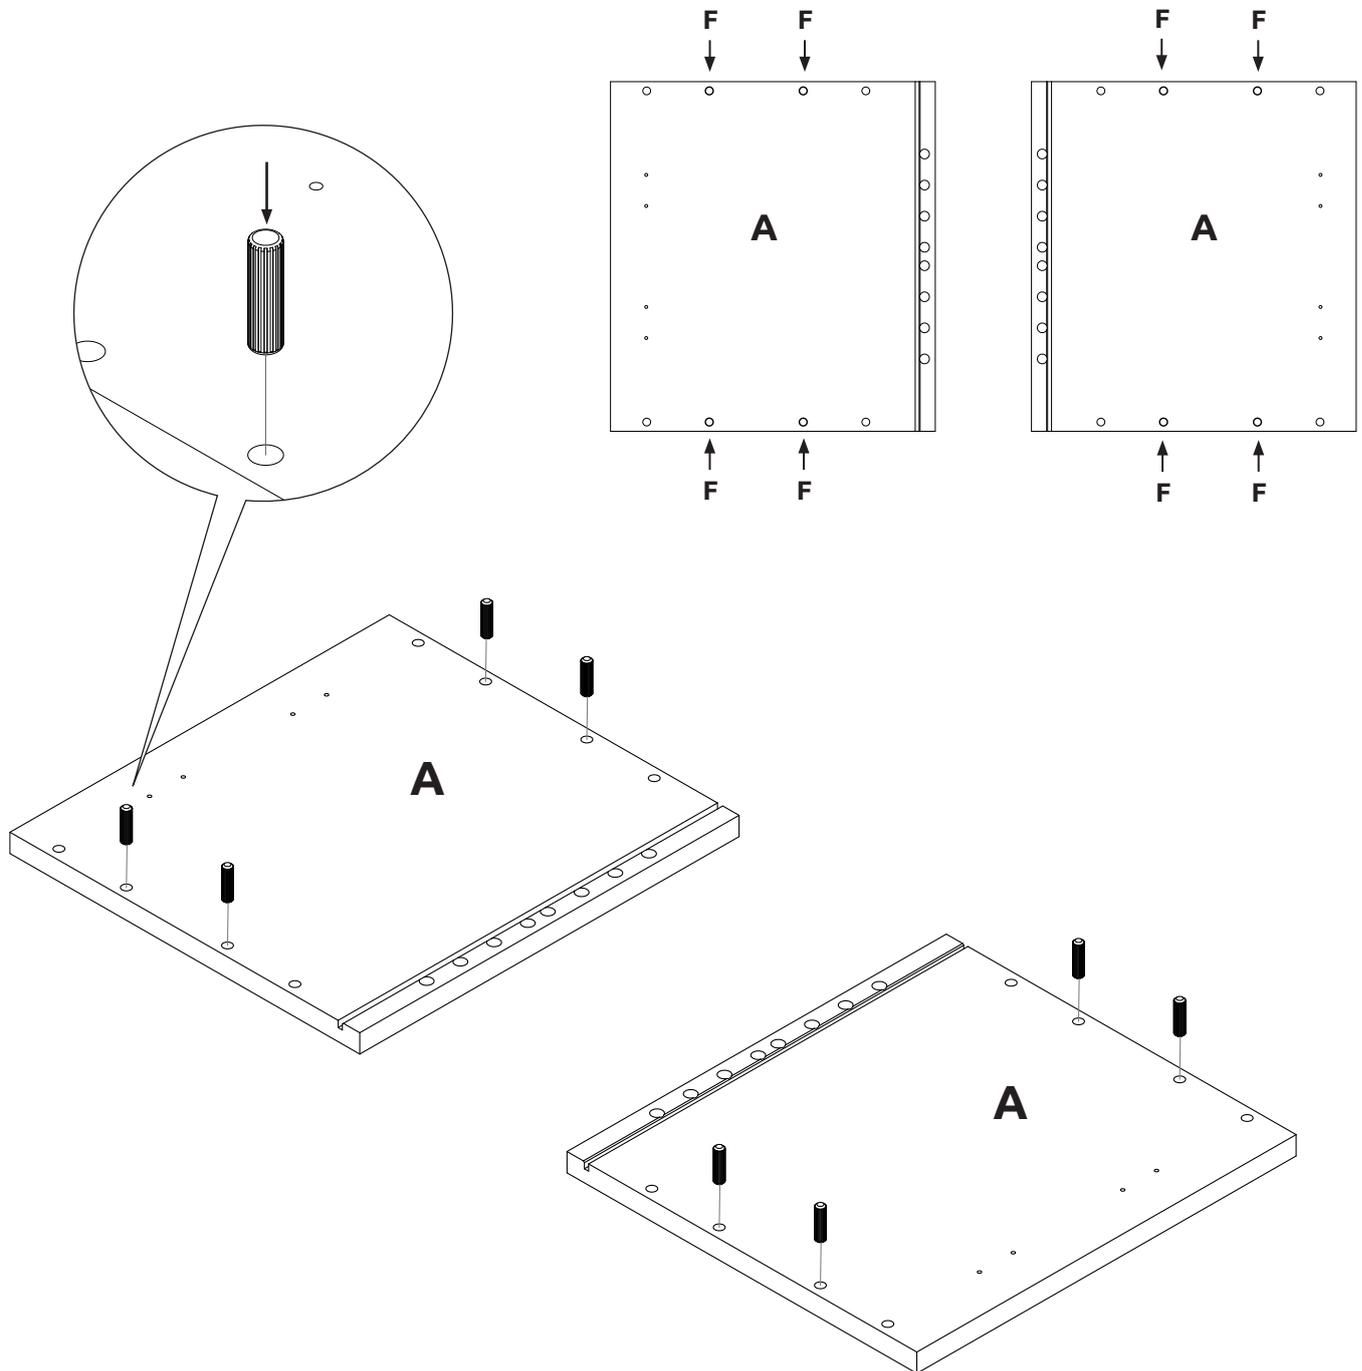


WALL UNIT

1000, Lift Assembly Guide

Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

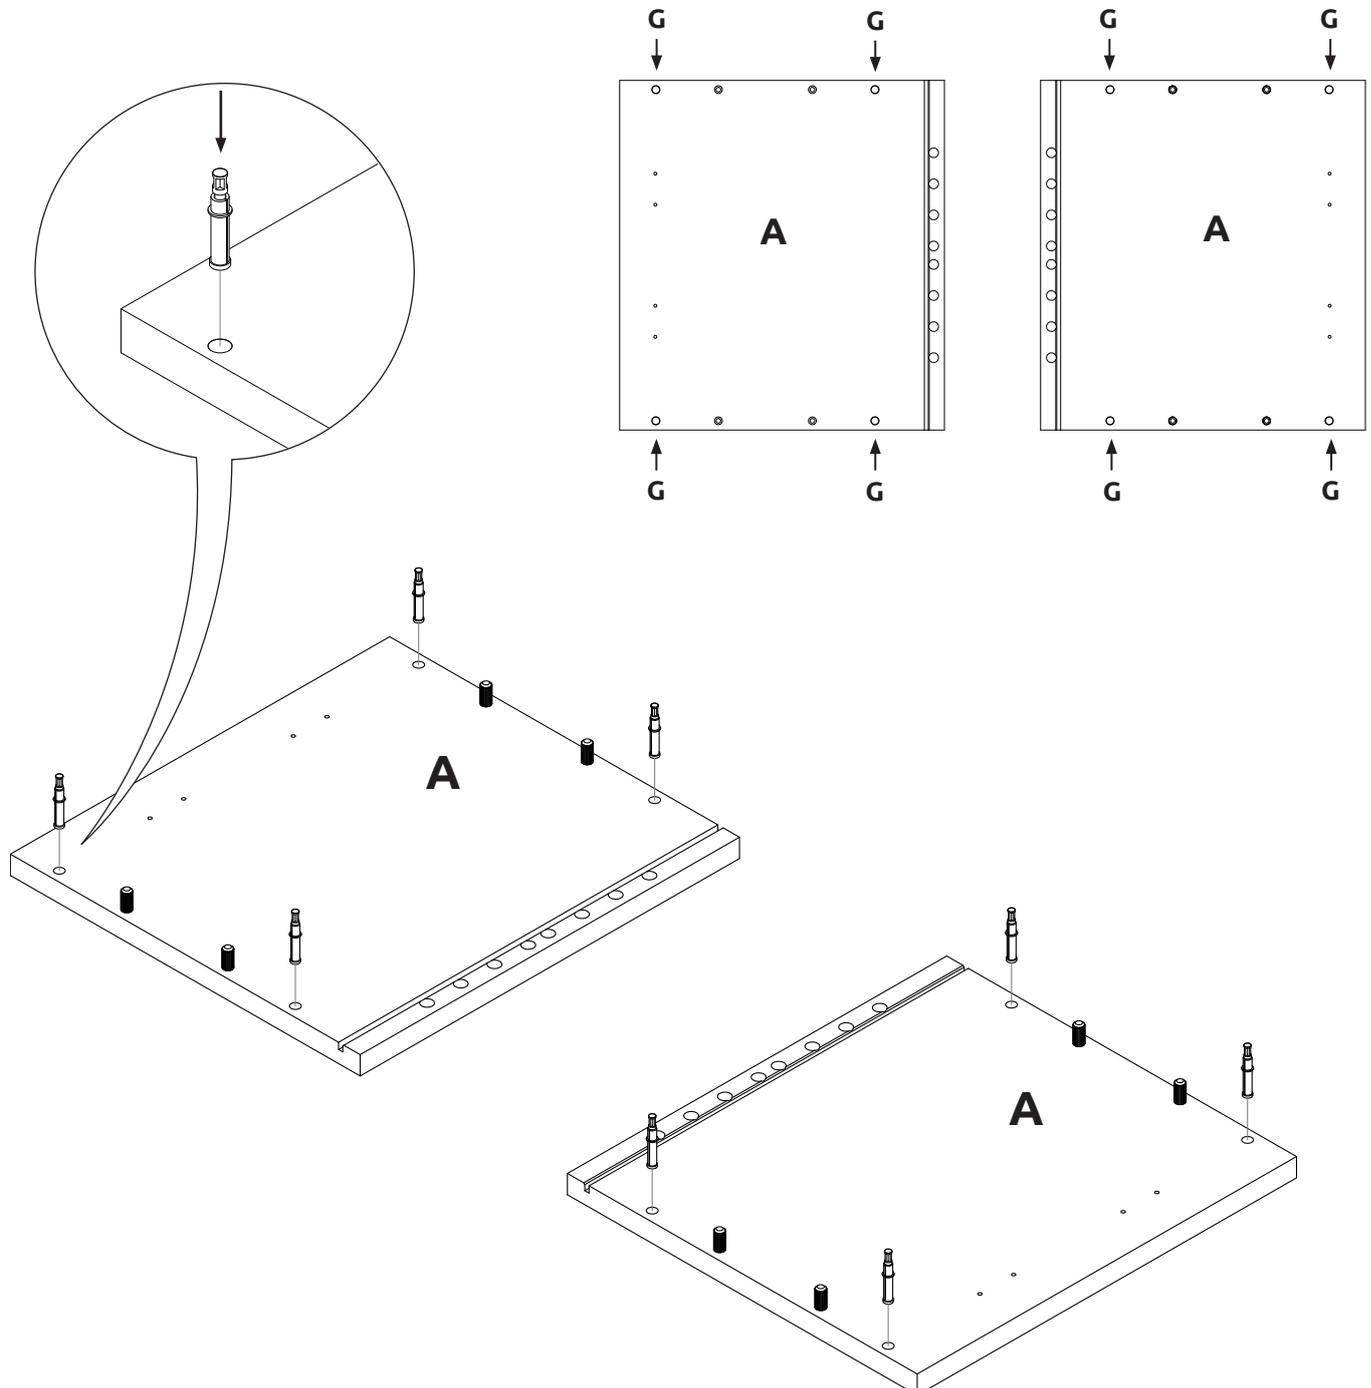

WALL UNIT


1000, Lift Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

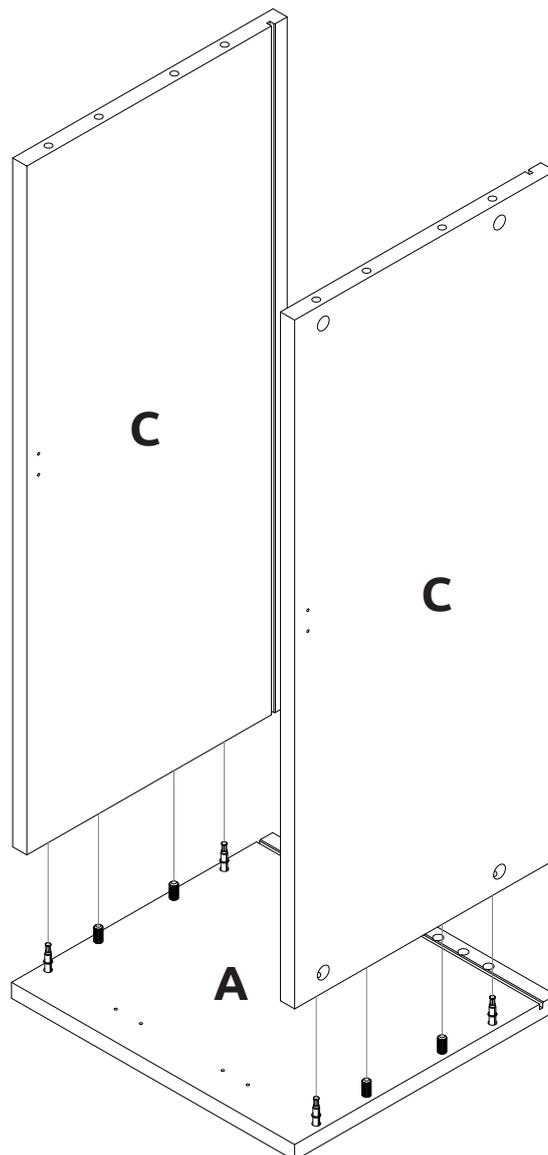


WALL UNIT

1000, Lift Assembly Guide

Step 4.

Slide back panel (B) into grooves of panels (C) and end panel (A).

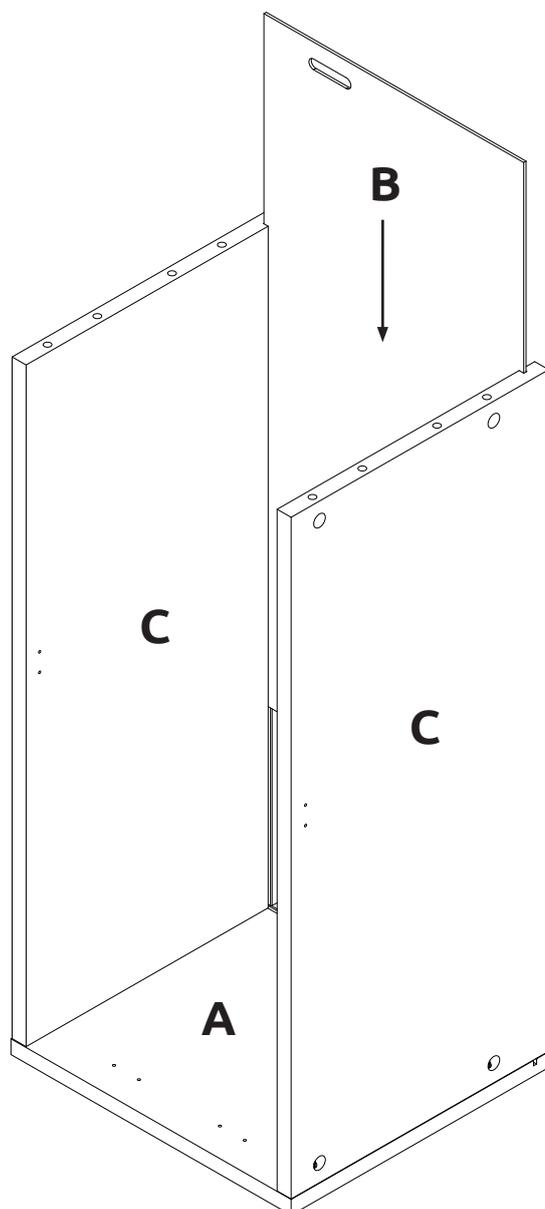


WALL UNIT

1000, Lift Assembly Guide



Step 5.

Attach end panel (A), using expanding cam dowels (G), and wooden dowels (F) in positions as shown.

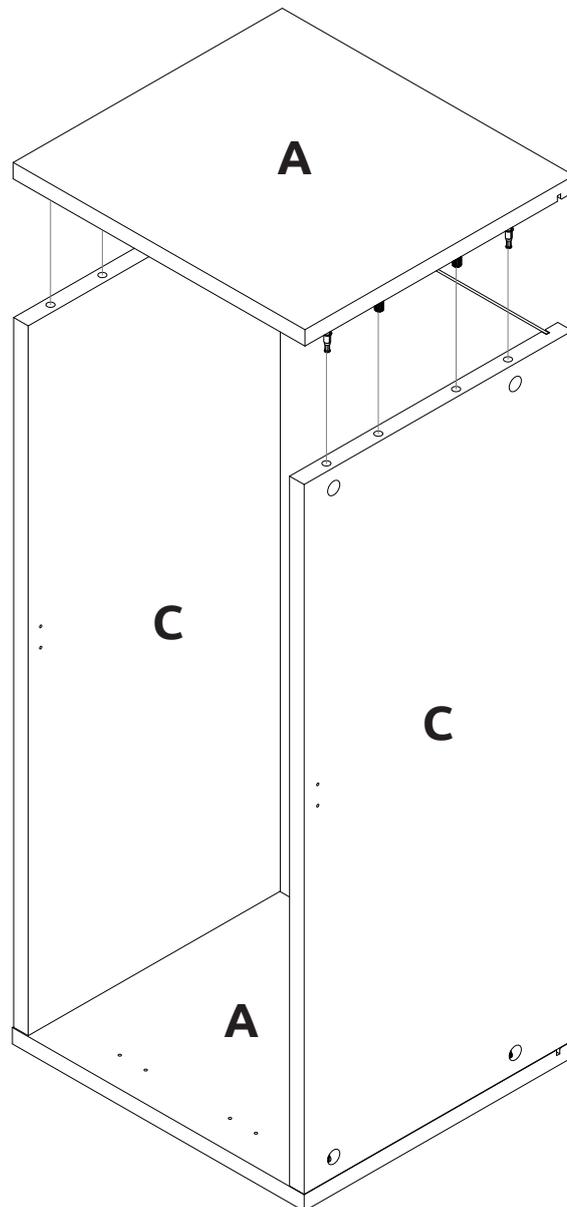

WALL UNIT

1000, Lift Assembly Guide

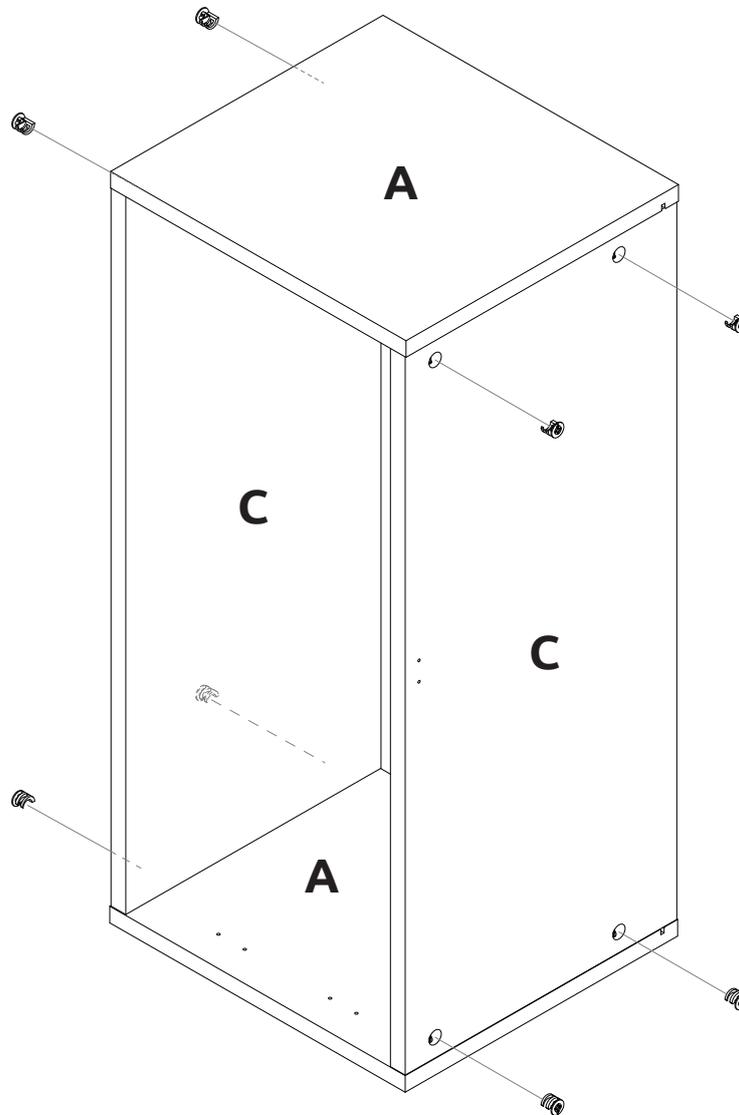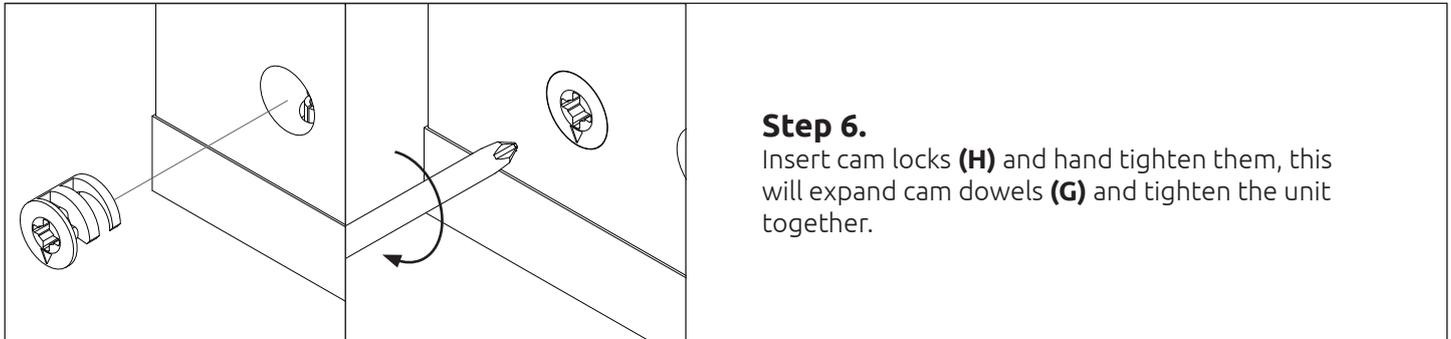


Do **not** use power tools with cam lock **(H)**

WALL UNIT

1000, Lift Assembly Guide

Step 7.


Join muntin panel (E) to both panels (C) using 4 x 45mm screws (P), through pilot holes provided.

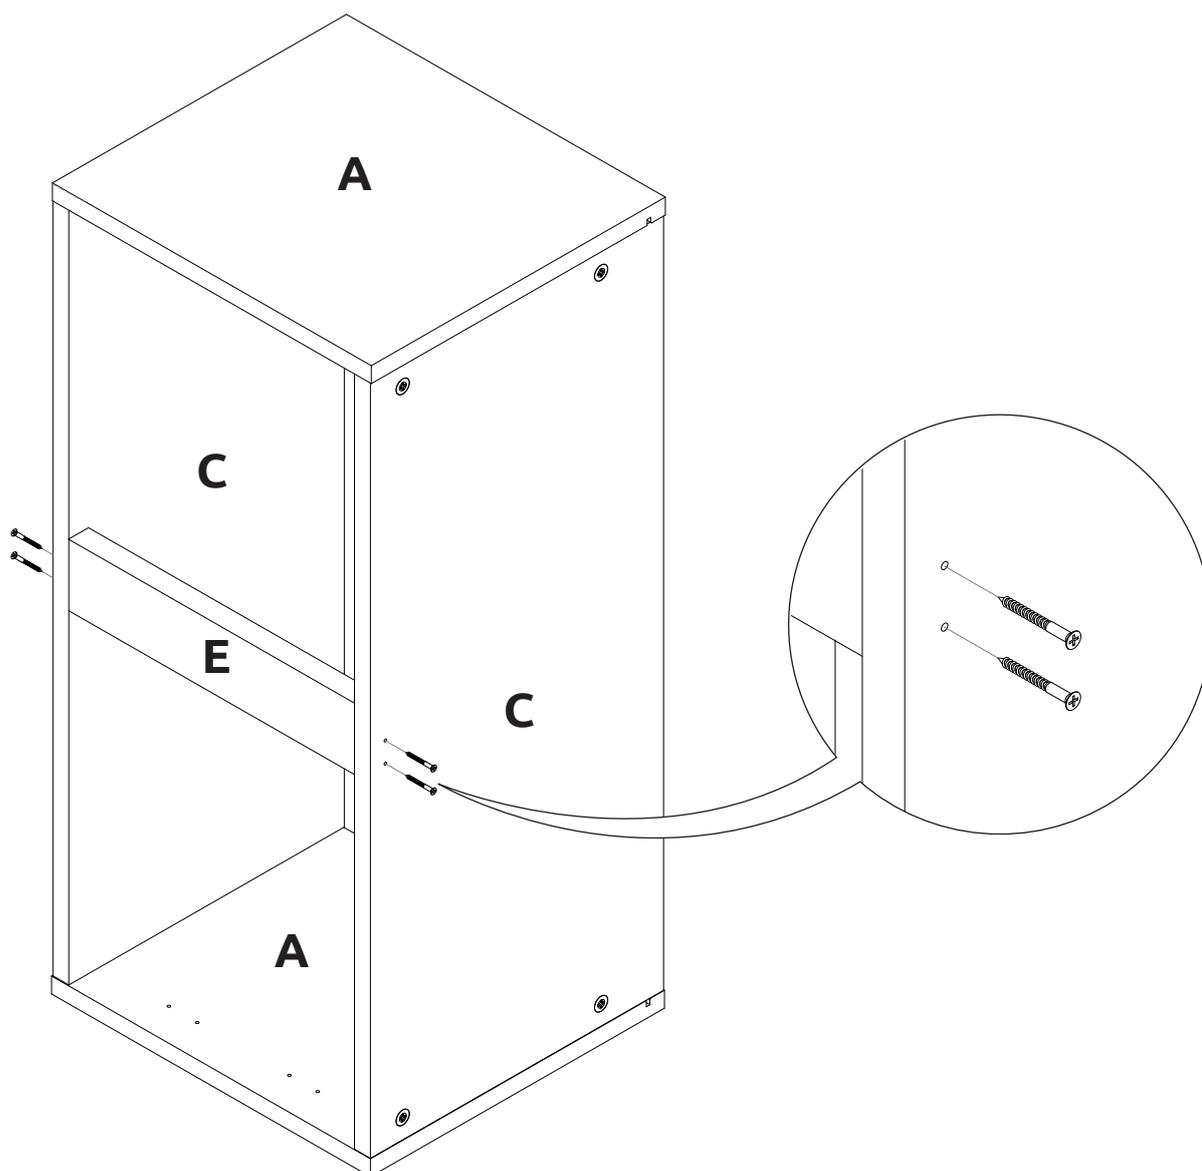

WALL UNIT**1000, Lift Assembly Guide****Step 8.**

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)** & **(C)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

The side back panel clips should be disregarded for the 288 units.

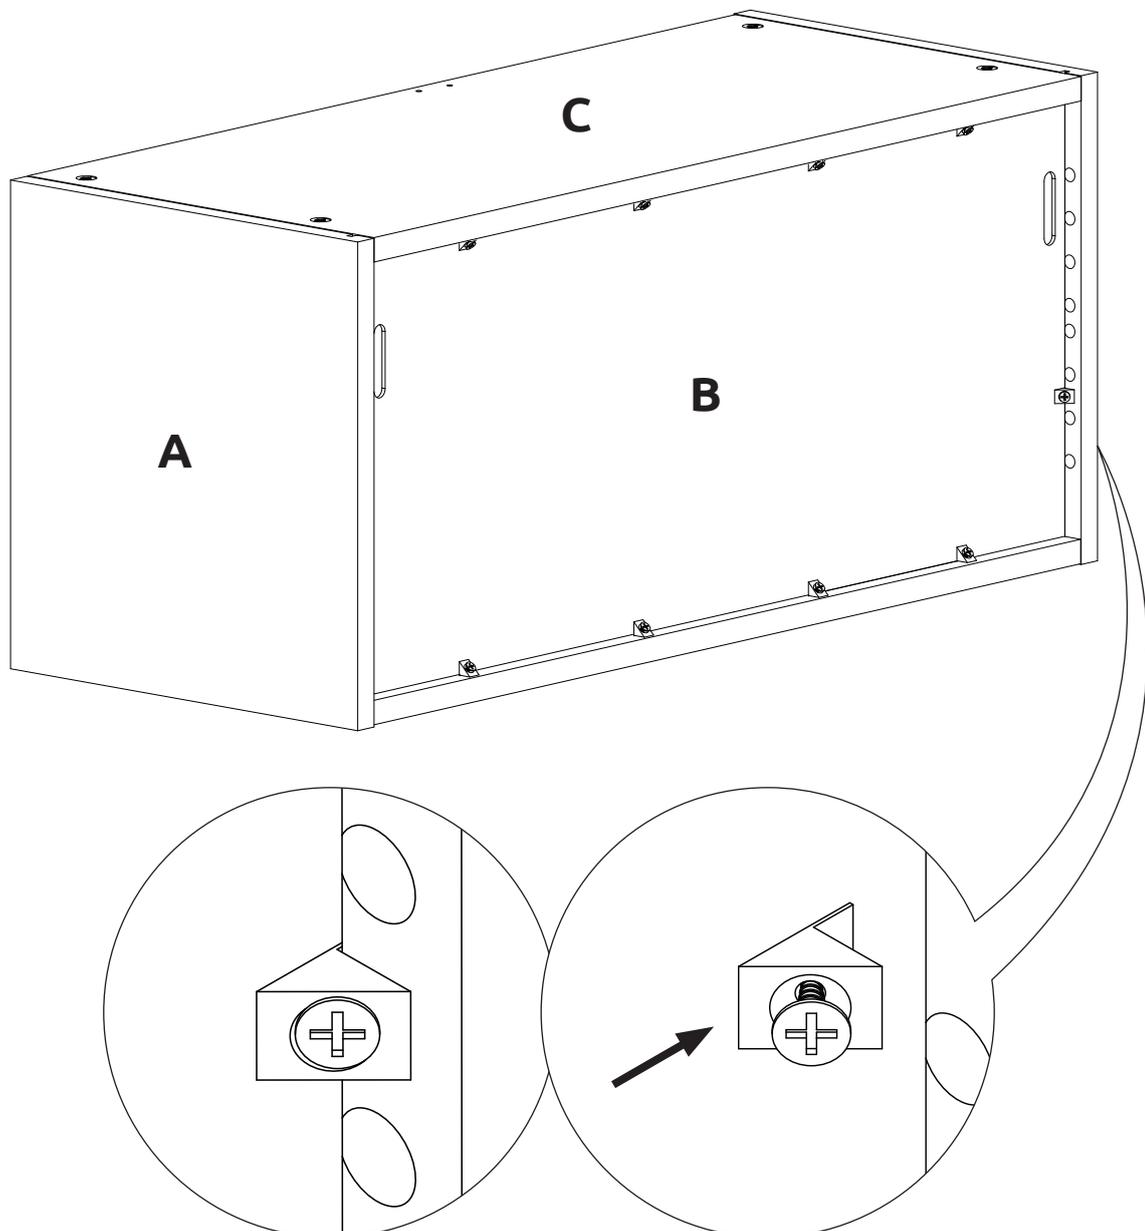

WALL UNIT

1000, Lift Assembly Guide



Step 9.

Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

A. Insert hanging bracket into pre-drilled holes.


B. Rotate locking lever 180 degrees.

C. Secure with provided 2 x 20mm screws (**S**) per bracket.

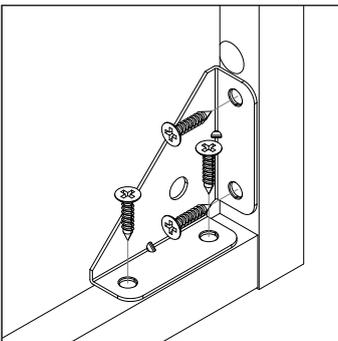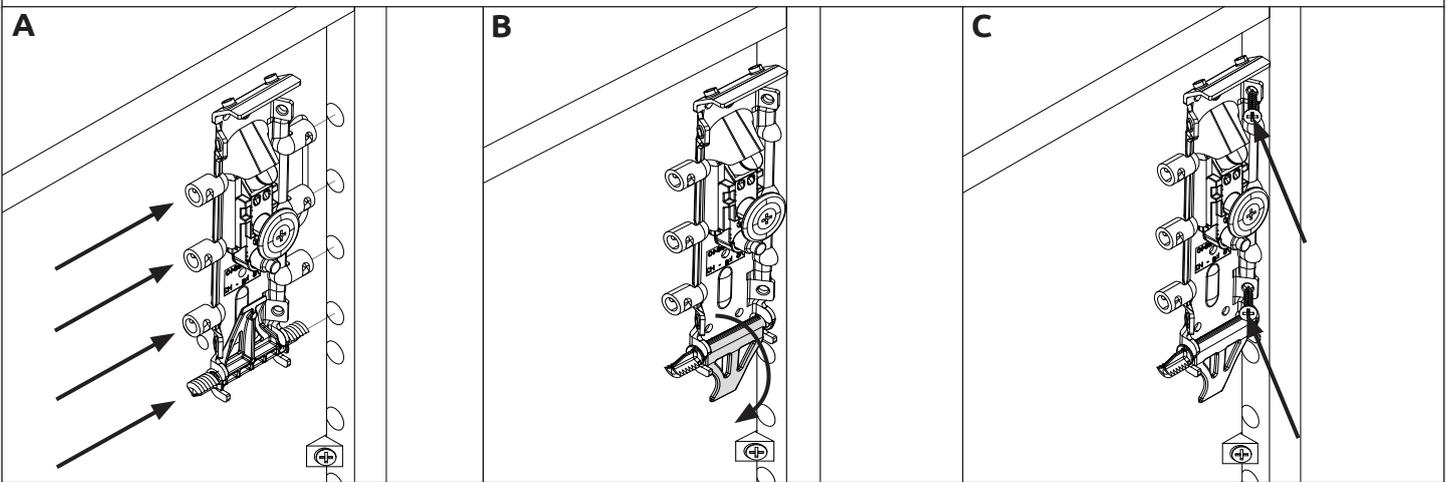

Step 10.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

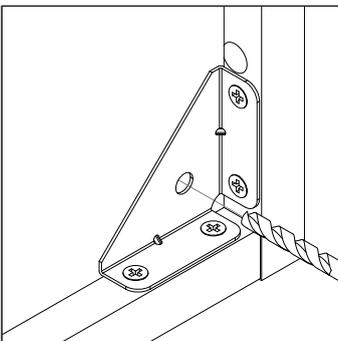

Step 11.



Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

WALL UNIT

1000, Lift Assembly Guide

Step 12.


Measure and attach hinge mounting plate onto fixed shelf **(C)** as shown, using screws already positioned within hinge plates.

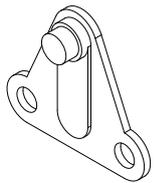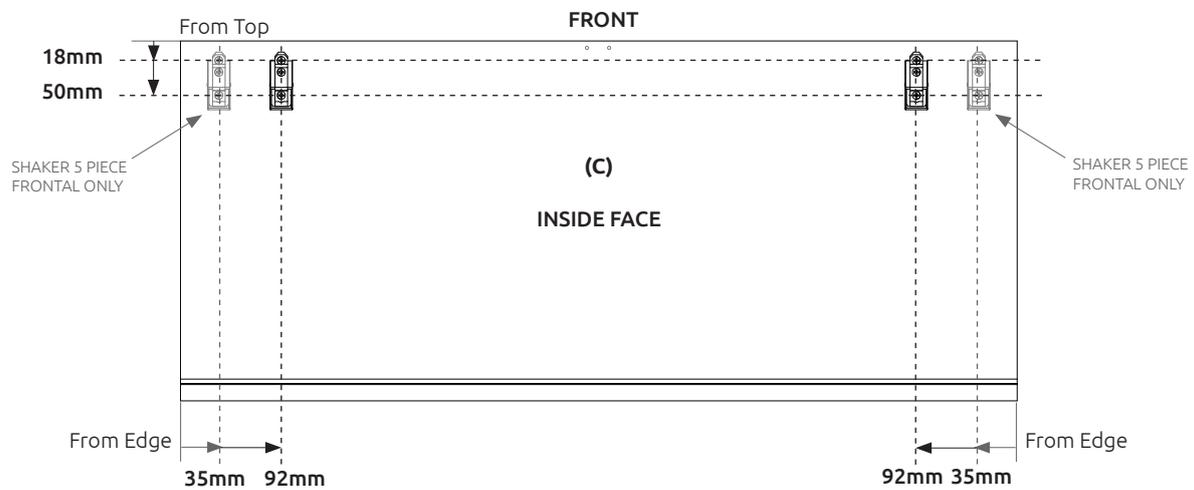

Lift hinge bracket


Step 13.

Measure and attach lift hinge brackets onto both end panels **(A)**, using 2 x screws per bracket which are already included within lift hinge pack.

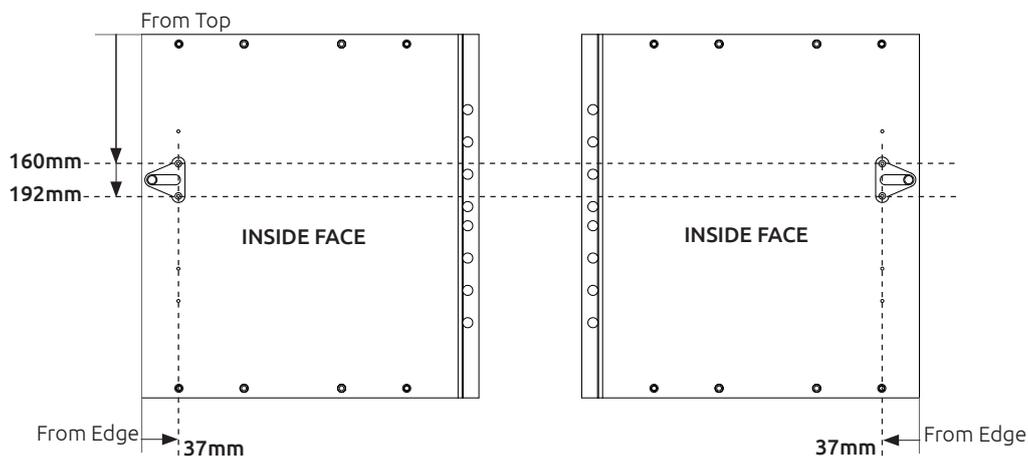

WALL UNIT



1000, Lift Assembly Guide

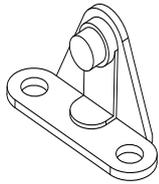

Lift hinge bracket

Step 14.

Measure and attach lift hinge brackets to the frontal using 2x screws per bracket which are already included within lift hinge pack.

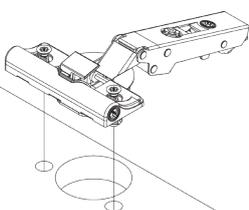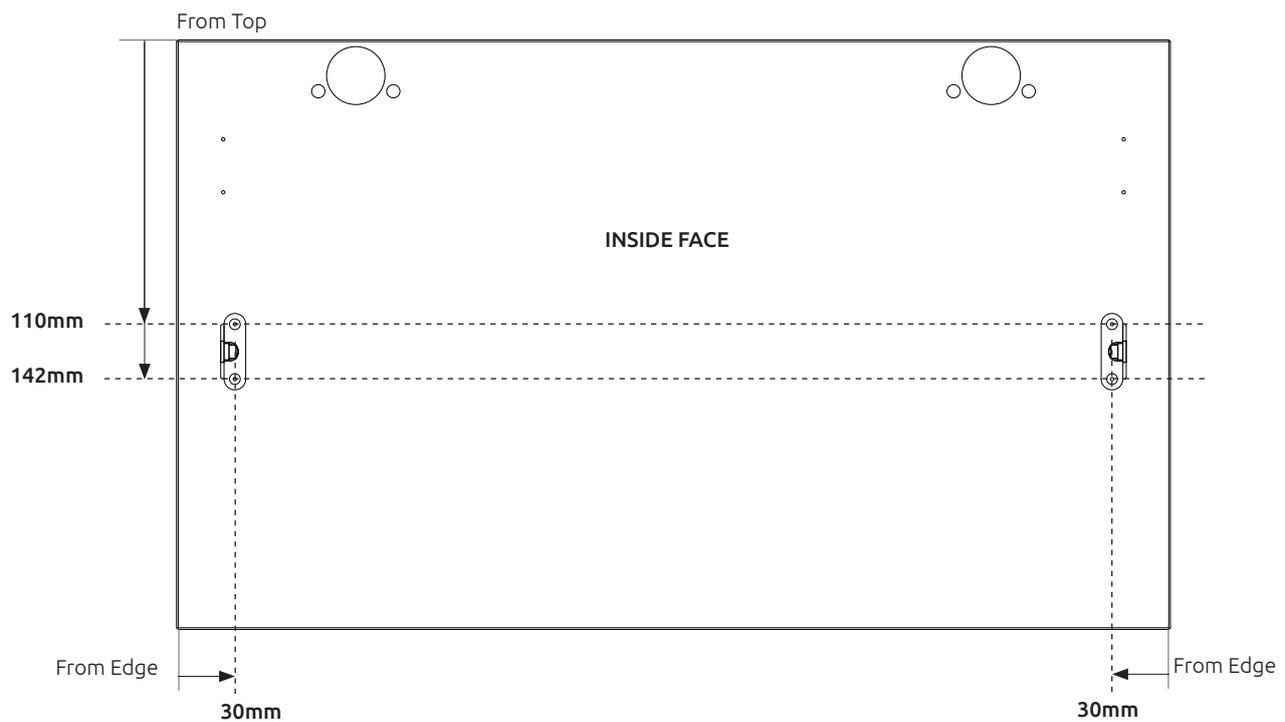

Step 15.

Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.




WALL UNIT**1000, Lift Assembly Guide**

Care to be taken. Hanging procedure is necessary for a safe installation.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

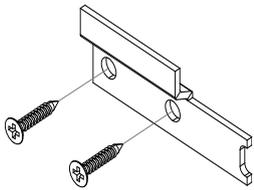**Step 16.**

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

Step 17.

Hang the unit using the brackets to hook onto the plate as shown.

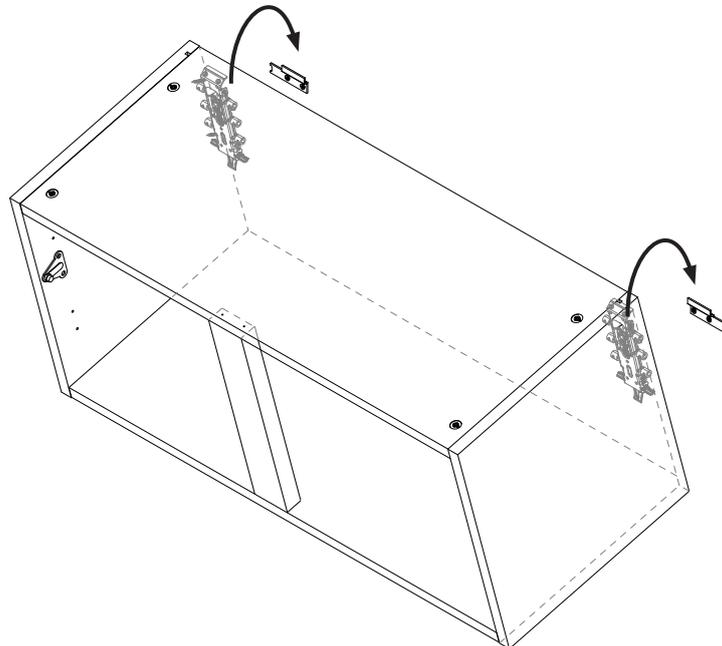


WALL UNIT


1000, Lift Assembly Guide

Step 18.

Using points **a**, **b** & **c** adjust the unit to suit.

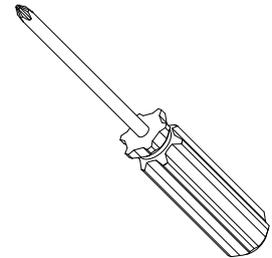

a

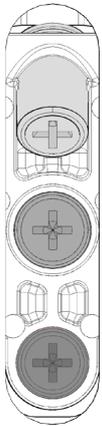

Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

b

Point b.

Adjust the depth using centre screw.


c

Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

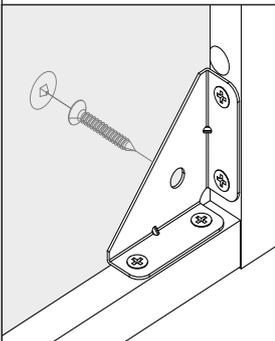

Step 19.

Secure the unit to the wall by screwing through the pilot hole and gusset from **step 11** into the wall. Place cover caps **(M)** on the heads to conceal them.




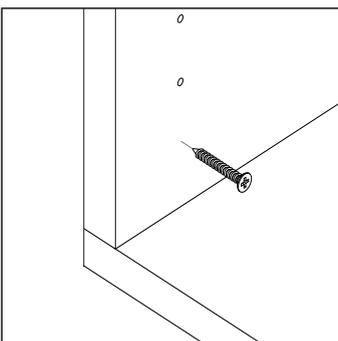



Step 20.



Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw at the top and bottom, place cover caps **(M)** on the heads to conceal them.

WALL UNIT

1000, Lift Assembly Guide

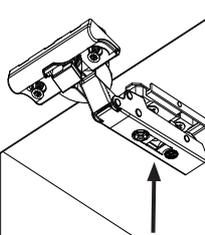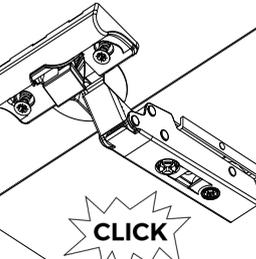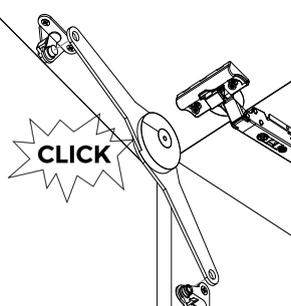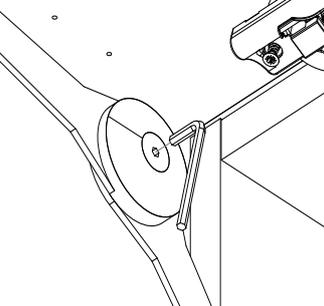		<p>Step 21. Clip hinges into hinge mounting plates on the unit.</p>
		<p>Step 22. Clip lift hinge mechanisms into each bracket. Use a 4mm allen key to adjust the strength of the lift hinge for the door weight.</p>
<p>Step 23. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

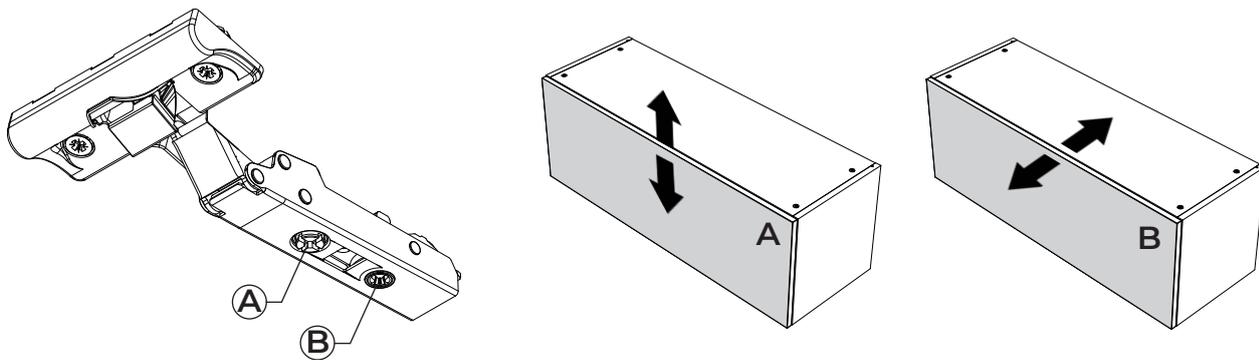

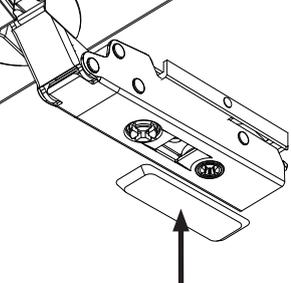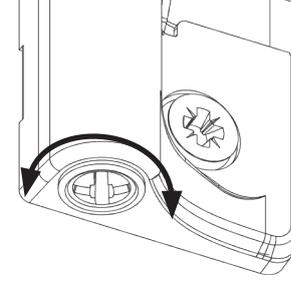	<p>Step 24. Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	--	---



Hinges **MUST** be adjusted to the **SAME STRENGTH**.

Vogue

WALL UNIT

1000, Lift Assembly Guide

wren

wren