


WALL BATTENS

Wall Batten Fitting Guide

FI.PK.BED.222.019

wren

400 Width Unit: 300 Width Batten
500 Width Unit: 400 Width Batten
800 Width Unit: 700 Width Batten
1000 Width Unit: 900 Width Batten



x4

30mm Screw



x12

45mm Screw



Screws and fixings for attaching to walls are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

Step 1.


Measurement 1: Measure the width of the unit and subtract 100mm for the batten width required.

Measurement 2: Measure the distance from the back of the robe or top box to the wall.


Measurement 3: Measure the distance from the floor to the centre of each rail on the back of the robe or top box.

800 width unit used for illustrative purposes only

Plan View

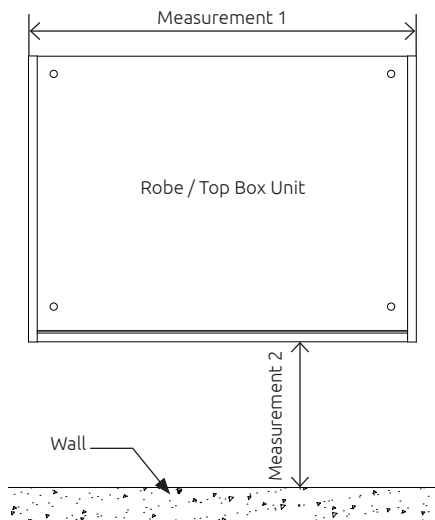

Side View

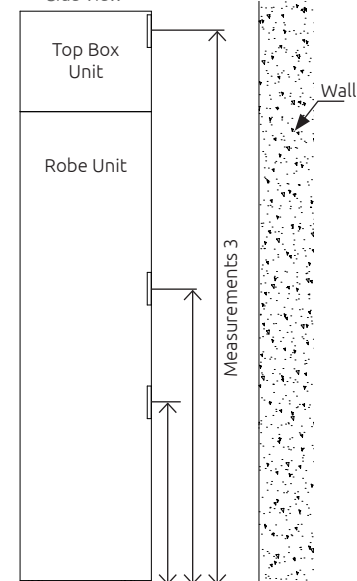

Wall Batten Fitting Guide

FI.PK.BED.222.019

Step 2.

Measurement 1: Using measurement 1 from page 1 cut the batten rail to the correct width.

Measurement 2: Subtract 2 x the board thickness* from measurement 2 and cut the rail to the correct length. Repeat for the correct number of width and depth rails required.

Drill pilots holes into the rails and secure them together using the 45mm screws provided to create the frame.


Two frames are required per robe.

One frame is required per top box.



*: Subtract 2 x board thickness

Plan View

400 - 500 Width Units

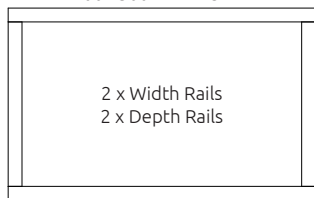

800 - 1000 Width Units

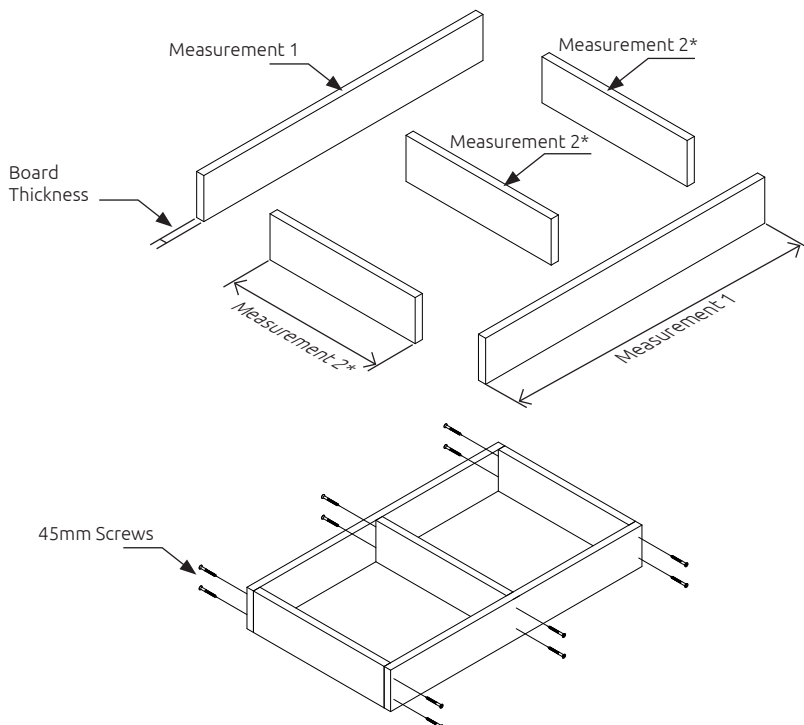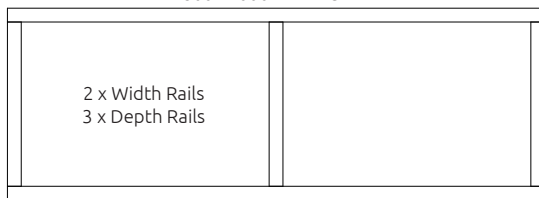

Wall Batten Fitting Guide


FI.PK.BED.222.019

Step 3. Robe Specific

Secure the frames to the wall using measurements 3 from step 1.

Screws and fixings for attaching to walls are not provided.

Position the robe in front of the frames and secure the robe to the frames by screwing through the rails located on the back of the robe.

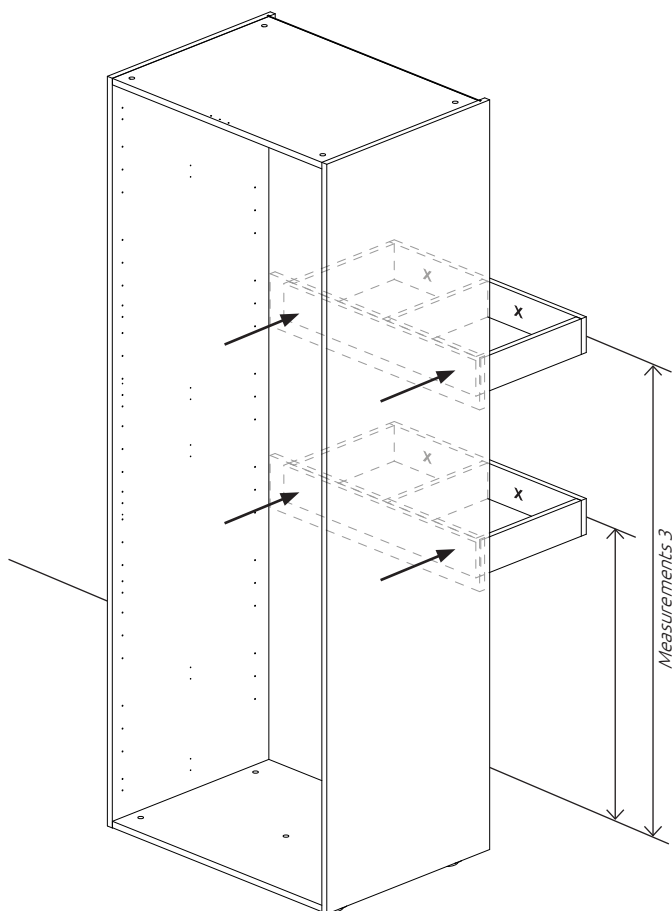

Wall Batten Fitting Guide

FI.PK.BED.222.019

Step 3. Top Box Specific

Secure the frame to the wall using measurement 3 from step 1.

Screws and fixings for attaching to walls are not provided.

Ensure the robe is positioned and secure before fitting the top box.

Position the top box on top of the robe and secure together using the guide and screws provided with the top box.

Secure the top box to the frame by screwing through the rails located on the back of the top box.

