






CAUTION
Tower doors **MUST** be open
during use of appliances.

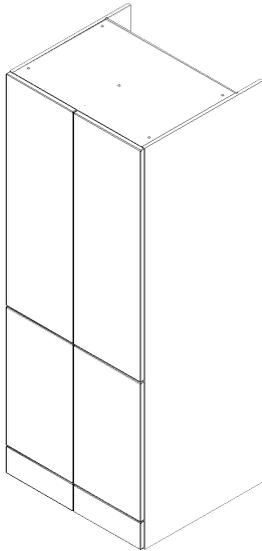


2070
70-30 Dr Option

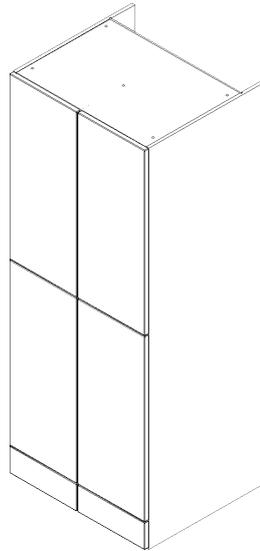


2070
50-50 Dr Option

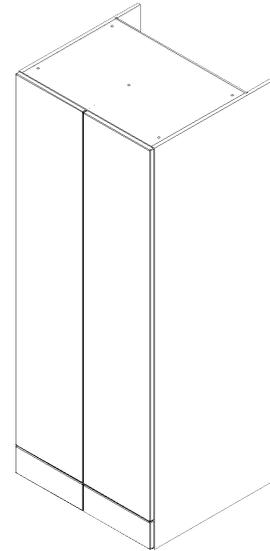


2070
1 Dr Option

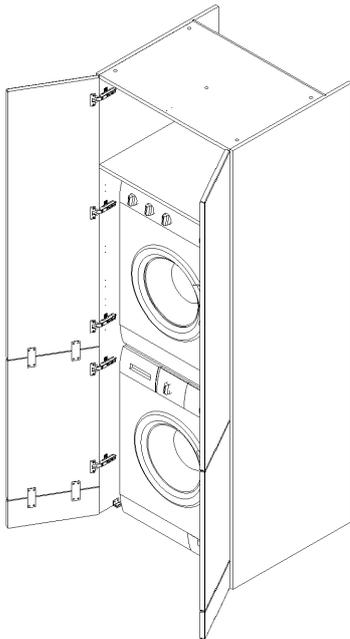

2250
70-30 Dr Option

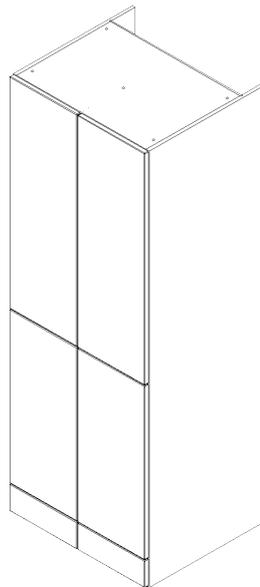

2250
50-50 Dr Option

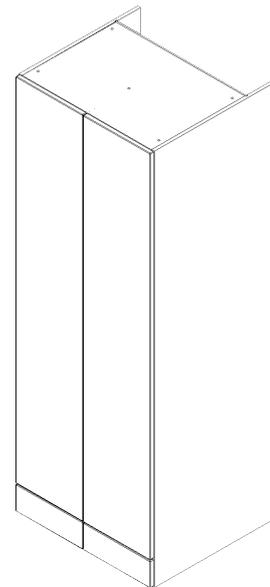

2250
1 Dr Option




BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.


THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED



Screws for attaching to walls and floor are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for floor and wall construction are used.

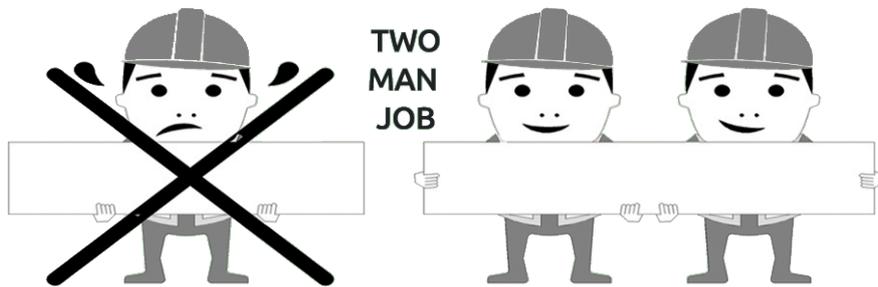


NOT to be used with
CAM DOWEL &
CAM LOCK

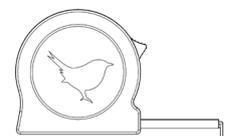


TOWER UNIT

Hideaway Stacked Appliance Tower Assembly Guide


wren

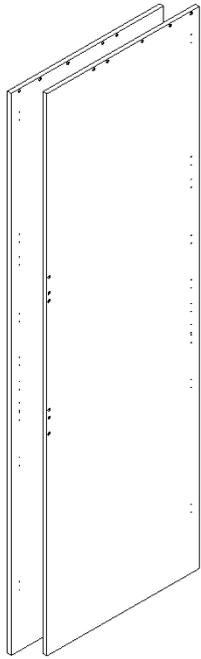

Panel eA
x2 End Panel

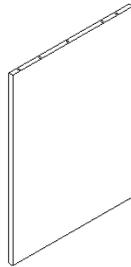


Panel sB
x1 Top Fixed Shelf

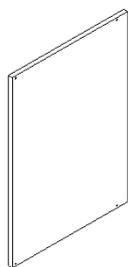


Panel sC
x1 Loose Shelf



Panel rD
x2 Rails

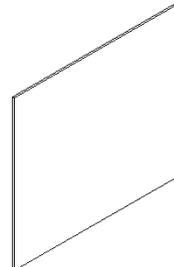


Panel bE
x1 Back Panel

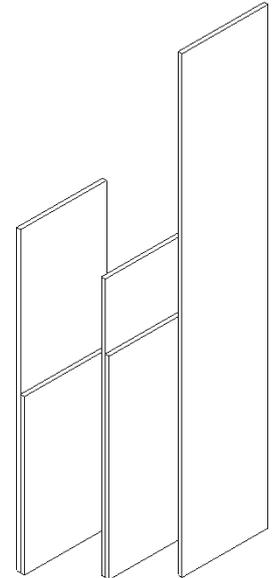


Frontals
70/30 or 50/50 or 1 Dr
(Packed Separately)


2250 tower shown for illustration purposes.

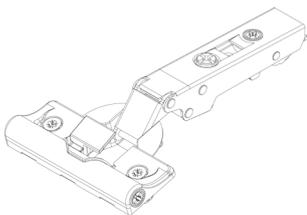

Hinge
Inc Screws

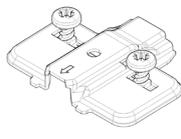

Hinge Mounting Plate
Inc Screws



Shelf support block
x4
(Includes screws)



Fixing Plate
x8



L Bracket LGE
x6



Glue bottle
x2




(F) x8
Wooden Dowel



(G) x4
Cam Dowel
(Expanding)



(H) x4
Cam lock



(K) x18
30mm
Screw



(L) x44
15mm
Screw



(M) x16
Cover Cap




(N) x2
Door Buffer




(P) x6
45mm screws

Hideaway Stacked Appliance Tower Assembly Guide



Step 1.
Using provided adhesive, fill the holes marked with circles on end panels **(eA)** approximately 3/4 full and seat dowels **(F)** into holes in both end panels **(eA)** marked **(F)** as shown.

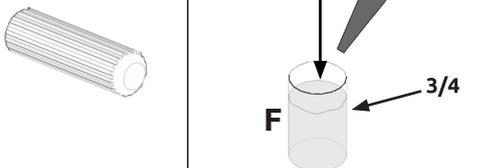

Step 2.
Seat cam dowel **(G)** into holes in both end panels **(eA)** marked **(G)** as shown.

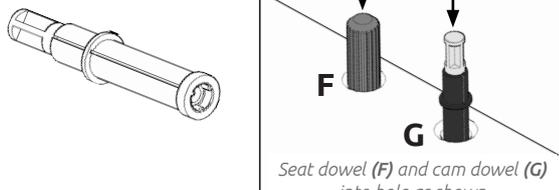

Seat dowel (F) and cam dowel (G) into hole as shown

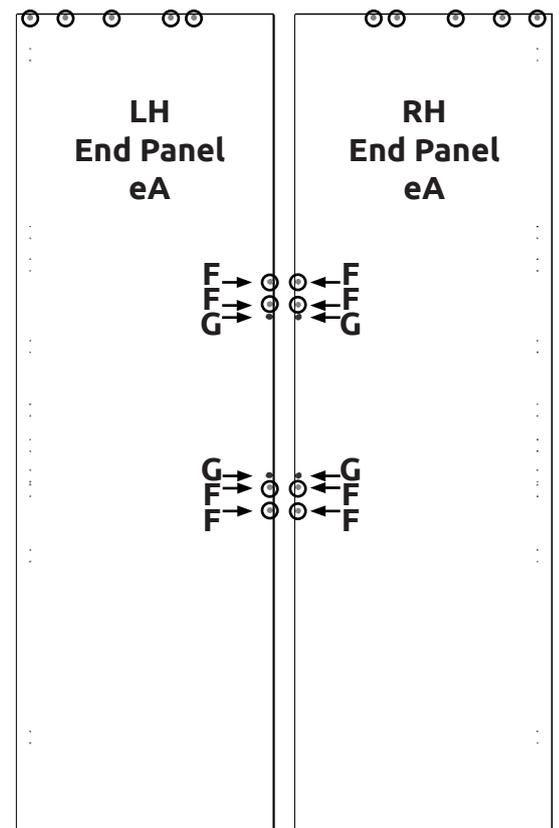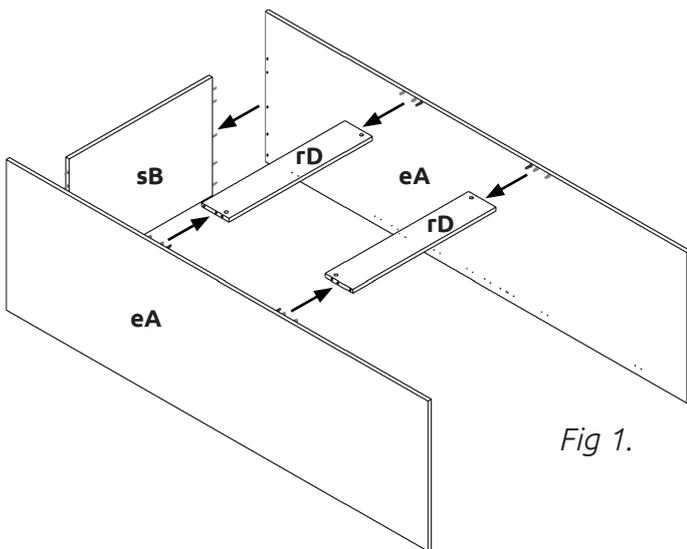


 DO NOT USE POWER TOOLS WITH CAM DOWEL **(G)** OR CAM LOCK **(H)**

 NB. All Cam Lock **(H)** are to be positioned facing the outside of the unit carcass, for ease of tightening.

Step 3.
Attach panels **(sB)** & **(rD)** to panels **(eA)**, using dowels **(F)**, and also using cam dowels **(G)** in positions as shown. (See Fig 1.)

Step 4
Insert cam lock **(H)** and hand tighten, this will expand cam dowels **(G)** and tighten the unit together.

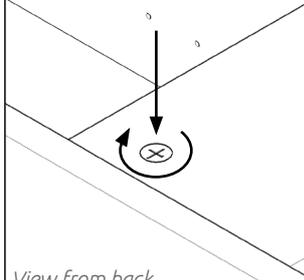


View from back

Hideaway Stacked Appliance Tower Assembly Guide

Step 5.

Using the pre-drilled holes on end panel (**eA**), Insert 3 x 45mm screws (**P**) to secure end panel (**eA**) and top shelf (**sB**) together. Repeat on both sides of the tower.

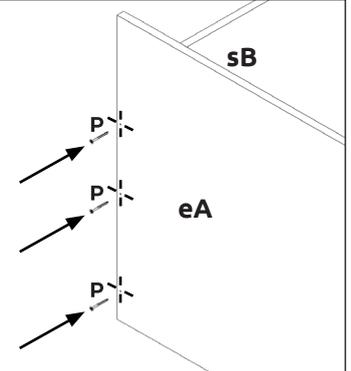


Step 6.

Using at least 2 people, carefully stand the tower up right. **IT IS IMPORTANT TO LIFT THE UNIT INTO THE UPRIGHT POSITION. DO NOT TILT AS DEPICTED IN IMAGE.**



Step 7.

Attach loose shelf (**sC**) support blocks to unit with screws provided. The height of the shelf is the Washing machine height + appliance stacker thickness + tumbler dryer height + 30mm for air circulation. Ensure the back of the loose shelf is aligned with the back of the top fixed shelf (See Fig 1). Secure shelf blocks into end panels (**eA**) first with 2 x 20mm screws provided. Secure shelf support bracket up into loose shelf (**sC**) with 2 x 15mm screws provided. Repeat for each loose shelf support block. Cover all shelf support blocks with cover caps provided.

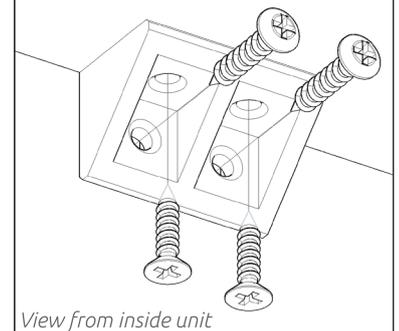

View from inside unit

Step 8.

Measure from the top of fixed shelf (**sB**) to the bottom of loose shelf (**sC**) and cut the back panel to size. Secure the back panel to the back of shelves (**sB**) & (**sC**) using 3 x 30mm screws (**K**) per shelf. Ensure you screw into the centre of shelves (**sB**) & (**sC**).


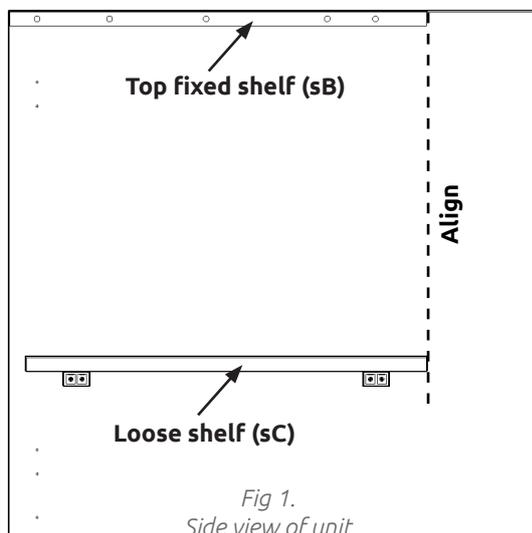



Fig 1.
Side view of unit

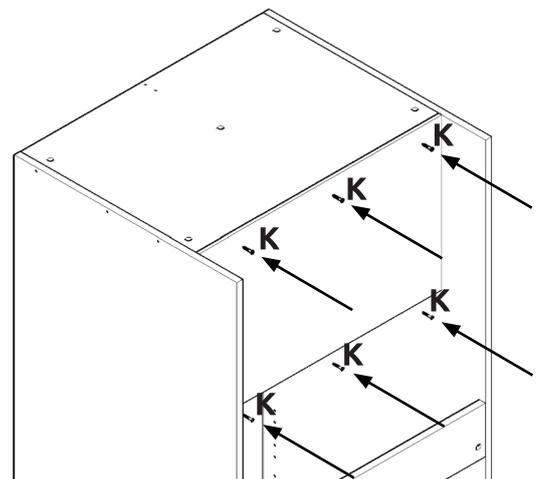

Hideaway Stacked Appliance Tower Assembly Guide



Step 9.

Secure the unit to the wall by screwing through the back rails into the wall (Fig 1). Cover screw heads with cover caps (M) provided. **Screws not provided.**

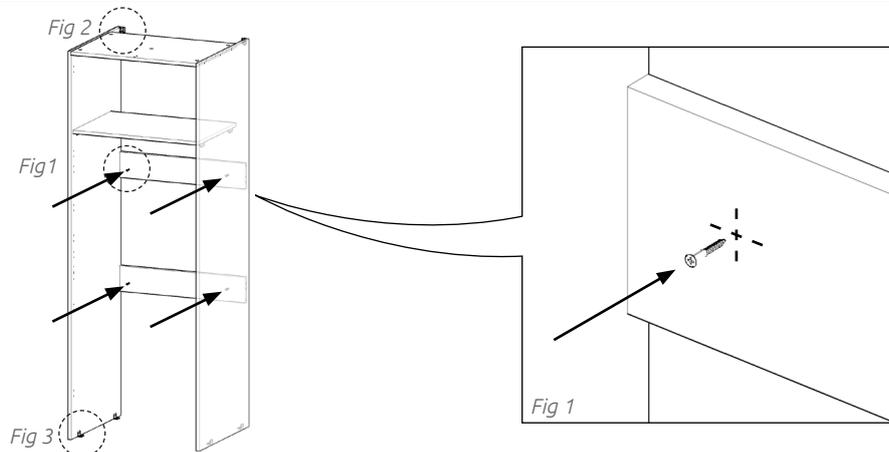



Step 10.

Secure unit to wall, using L brackets LGE. Use 2 x 15mm screws (L) to secure each of the L brackets LGE to the top of the end panel at the rear on both sides. Then screw through into the wall as shown. (Fig 2) **Screws not provided.**

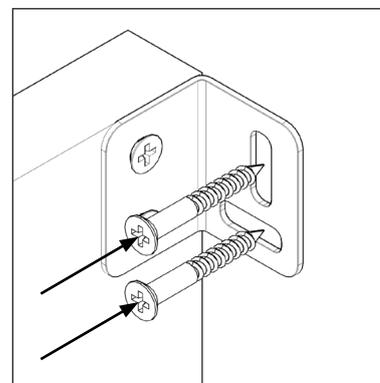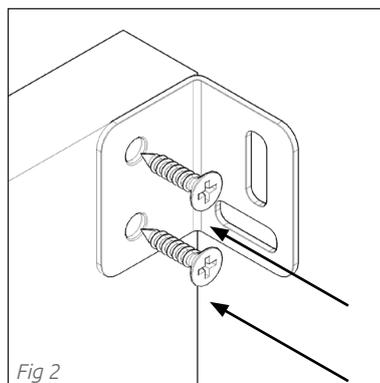

Step 11.

Secure unit to floor, using L brackets LGE. Use 2 x 15mm screws (L) to secure each of the L brackets LGE to the bottom of the end panel at the front and rear on both end panels. Then screw through into the floor as shown. (Fig 3) **Screws not provided.**

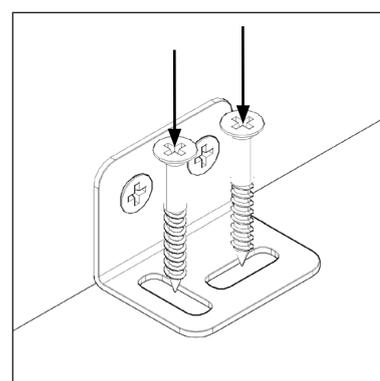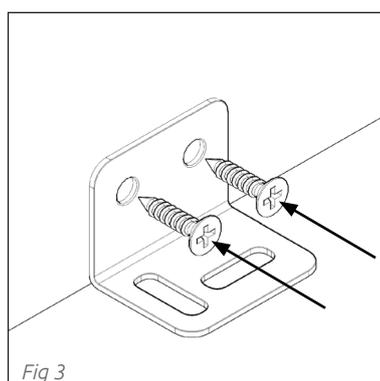


Hideaway Stacked Appliance Tower Assembly Guide

Step 12. (Where applicable)

Attach hinge plates to the inside face of end panels (eA) as shown.

Hinge side to be mounted in accordance to customer specific kitchen plan.

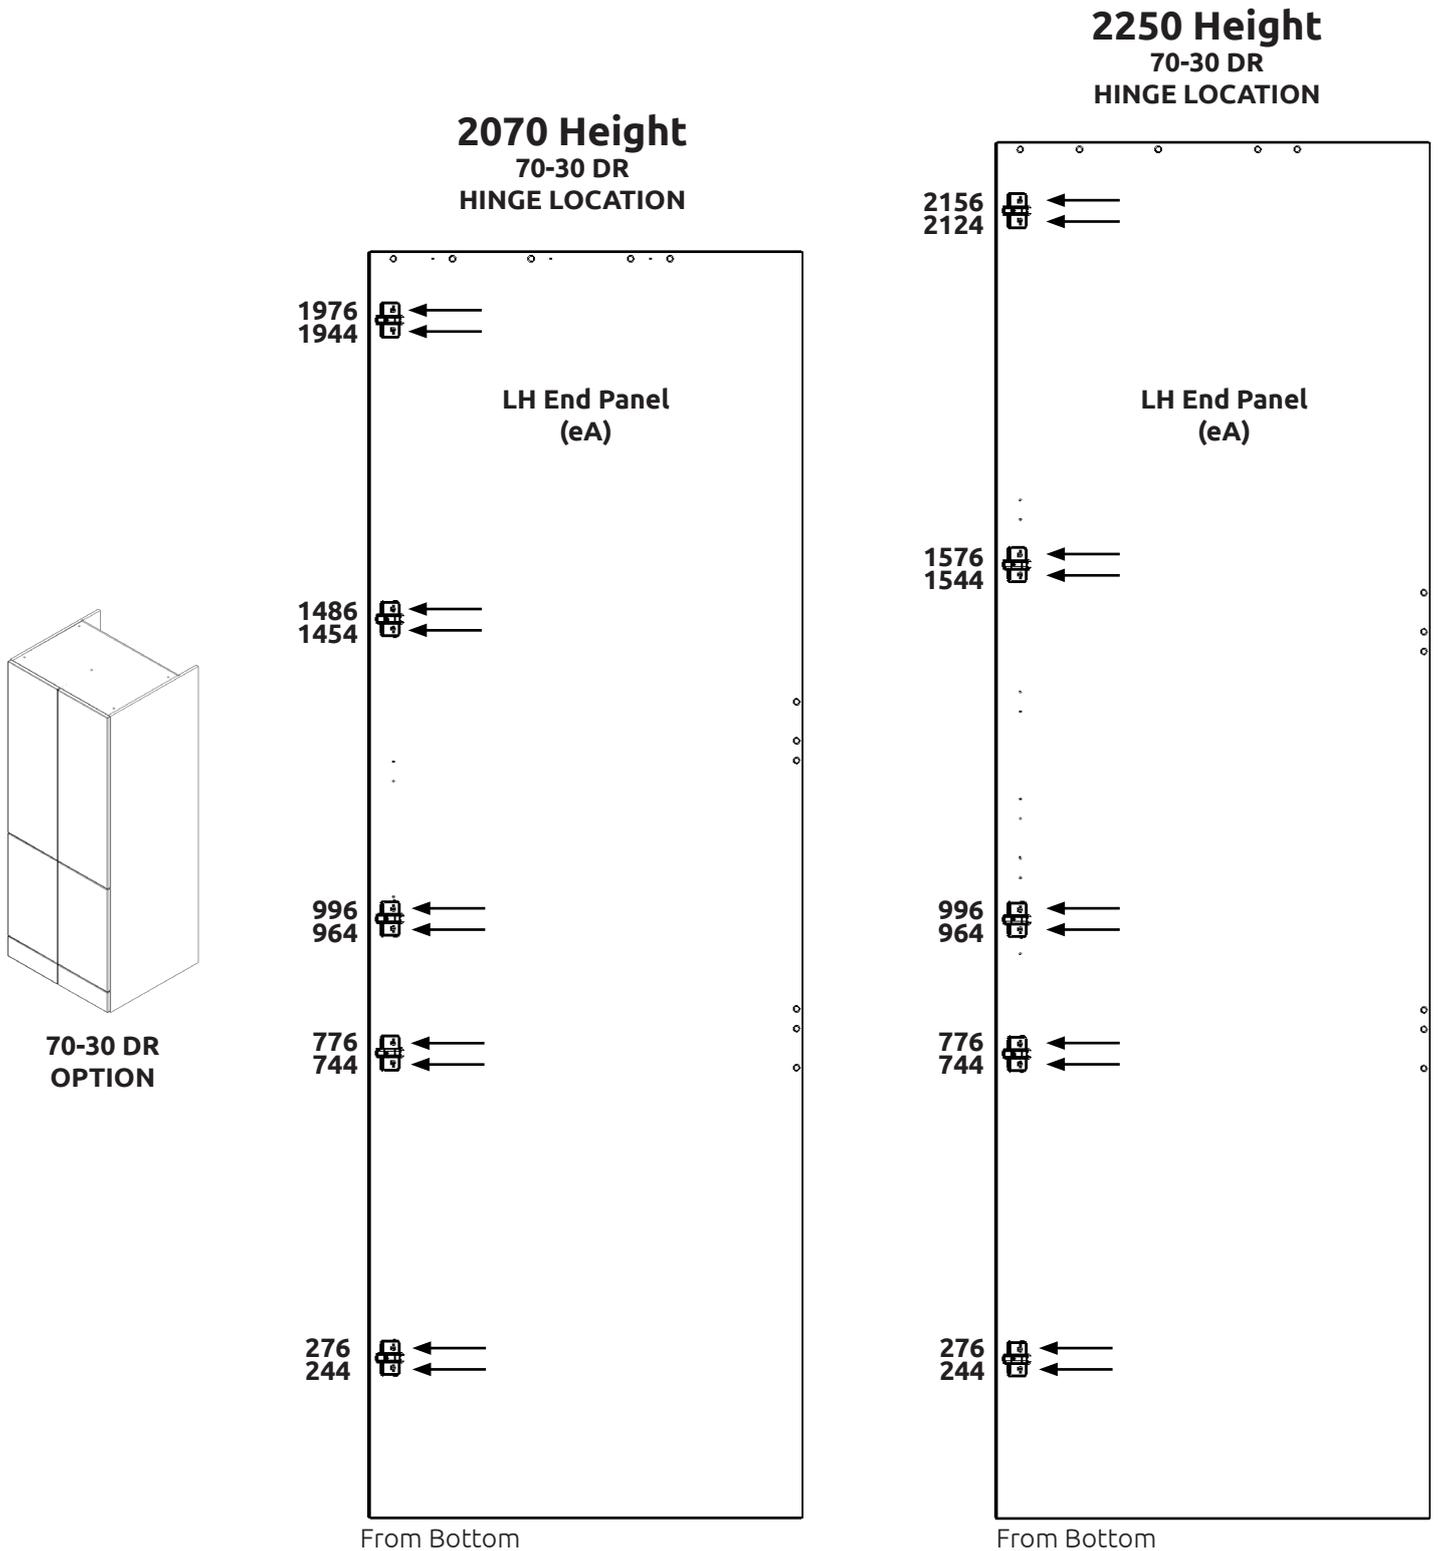


Hideaway Stacked Appliance Tower Assembly Guide

Step 12. (Where applicable)


Attach hinge plates to the inside face of end panels (eA) as shown.

Hinge side to be mounted in accordance to customer specific kitchen plan.

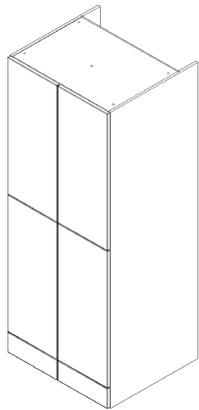


50-50 DR
OPTION

2070 Height 50-50 DR HINGE LOCATION

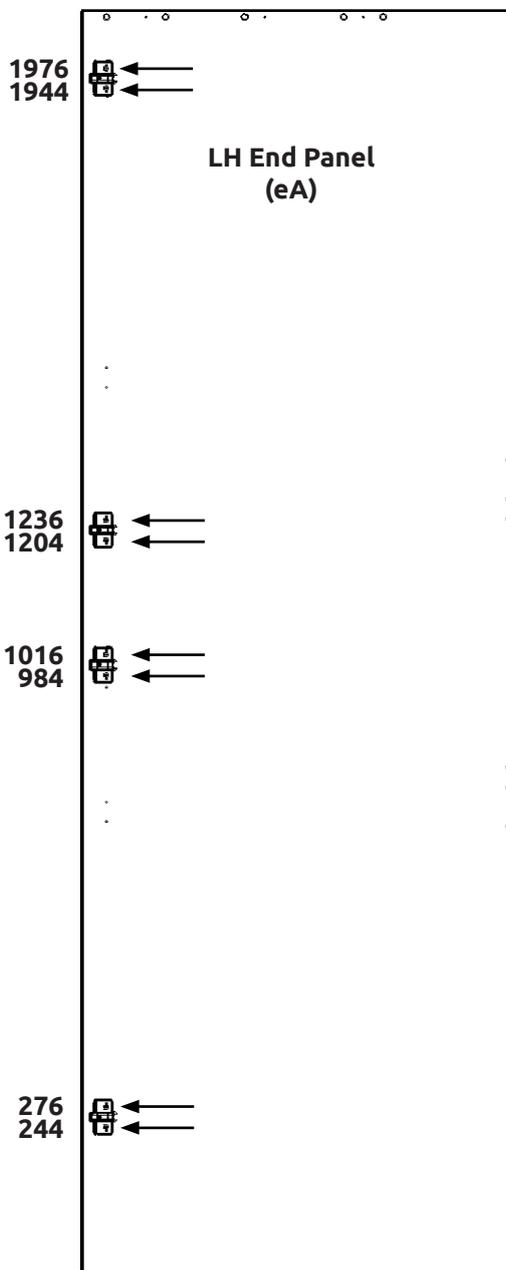

From Bottom

2250 Height 50-50 DR HINGE LOCATION

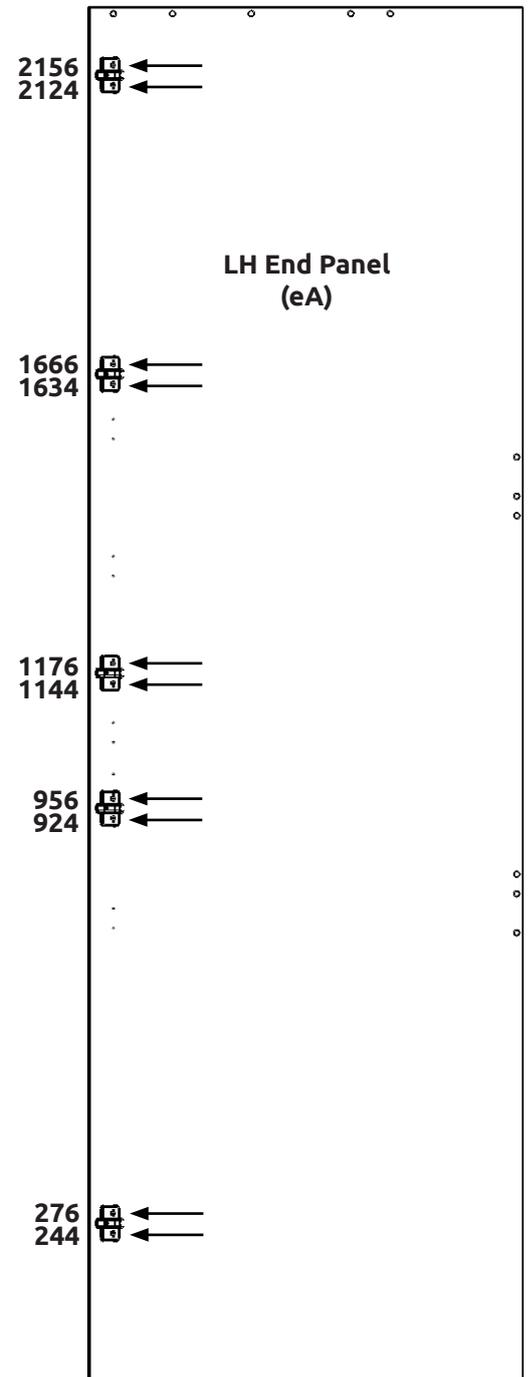

From Bottom


Hideaway Stacked Appliance Tower Assembly Guide

Step 12. (Where applicable)

Attach hinge plates to the inside face of end panels (eA) as shown.


Hinge side to be mounted in accordance to customer specific kitchen plan.

2070 Height 1 DR HINGE LOCATION

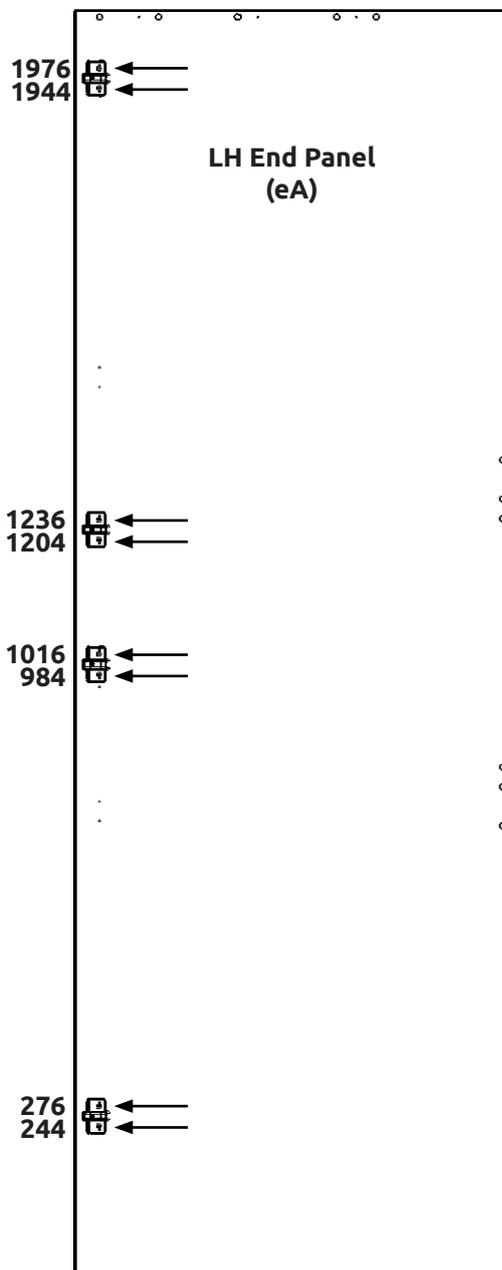


From Bottom

2250 Height 1 DR HINGE LOCATION

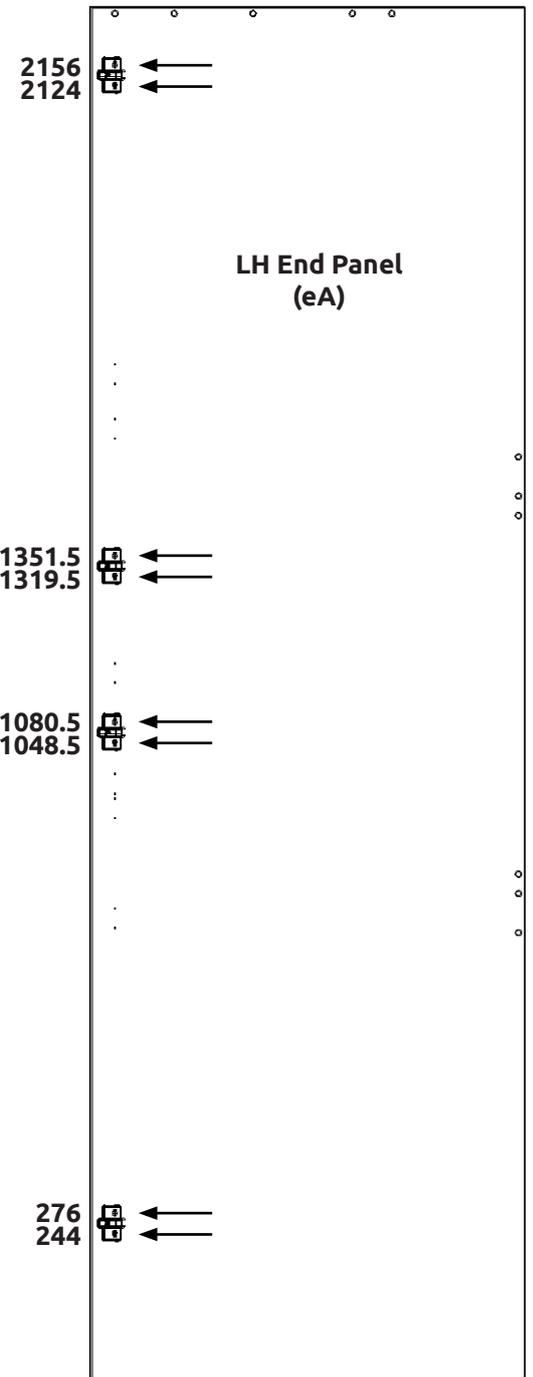

From Bottom

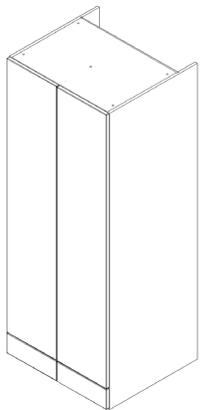

1 DR
OPTION


Hideaway Stacked Appliance Tower Assembly Guide

Step 13.

Cut decor end panel to size.

The height of the decor end panel is the height of the tower + the height of the cornice.


The depth of the decor end panel is the depth of the tower + the door thickness + 2mm for the door buffers.

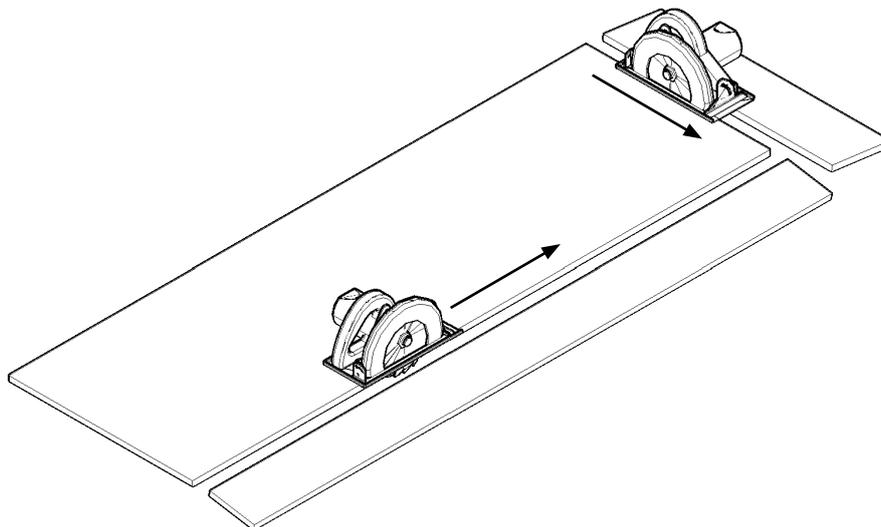

Step 14.

Secure the decor end panel to the tower using 6 x 30mm screws (K).




Screw to the rear of the hinge plate and the rear of the unit at the top, middle and bottom. Place cover caps (M) over the heads to conceal them.

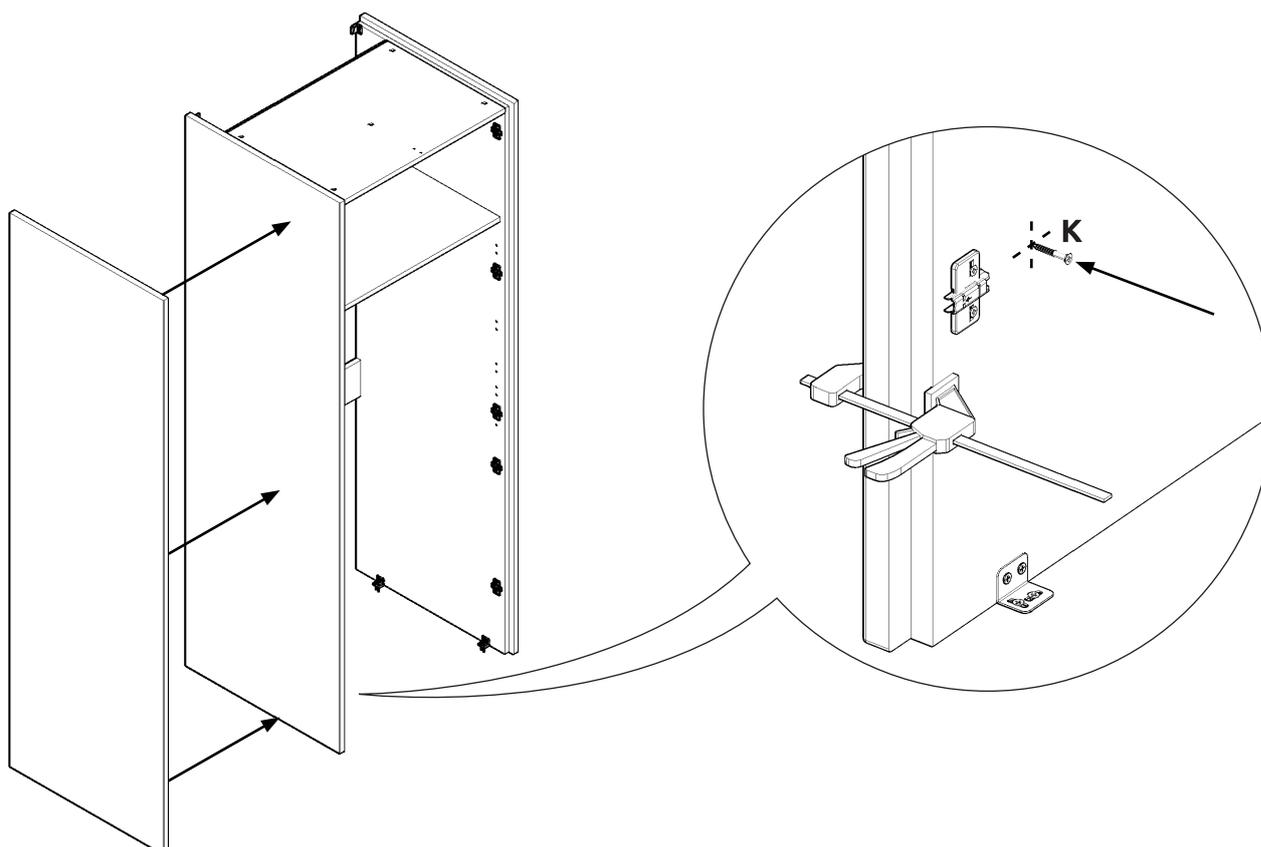




TOWER UNIT

wren

Hideaway Stacked Appliance Tower Assembly Guide

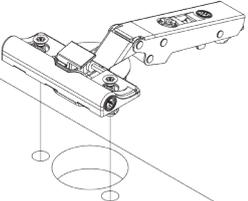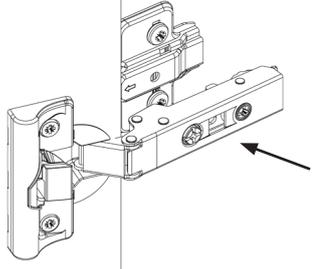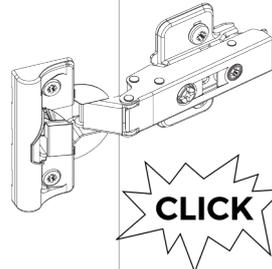	<p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>  <p>Hinge dowels</p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

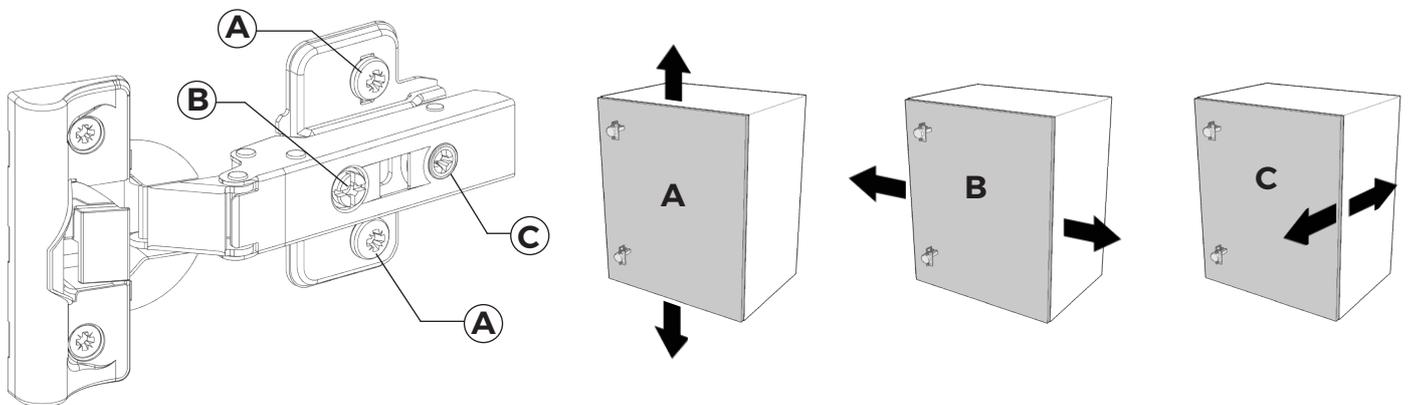

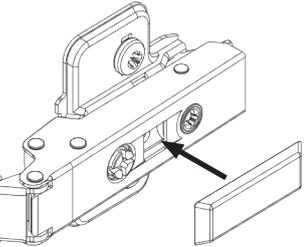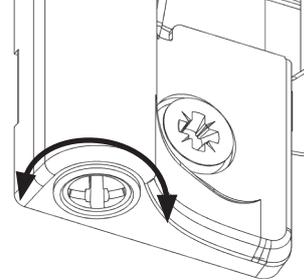	<p>Step 4. Fit cover caps to hinges and adjust soft-close to suit.</p>	
--	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

wren