



HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

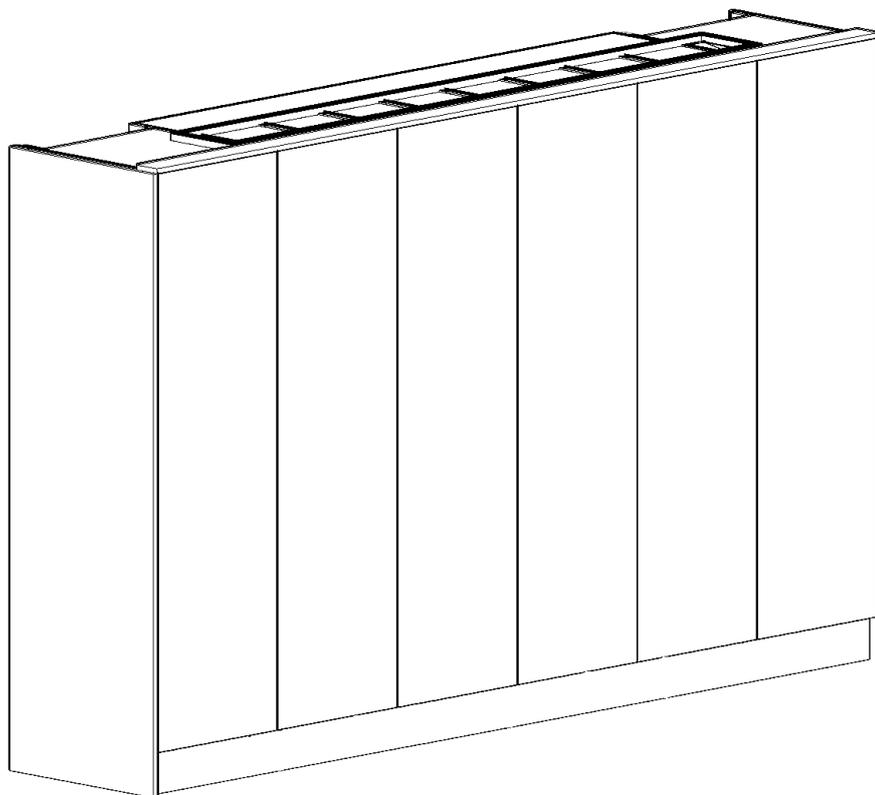

CAUTION
Bi-Fold doors **MUST** be open
during use of induction hob.

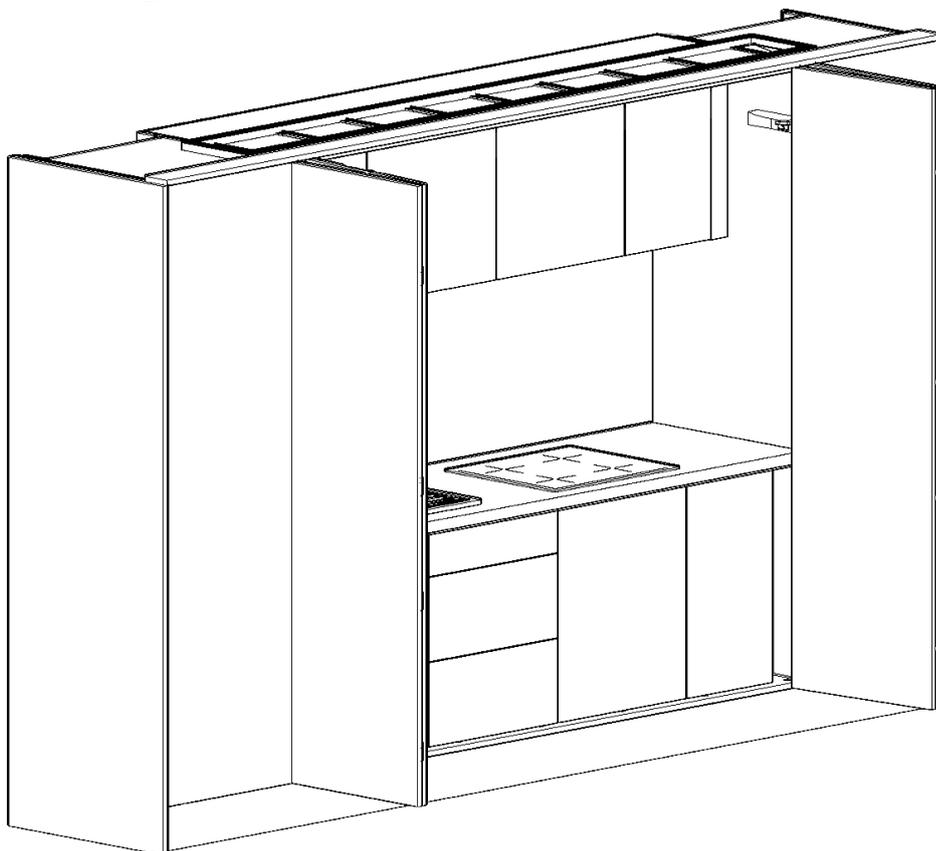

HIDE AWAY KITCHEN UNIT

wren

Assembly Guide



BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED




Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.



Screws for attaching to the worktop are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.



**TWO
MAN
JOB**

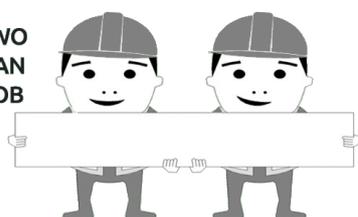

**PROTECT
AGAINST
DAMAGE**



CONTENTS

2	Robe panels
3	Components
4 - 5	Tower Unit(s) / Packer Assembly
6	Fly under shelf / Left Tower placement
7 - 11	Lower Unit installation
12 - 13	Worktop / Upper Decor end installation
13 - 15	Upper Unit installation
16 - 17	Support frame / Fly over shelf installation
18 - 27	Bi-fold door assembly and installation
28	Tower decor end installation
29	Plinth installation

HIDE AWAY KITCHEN UNIT

wren

Assembly Guide


HIDE AWAY UTILITY - COMPONENTS




Fly Under Shelf x1
(Sa)



Fly Over Shelf x1
(Sb)

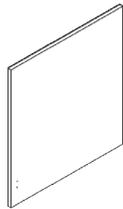

Lower LH Decor x1
(Da)

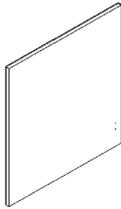


Lower RH Decor x1
(Db)



Upper LH Decor x1
(Dc)



Upper RH Decor x1
(De)

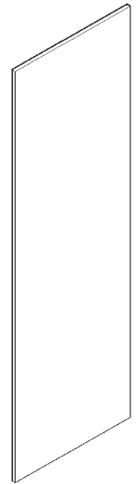

Tower Decor Ends x2
(Df)



Fixing Rails x12
(a)



Cornice x4
(b1)



Cornice x2
(b2)



Plinth x2
(c)



Filler x5
(d)



Support Frame x1
(e)



LH Bi-Fold Door 1 x1
(f)




LH Bi-Fold Door 2 x1
(g)



RH Bi-Fold Door 1 x1
(h)




RH Bi-Fold Door 2 x1
(i)

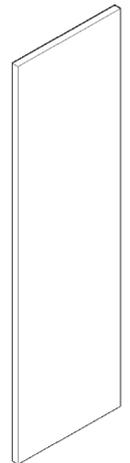

Worktop x1
(w)

TOOLS REQUIRED

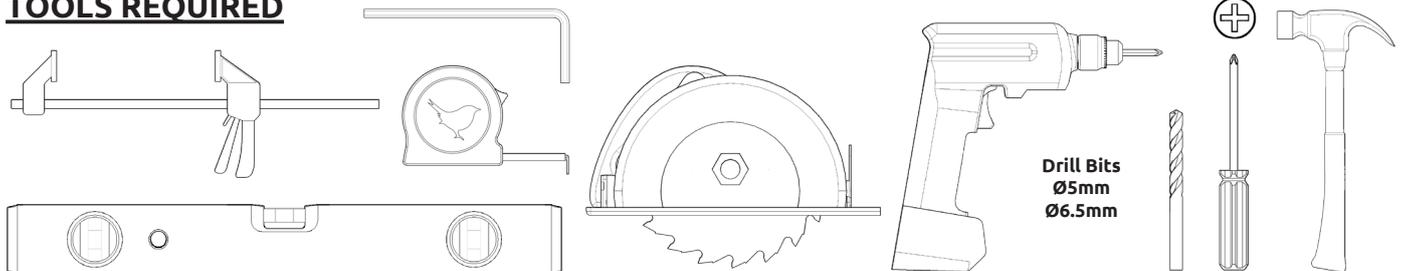


HIDE AWAY KITCHEN UNIT


wren

Assembly Guide


HIDE AWAY KITCHEN - FIXTURES & FITTINGS

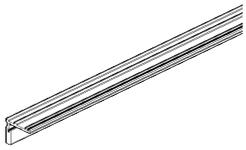


Bottom
Runner Guide x1
(Ha)

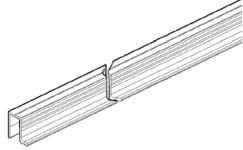


Top
Runner Guide x1
(Hb)




Bi Fold Door Mechanism Arm
Left Hand x1
Right Hand x1
(Hd)

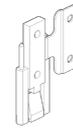


Bi Fold Door
Centre Hinge x8
(He)

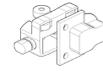

Door Runner
Bottom x2
(Hf)

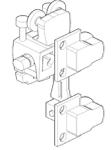

Door Runner
Top x2
(Hg)

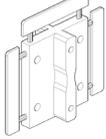


4mm Door
Spacer x2
(Hj)



Hinge
x8
(Hk)



Hinge Plate
x8
(Hl)

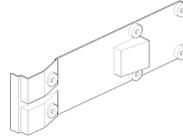


Hinge Jig
x2
(Hm)




Please note units (Ub), (Uc), (Ud) and (Ue) can be configured according to the customers specific unit plan. For the purpose of this guide the units shown below will be used throughout.


INCLUDED UNIT COMPONENTS

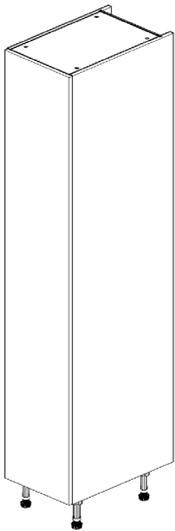


Tower Unit x2
(Ua)

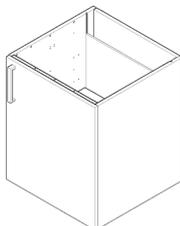


Sink Base Unit
(Ub)

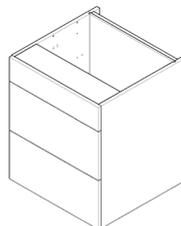


3 Drawer Base Unit
(Uc)

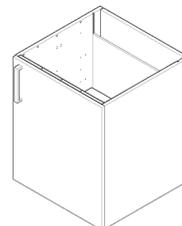


Hob Base Unit
(Ud)

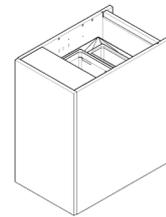


Bin Pull-out Base Unit
(Ue)

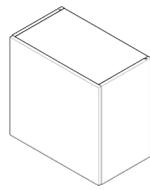

Wall Unit
(Uf)

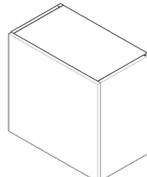

Wall Unit
(Ug)

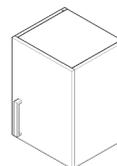

Wall Unit
(Uh)

FI.PK.FIT.321 - FITTING PACK - Supplied in pack:



(L) x50
15mm screws



(K) x125
30mm screws



(P) x4
45mm screws




(M) x59
Cover Cap

HIDE AWAY KITCHEN UNIT


wren

Assembly Guide

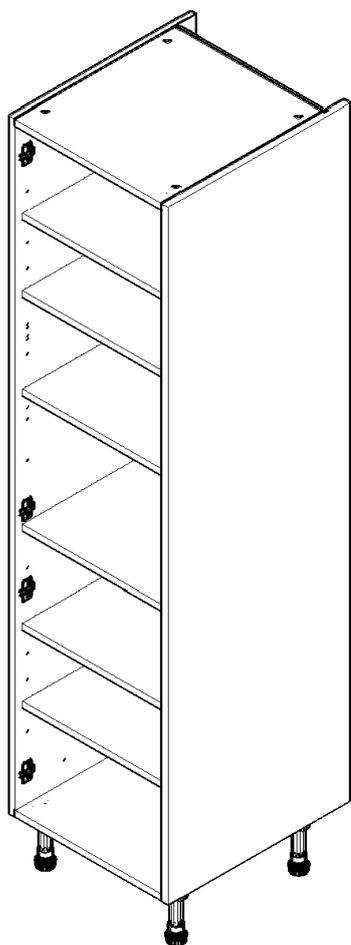


Step 1.

Secure each of the legs in place on the tower units (**Ua**) with 4 x 15mm screws (**L**) per leg. **Ensure legs are rotated as shown so the tab is supporting the end panel.**

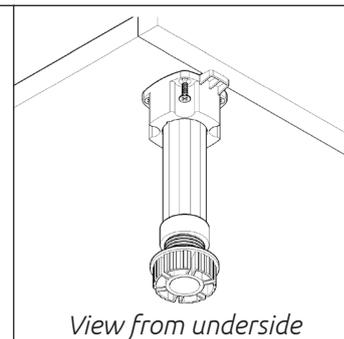


It is **important** to lift the unit (**Ua**) onto its legs.
Do **not** tilt as depicted in the image.
Do **not** fix the tower units back to the wall at this stage.

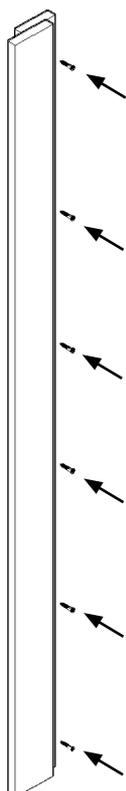


Step 2.

Cut one of the fixing rails (**a**) down to 80mm

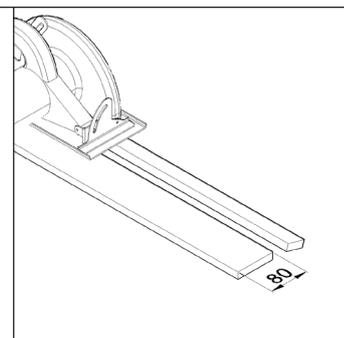

Step 3.

Attach the fixing rail from **step 2** to another fixing rail (**a**) using 6 x 30mm screws (**K**) to form a tower packer. **Repeat steps 2 & 3** for the other side of the tower.

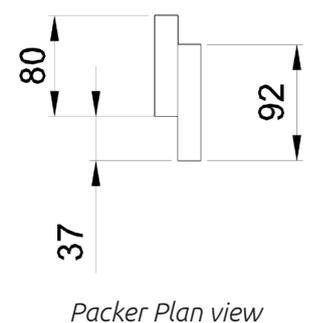


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide


Step 4.

Secure the tower packers into position using 6 x 30mm screws **(K)** per packer.

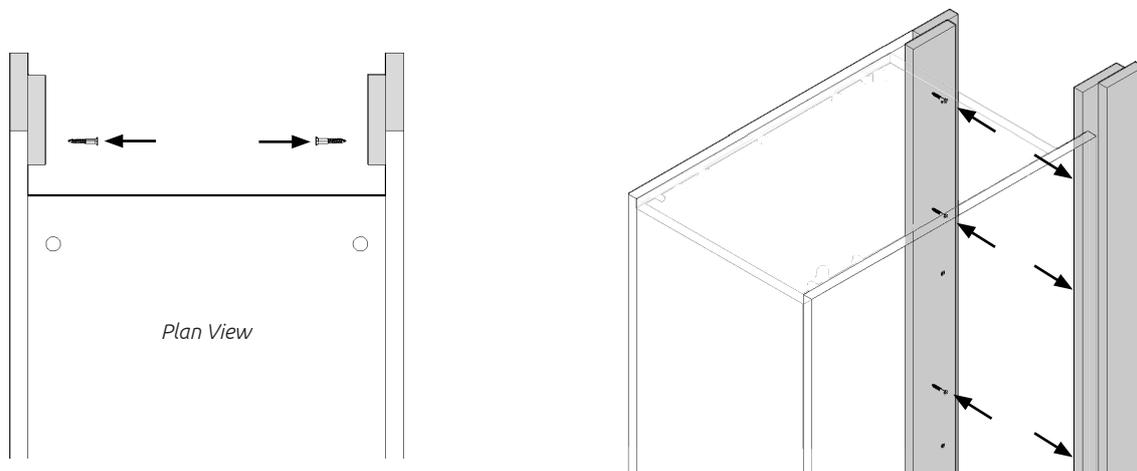

Step 5.

Repeat **steps 2 to 4** to make and fix 2 additional tower packers to the other tower unit **(Ua)**.

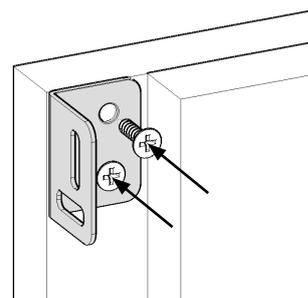


Step 6.

Use 2 x 15mm screws **(L)** to secure each **L bracket LGE** to the rear of the tower packers on the left and right hand sides, at the top of the packers.

Step 7.


Manoeuvre one of the tower units **(Ua)** into position. Screws through each **L bracket LGE** into the wall. **Screws not provided.**

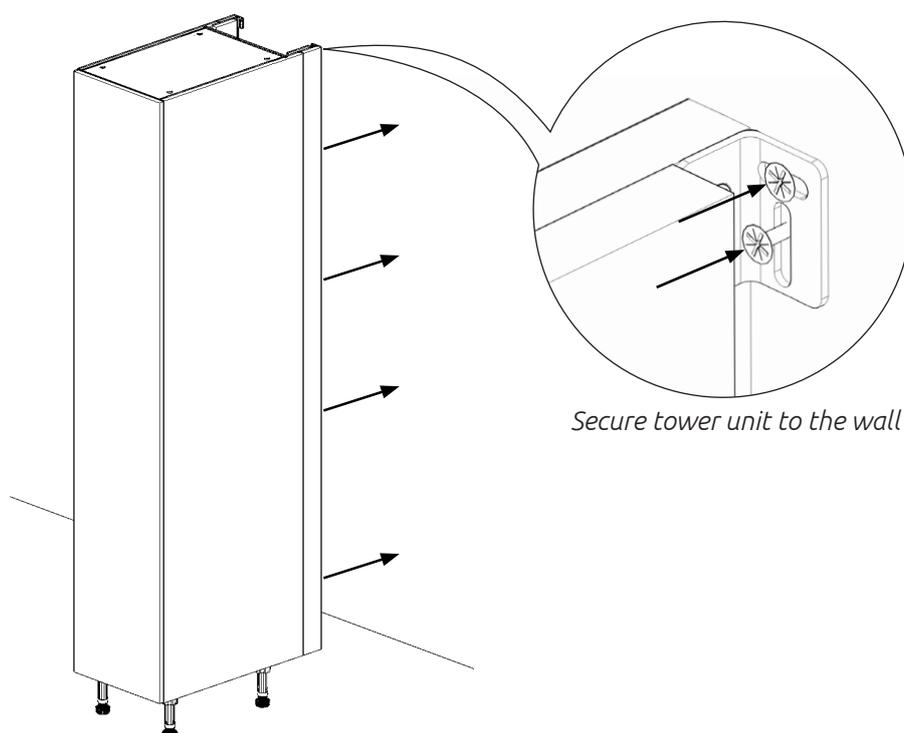

Assembly Guide

Step 8.


See *fig 1*. Fix 16 legs into place on the bottom of the fly under shelf (Sa) using 4 x 15 mm screws (L) per leg. See *fig 2*. Push legs firmly down into leg base. Adjust legs to 150mm before turning upright. Once in situ level accordingly.

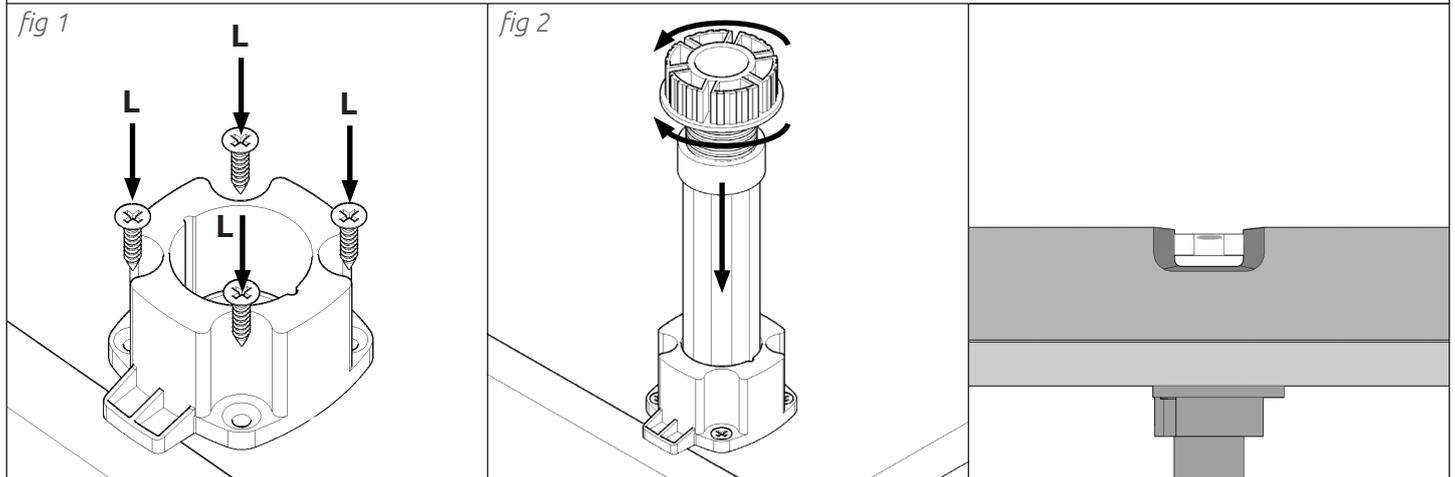

Ensure legs are rotated as shown so that part of it is supporting the end panels.


Viewed from underneath

Ensure shelf is level

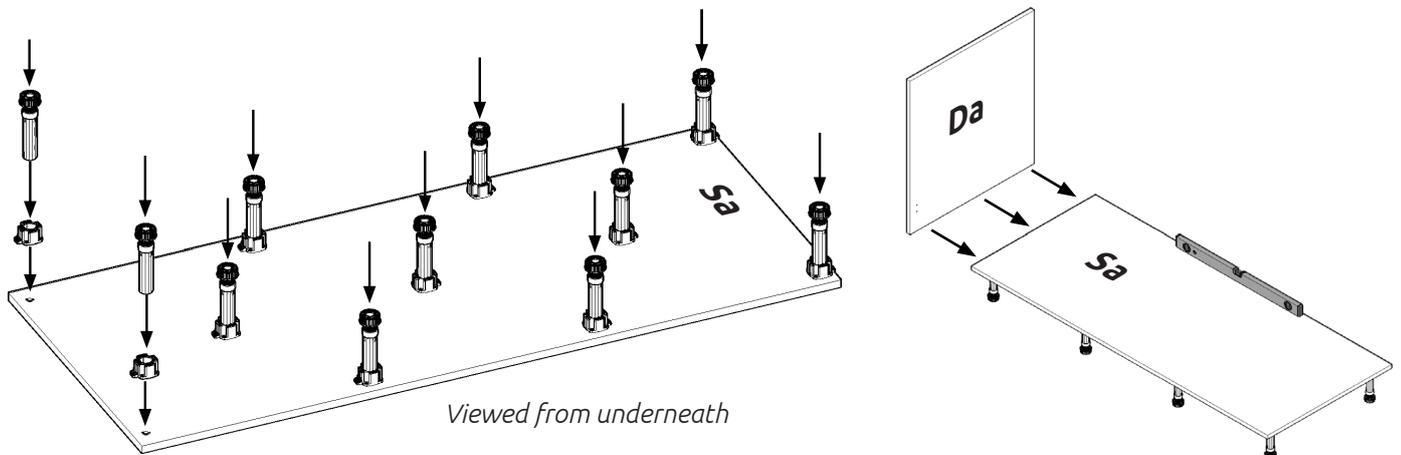

Viewed from underneath

*Legs supplied as part of fully assembled units (Ub), (Uc) and (Ud).

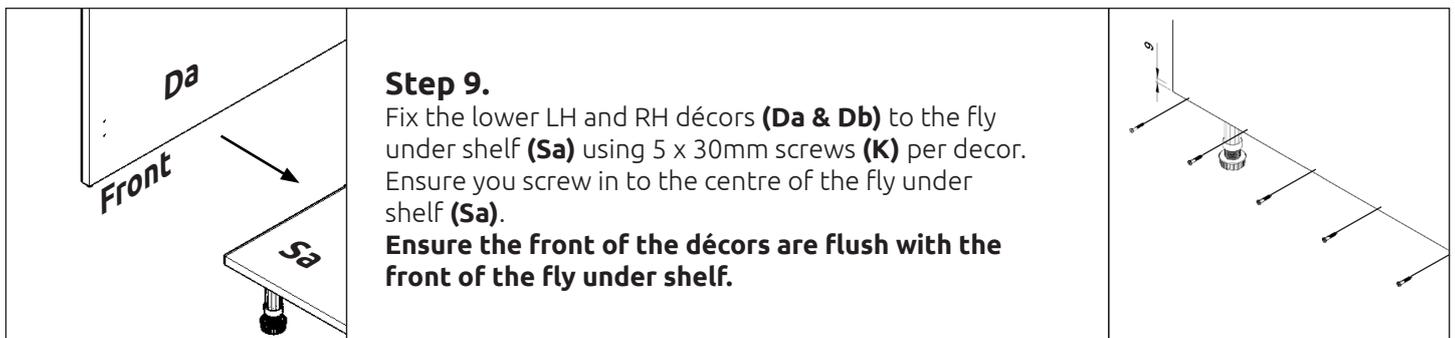

Step 9.

Fix the lower LH and RH décors (**Da & Db**) to the fly under shelf (**Sa**) using 5 x 30mm screws (**K**) per decor. Ensure you screw in to the centre of the fly under shelf (**Sa**).

Ensure the front of the décors are flush with the front of the fly under shelf.



Ensure hinge holes are at the **front** and facing **inwards** towards the fly under shelf (**Sa**)

HIDE AWAY KITCHEN UNIT


wren

Assembly Guide

Step 10.

Manoeuvre the assembled fly under shelf (**Sa**) and the lower LH decor (**Da**) into position against the left hand tower unit (**Ua**).

See *fig 1*. Ensure the front of the lower LH decor (**Da**) is aligned with the front of the tower unit (**Ua**) end panel.
See *fig 2*. Screw through into the adjacent end panel (**Da**) using 4 x 30mm screws (**K**). Cover screw heads with screw caps (**M**) provided. **Repeat steps 9 & 10** for the other side of the tower.


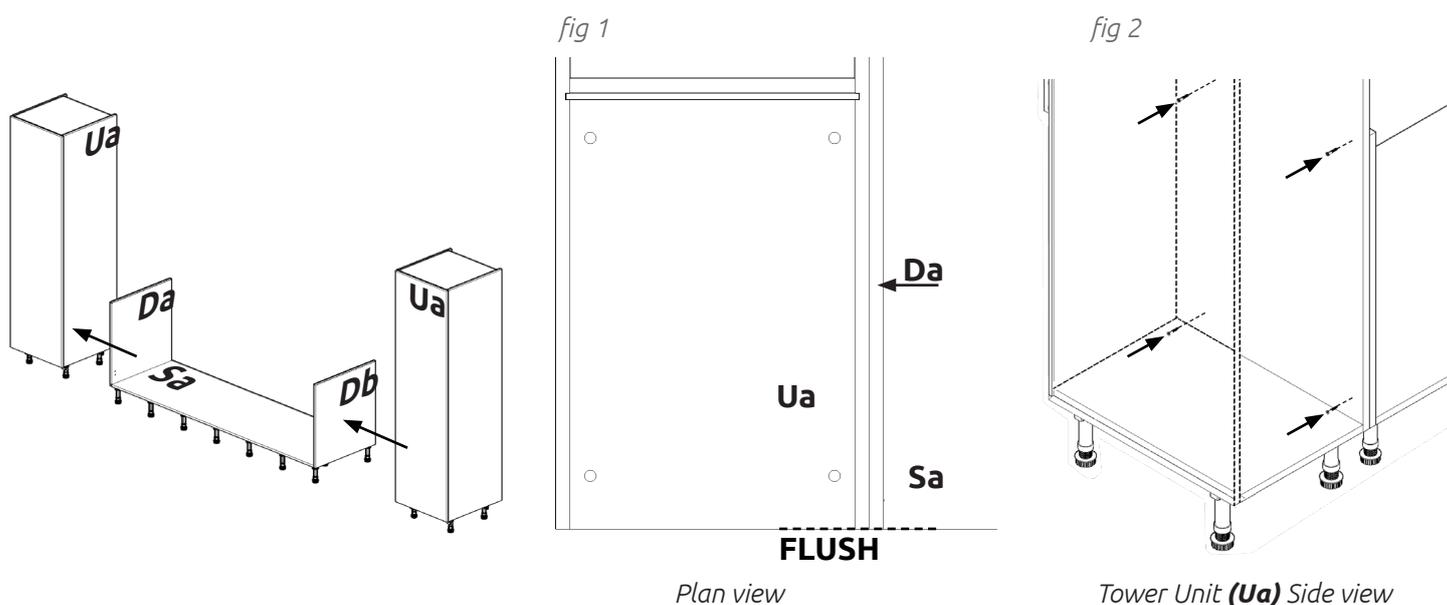


Step 11.

Secure 2 x fixing rails (**a**) to the wall using appropriate fixings. One at the back of the fly under shelf (**Sa**) and one level with the top of the lower LH decor (**Da**).



Ensure the fixing rails are LEVEL before fixing to the wall.

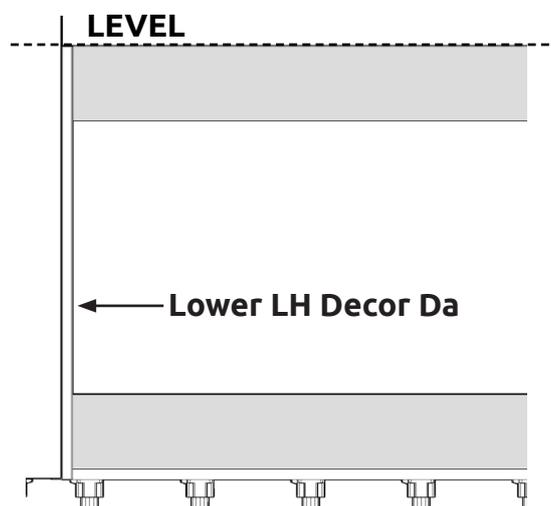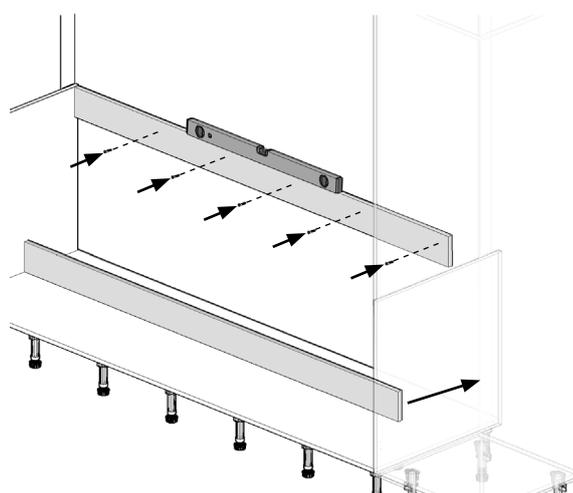

Fixing rail setup Front view


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

Step 12.

Cut a length of fixing rail **(a)** to 263mm. Secure directly next to the fixing rails from **step 11**. Secure to the wall using appropriate fixings.

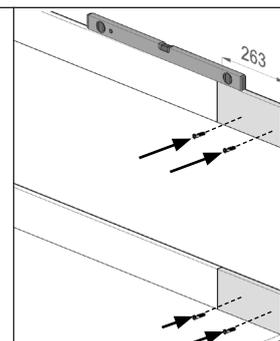

Ensure the fixing rails are **level** before proceeding on the next step




Steps 13 - 19 are for reference only.
Please refer to customer specific unit plan for exact layout.



Please note **doors / drawers** may need to be **opened / removed** in order to secure units.


Step 13.

Cut a filler **(d)** to the sizes depicted.

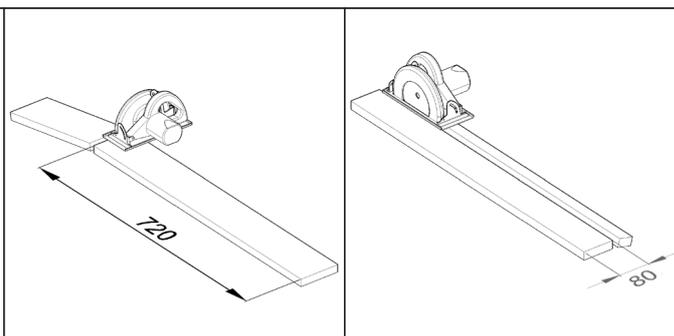

Step 14.

Attach the filler **(d)** to the sink unit base **(Ub)** 100mm from the front of the sink unit base end panel. Secure using 4 x 45mm screws **(P)**, conceal screw heads with cover caps **(M)**.

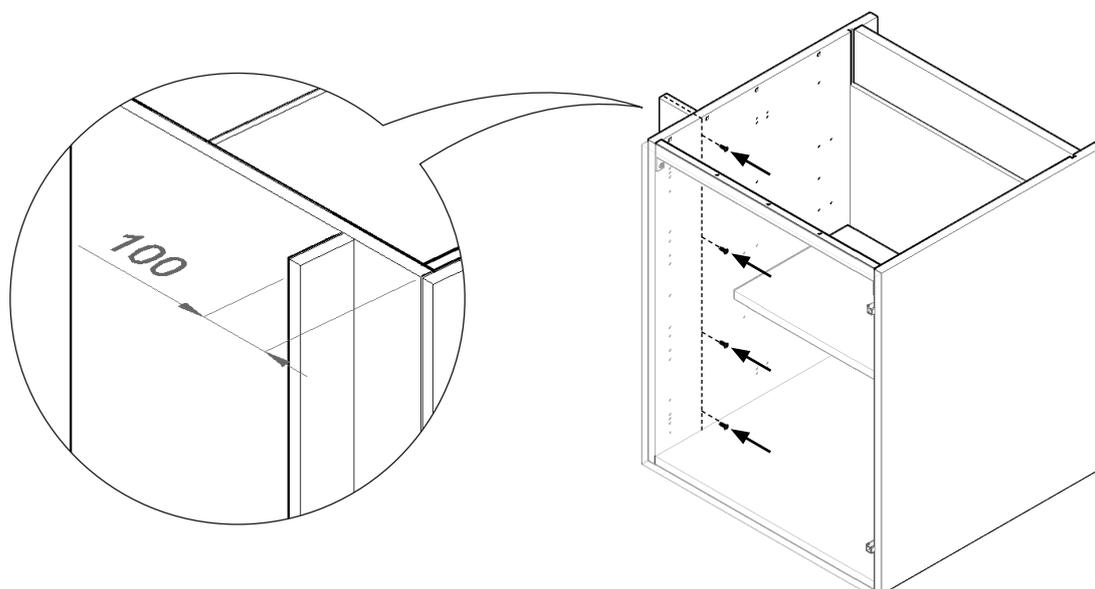



HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

Step 15.

Manoeuvre the sink base unit (**Ub**) and the 3 drawer base unit (**Uc**) into position on top of the fly under shelf (**Sa**). Ensure the units are touch tight to the lower LH decor (**Da**) and tight to the back fixing rails (**a**).

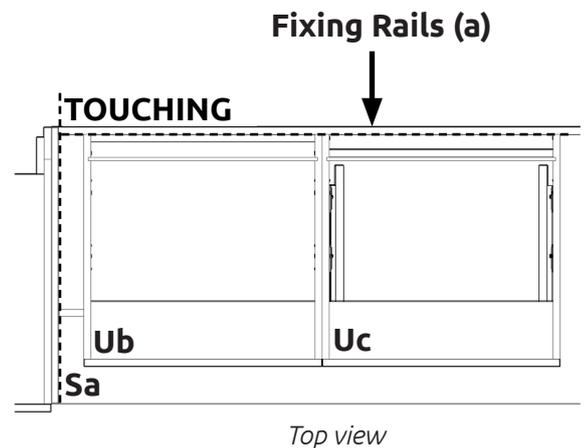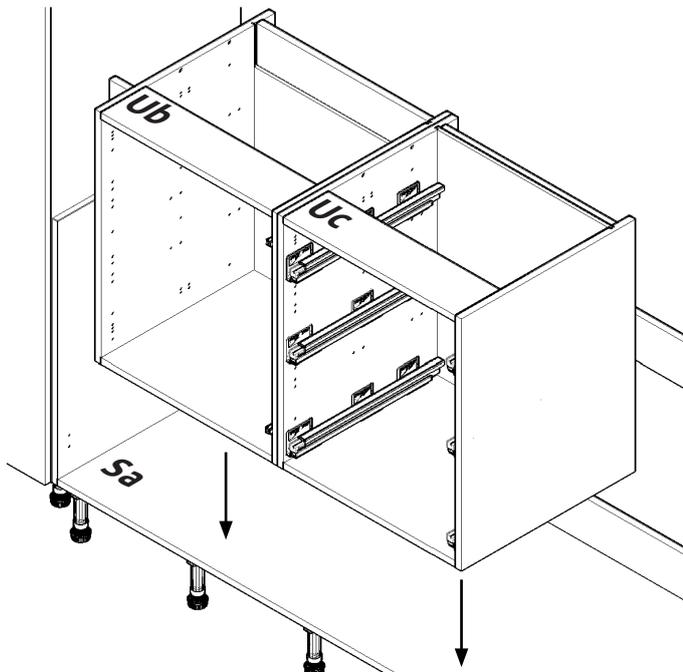

Step 16.

Secure each unit to each other and the fly under shelf (**Sa**) as follows:

See *fig 1*. Screw through the bottom fixed shelf of units (**Ub & Uc**) in to the fly under shelf (**Sa**) using 4 x 30mm screws (**K**). Conceal screw heads with cover caps (**M**).

See *fig 2*. Screw through the sink base unit (**Ub**) in to the 3 Drawer base unit (**Uc**) using 4 x 30mm screws (**K**). Screw just to the rear of the hinge plate and the rear of the unit. Conceal screw heads with cover caps (**M**).

fig 1


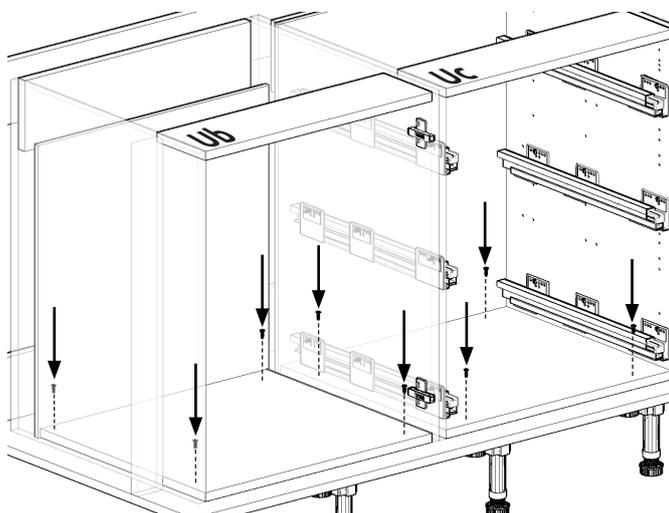


fig 2

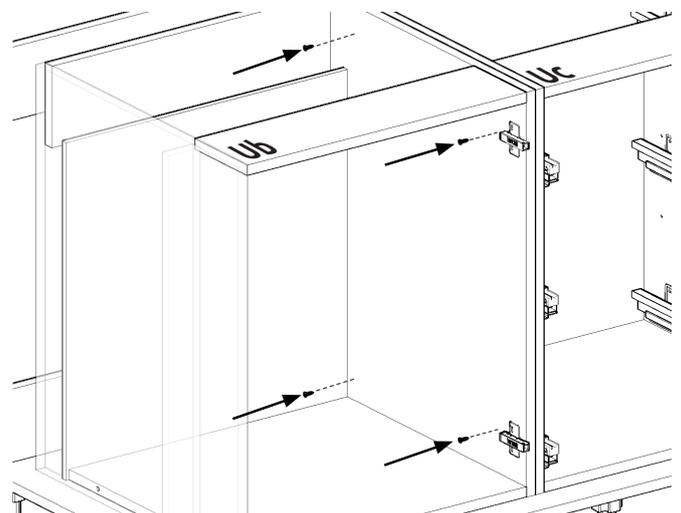

HIDE AWAY KITCHEN UNIT



wren

Assembly Guide

Step 17.

Screw through the sink base unit (**Ub**) back rail into the fixing rail (**a**) using 3 x 30mm screws (**K**). Secure the 3 Drawer base unit (**Uc**) to the fixing rail (**a**) using a space plug.

Drill a pilot hole through the back brace into fixing rail (**a**). Unwind space plug until it contacts both surfaces. Finally, tighten the screw.

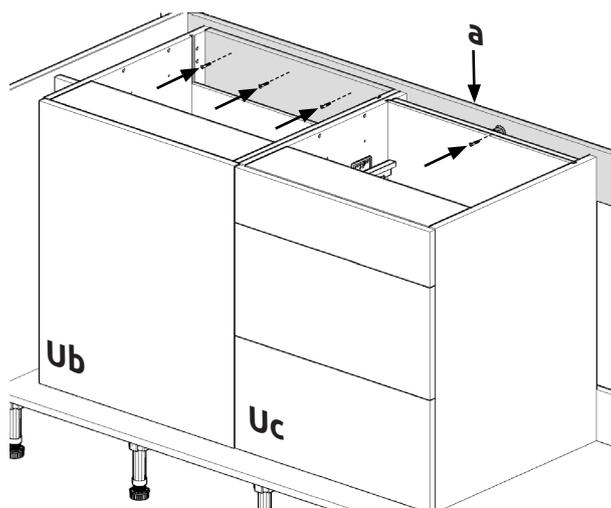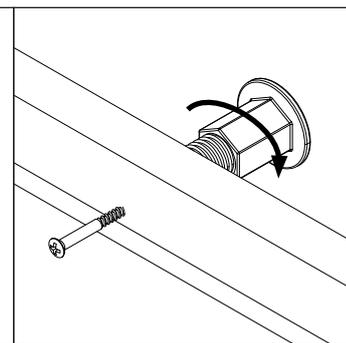


Step 18.

Repeat steps 15 to 17 to install and secure the hob base unit (**Ud**) and the bin pull-out unit (**Ue**).

Step 19.


Measure the distance between the end of the bin pull-out base unit (**Ue**) and the lower R/H Decor (**Db**). Cut filler (**d**) to these sizes.

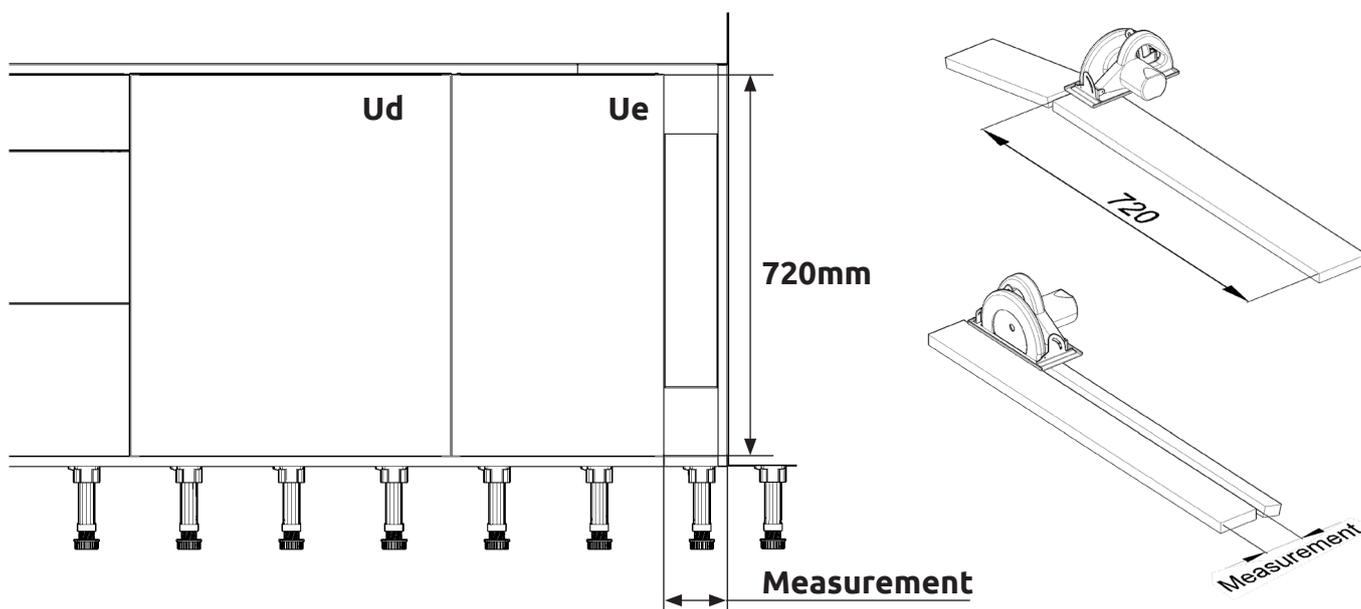

Assembly Guide

Step 20.


Set the filler (**d**) 100mm back from the front of the bin pull-out base unit (**Ue**) end panel. Secure using 4 x 45mm screws (**P**) through the tower unit (**Ua**) end panel into the filler. Conceal the screw heads with cover caps (**M**).

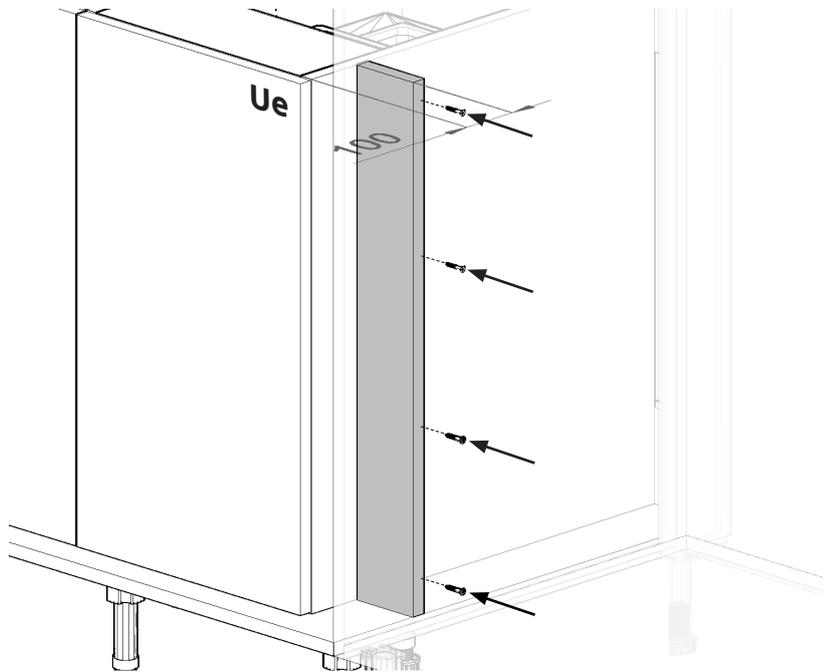

Step 21.

Place two lengths of cornices (**b1**) into position on top of the lower units. **Place one cornice flush with the front of the unit(s) (not the doors) and one flush with the back of the unit(s)**.

Screw down in appropriate places through the cornice (**b1**) in to the lower units using 4 x 30mm screws (**K**) per cornice.

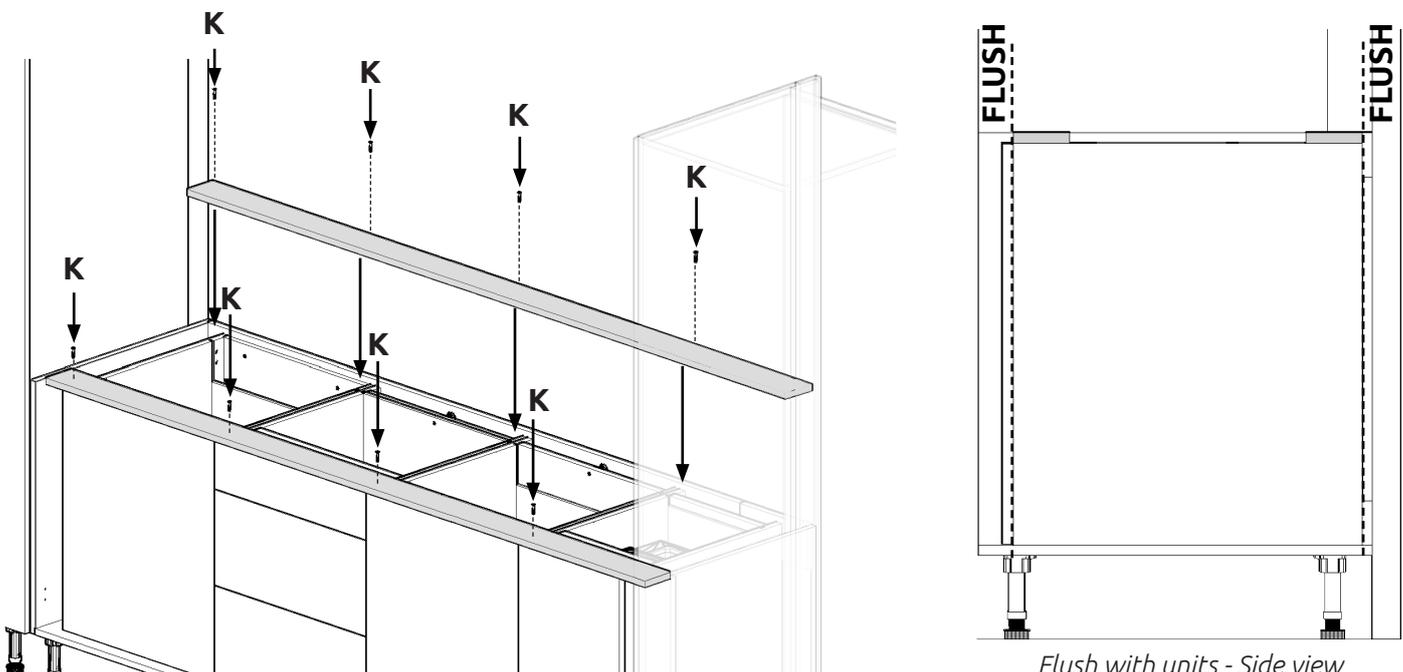

Flush with units - Side view


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

Step 22.

Manoeuvre the worktop into position on top of the lower units. Ensure the worktop (**W**) is flush to the wall and both tower end panels.

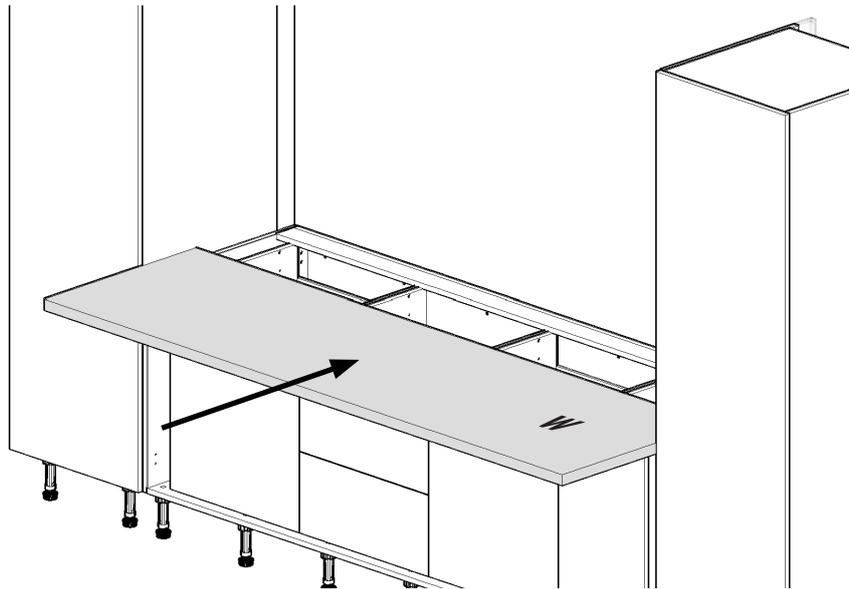





Step 23.

Secure the worktop (**W**) in place:

See *fig 1*. Screw up through the worktop packers (**front and back**) into the worktop.

See *fig 2*. Screw up through the sink base (**Ub**) and hob base (**Ud**) metal rails into the worktop.

See *fig 3*. Screw through the end panel of each tower unit (**Ua**) into the worktop (use pilot drills where appropriate). Cover screw heads with cover caps (**M**).

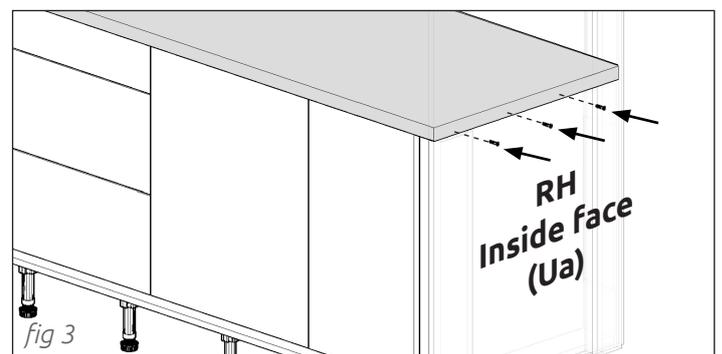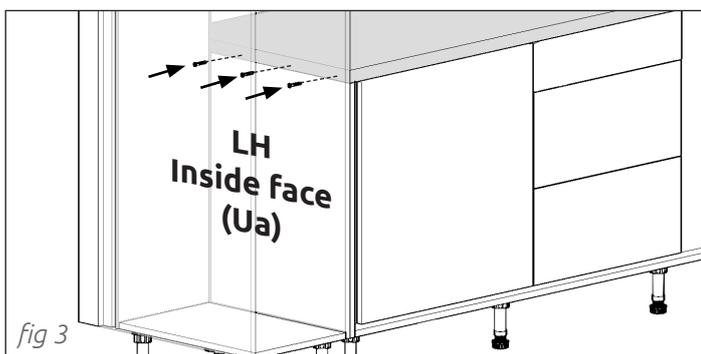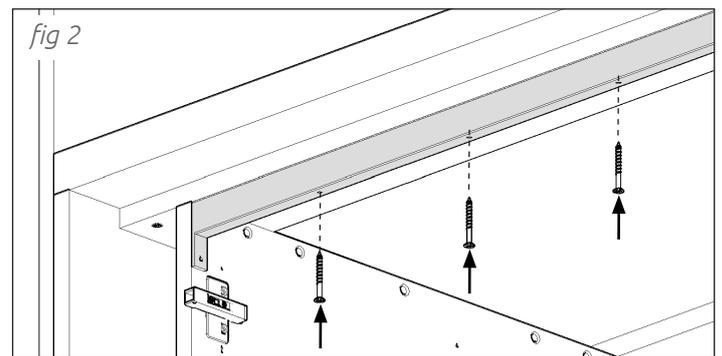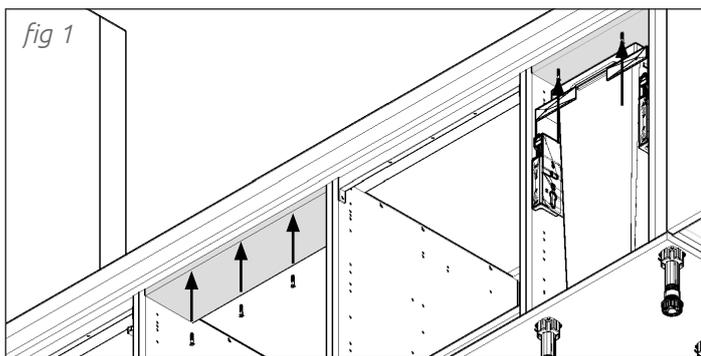

Assembly Guide

Step 24.


See *fig 1*. Fix the Upper RH Decor (**De**) in place as depicted below.

See *fig 2*. Screw through the tower unit (**Ua**) into the decor using 6 x 30mm screws (**K**), cover screw heads with cover caps (**M**). **Ensure the front of the decor is flush with the front of the worktop.**

Repeat this process for the Upper LH Decor (Dc).



Ensure hinge holes are at the **front** and facing **inwards** towards the worktop (**w**).


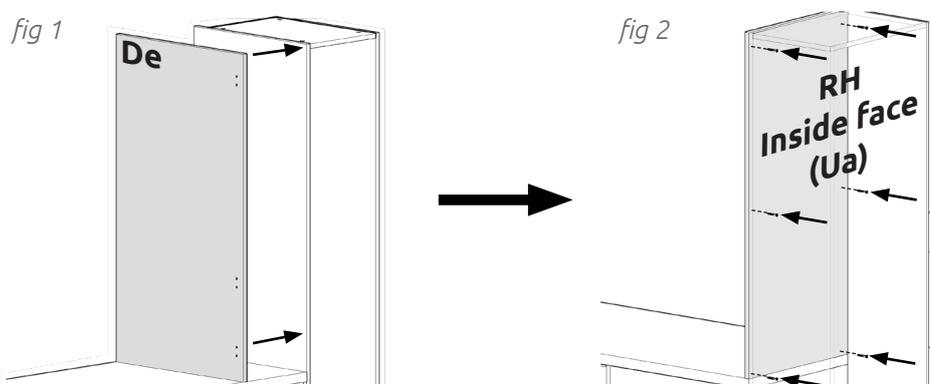


Step 25.

Fix two hanging brackets at the top of each wall unit (**Uf, Ug & Uh**) as depicted on the below.


Fix two corner gussets at the bottom of each wall unit (**Uf, Ug & Uh**) as depicted on the right.

Secure using 4 x 15mm screws (**L**) per bracket.

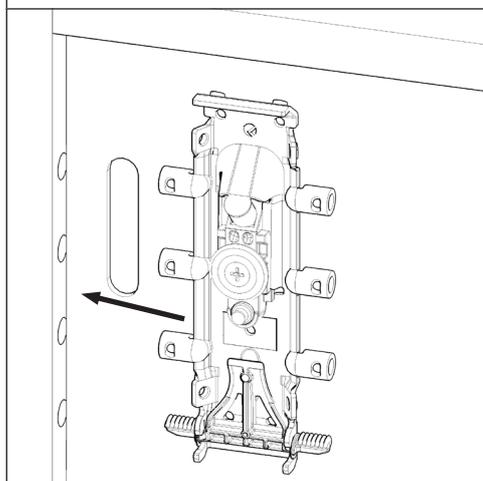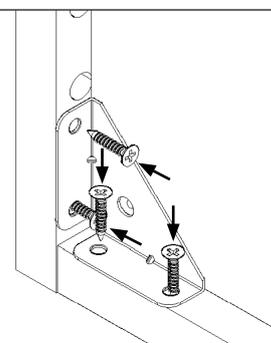


Step A.

Insert wall hanging bracket into pre-drilled holes on the rear of the unit.

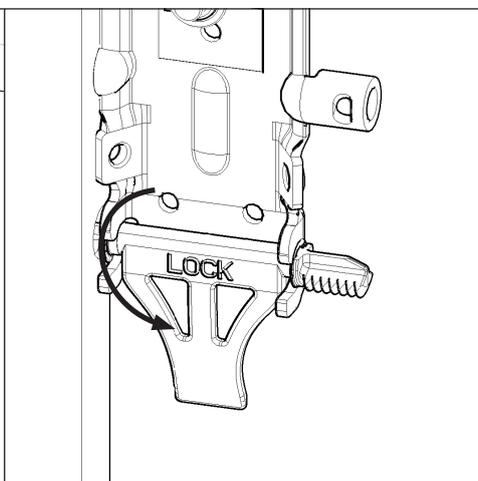

Step B.

Rotate locking lever 180 degrees.

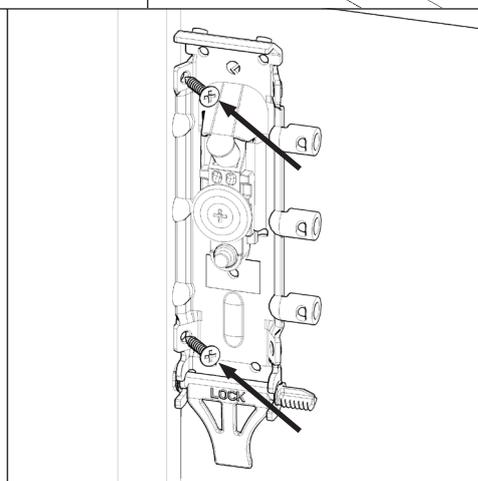



Step C.

Secure with 2 x 20mm screws (**S**) per hanging wall bracket.

HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

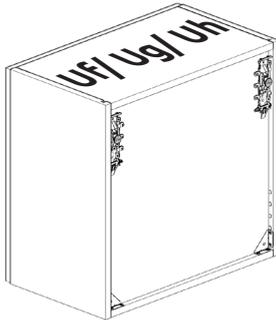
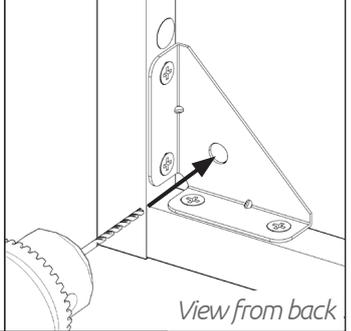
<p>Step 26. Drill a pilot hole through the corner gussets and the back panels of each wall unit (Uf, Ug & Uh).</p>		 <p><i>View from back</i></p>
--	--	--




Before proceeding on the next step 27.
Ensure the hanging bracket plates are **positioned** so that the wall units (**Uf, Ug & Uh**) are **central** between the upper LH & RH décors (**Dc & De**).



It is **critical** that the top of the wall units (**Uf, Ug & Uh**) are **set 37mm down** from the top of each decor end panel as below.

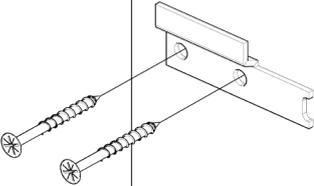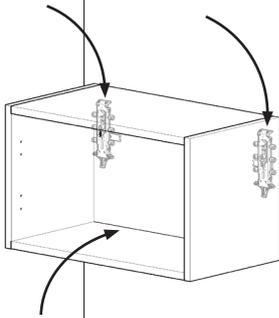		<p>Step 27. Measure appropriately and attach 2 x hanging bracket plates per wall unit (Uf, Ug & Uh) to the wall. Hang the units using the brackets to hook onto the plate as shown.</p>	
---	--	--	--

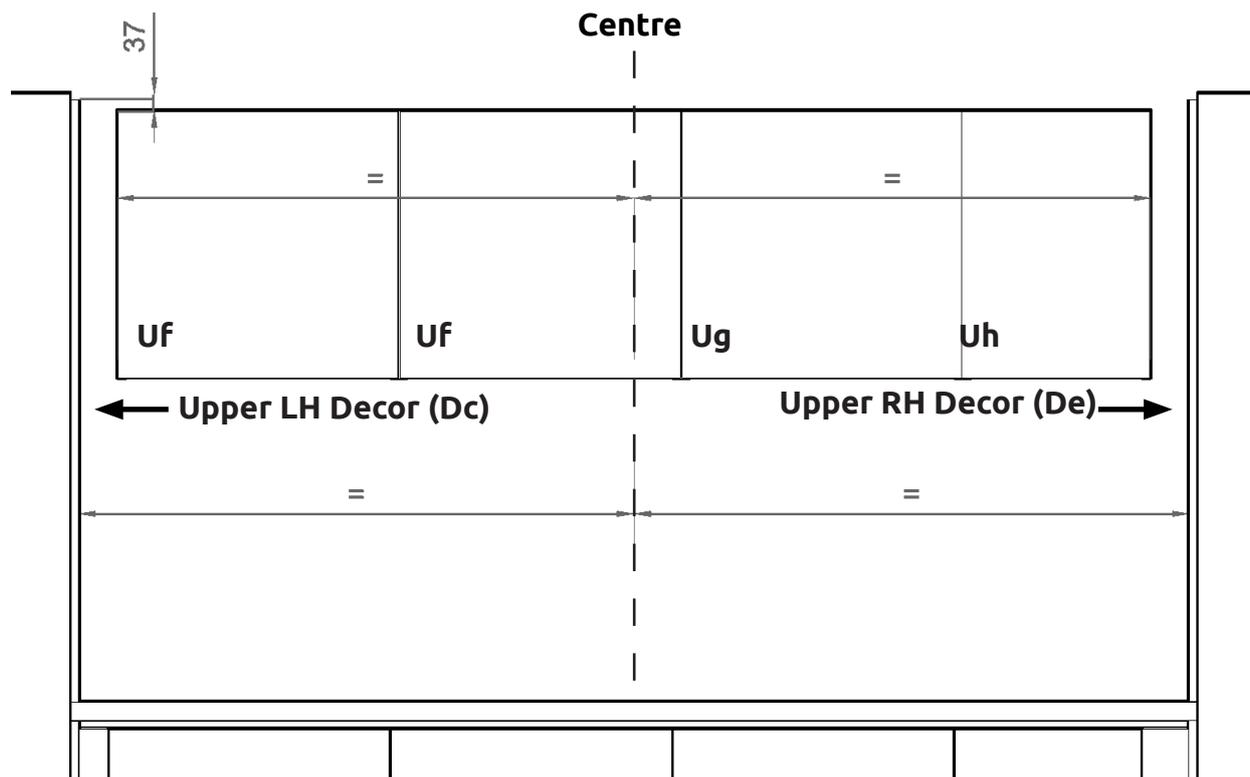

Front View - Centre the wall units between the two decor ends.

**Please refer to the wall fitting pack guide for adjusting and securing the wall unit to the wall safely.*


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide


Step 28.

Measure the distance between either end unit and the upper LH /RH décors (**Dc & De**).
Cut 2 x filler (**d**) to these sizes.

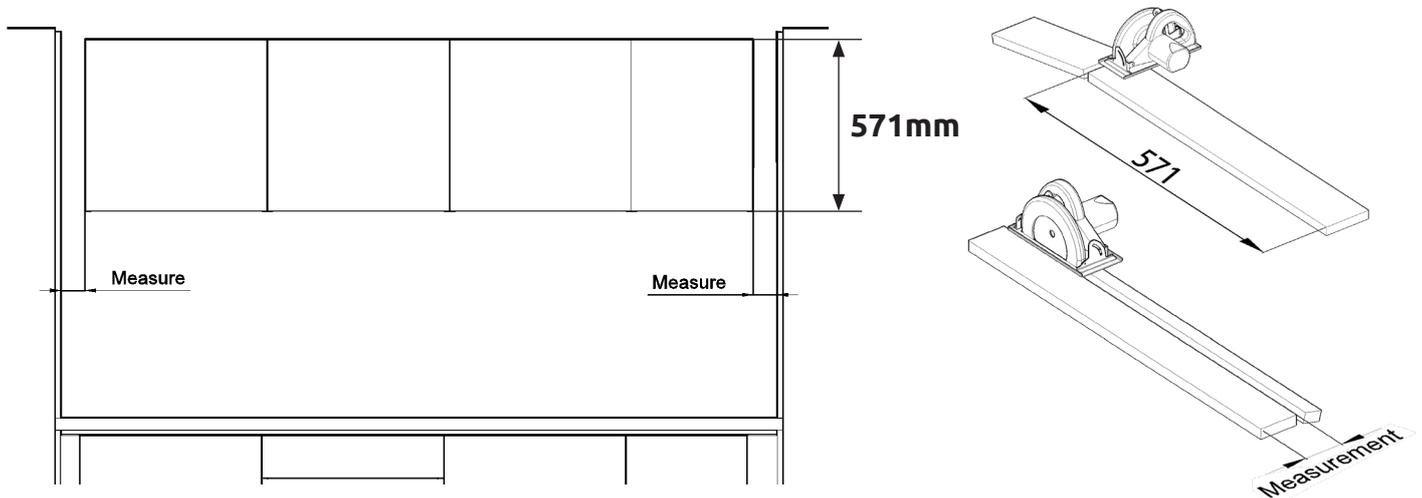


Step 29.

Cut 1 x filler (**d**) in half. Fix each piece to each one of the fillers (**d**) from step 28, secure using 3 x 30mm screws (**K**) per filler.

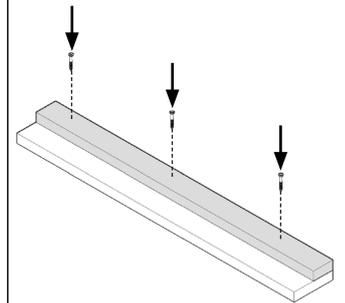

Step 30.

Use 3 x 30mm screws (**K**) per filler, screw through the end panels of units (**Uf & Uh**) to secure each of the fillers into position. **Make sure a 2mm door gap is maintained between to filler and the door.** Conceal screw heads with cover caps (**M**) provided.

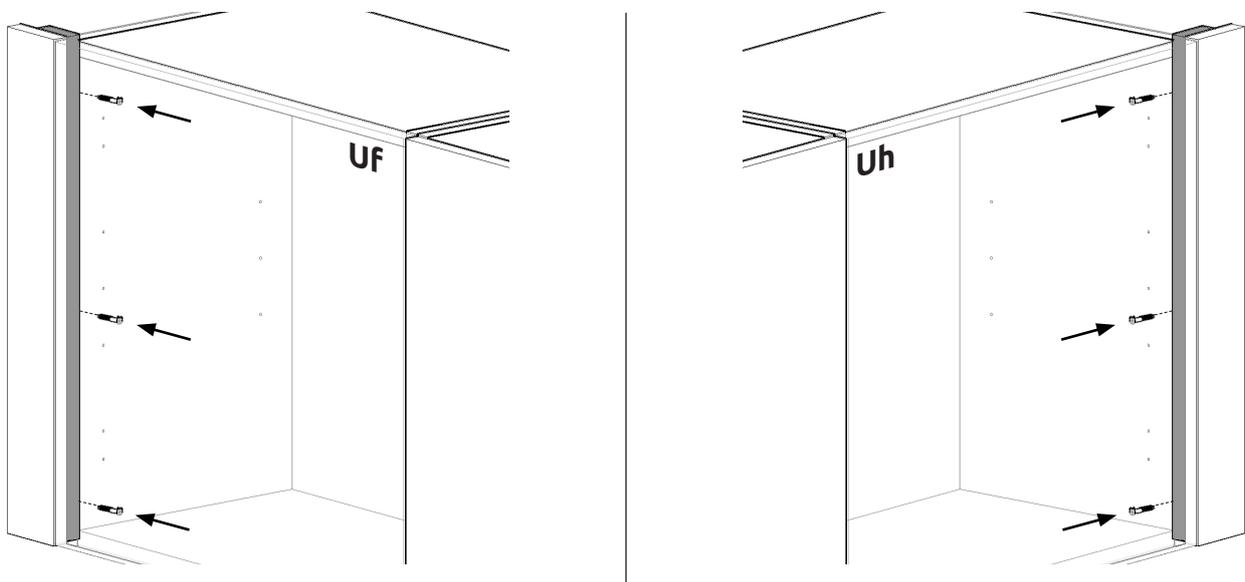


Assembly Guide

Step 31.

Secure the cornice (**b1**) in place:


See *fig 1*. Secure 2 x lengths of cornice (**b1**) together using 6 x 30mm screws (**K**) equal distance. Ensure there is a 25mm overlap as depicted below.

See *fig 2*. Secure the cornice's (**b1**) to the top of the upper wall units (**Uf, Ug & Uh**) using 5 x 45mm screws (**P**). Make sure the cornice's are aligned as depicted below.

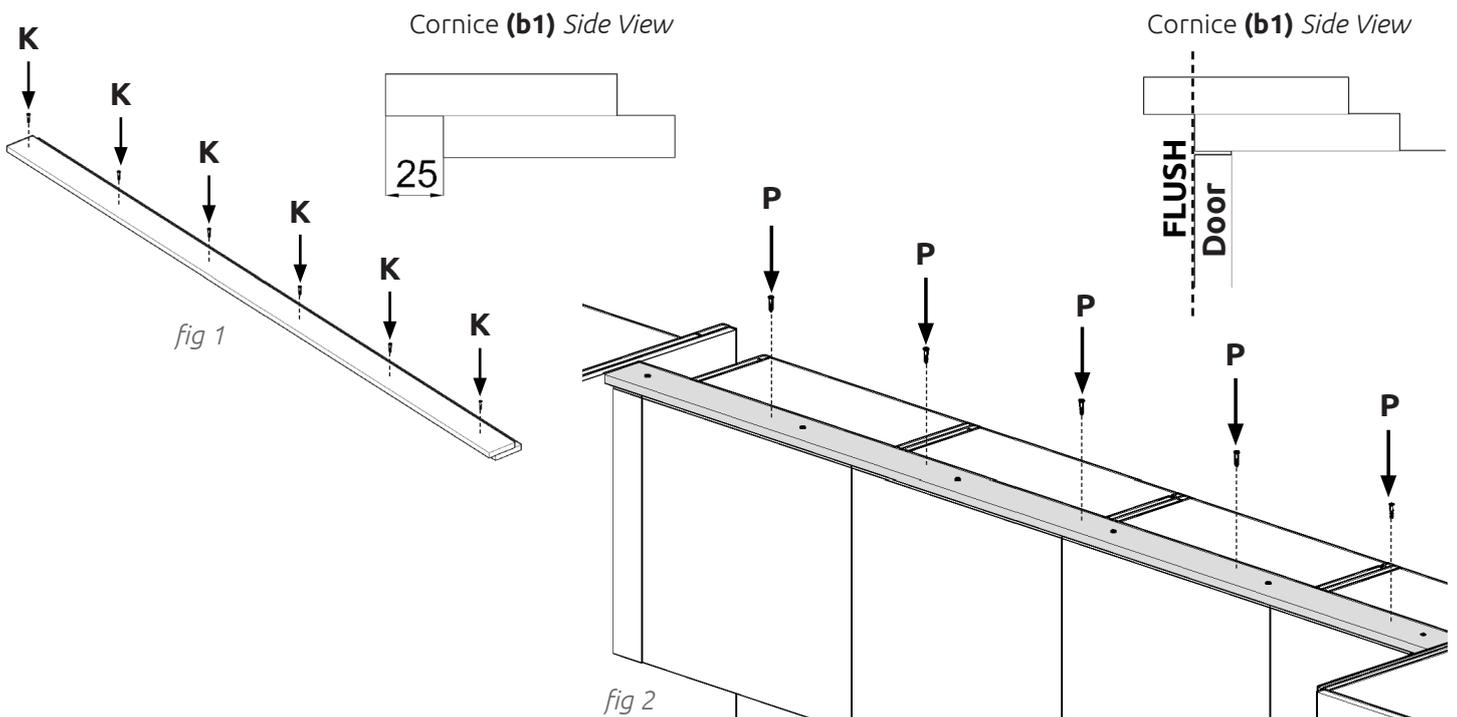

Step 32.

Centralise the support frame (**e**) on top of the fly over shelf (**Sb**) and set back 110mm from the front edge. Screw down through the support frame (**e**) in to the fly over shelf (**Sb**) using 18 x 15mm screws (**L**).

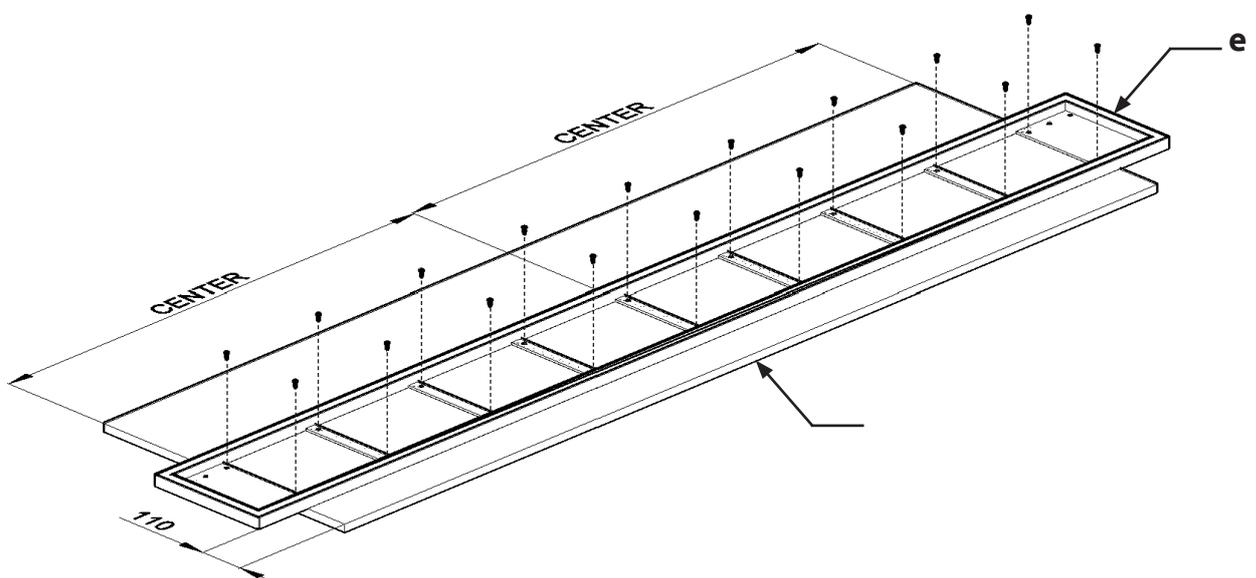

HIDE AWAY KITCHEN UNIT

wren


Assembly Guide

Step 33.

Lift the assembled support frame **(e)** and fly over shelf **(Sb)** in to position. Screw down through the support frame **(e)** into the top of the tower units **(Ua)** using 4 x 15mm screws **(L)** per tower.



Please note the assembled support frame **(e)** and the fly over shelf **(Sb)** should be lifted into position by a minimum of 2 people.

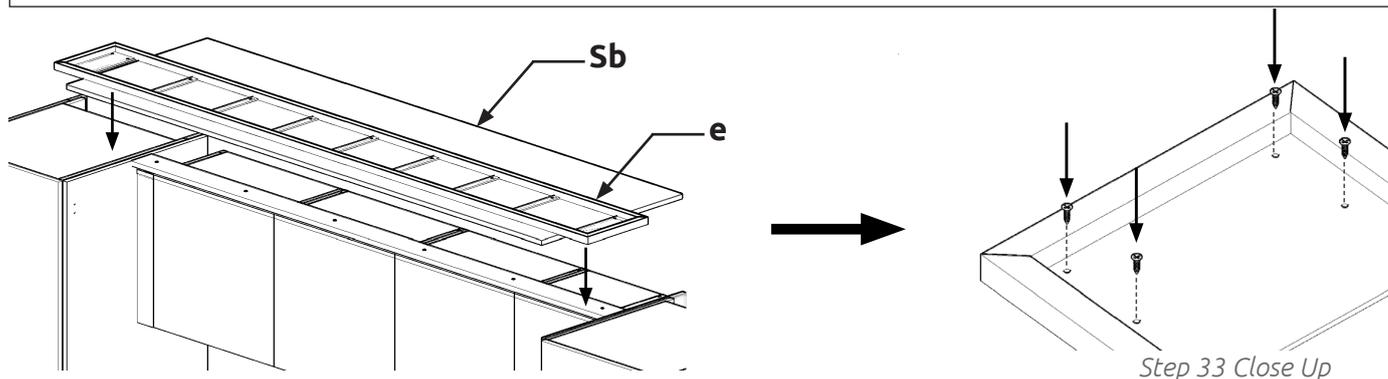

Step 34.

Manoeuvre the cornice **(b1)** into position flush with the left hand side of the unit on top of the towers **(Ua)** and fly over shelf **(Sb)**. Secure using 6 x 30mm screws **(K)** spaced evenly across the cornice **(b1)**. **Ensure the cornice (b1) is aligned with the front of the tower unit (Ua) door.**

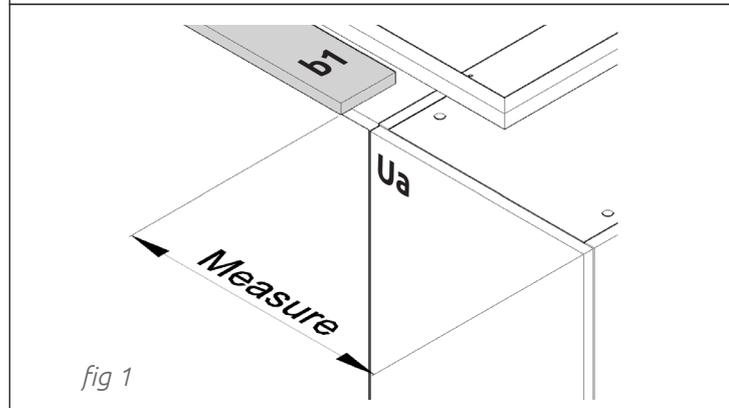
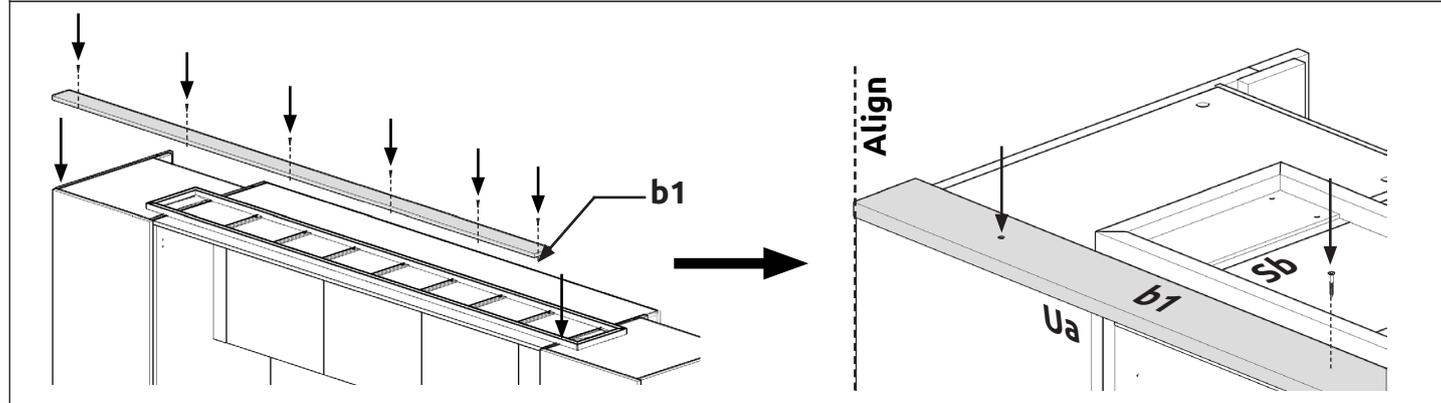


fig 1

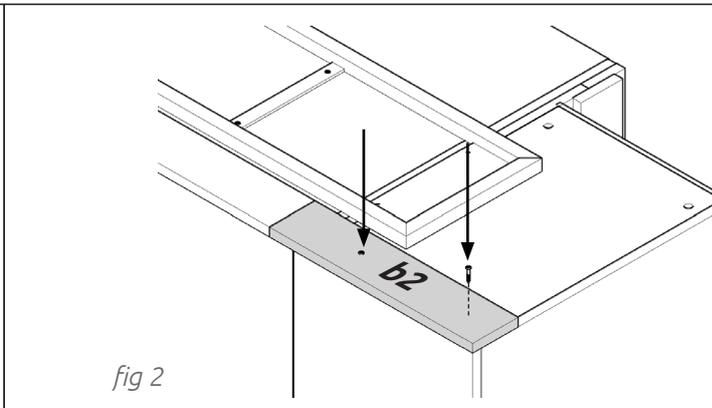


fig 2

Step 35.

See *fig 1*. Measure the remaining distance from the cornice **(b2)** to the end of the tower unit **(Ua)**. Cut a second piece of cornice **(b2)** to size.

See *fig 2*. Follow **step 34** to secure the cornice **(b2)** to the top of the unit using 2 x 30mm screws **(K)**.


Assembly Guide

Step 36.

Top runner guide (**Hb**) set 40mm back from the front of the fly over shelf (**Sb**). Screw up in to position using screws provided.



Ensure the top runner guide (**Hb**) notch is facing at the **front** of the fly over shelf (**Sb**).

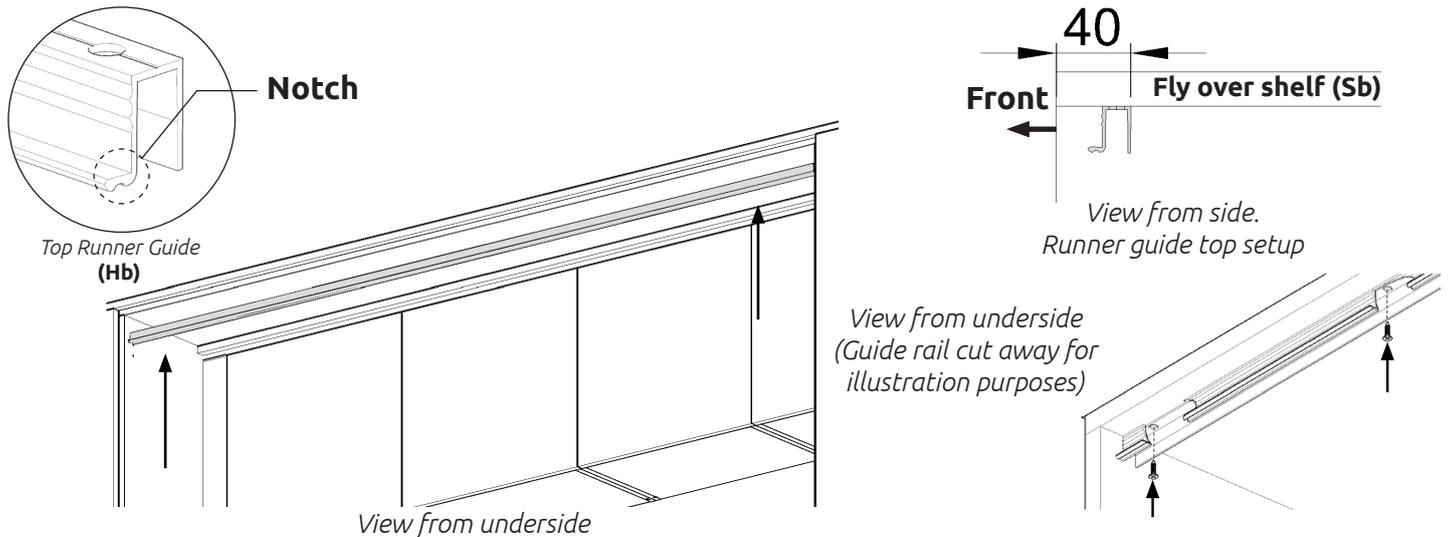


Step 37.

Bottom runner guide (**Ha**) set 40mm back from the front of the worktop (**w**) on the underside. Screw up in to the worktop to secure.



Ensure the bottom runner guide (**Ha**) notch is facing at the **front** of the worktop (**w**).

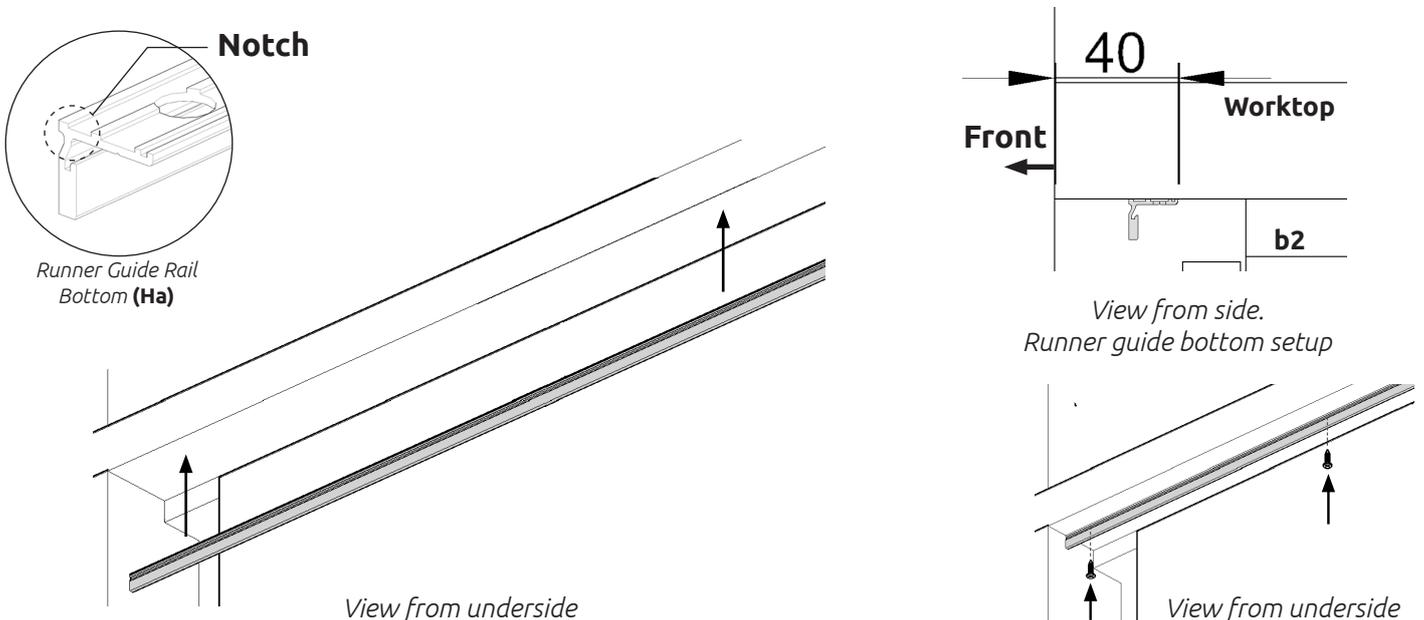

HIDE AWAY KITCHEN UNIT

wren


Assembly Guide

Step 38.

Secure 1 x hinge plates (**H1**) using 2 x **provided screws** per plate onto the lower LH decor (**Da**).

Secure 3 x hinge plates (**H1**) using 2 x **provided screws** per plate onto the upper LH decor (**Dc**) in the pre-drilled positions.

Repeat this process for the lower RH decor (Db) and upper RH decor (De).

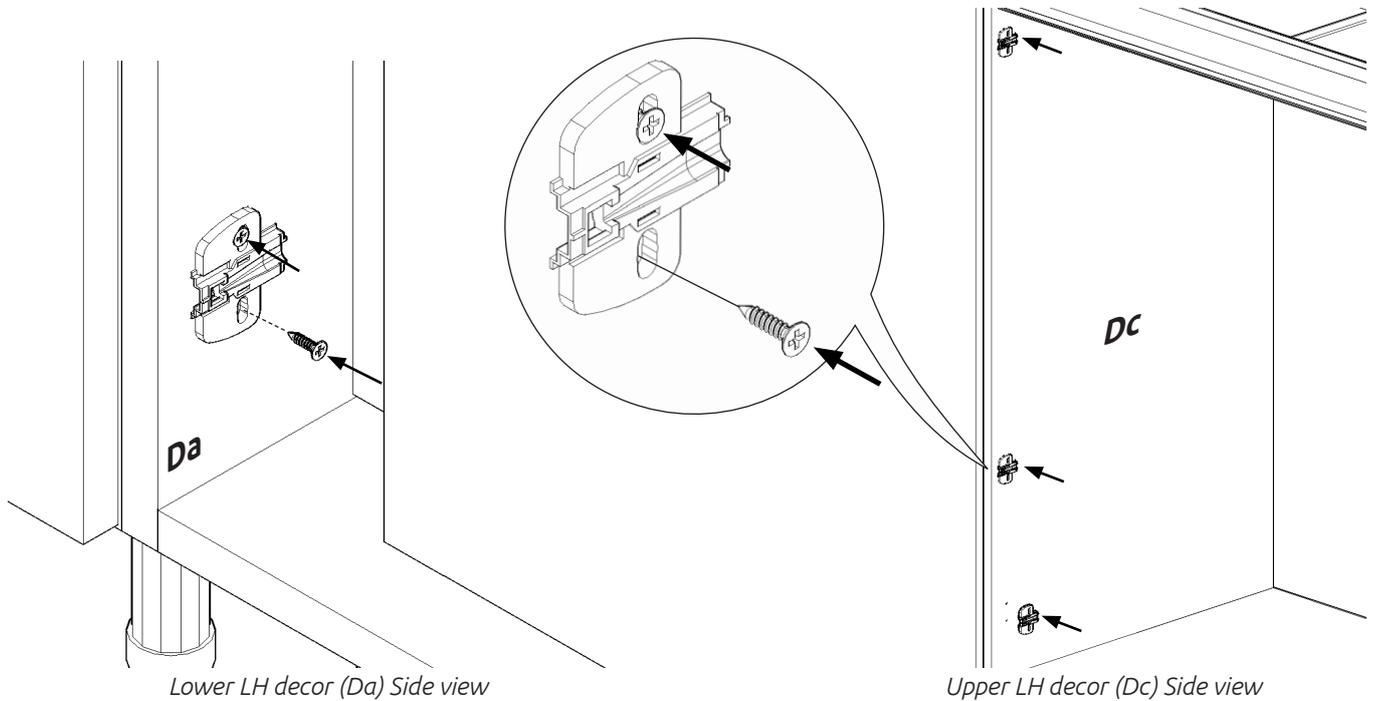

Lower LH decor (Da) Side view


Upper LH decor (Dc) Side view

Step 39.

Place the LH Bi-Fold door 1 (**f**) and LH Bi-Fold door 2 (**g**) next to each other face down.



Ensure the doors are placed on a surface that's clean and free of debris to avoid damage to the doors.

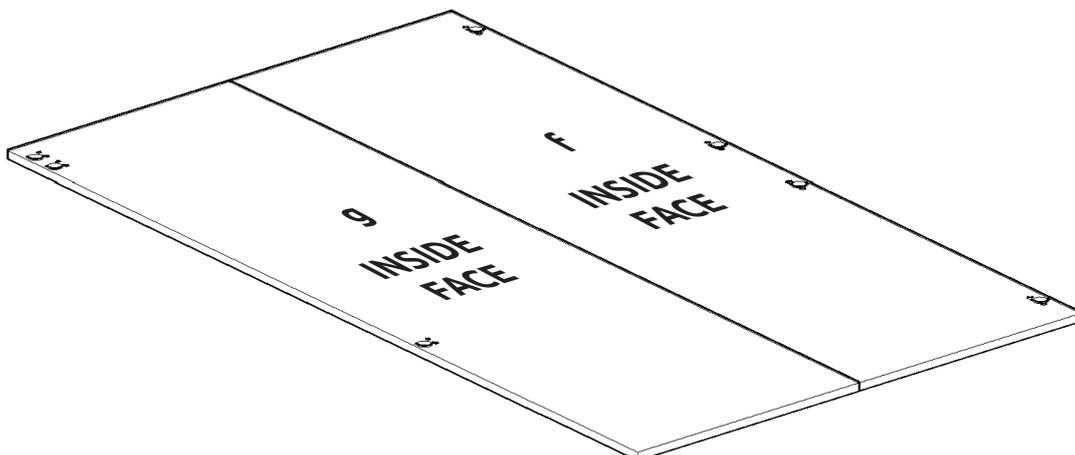

Assembly Guide

Step 40.

See *fig 1*. Snap the 4mm spacer clip off the Door Spacer (**Hj**). Insert into the door spacer (**Hj**).
See *fig 2*. Use the Door Spacer(s) (**Hj**) to create a 4mm gap between both doors.



Ensure doors are **aligned** and **flush** on the top and bottom.

fig 1a


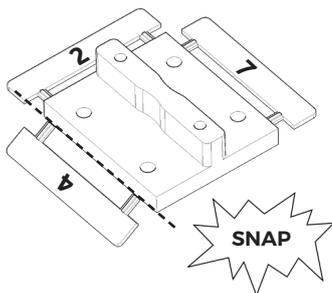


fig 1b

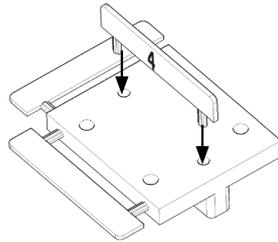

View from underside

fig 2a



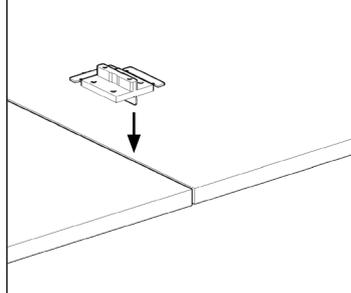


fig 2b

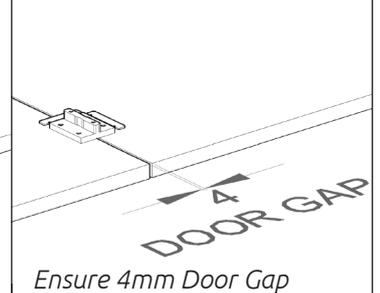


Ensure 4mm Door Gap

fig 3

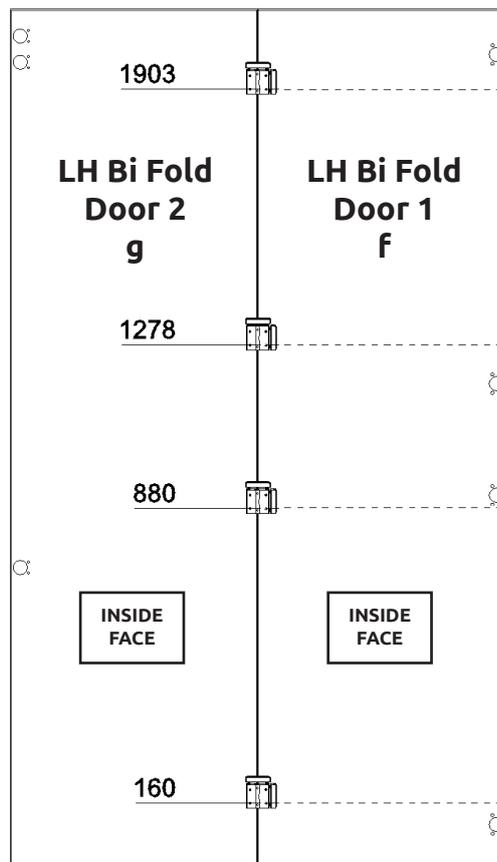

From Bottom

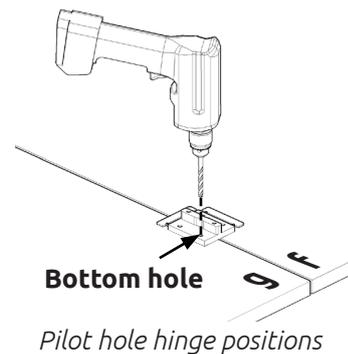

Step 41. (Where Required)

See *fig 3*. Follow the door spacer (**Hj**) location guide.

The measurement(s) align with the bottom hole(s) on the door spacer (Hj**).** Using a $\varnothing 5\text{mm}$ drill bit, drill a pilot hole 2mm deep through each of the 4 holes on the door spacer (**Hj**) into the doors.


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide


Step 42.

Locate 4 x Bi-Fold door centre hinge (**He**) into the position on top of the door. Secure using 4 x screws (provided).

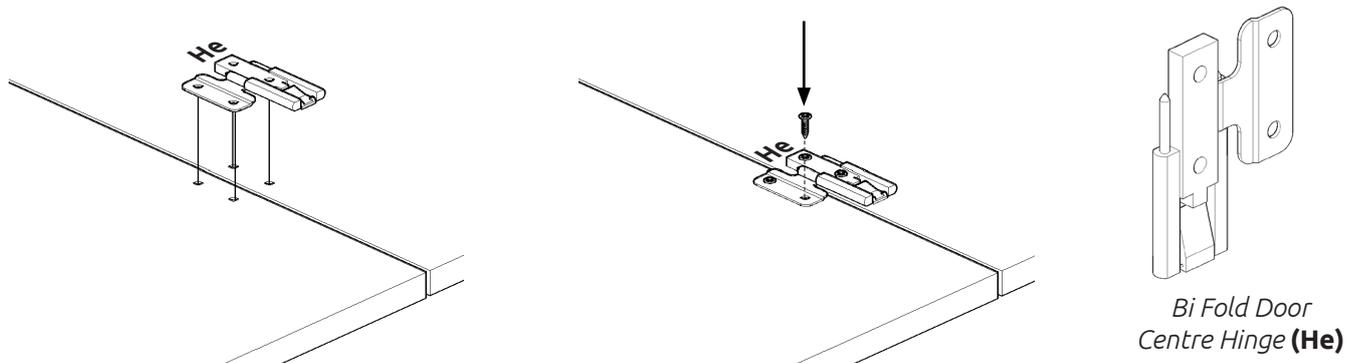

Step 43.


Insert 4 x Hinge (**Hk**) into the hinge holes on LH Bi-Fold door 1 (**F**). Secure Hinges with 2 x screws already positioned within the hinge.

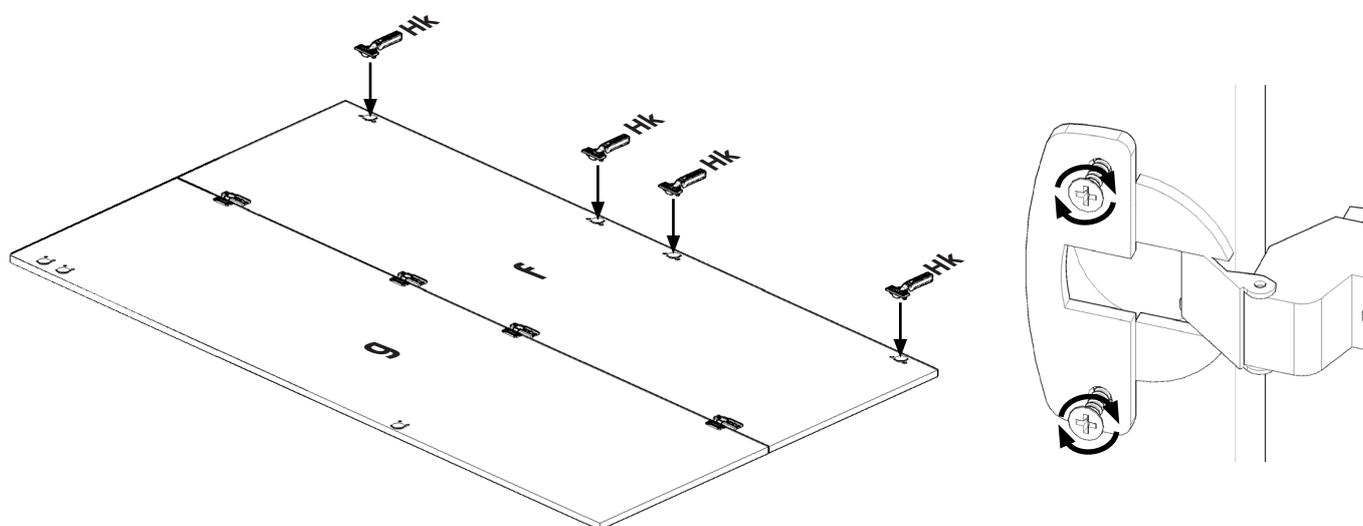


Step 44.

Ensure door runners are in the open position before installation of the top (**Hg**) and bottom (**Hf**) door runners.

Hg

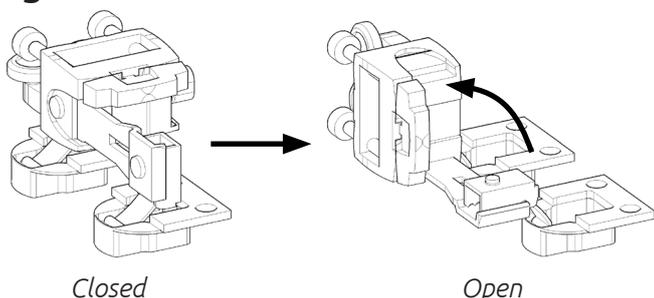

Hf

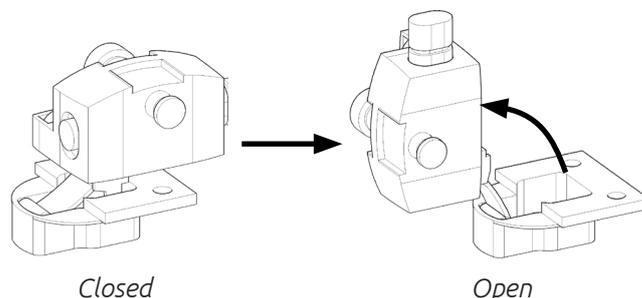


Assembly Guide



Ensure top door runner (**Hg**) and bottom door runner (**Hf**) rollers are facing **top** of the LH Bi-Fold door 2 (**g**).

Step 45.

Insert top (**Hg**) and bottom (**Hf**) door runners into the pre drilled holes in LH Bi-Fold door 2 (**g**). Secure with 6 x screws (provided). **Ensure the top and bottom door runners are back in their closed position once secured to the door.**

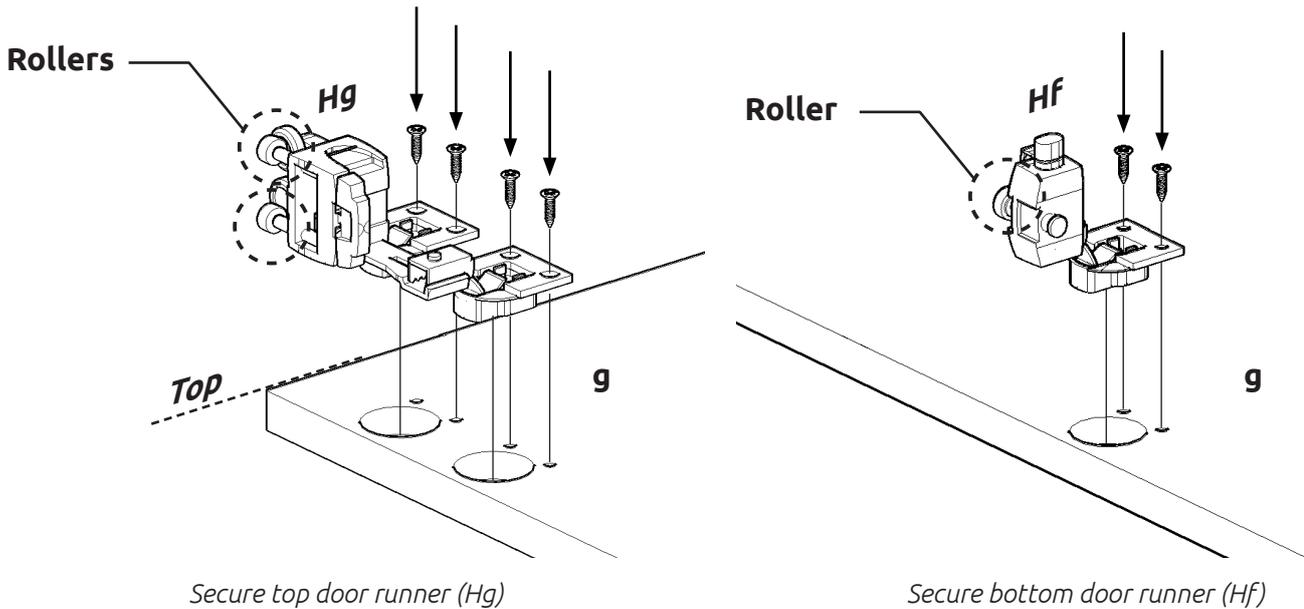

Secure top door runner (Hg)


Secure bottom door runner (Hf)




Ensure **extra care** is taken not to mark/scratch the doors during step 47.

Step 46.

Separate the two doors from each other. Lift LH Bi-Fold door 2 (**g**) away from LH Bi-Fold door 1 (**f**) in an upward motion. The Bi-fold door centre hinge (**He**) will separate into two pieces.

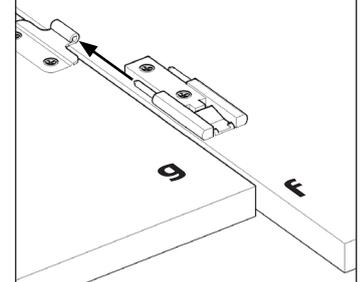

Bi-Fold door Hinge separating

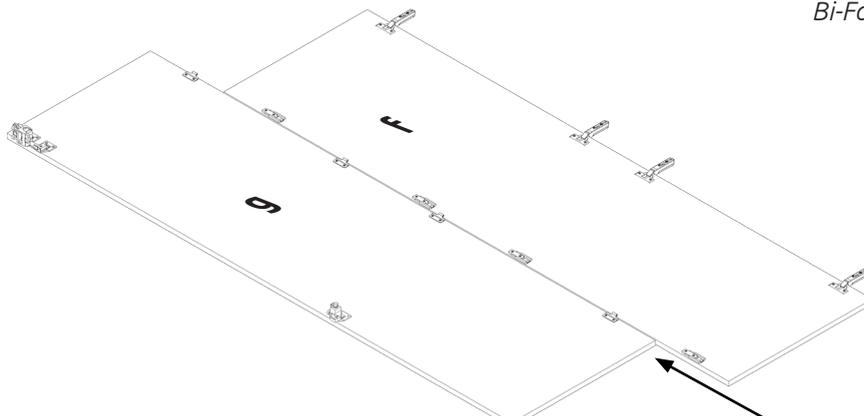


HIDE AWAY KITCHEN UNIT

wren

Assembly Guide


Step 47.

Attach LH Bi-Fold door 1 (**f**) to the hinge plates on the upper LH decor (**Dc**) and lower LH decor (**Da**). Click in to position to secure.

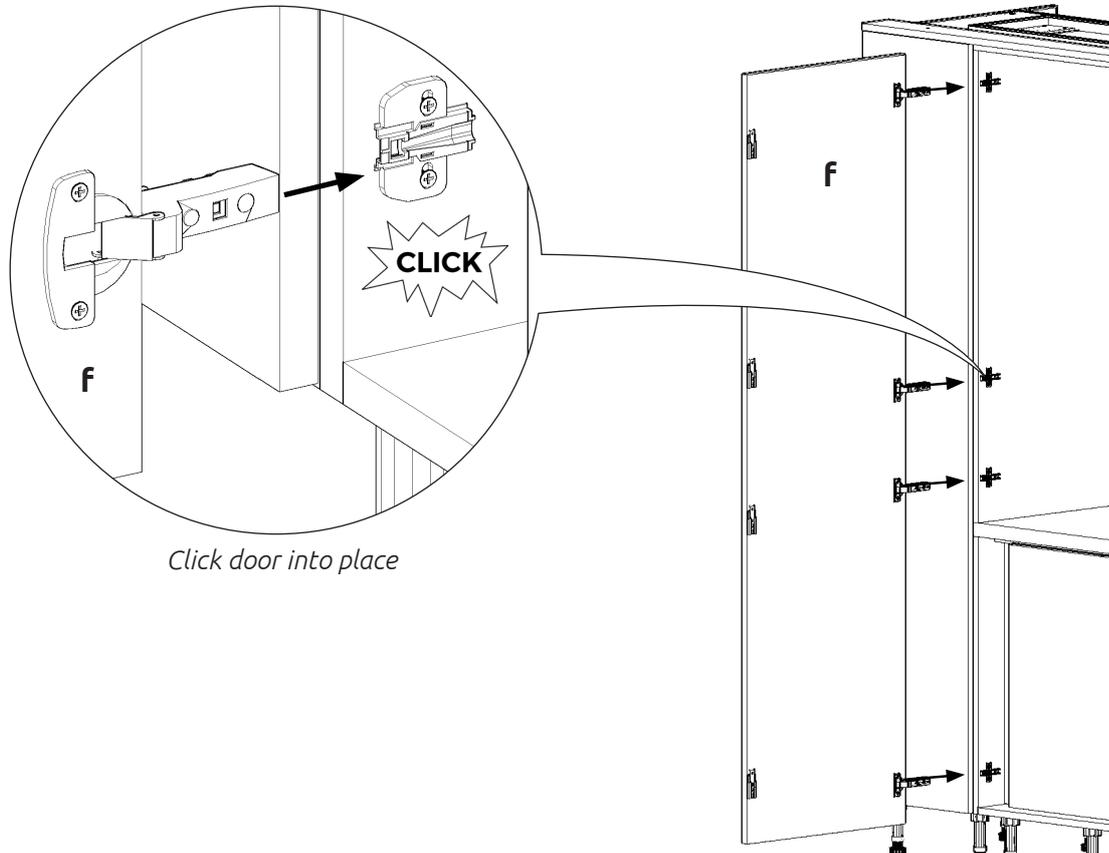

Step 48.


Manoeuvre the Hinge jig (**Hm**) onto the upper LH decor (**Dc**). Locate in the positions 130mm. Drill 2 x Ø5mm holes, 13mm deep in the upper LH decor (**Dc**) as shown.

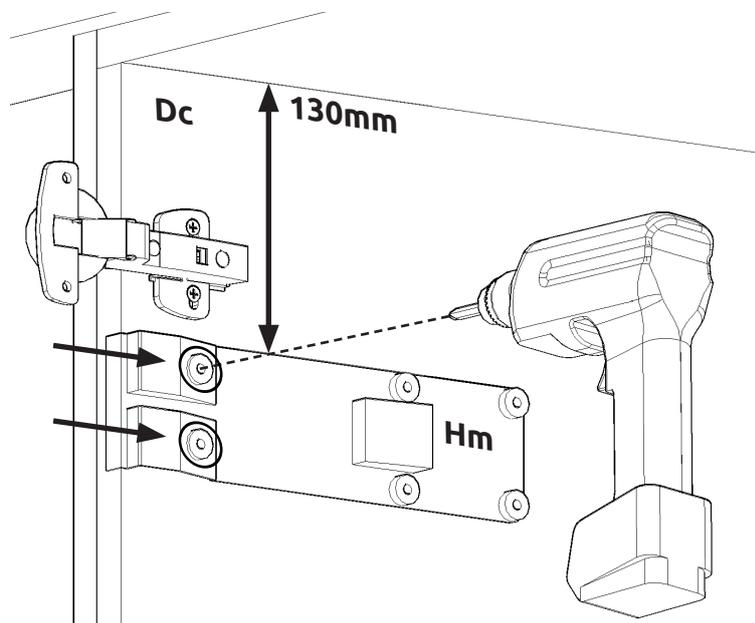


Assembly Guide

Step 49.


Manoeuvre the Hinge jig (**Hm**) onto the LH Bi-Fold Door 1 (**F**) into the position 144mm.
Drill 4 x Ø5mm holes 13mm deep.

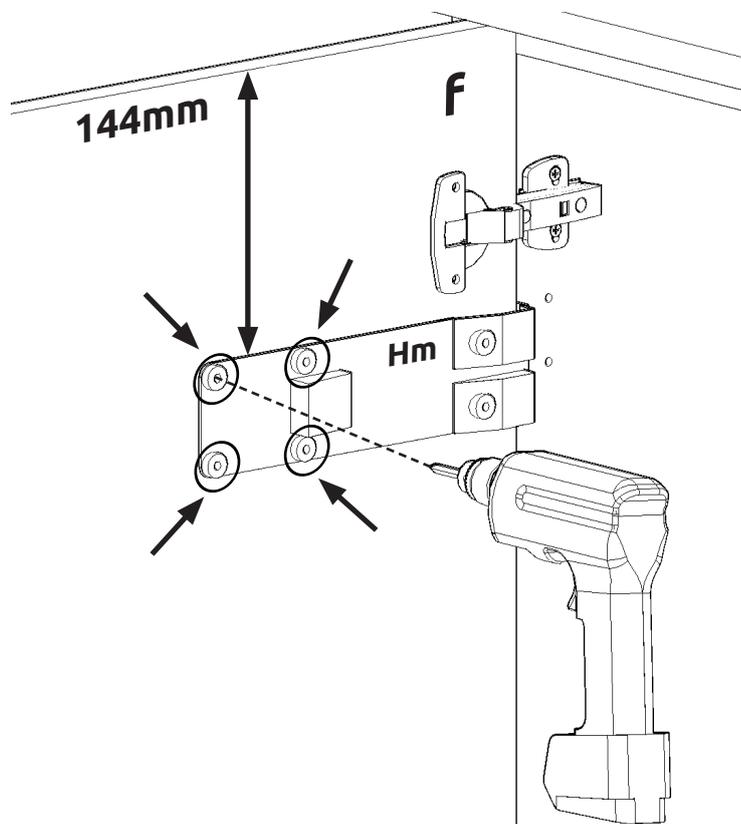


The Bi-Fold Door Mechanism Arm used in the following steps contains the individual component parts below
(Please note the mechanism arm packer is not needed and can be discarded)

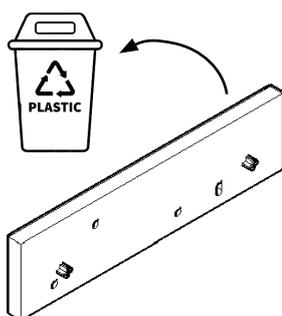


**Mechanism
Arm Packer**

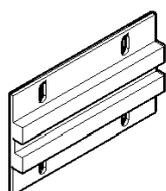

**Mechanism
Arm Bracket**

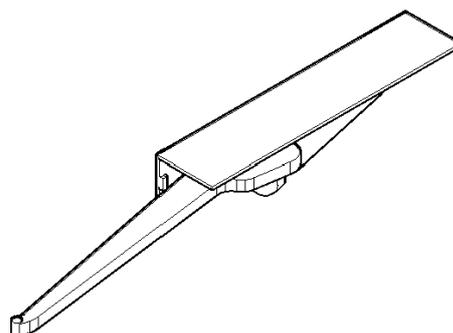

**Mechanism
Arm Plate**

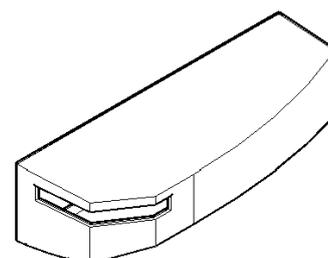

**Mechanism Arm
Cover Case**

HIDE AWAY KITCHEN UNIT

wren

Assembly Guide



Ensure the **left hand** hinge is used for this step. Indicated by the letter **L** as depicted.

fig 1


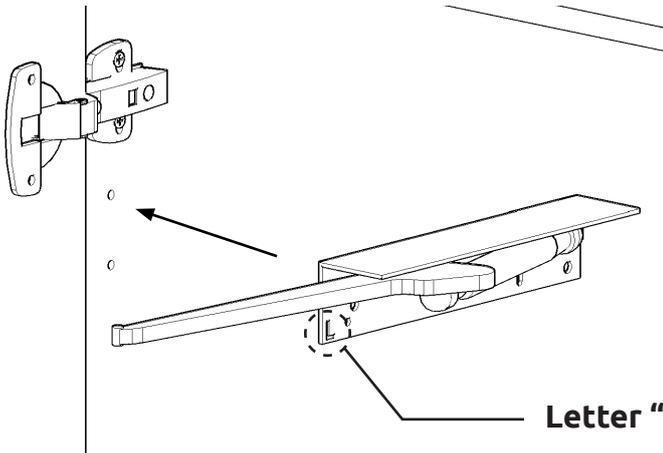


fig 2

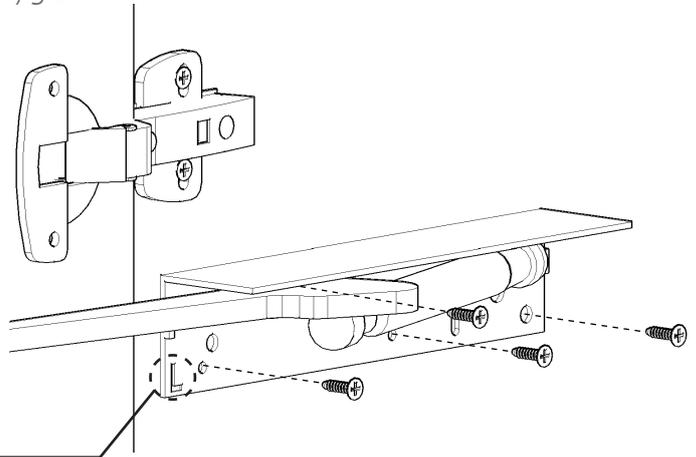

Letter "L"


Step 50.

Secure the LH Bi-Fold door mechanism arm (**Hd**):

See *fig 1*. Move into position by placing the 2 location bumps into the pre drilled pilot holes from step 49.


See *fig 2*. Secure to the unit using the screws provided in 4 locations.

fig 1

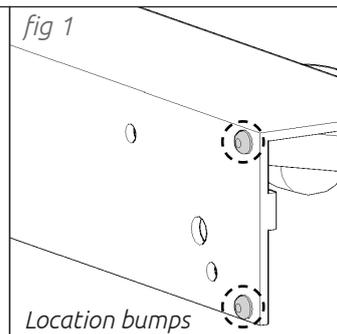

Location bumps



fig 2

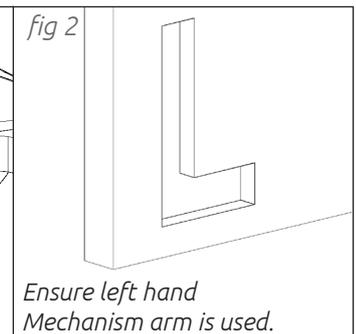

Ensure left hand
Mechanism arm is used.

Step 51.

Secure the **mechanism arm cover case** into position over the LH Bi-Fold door mechanism arm (**Hd**) as shown on the right.

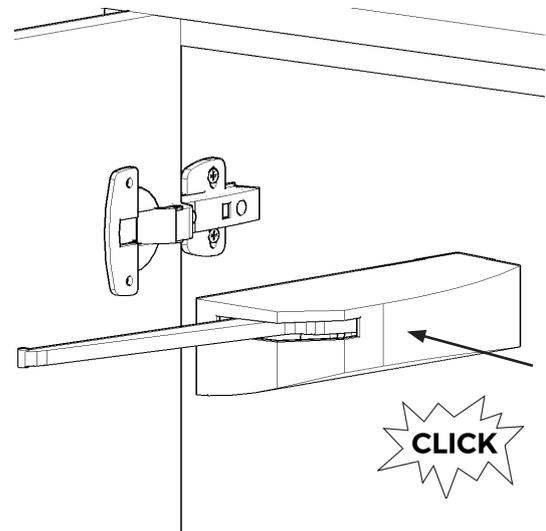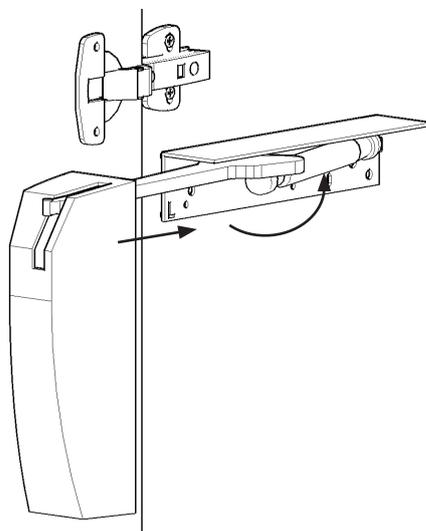





Assembly Guide

Step 52.

Secure the **mechanism arm bracket** into position:

See *fig 1*. Slide the **mechanism arm bracket** onto the Bi-Fold door mechanism arm and rotate 90 degrees to lock in place.

See *fig 2*. Line up the **mechanism arm bracket** with the 4 previously drilled holes from **step 50**. Secure in 4 places using the screws provided.

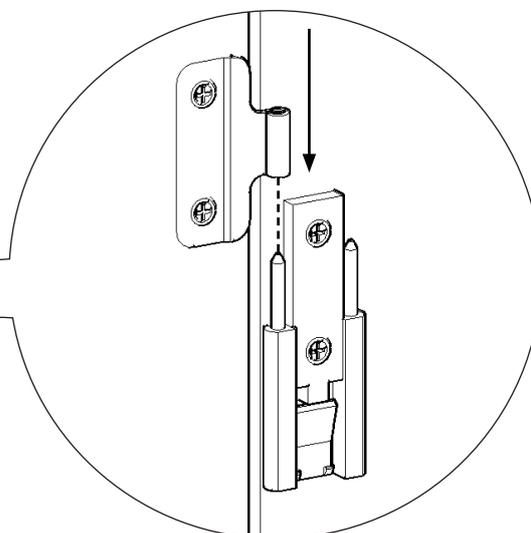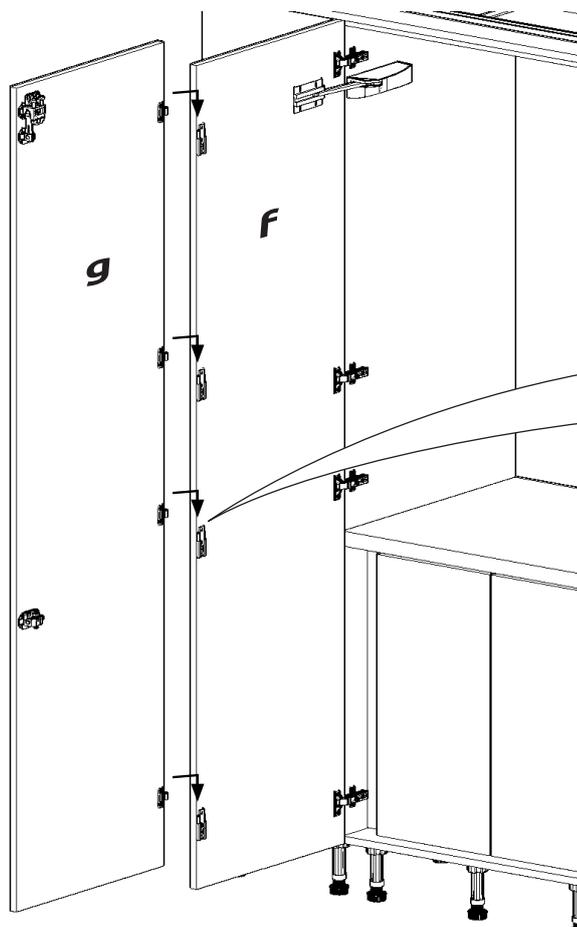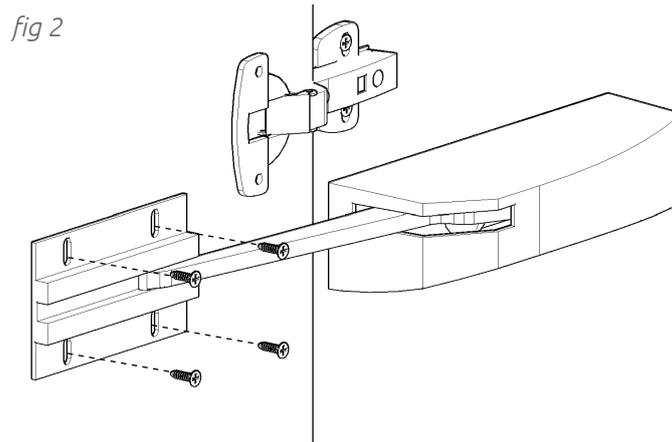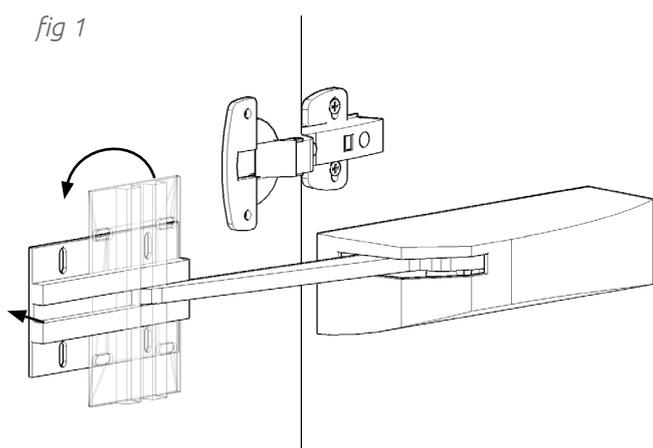

*View from LH Bi-Fold Door 2 (g)
Side view*

Step 53.

Locate Bi-Fold door 2 (**g**) in to position by hooking both parts of the Bi Fold door centre hinge (**He**) together.

HIDE AWAY KITCHEN UNIT

wren

Assembly Guide

Step 54.

Position the Bi-Fold doors (**f & g**) so that the top and bottom door runners (**Hg & Hf**) are in contact with the top and bottom runner guides (**Ha & Hb**).


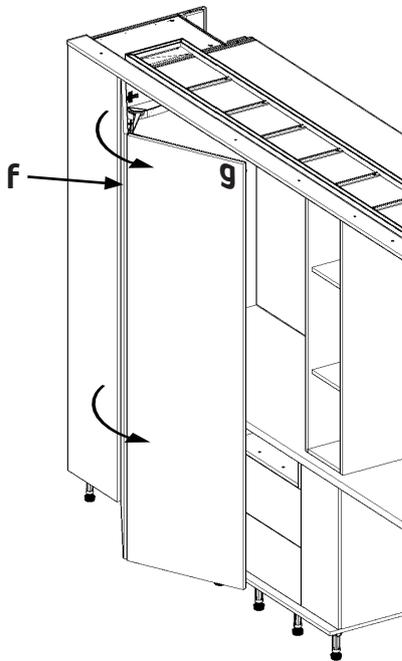



fig 1

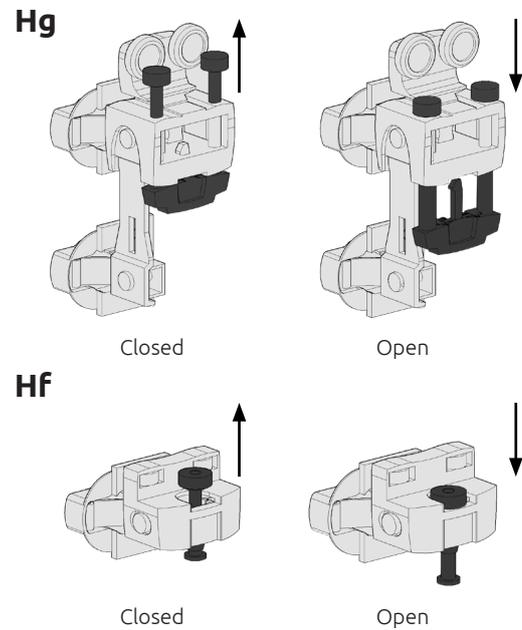

Step 55.


See *fig 1*. Set the door runners top and bottom (**Hg & Hf**) to the open position as shown below. See *fig 2*. Once in the open position, clip both runners onto the top and bottom (**Ha & Hb**) runner guides. Secure in place by pushing both runners into the closed position.

fig 2

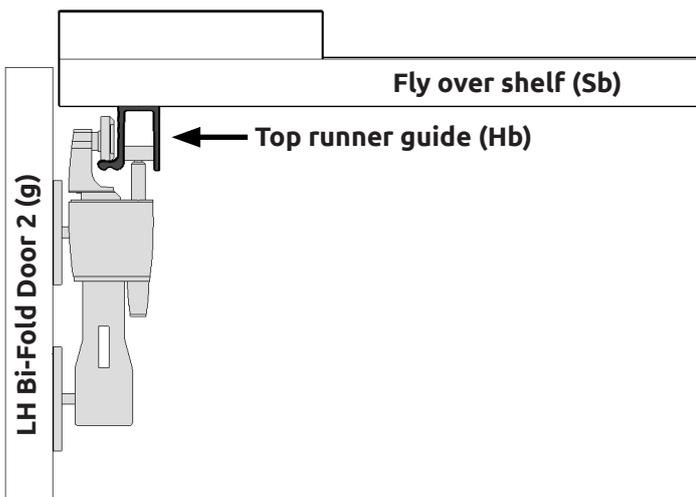

Top Door Runner Clicked into the runner guide
Viewed from side

fig 2

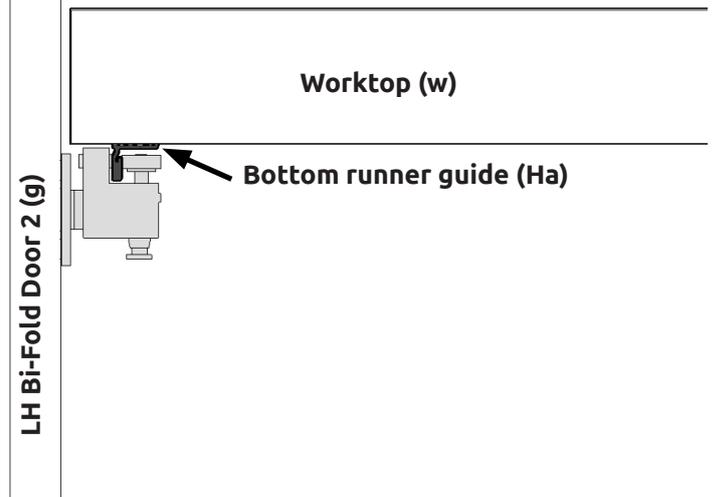

Bottom Door Runner Clicked into the runner guide
Viewed from side


Step 56.

Repeat Steps 39 to 56 to complete the door attachment for the RH Bi Fold Doors 1 and 2 (**h & i**).

Assembly Guide

Step 57.

See *fig 1a,b*. Measure the height from the floor to the top of the unit including the cornice (**Measurement 1**) and the depth from the wall to the front of the doors (**Measurement 2**). Cut the tower decor ends (**Df**) to this size.

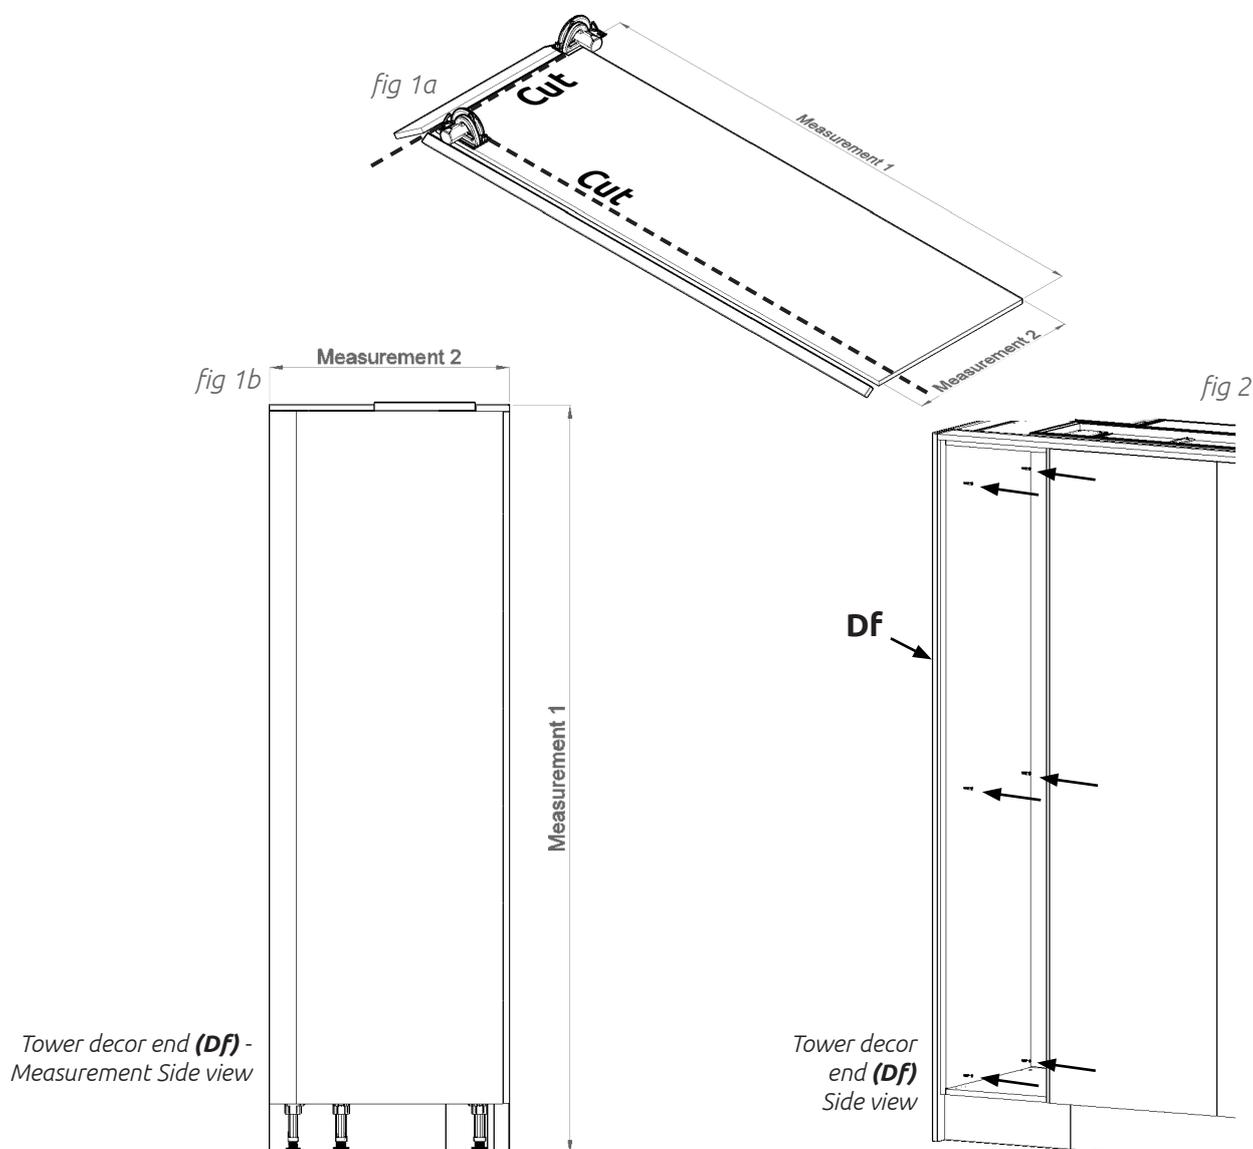


Step 58.

See *fig 2*. Manoeuvre the decor end panel (**Df**) into position.

Screw through the tower end panel into the decor end using 6 x 30mm screws (**K**).

Screw at the front and back of the unit at the top, middle and bottom in appropriate places. Cover the screw heads with cover caps (**M**).

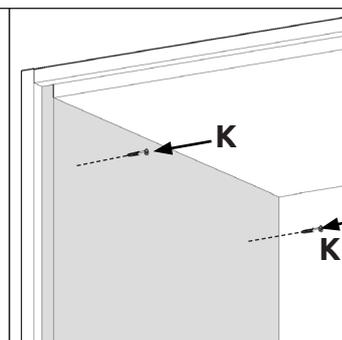




Step 59.

Repeat step 57 & 58 to secure the other tower decor end panel (**Df**).

Assembly Guide

Step 60.

Place 1 x plinth (c) into position and measure the remaining distance.
Cut another piece of plinth (c) to this size.

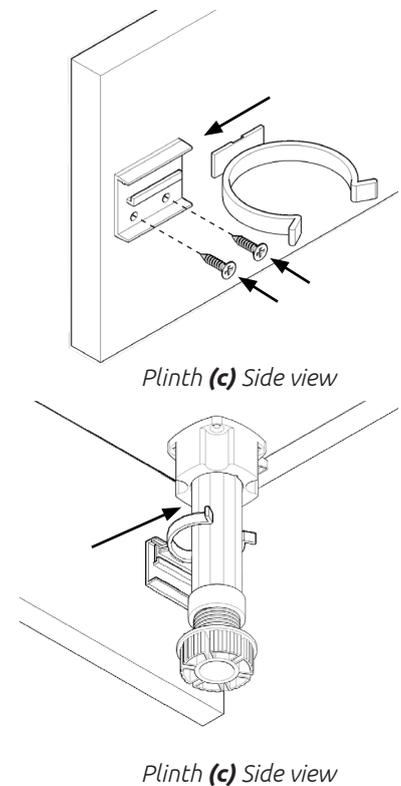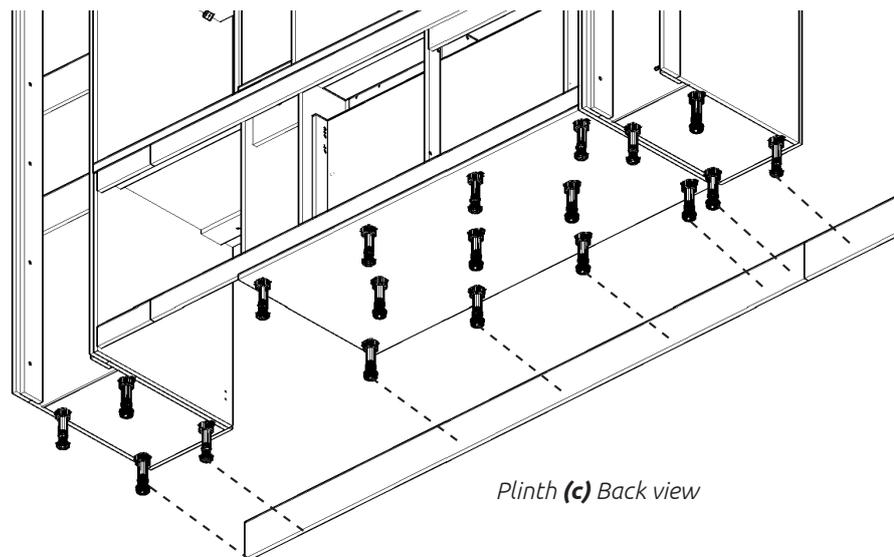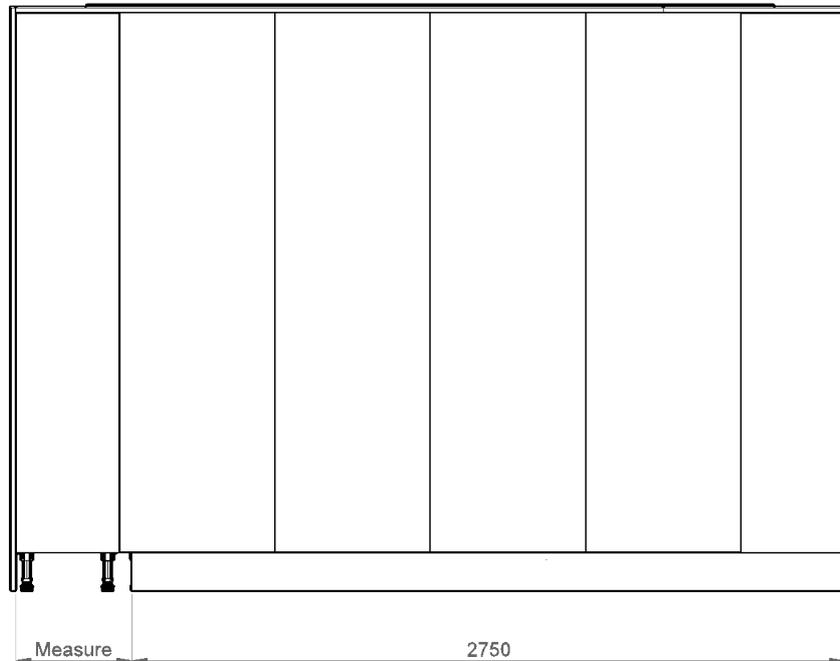

Step 61.

Align plinths (c), mark out locations for each plinth connector clip. Fix the plinth connector clips to the back of the plinth using 2 x 15mm screws (L) per connector. Locate the plinth(s) into position using the plinth connectors.

wren