



ROBE UNIT

1-2 Door Robe Assembly Guide

wren

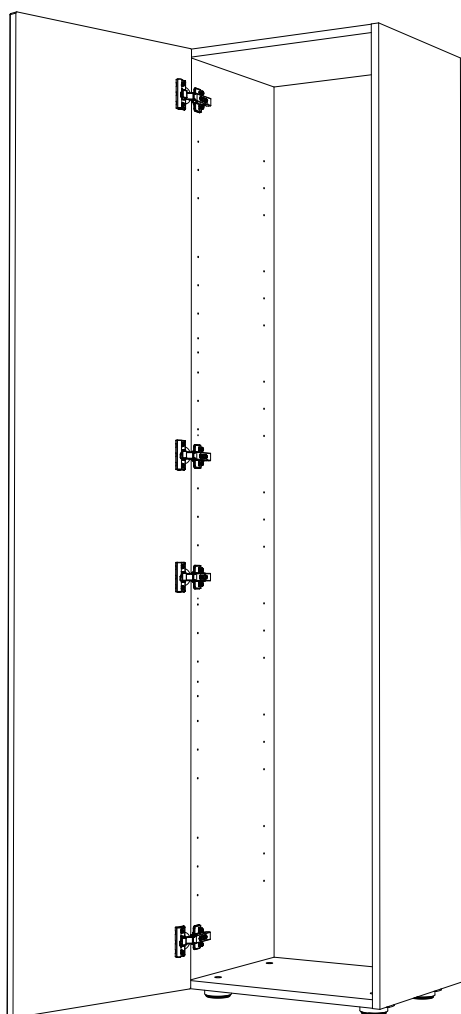

1 Dr Robe

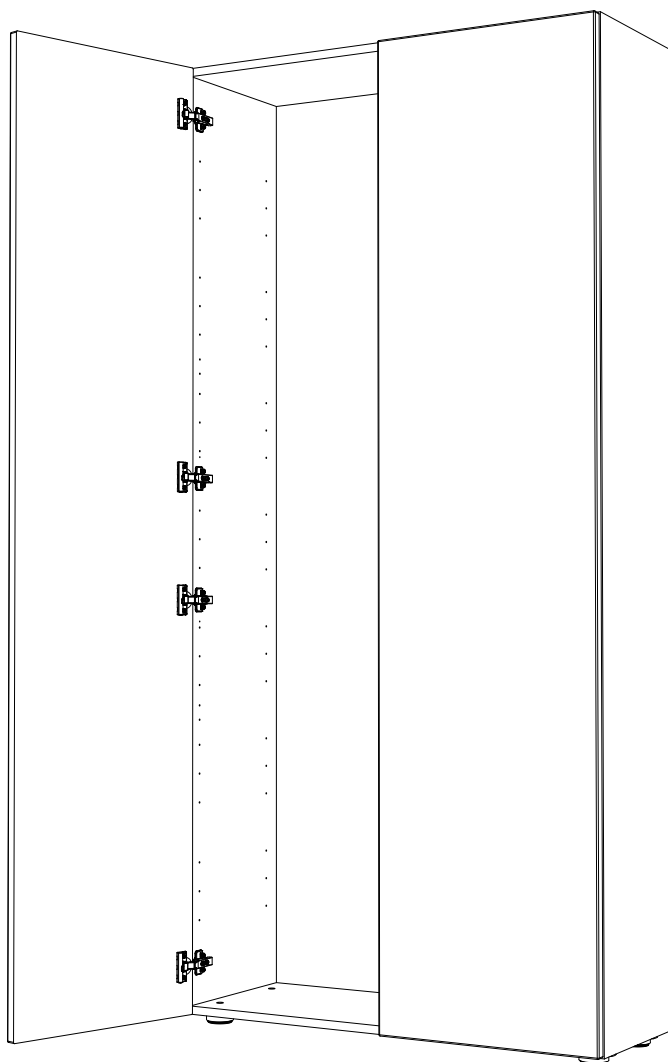

2 Dr Robe





BEFORE YOU START

THIS PRODUCT MUST BE SECURED TO THE WALL


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

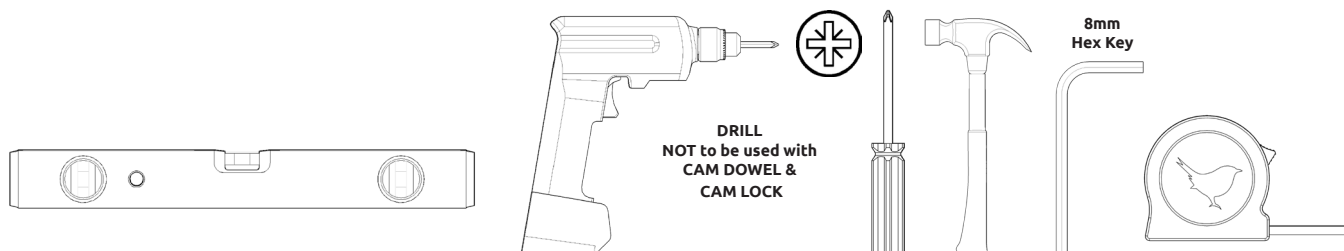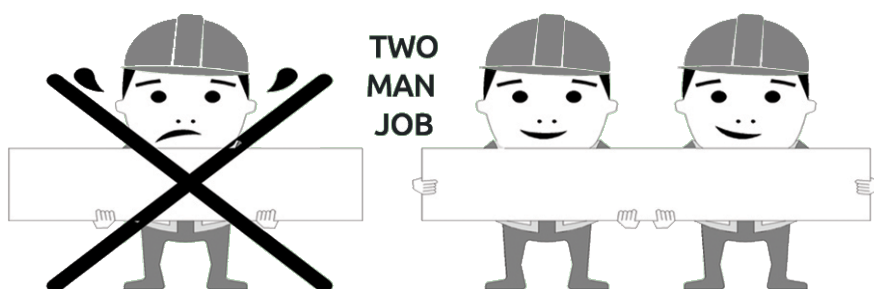

CONTENTS

4	Robe panels
5	Components
6-12	Robe Assembly
13	Leg Attachment
14	Sliding Robe Leg Attachment
15	Hinge Plate Locations
16	Secure Robe To Wall & Adjacent Units
17	Internal Layout Options
18	Divider Panel - 1000 Width Robes
19	Front Facing Hanging Rail Locations
20	Hinge Adjustment
21	Loose Shelf Fitting

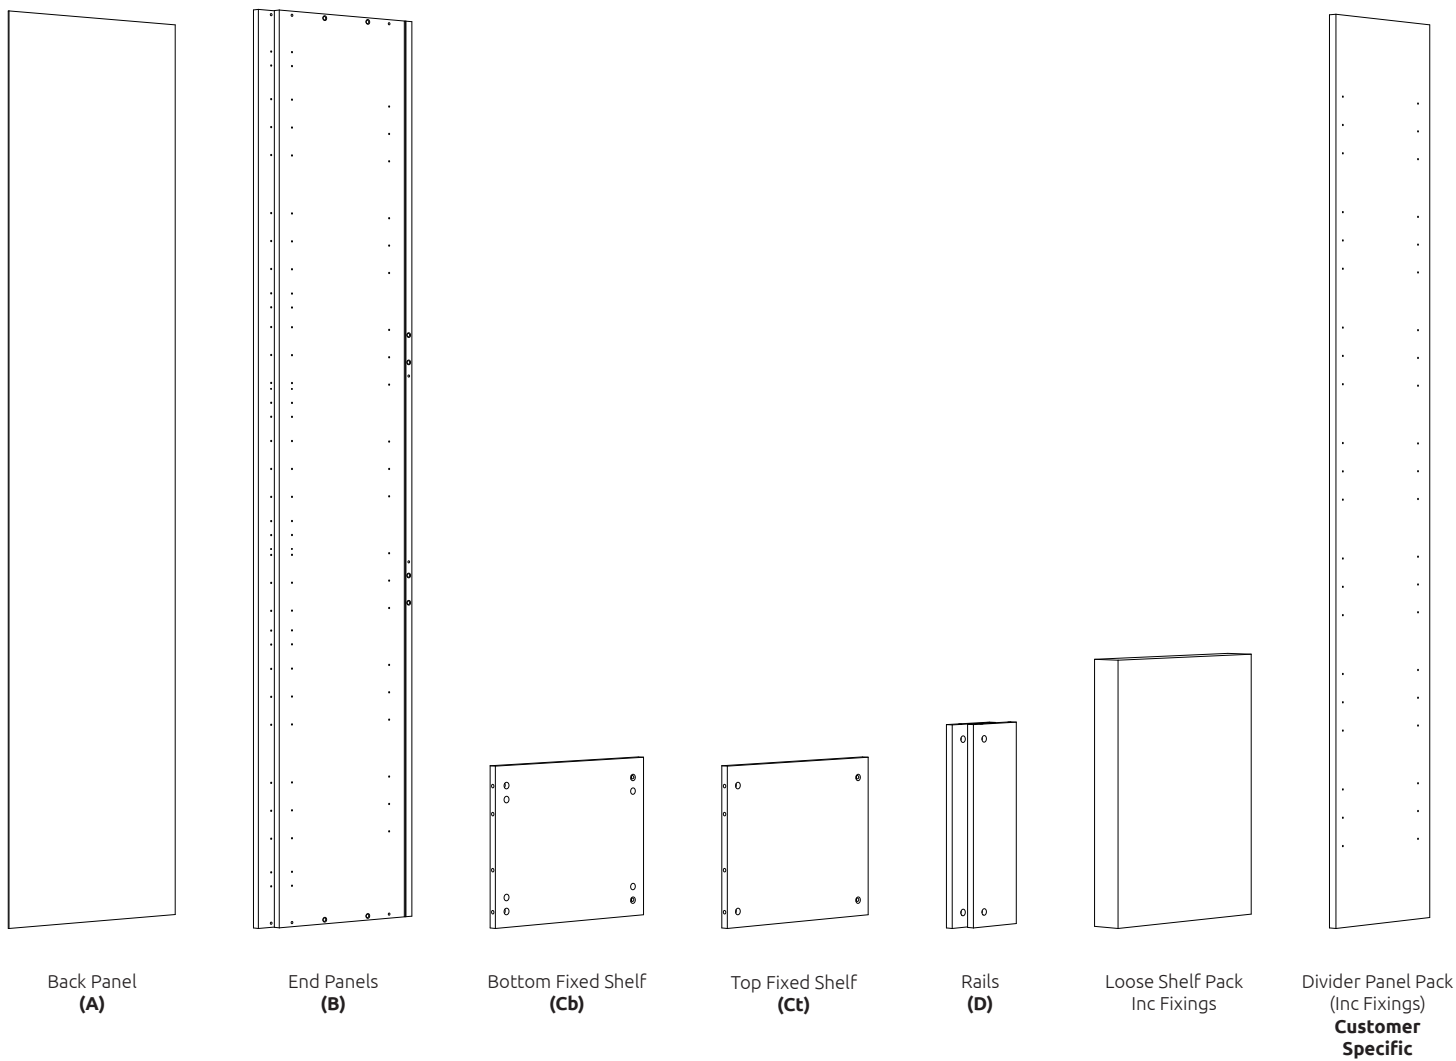


RAILS PROVIDED WITH THIS ROBE MAY DIFFER
IN COLOUR TO THE REST OF THE ROBE

See Page 17 for hanging rail / loose shelf layouts

ROBE UNIT

1-2 Door Robe Assembly Guide


wren




(F) x16
Wooden
Dowel




(KK) x4
13mm
Screw




(L) x24
15mm
Screw




(K) x16
30mm
Screw




(W) x12
Cam Dowel

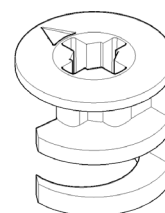


(H) x12
Cam Lock

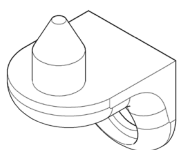


(JJ) x4
Shelf Peg




(N) x6
Door Buffer

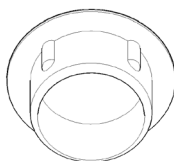


(LL) x5
15mm
Cover Cap

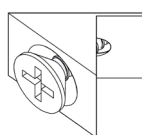


(T) x16
Back Panel
Clip

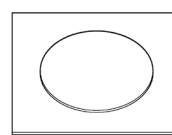


x12
Stick On Cover Cap

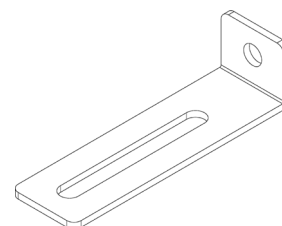


x2
Anti Tipping
Bracket

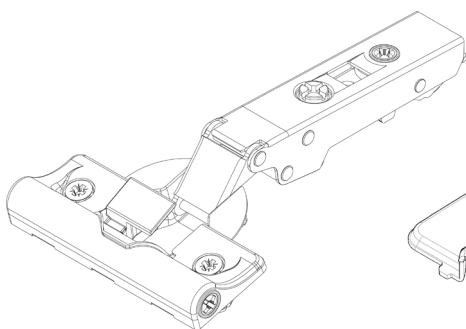


Hinges
Inc Screws

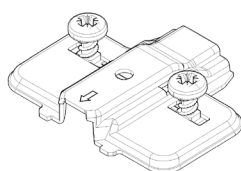



Hinge Mounting Plates
Inc Screws

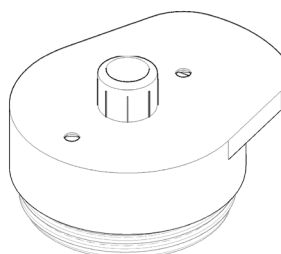


Robe Legs

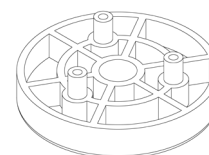


**Robe Leg Extension
Packers**

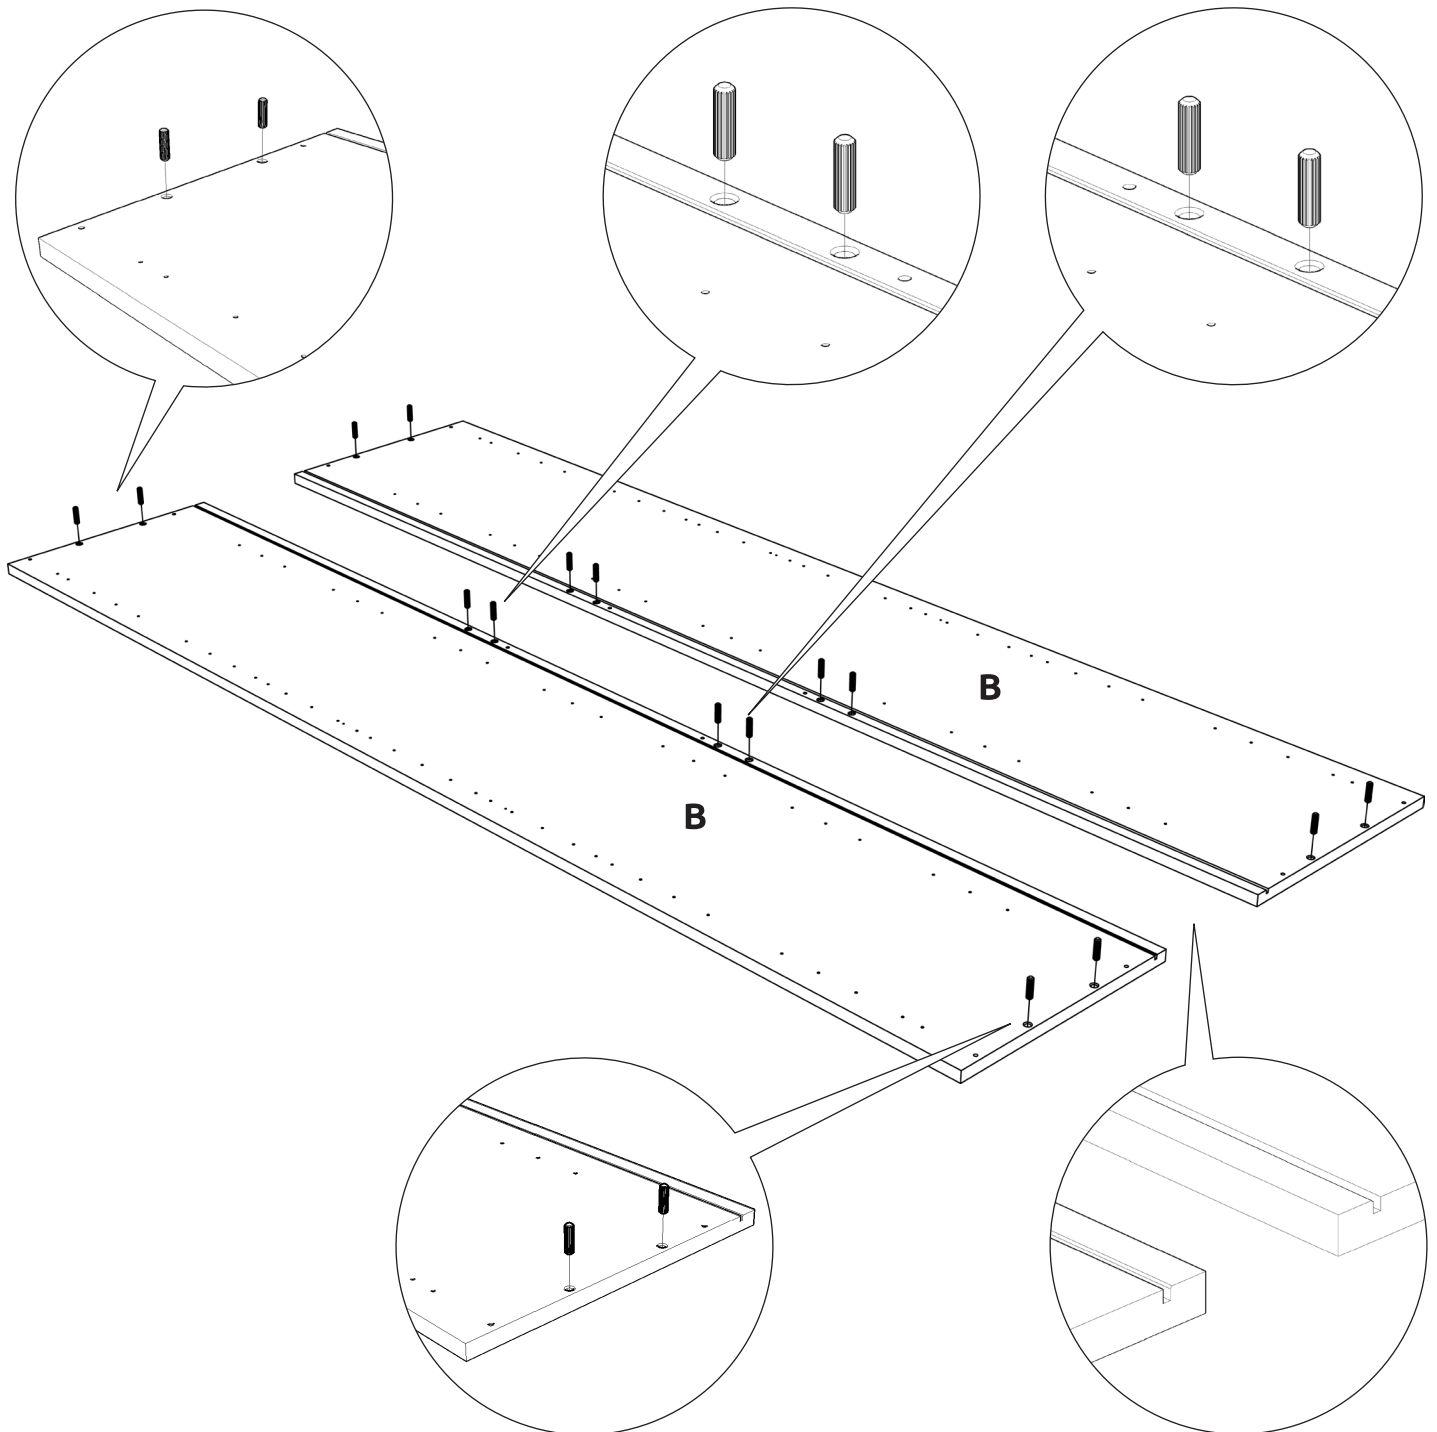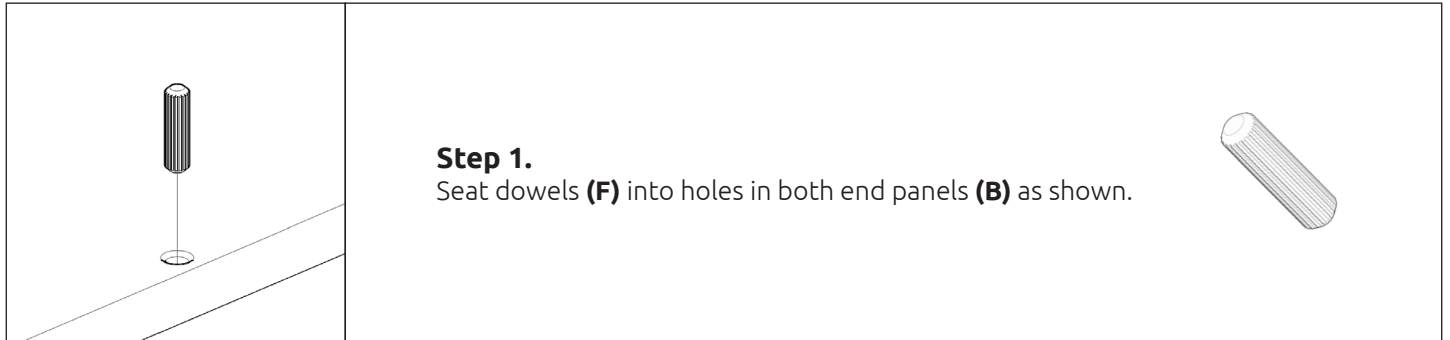

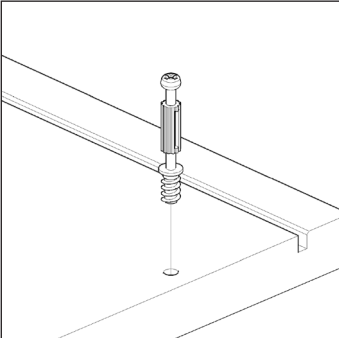


Step 2.
Seat cam dowels **(w)** into holes in both end panels **(B)** as shown.

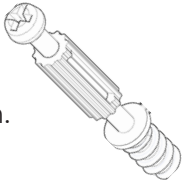



Do not use power tools with cam dowel **(w)** or cam lock **(H)**

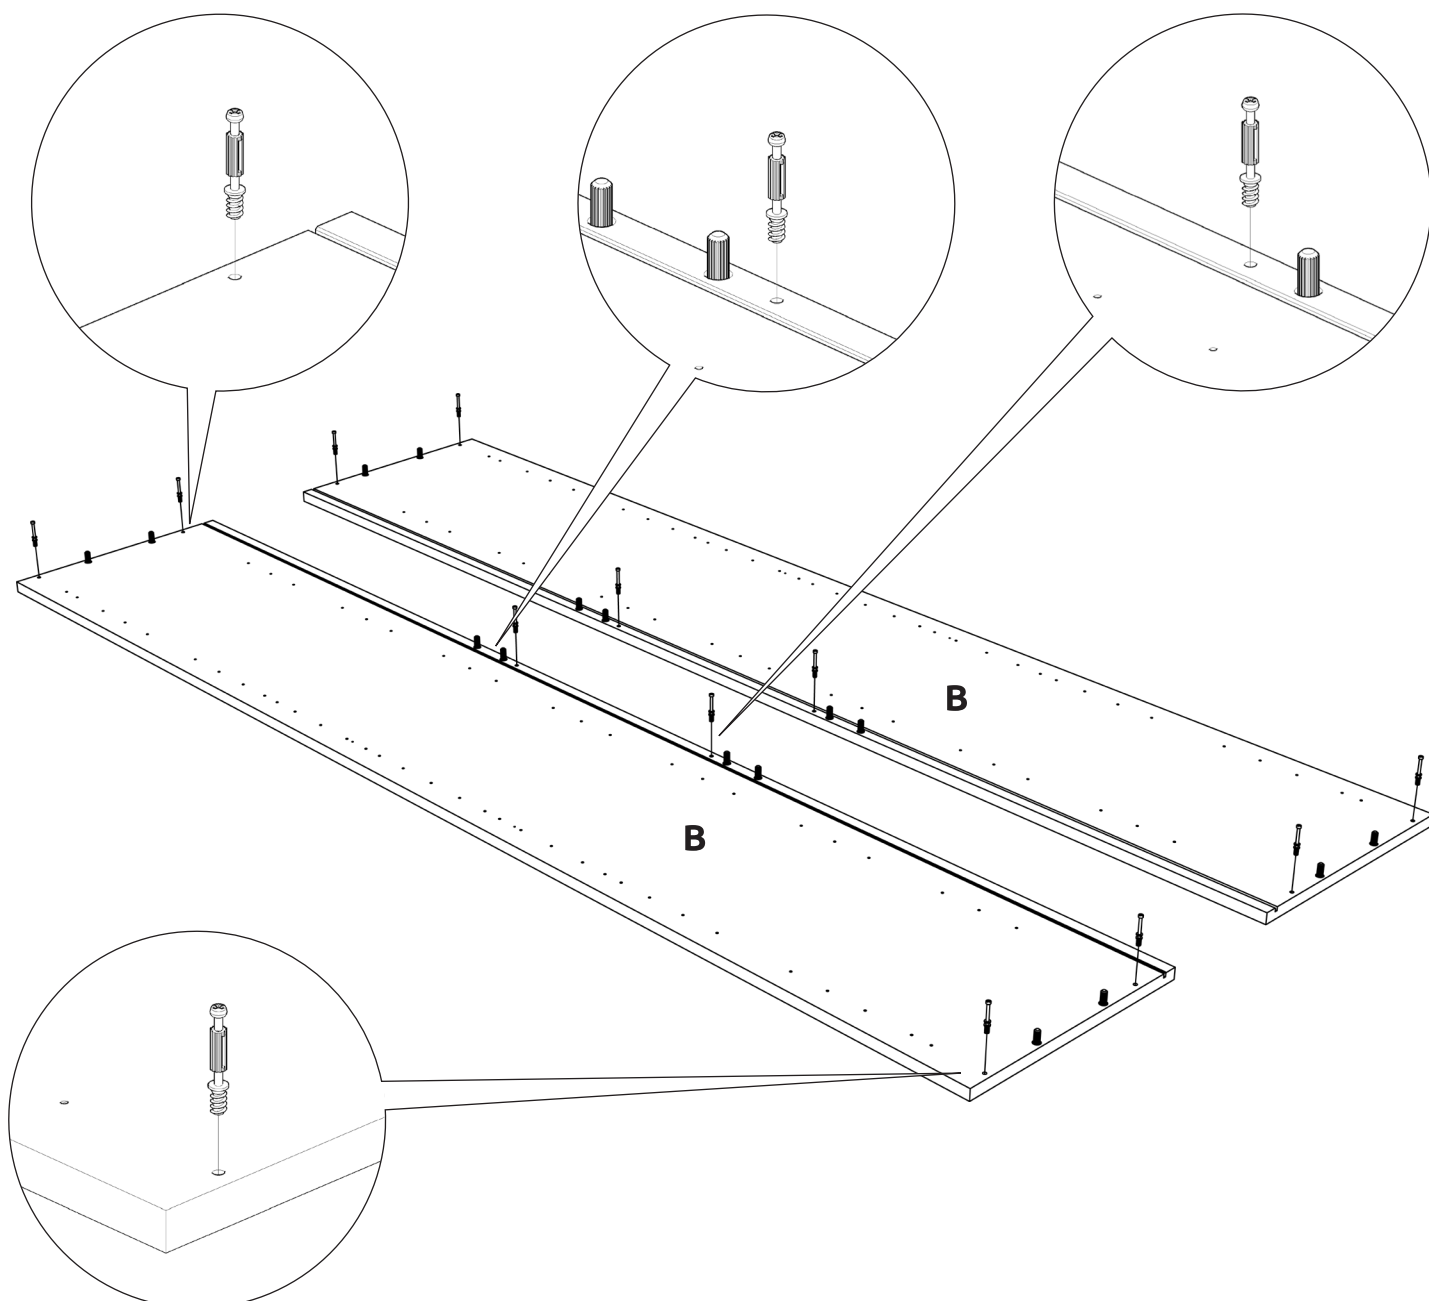


Step 3.

Attach panels **(Ct)**, **(Cb)** & **(D)** to panels **(B)**, using cam dowels **(W)**, and dowels **(F)** in positions as shown.



All cam locks **(H)** are to be positioned facing the outside of the robe, for ease of tightening.

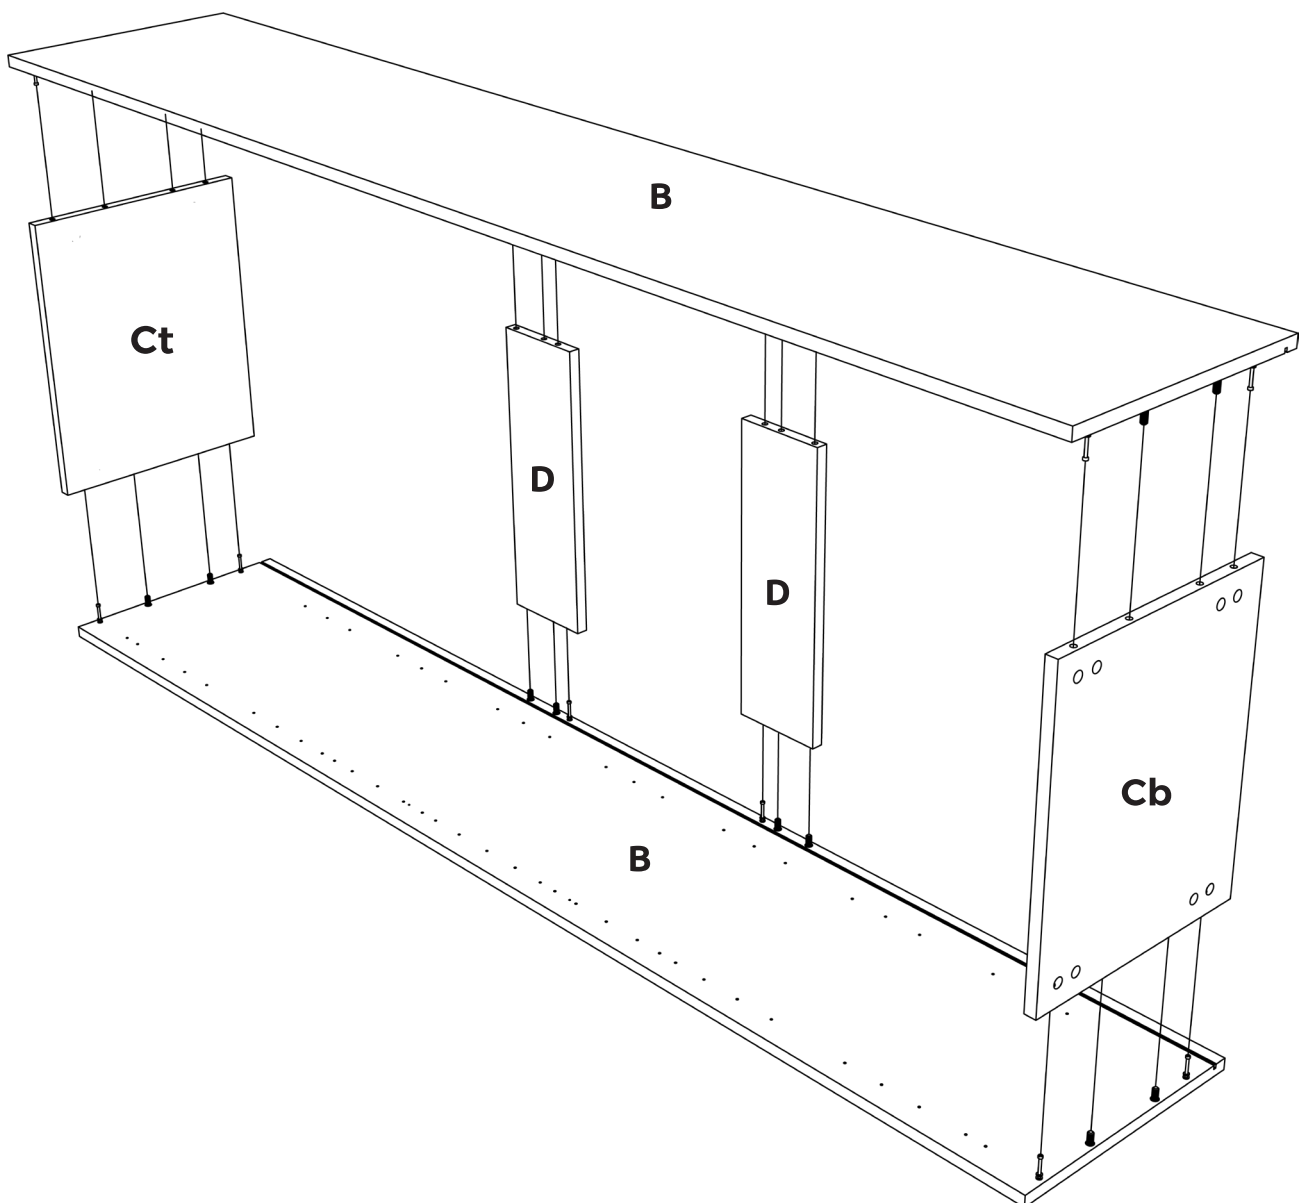



Step 4.

Trim the edgeband covering the groove on the bottom of the end panels.

Slide back panel **(A)** into groove of end panels **(B)**.


Once back panel **(A)** is in position, ensure the panel is flush & square with bottom of end panels **(B)**.

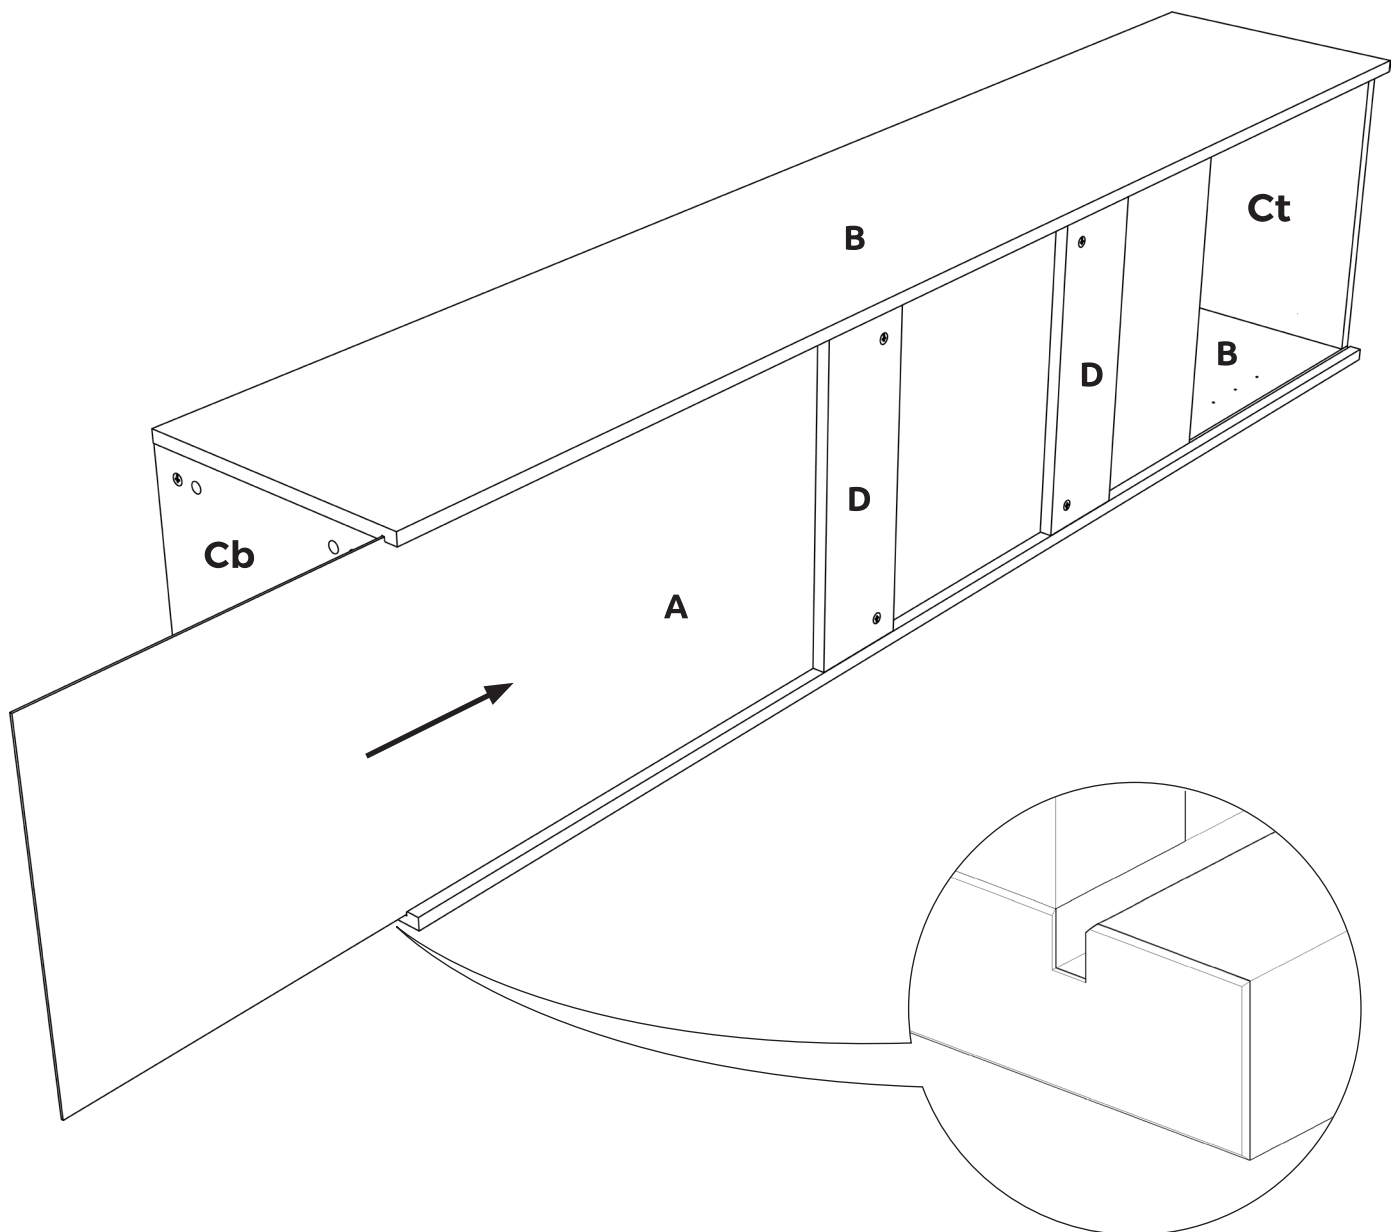

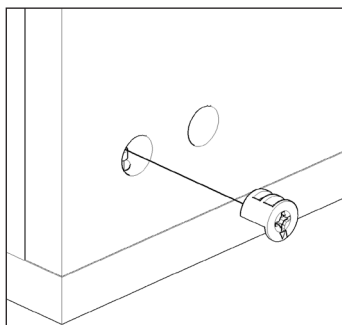



Step 5.

Insert cam locks **(H)**. Hand tighten all cam locks **(H)**, this will tighten the robe together.




Do **not** use power tools with cam dowel **(W)** or cam lock **(H)**

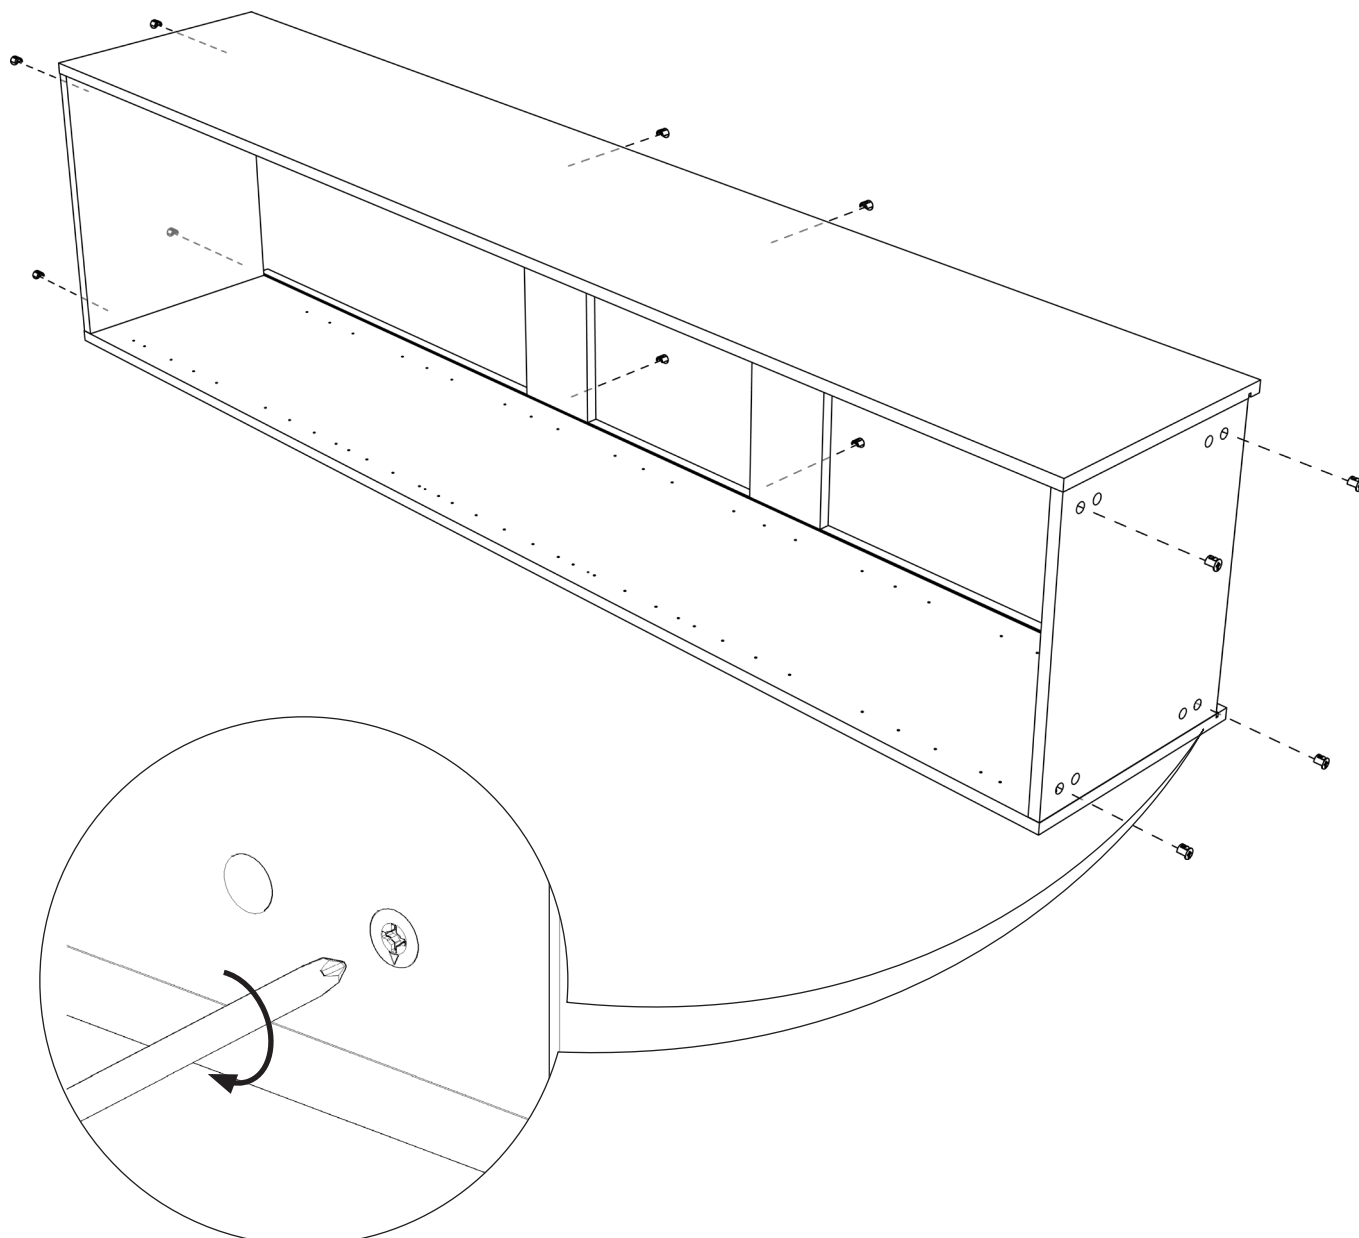

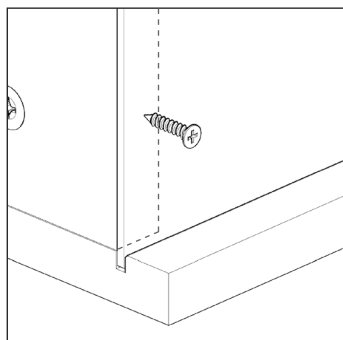


Step 6.

Ensure the robe is square. Secure back panel **(A)** with 15mm screws **(L)** equally spaced at the top and bottom of back panel **(A)** into the fixed shelves **(Ct)** and **(Cb)** as shown. Ensure you screw into the centre of fixed shelves **(Ct)** and **(Cb)**. (9mm from the edge).

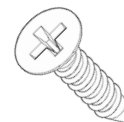

300 - 600 Widths: 6 x 15mm Screws



800 - 1000 Widths: 12 x 15mm Screws

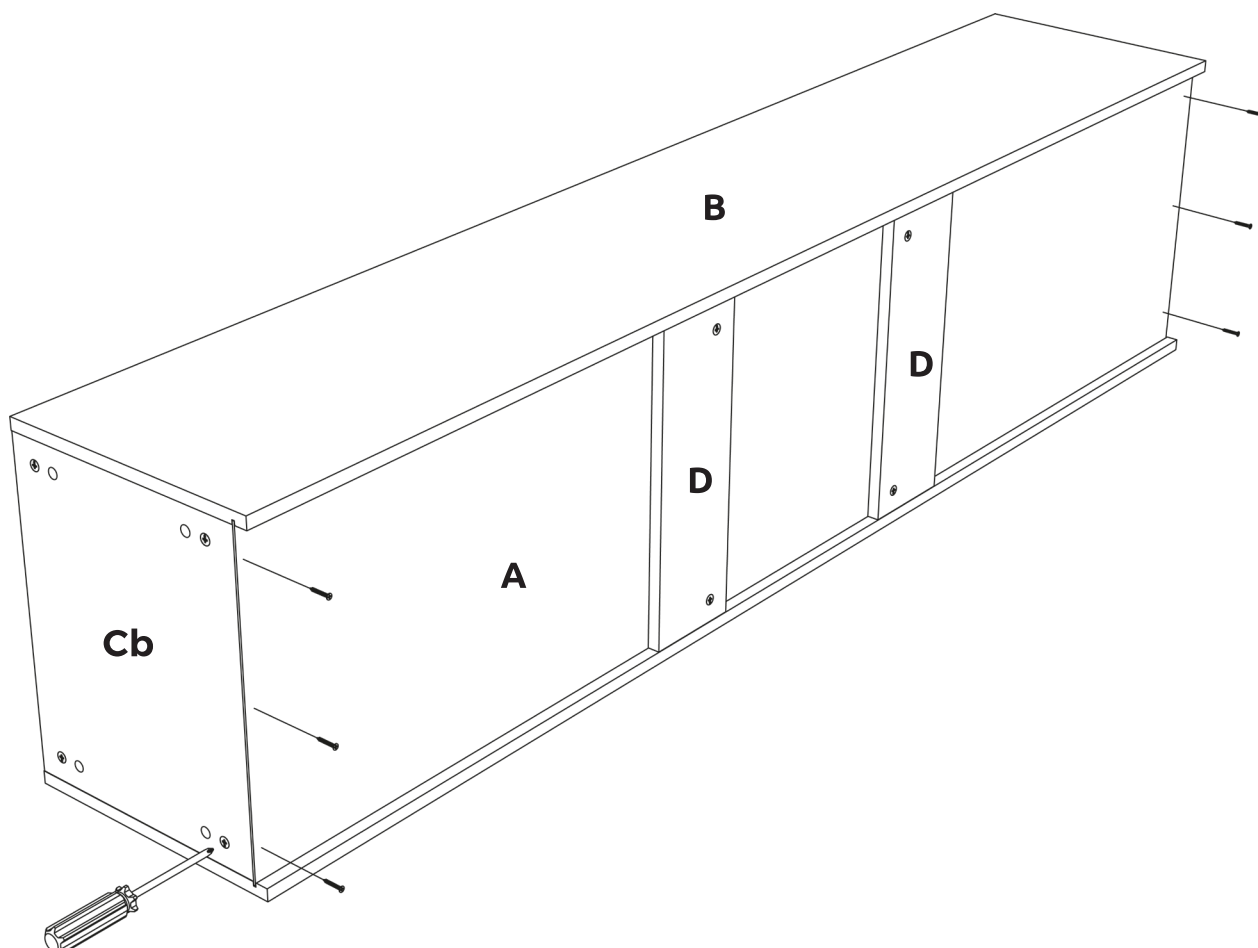

Step 7.


Secure back panel using 16 x back panel clips (**T**).

Slide the back panel clips (**T**) into the groove of both end panels (**B**). The back panel clips (**T**) should be evenly spaced as shown. Once in place, tighten screw.

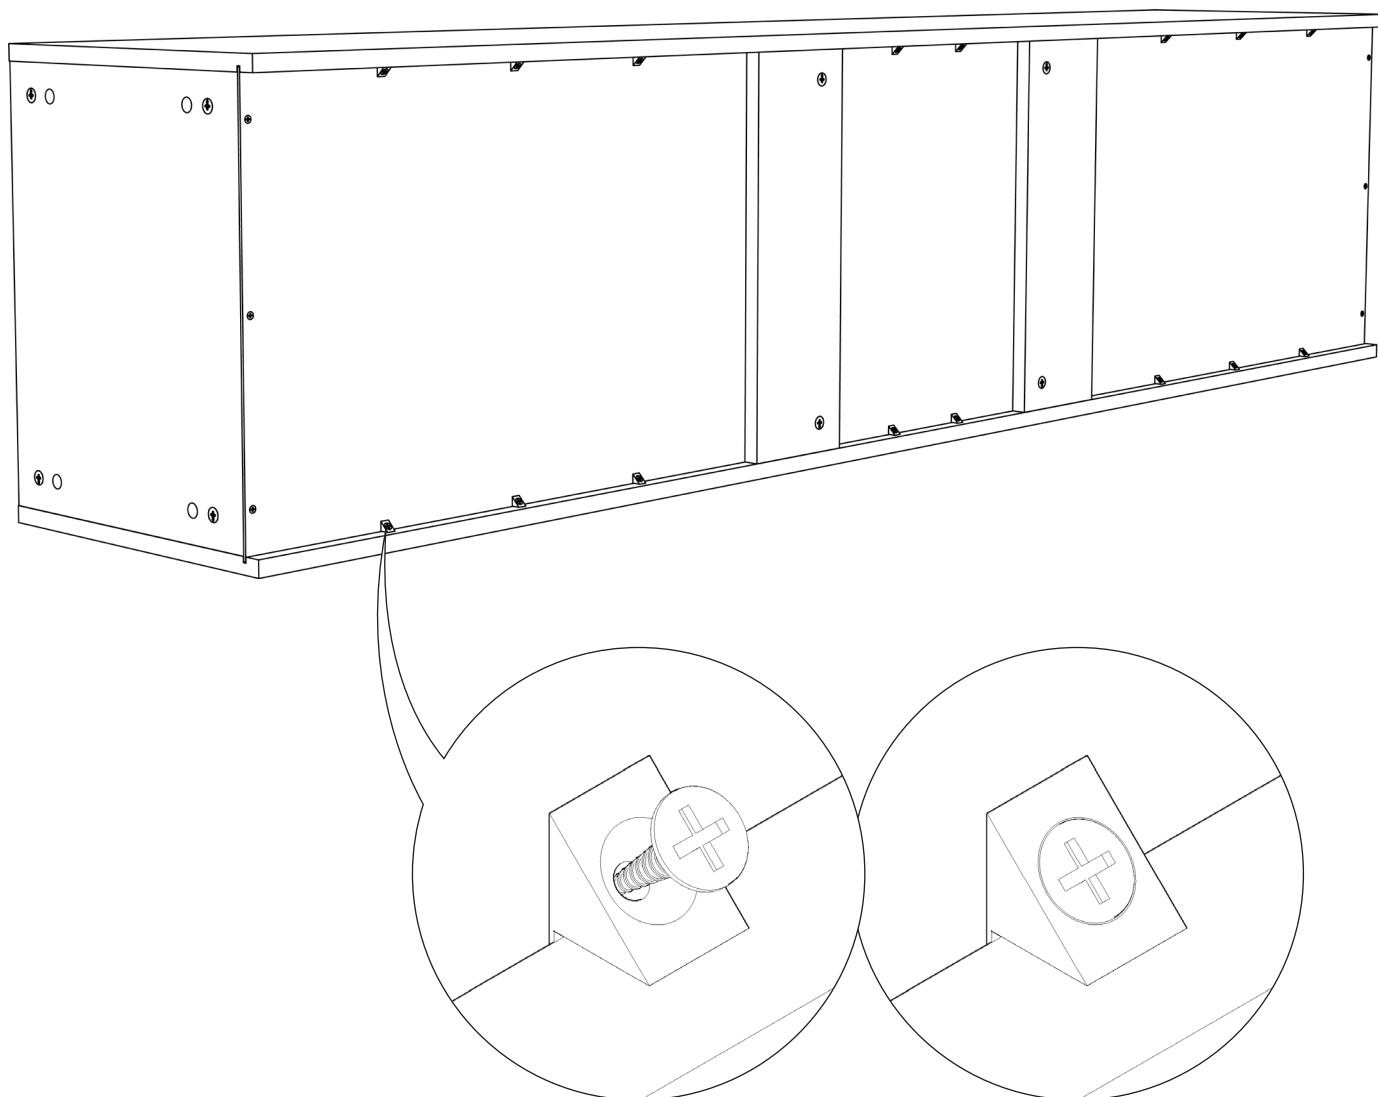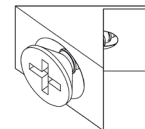

**For adjustable and stable corner robes
please refer to fitting pack Instruction
FI.PK.BED.111.009 or FI.PK.BED.111.010
in your Adj/Stable corner pack for following steps.**

1-2 Door Robe Assembly Guide

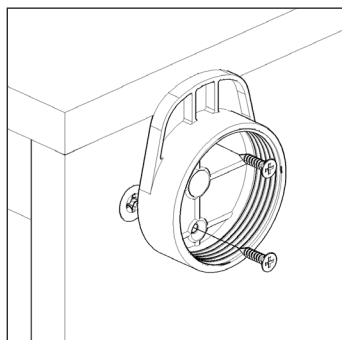

Step 8.

Position top section of legs as shown. Ensure legs are rotated towards the end panels **(B)**. Secure with 2 x 15mm screws per leg.


Attach bottom section of legs and set all legs to the same height.

300 - 600 Widths: 4 Legs


800 - 1000 Widths: 5 Legs

FOR SLIDING ROBE LEGS PLEASE SEE PAGE 14


For floor to ceiling
sliding doors use
these legs.

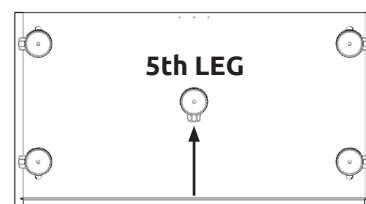

5th Leg Placement

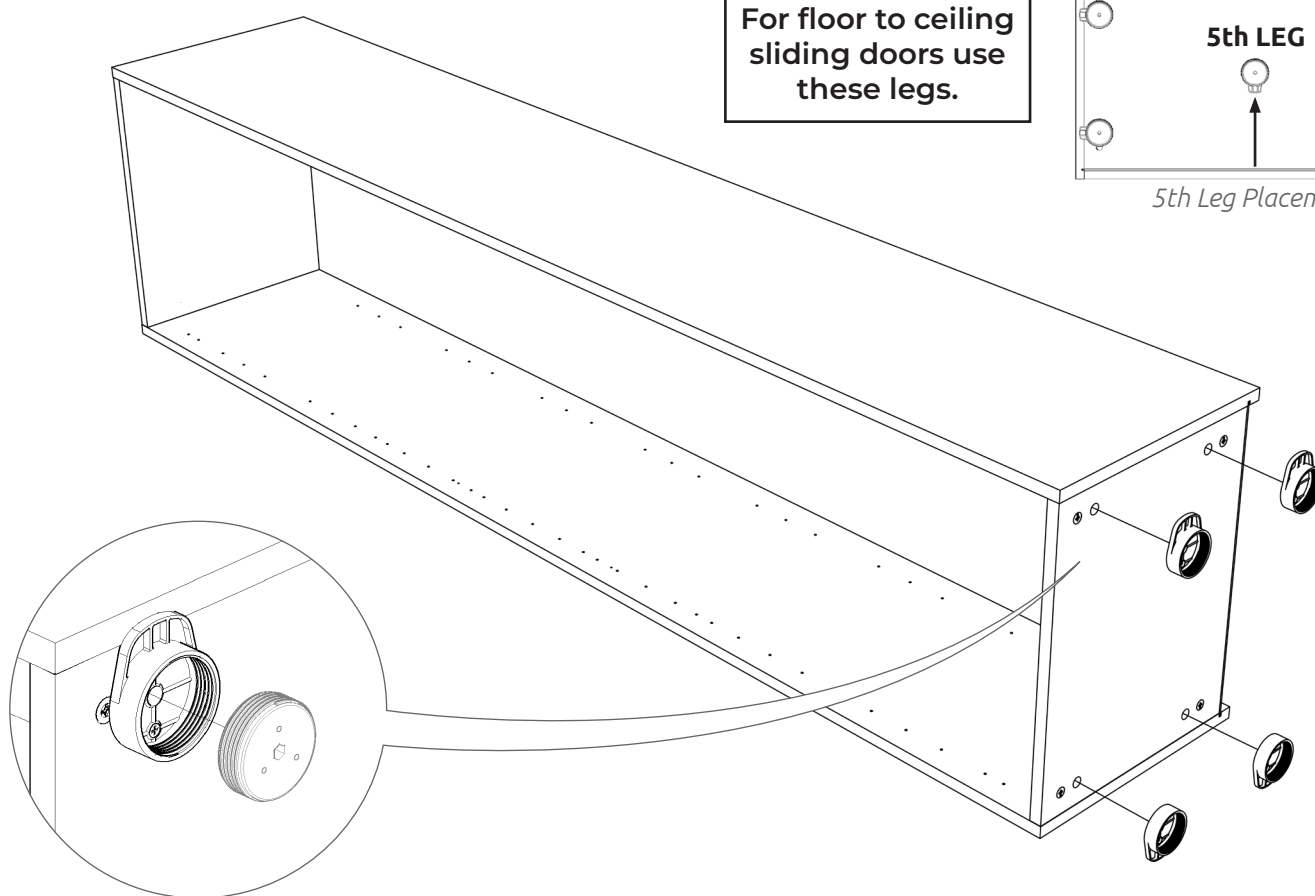


It is **important** to lift the robe onto its legs. Do not tilt as depicted in image.

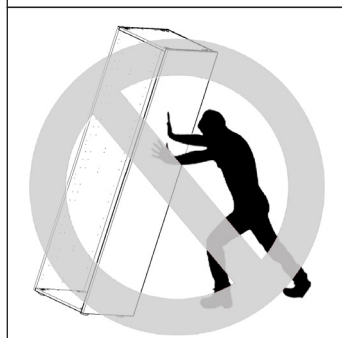


Step 9.

Lift the robe upright. Once in situ level accordingly, using an 8mm hex key from inside the robe. Attach leg packers to one side of the robe to level the robe on uneven surfaces.

Cover leg holes with 15mm cover caps **(LL)**.

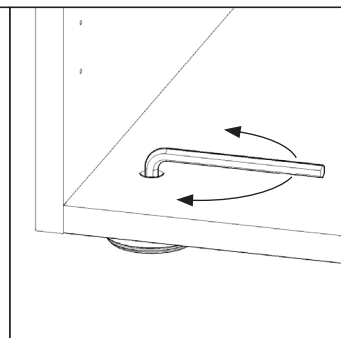

1-2 Door Robe Assembly Guide

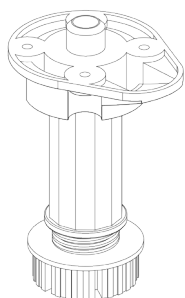

Standard Legs


Sliding Robe Specific

Step 10.


The rear 2 legs (+ extra 5th leg if required) will use the existing leg positions.
Position the 2 front legs as shown. Ensure legs are rotated towards the end panels **(B)**. Secure all legs with 4 x 15mm screws and adjust all legs to 105mm.

300 - 600 Widths: 4 Legs



800 - 1000 Widths: 5 Legs

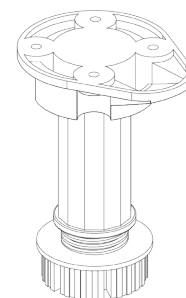

Front 2 Legs

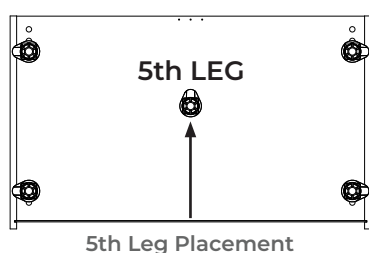

5th Leg Placement

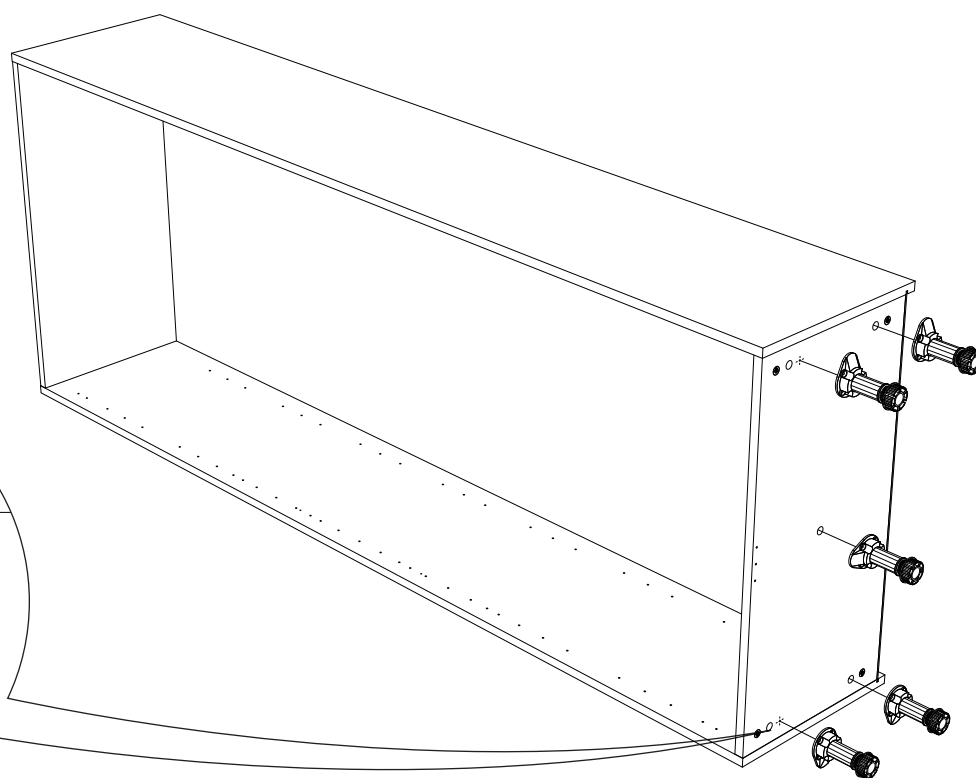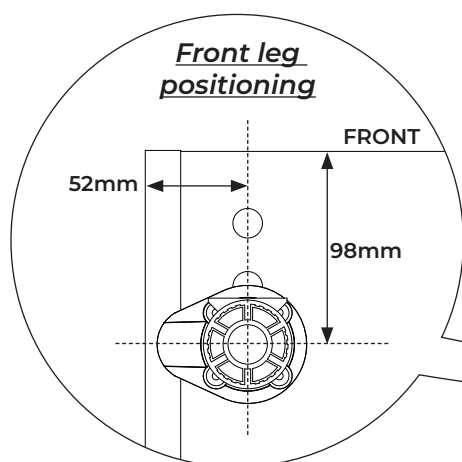


It is **important** to lift the robe onto its legs. Do not tilt as depicted in image.




Step 11.

Lift the robe upright. Once in situ level accordingly.
Cover leg holes with 15mm cover caps **(LL)**.

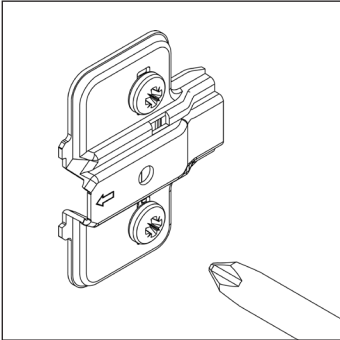

Step 12. (Where Required)
Attach hinge plates onto end panels **(B)** to suit as shown using 2 screws already in hinge plates.

Hinge side to be mounted in accordance to customer specific bedroom plan.

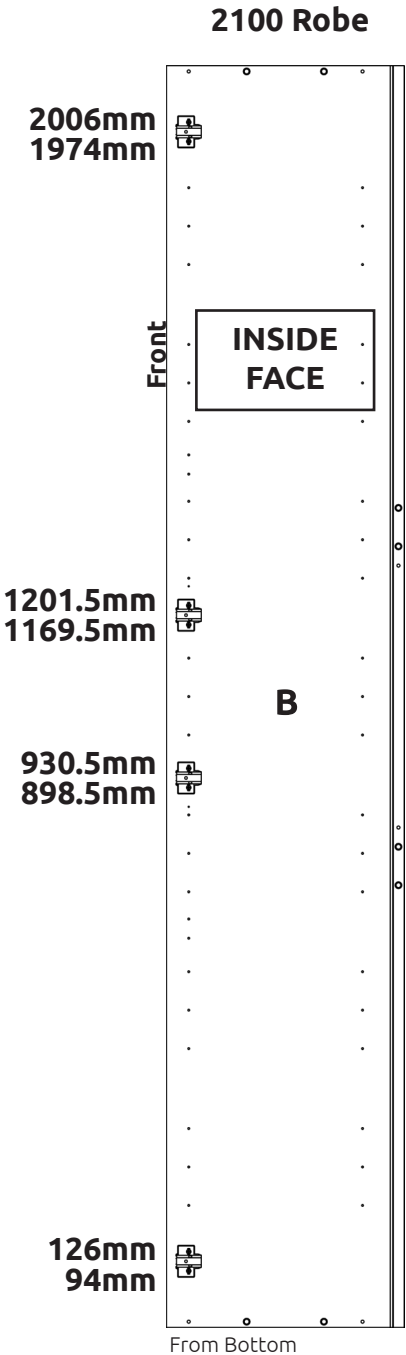

1-2 Door Robe Assembly Guide




Screws for fixing to walls are not provided as these vary depending on wall material and construction. Ensure appropriate fixings for wall constructions are used.

Step 13.


Ensure the robe is level and positioned correctly.

Wren recommends securing the robe to the wall using rails **(D)**. Drill pilot holes through back panel **(A)** and rails **(D)** into the wall. Screw through the pilot holes into the wall, place cover stickers on the heads to conceal them. If unable to use the rails **(D)** to secure the robe to the wall use the anti tipping brackets provided. Attach the brackets to the top of the robe using 15mm screws **(L)** provided. Screw through the brackets into the wall.

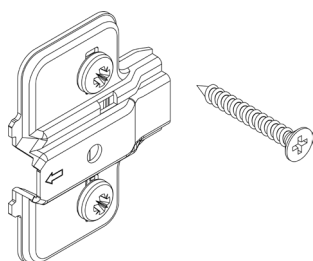




Step 14.

Screw into any adjacent robes using 30mm screws **(K)** provided to secure the robe. Screw just to the rear of the hinge plates at the top, middle and bottom on both sides. Place stick on cover caps on the heads to conceal them.

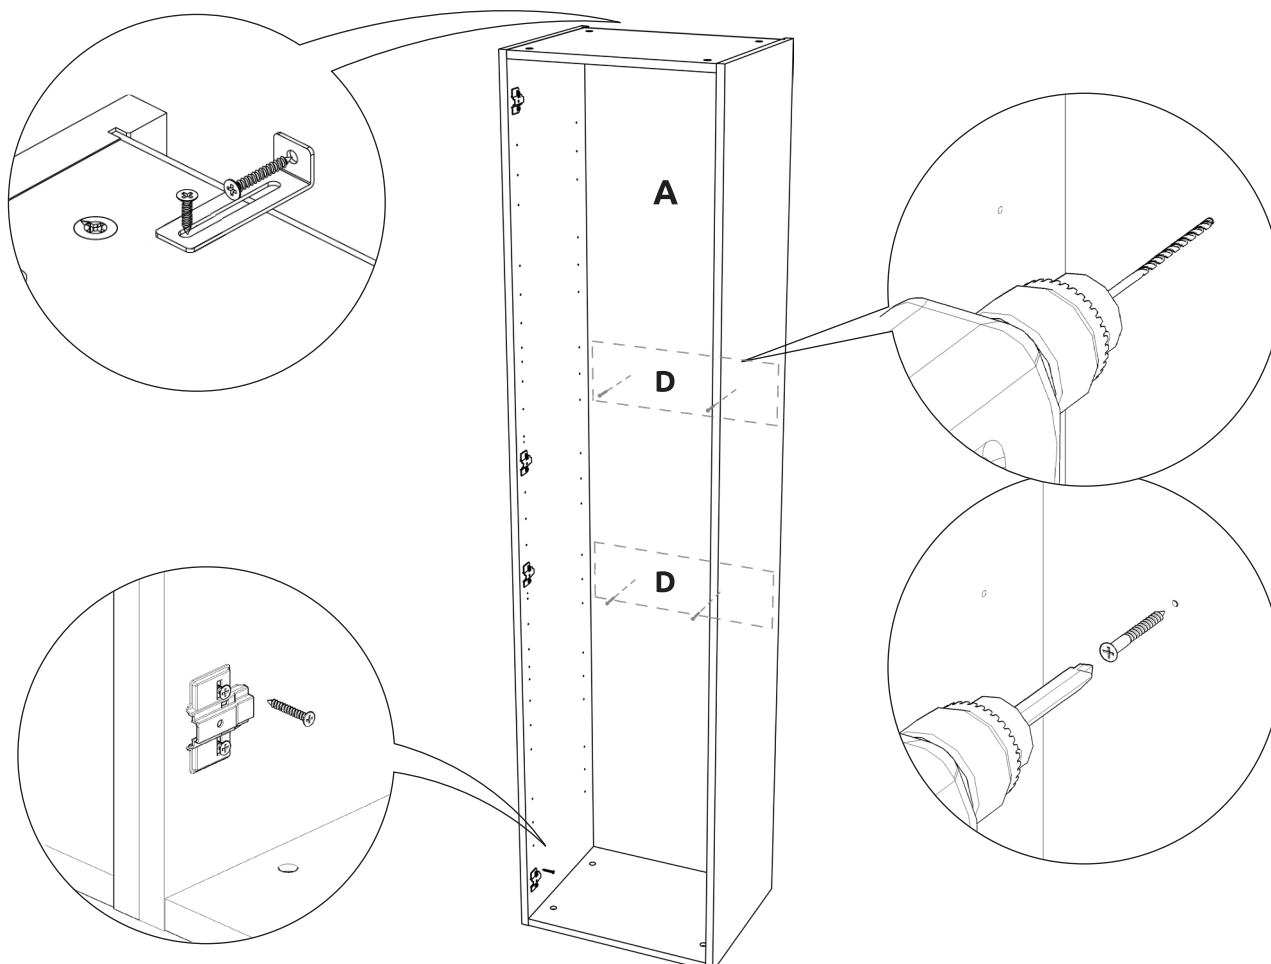

ROBE INTERNAL LAYOUT OPTIONS inc SLIDING ROBES

1. 1-2 Door, 4 Shelves and 2 Baskets
2. 1-2 Door, 7 Shelves
3. 2 Door - 1000 Width Specific, 6 shelves
and 1 Front Facing Hanging Rail

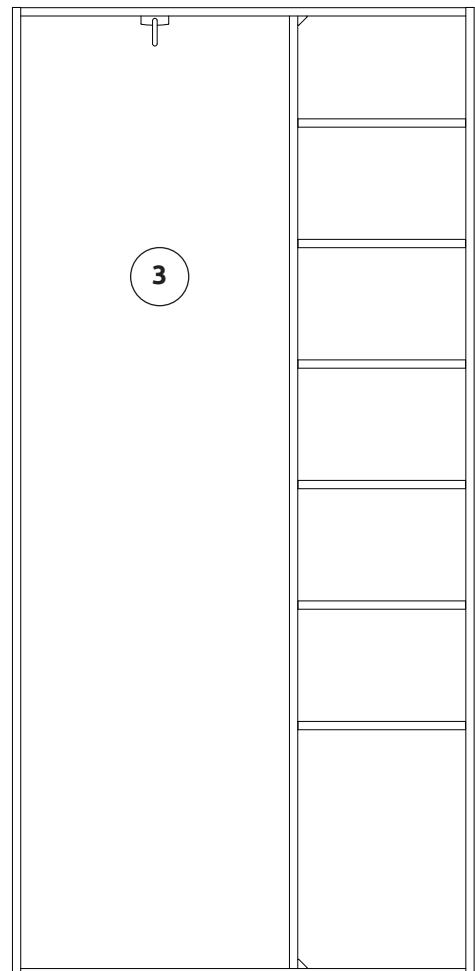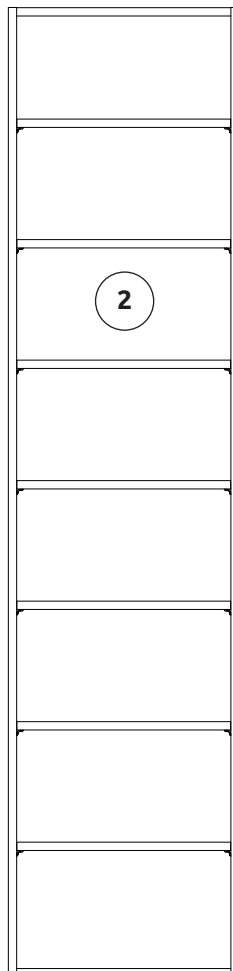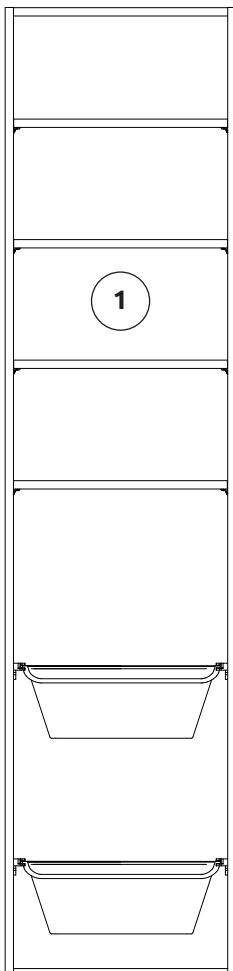



1-2 Door Robe Assembly Guide

Divider Panel - 1000 width robe specific

On the top and bottom fixed shelves mark a line 364mm from the side.



On the marked line secure 2 x fixing blocks to each shelf using 2 x 15mm screws (L) per fixing block.

Position the divider panel against the fixing blocks, ensure the shelf drilling is facing the correct direction and secure the divider panel to the fixing blocks using 2 x 15mm screws (L) per fixing block.

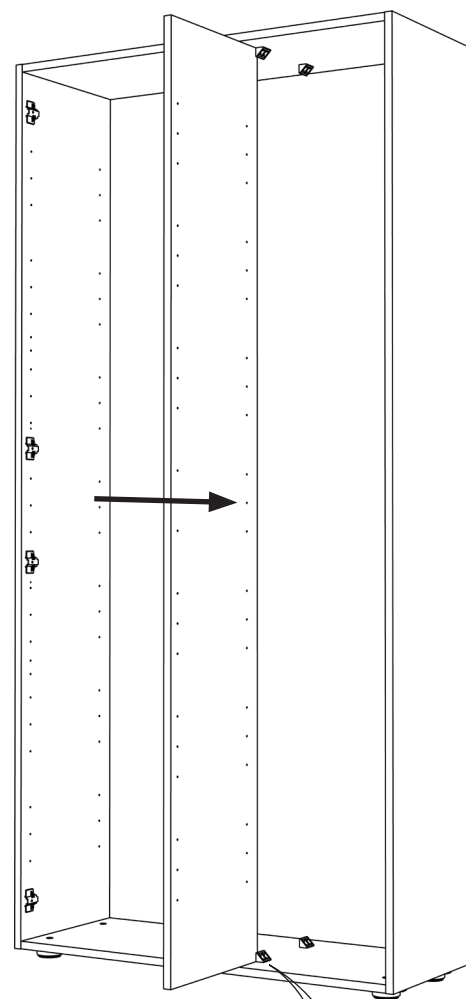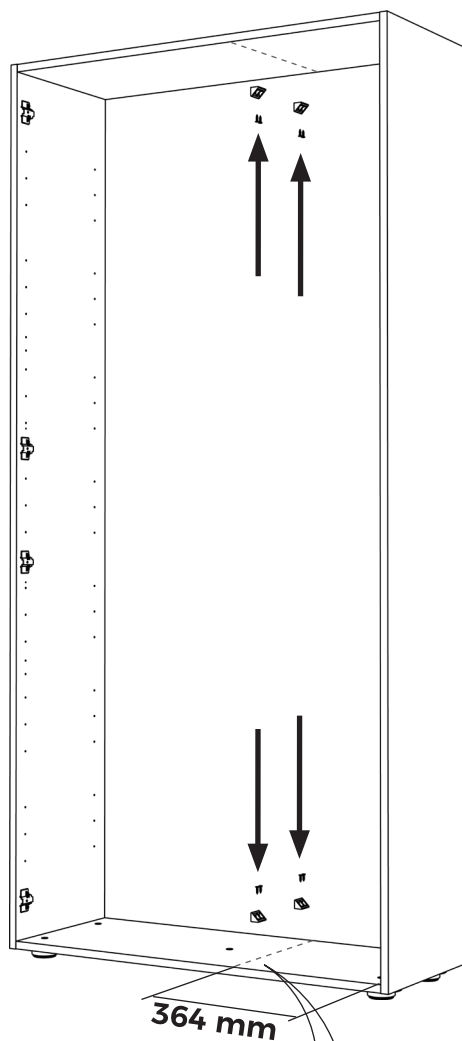


Front Facing Hanging Rail.



Position the hanging rail in the centre of the top fixed shelf of the larger aperture and secure with 4 x 30mm screws (**K**). Ensure the front facing hanging rail is set back from the front of the fixed shelf to not clash with the rear of the robe door.

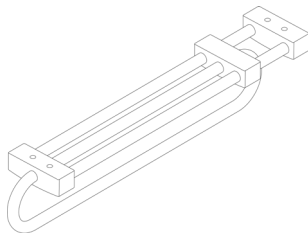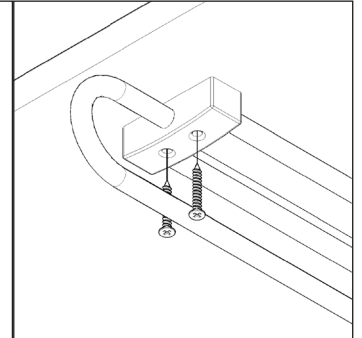

Closed / Retracted

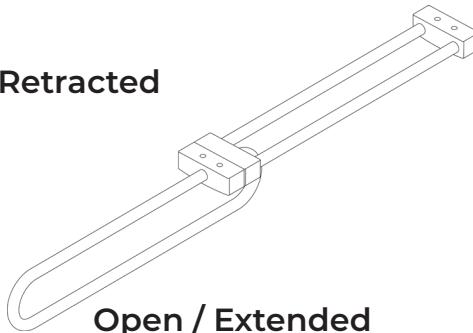





Open / Extended

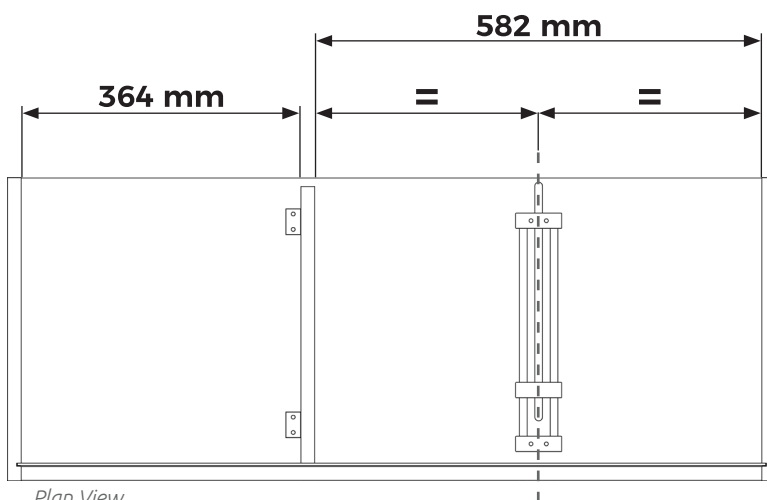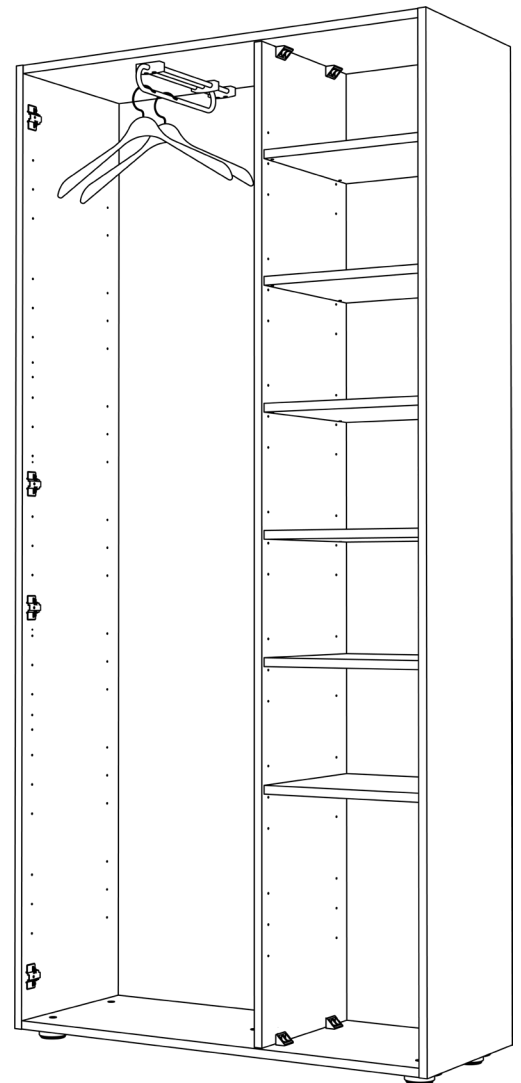




Plan View
1000 width robe

1-2 Door Robe Assembly Guide

Hinge Attachment and Adjustment

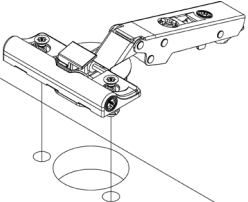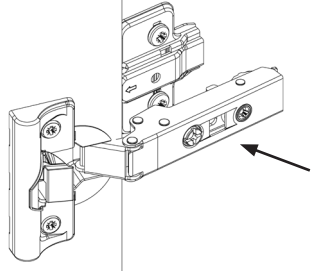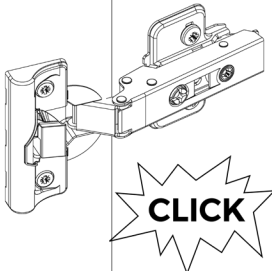	Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.  <i>Hinge dowels</i>	
	 CLICK	Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.		

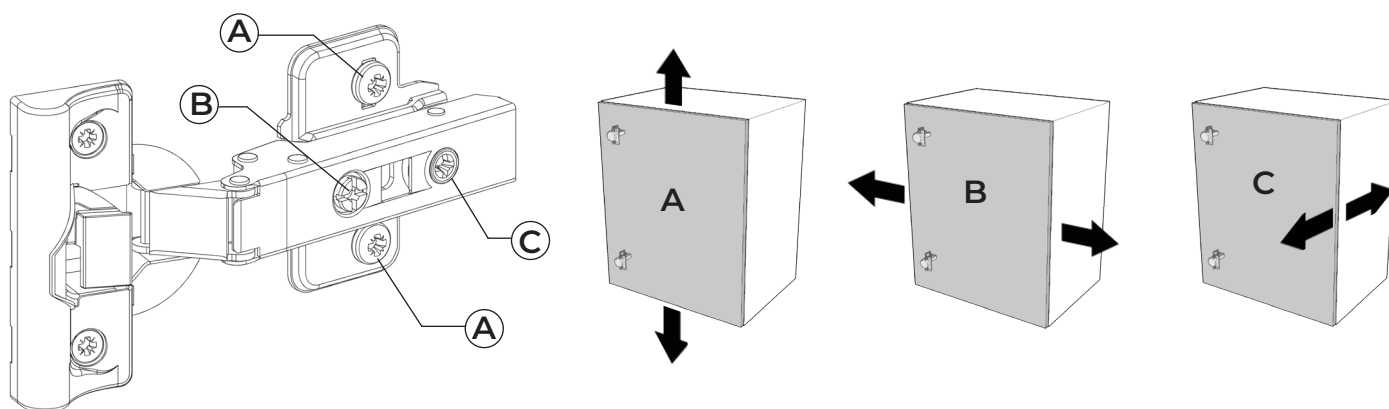

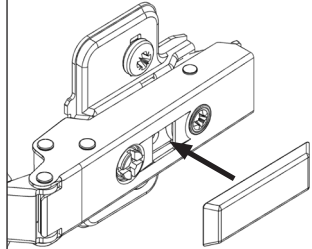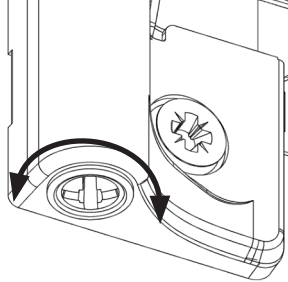	Step 4. Fit cover caps to hinges and adjust soft-close to suit.		
--	---	--	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.


Loose Shelves

Secure shelf peg (JJ) to end panels (B) using 1 x 13mm screw (KK) per shelf peg.

4 x shelf pegs (JJ) are required per loose shelf.

Position loose shelf onto shelf pegs (JJ) ensuring the spikes on the shelf pegs locate in the holes on the bottom of the loose shelf.


See customer specific bedroom plan for position and number of loose shelves.



Shelf Peg



13mm Screw

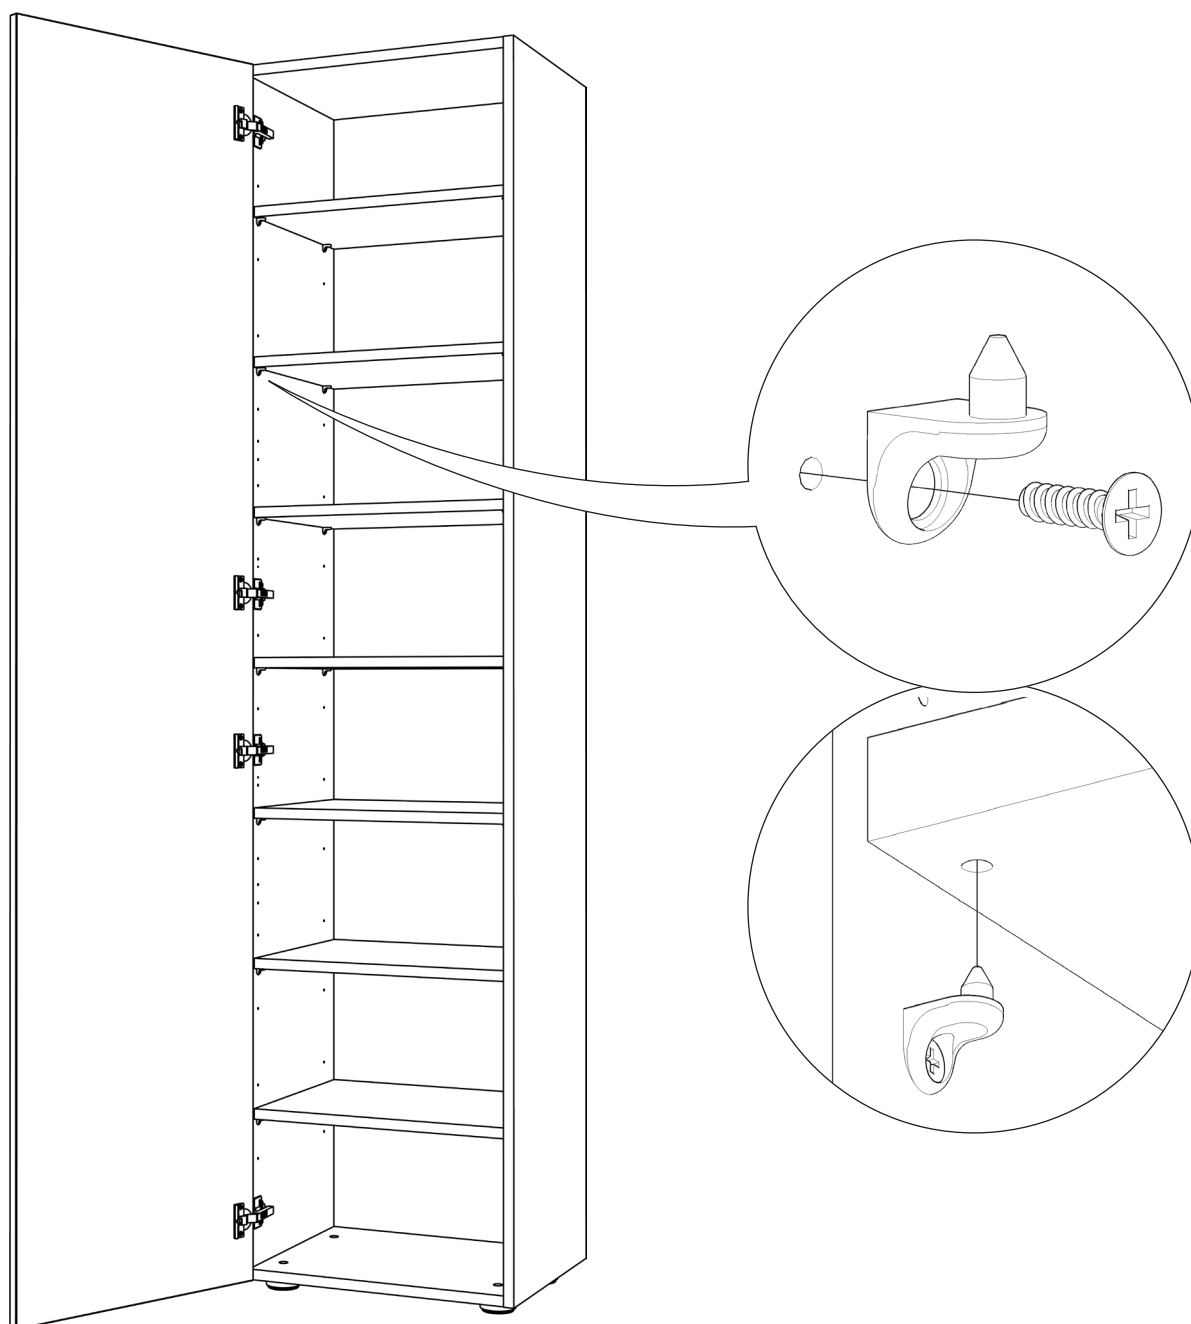

wren