



BASE UNIT

800-1000, Adjustable Corner Assembly Guide

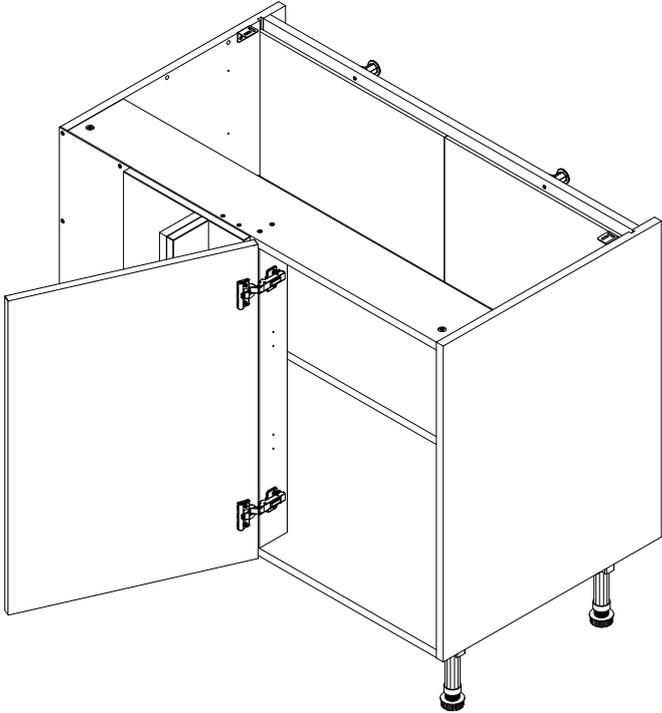

800 - 1000 Adjustable Corner Base Unit

LH UNIT SHOWN FOR ILLUSTRATIVE PURPOSES ONLY

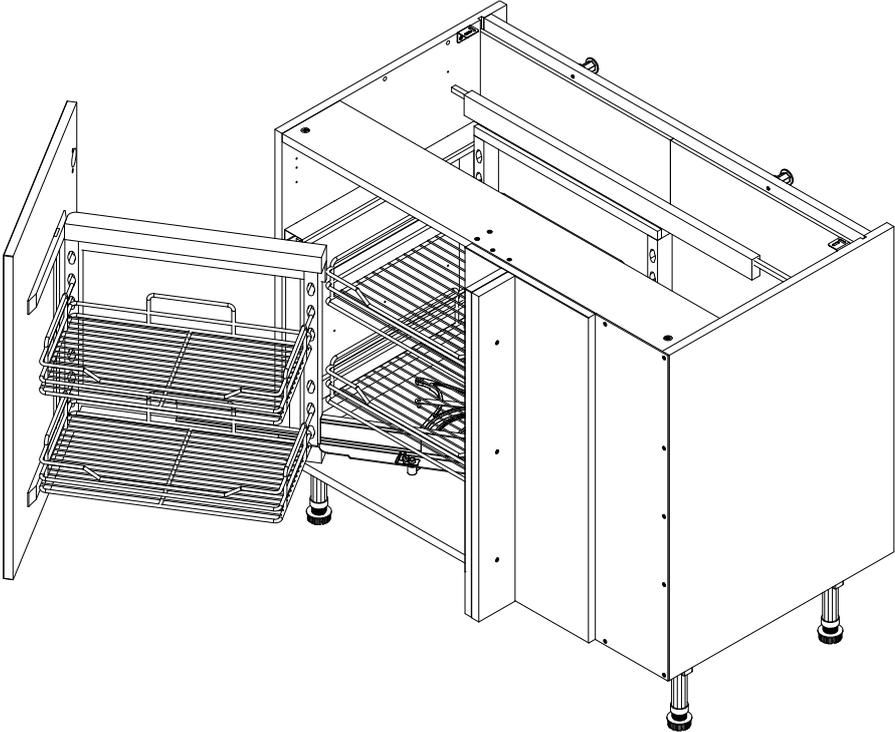

800 - 1000 Adjustable Magic Corner Base Unit

RH UNIT SHOWN FOR ILLUSTRATIVE PURPOSES ONLY

BASE UNIT


800-1000, Adjustable Corner Assembly Guide




BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

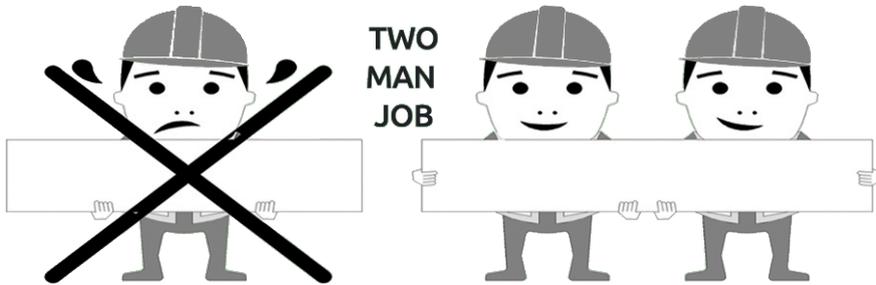


NOT to be used with
CAM LOCK

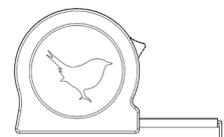

BASE UNIT

800-1000, Adjustable Corner Assembly Guide

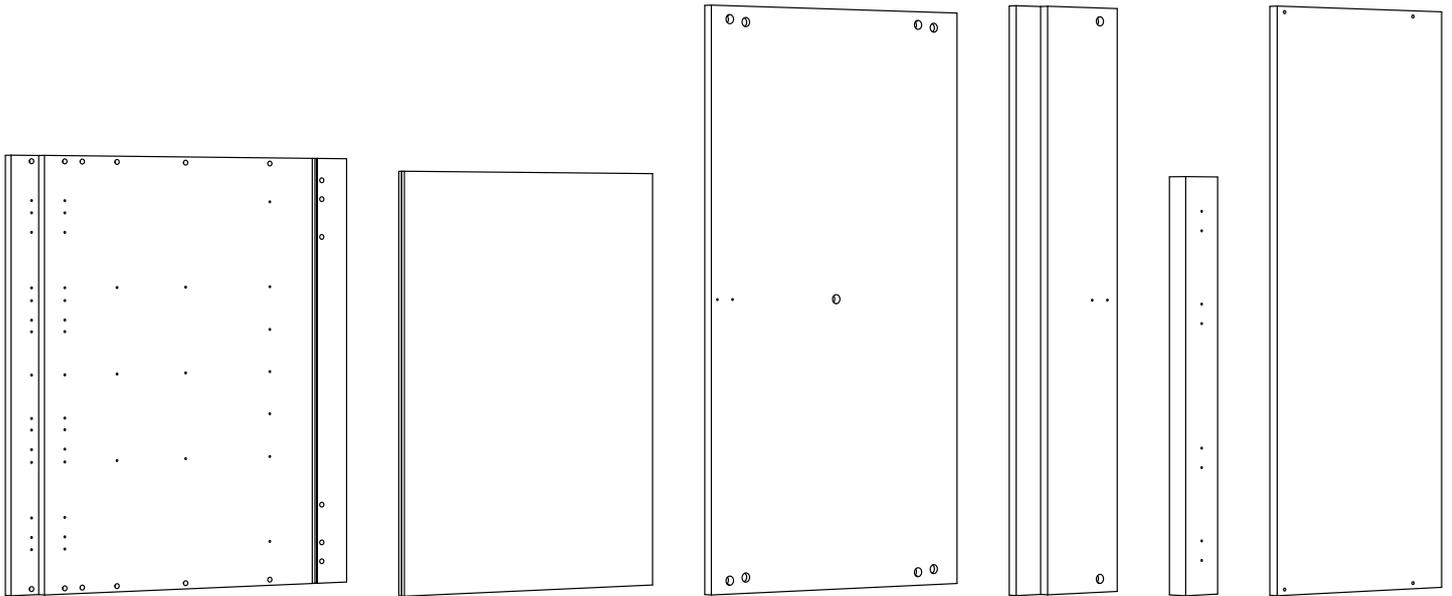

Panel A
x2 End Panel


Panel B
x1 Back Panel
(Folded)

Panel C
x1 Fixed Shelf

Panel D
x2 Rail

Panel E
x1 Muntin

Shelf
x1 Loose Shelf

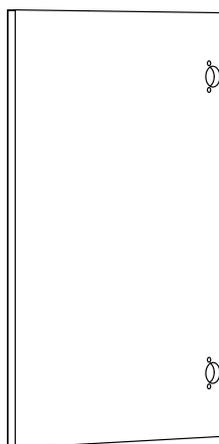


Frontal
x1 Front Panel
(Packed Separately)



Blank Panel
x1 Blanking Panel
(Packed Separately)




Panel Y
x1 Corner Post Panel
(Packed Separately)

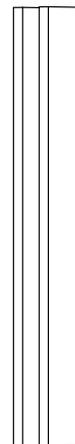

Rails Z1 & Z2
x2 Fixing Rails
(Packed Separately)

BASE UNIT


800-1000, Adjustable Corner Assembly Guide

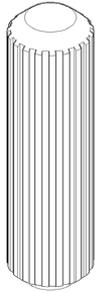

(F) x12
Wooden
Dowel




(L) x37
15mm
Screw

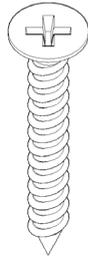


(K) x18
30mm
Screw




(P) x4
45mm
Screw

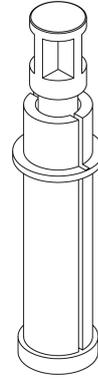


(G) x8
Cam Dowel
(Expanding)

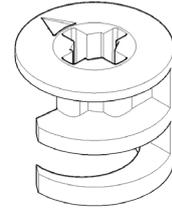


(H) x8
Cam Lock

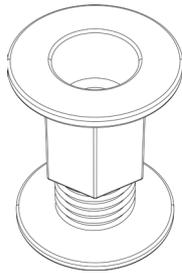

Space Plug
x2

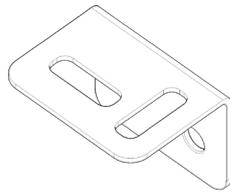


L Bracket
x4

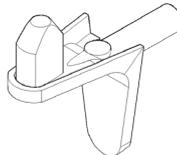


(Z) x5
Shelf Peg Metal




(M) x4
Cover Sticker

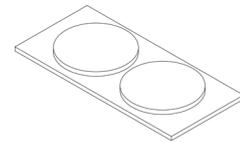


(N) x1
Door Buffer

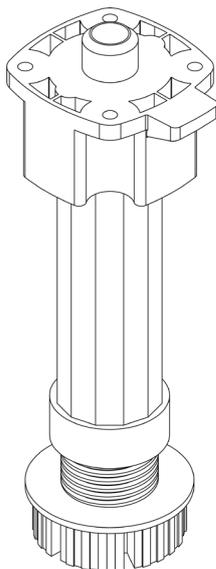

Leg

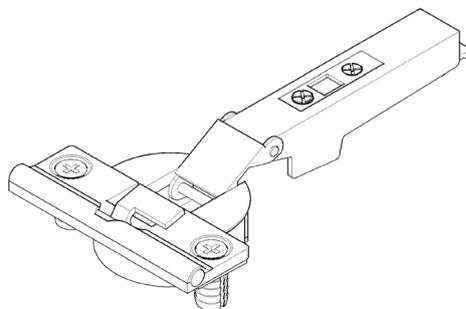

Hinge
Inc Screws & Cover Plate

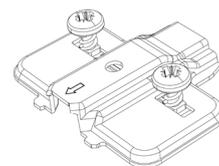


Hinge Mounting Plate
Inc Screws

BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.


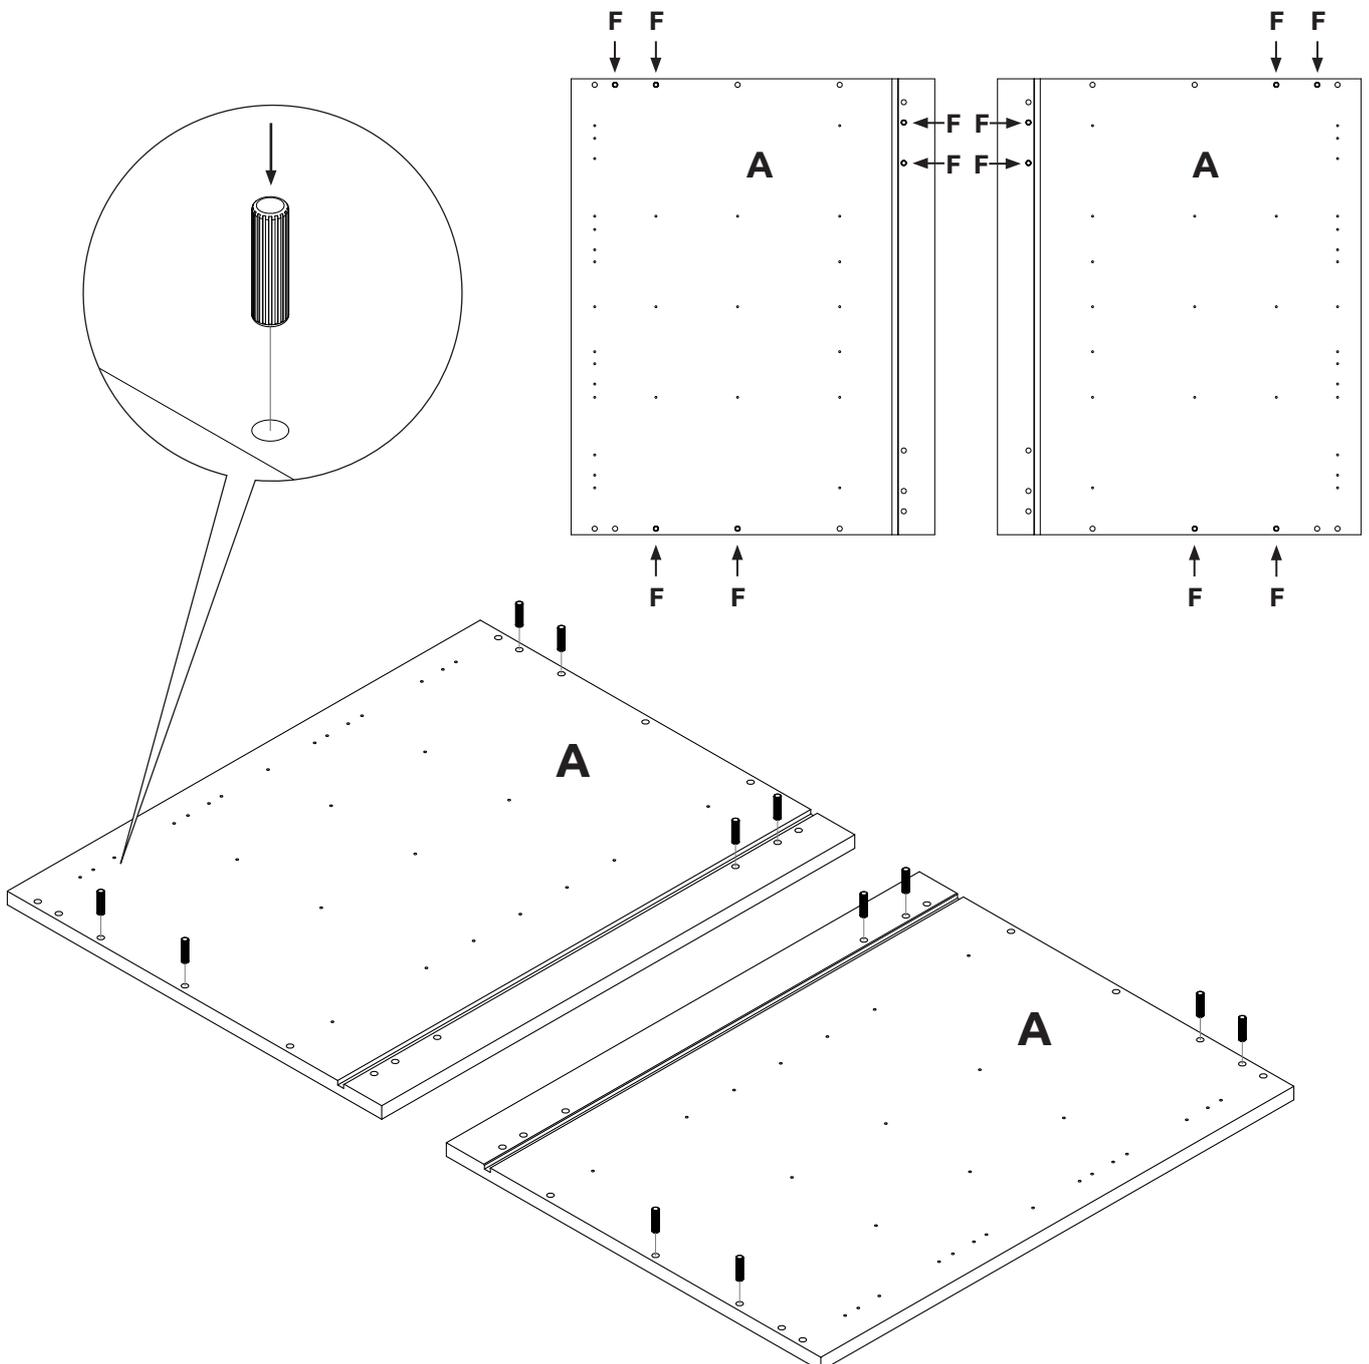


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 2.

Seat expanding cam dowels (**G**) into holes in both end panels (**A**) as shown.

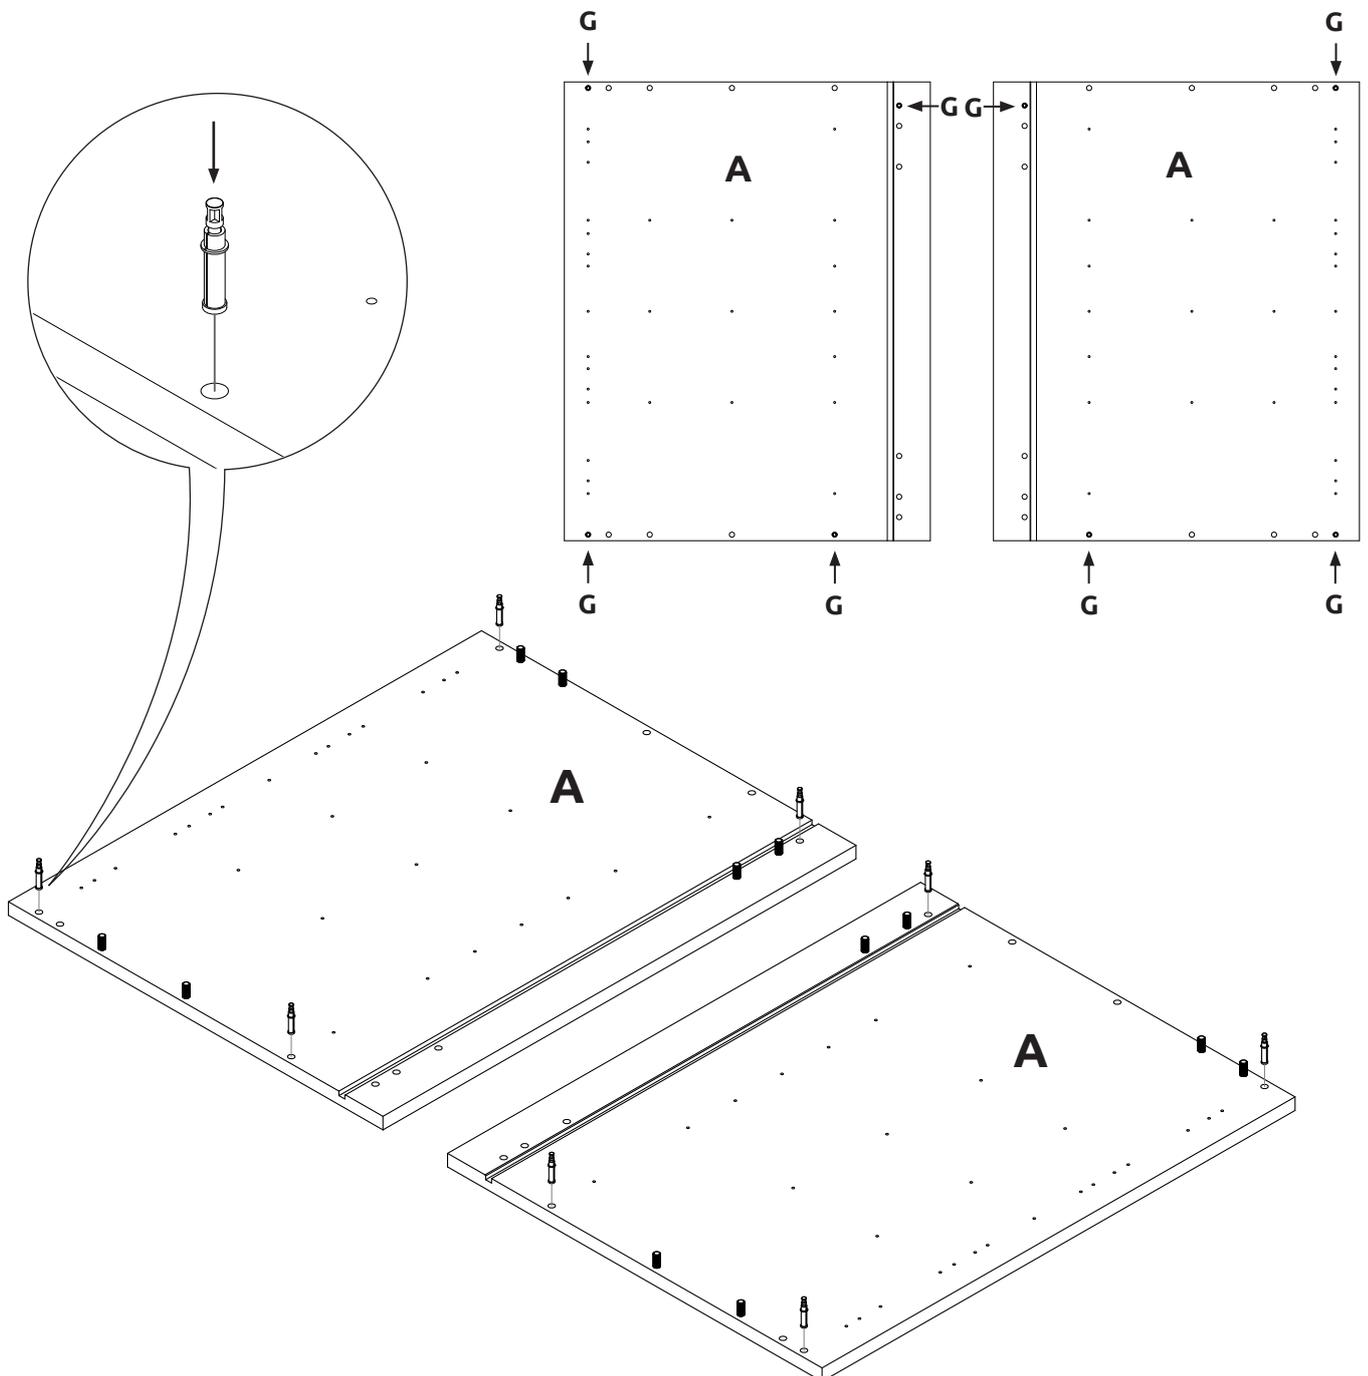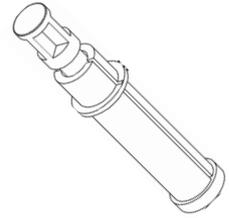

BASE UNIT


800-1000, Adjustable Corner Assembly Guide

Step 3.

Attach panels **(C) & (D)** to panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

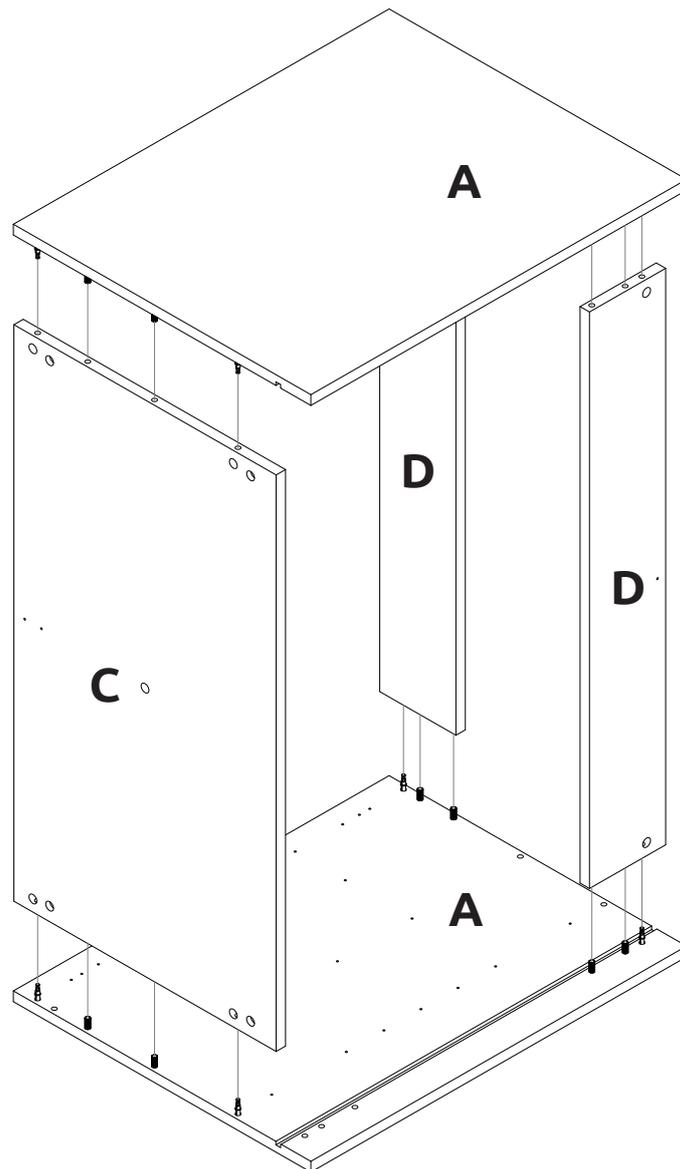


BASE UNIT

800-1000, Adjustable Corner Assembly Guide



Step 4.

Slide back panel (B) into groove of end panels (A). Once back panel (B) is in position, ensure the panel is flush & square with bottom of end panels.

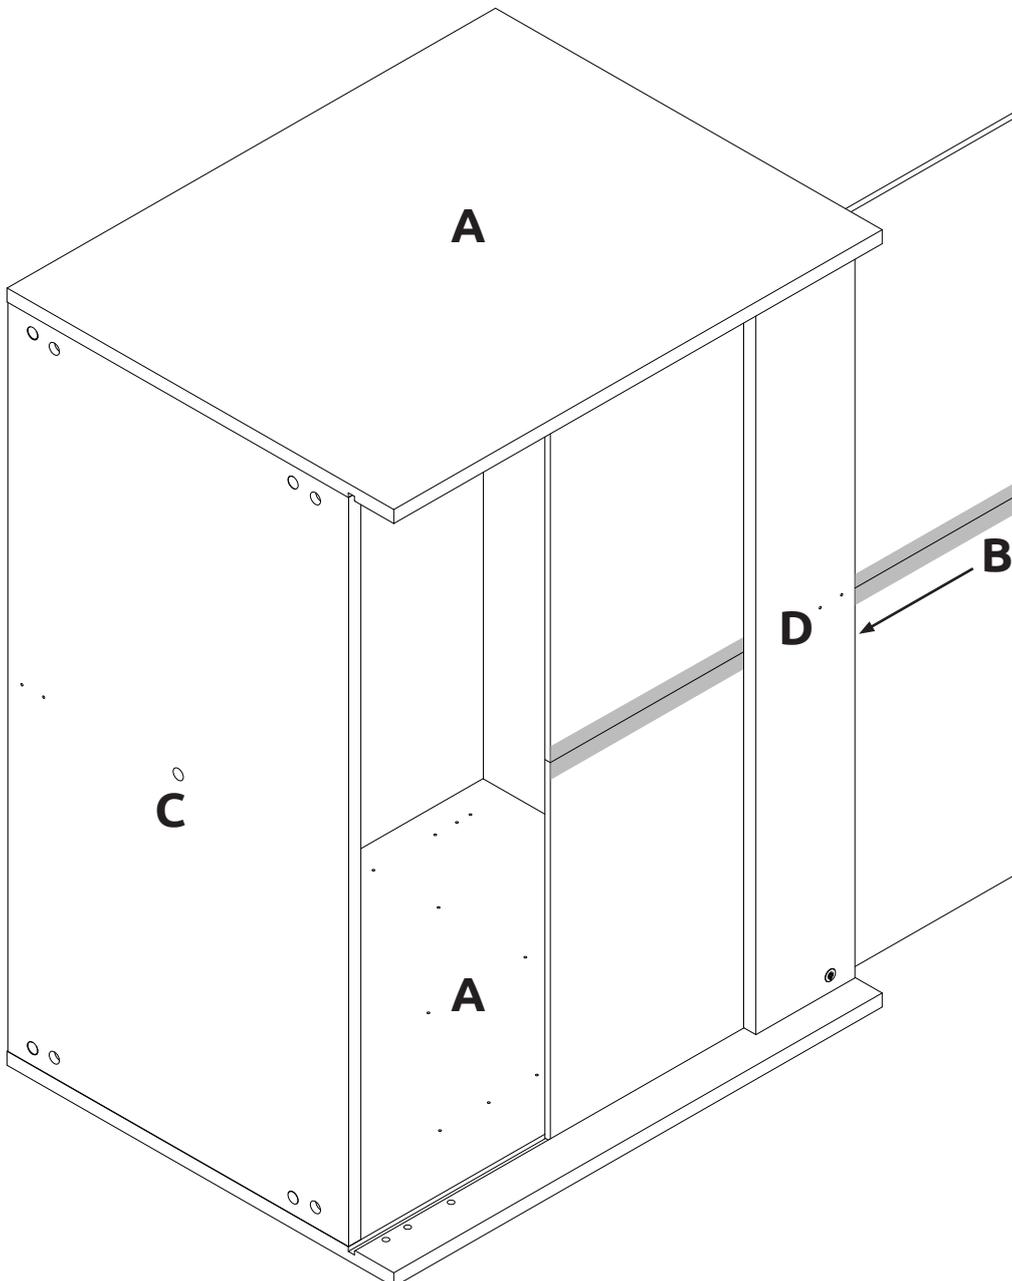

BASE UNIT


800-1000, Adjustable Corner Assembly Guide

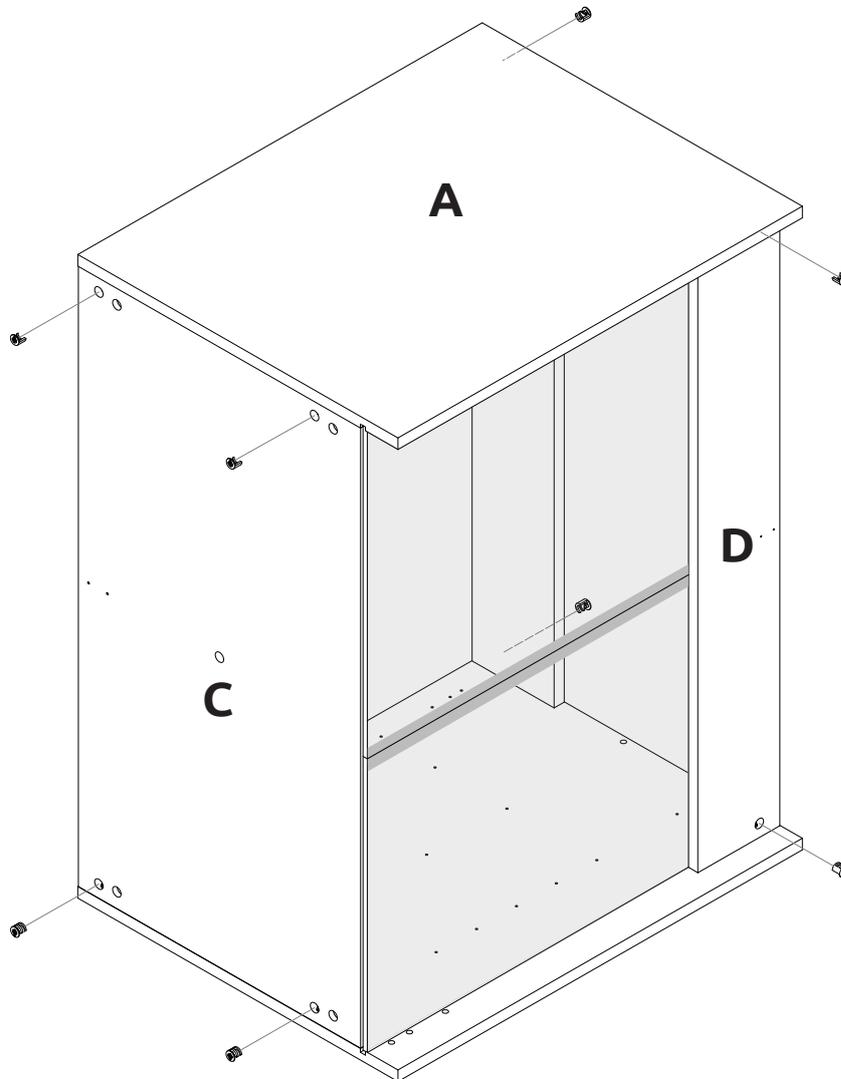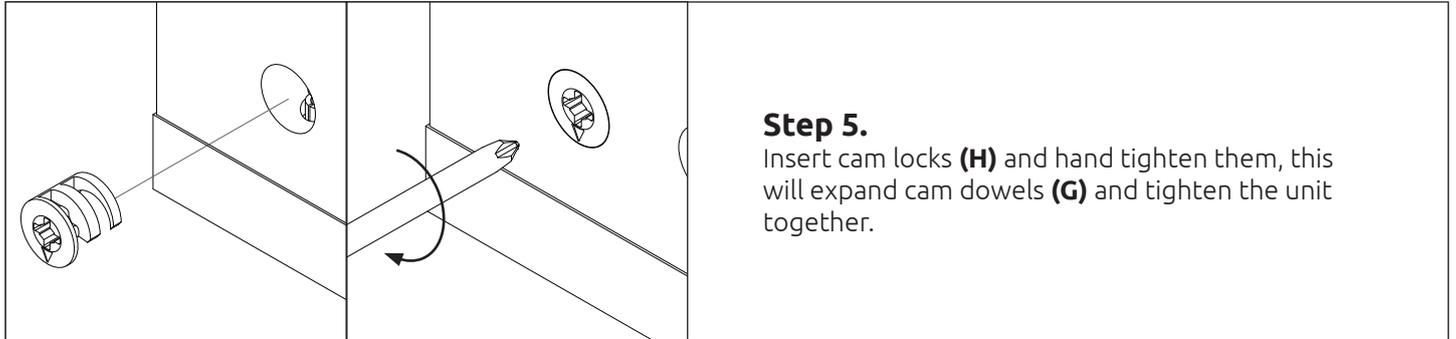

Do **not** use power tools with cam lock **(H)**


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

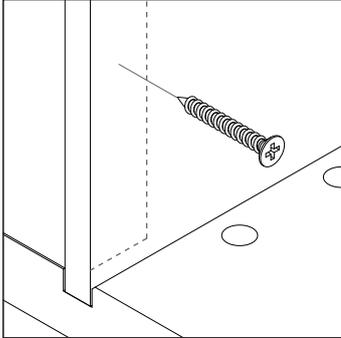

Step 6.

Ensure the unit is square. Secure back panel **(B)** with 4 x 30mm screws **(K)** equally spaced at the bottom of back panel **(B)** into base panel **(C)**, as shown. Ensure you screw into the centre of the base panel **(C)** (9mm from the edge).

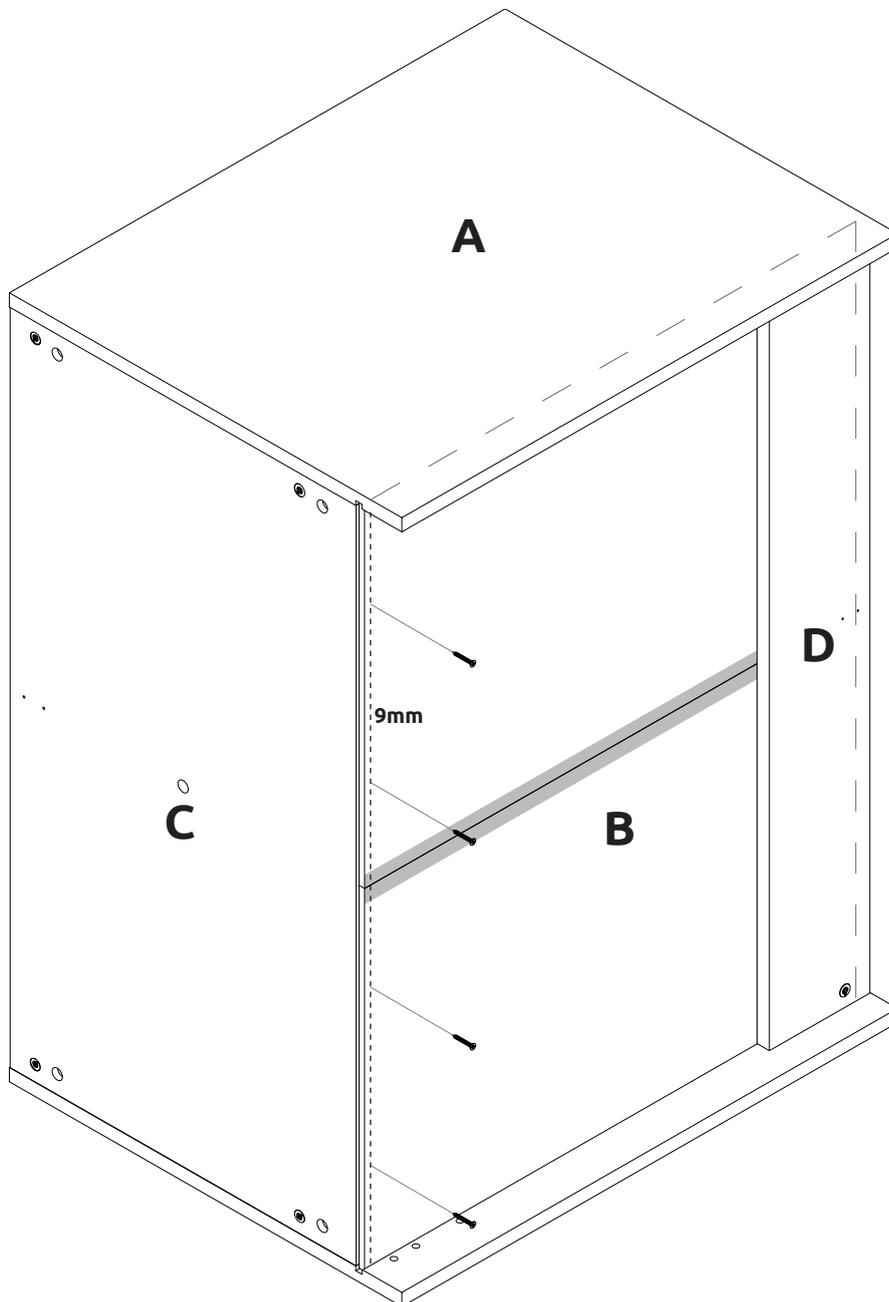


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 7.

To secure muntin post (E) in place, use pre-drilled pilot holes to align muntin as shown. Secure muntin (E), base (C) & rail (D) together using 4 x 45mm screws (P) as shown. Please refer to customer specific kitchen plan for left or right hand orientation.


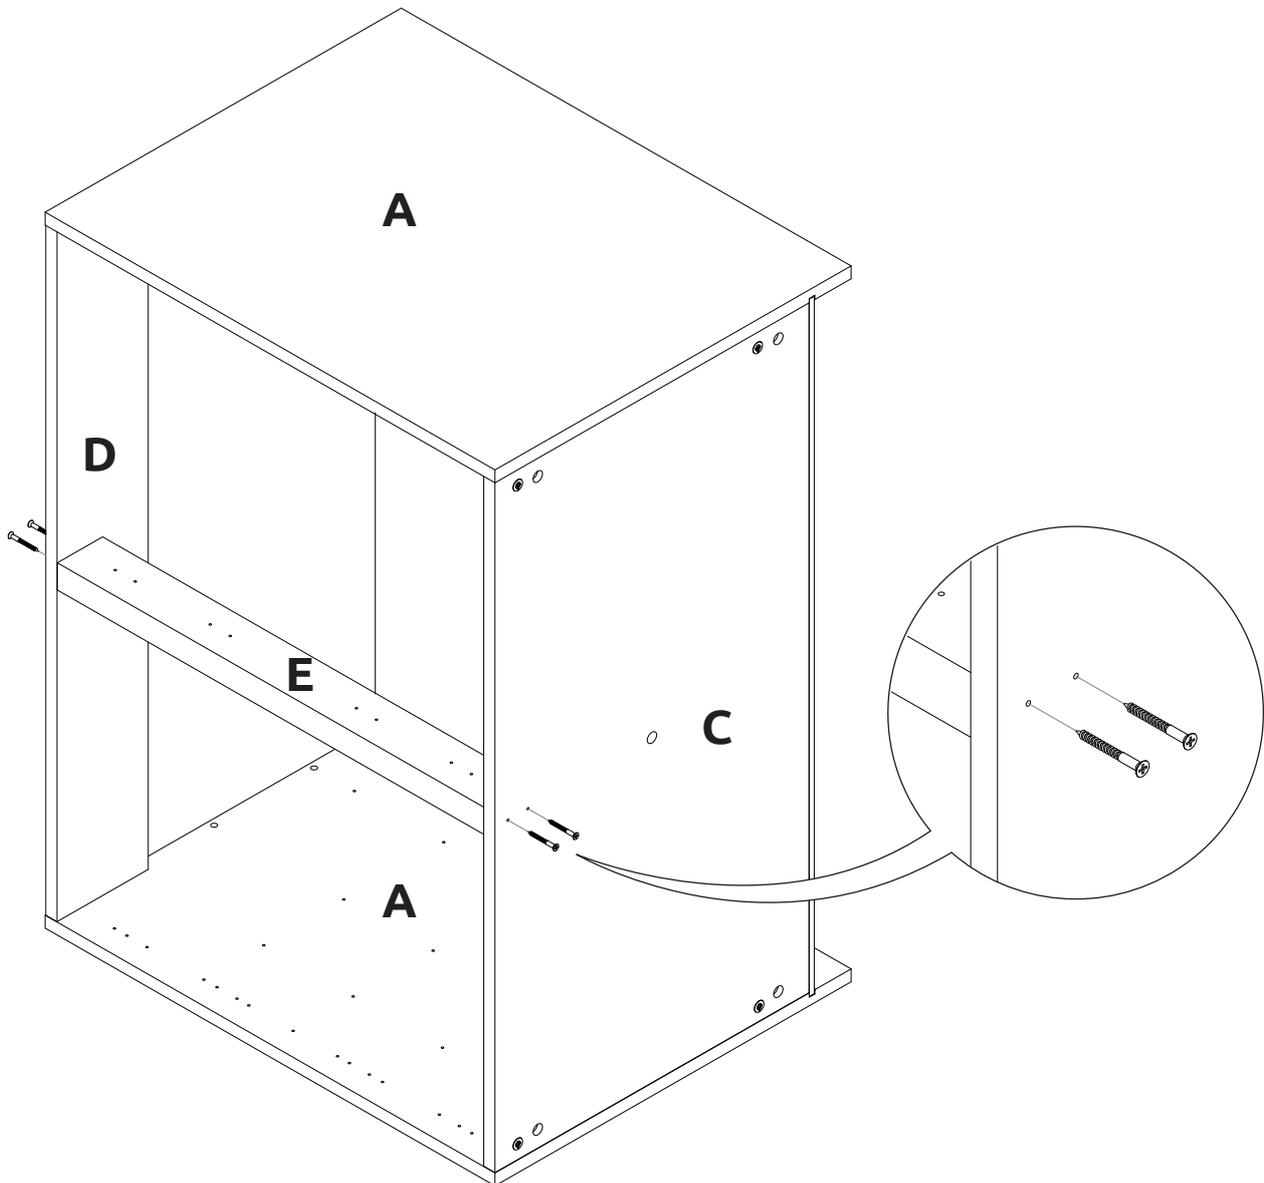


BASE UNIT


800-1000, Adjustable Corner Assembly Guide

Step 8.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

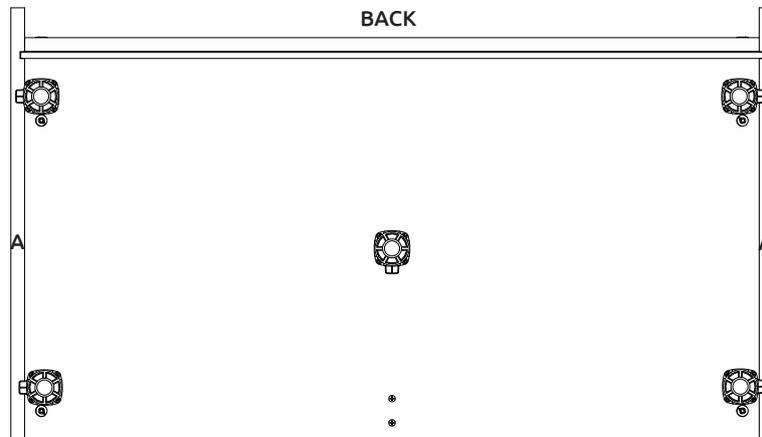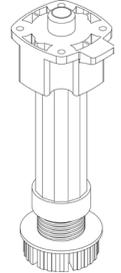

LEG POSITIONS - UNDERSIDE VIEW

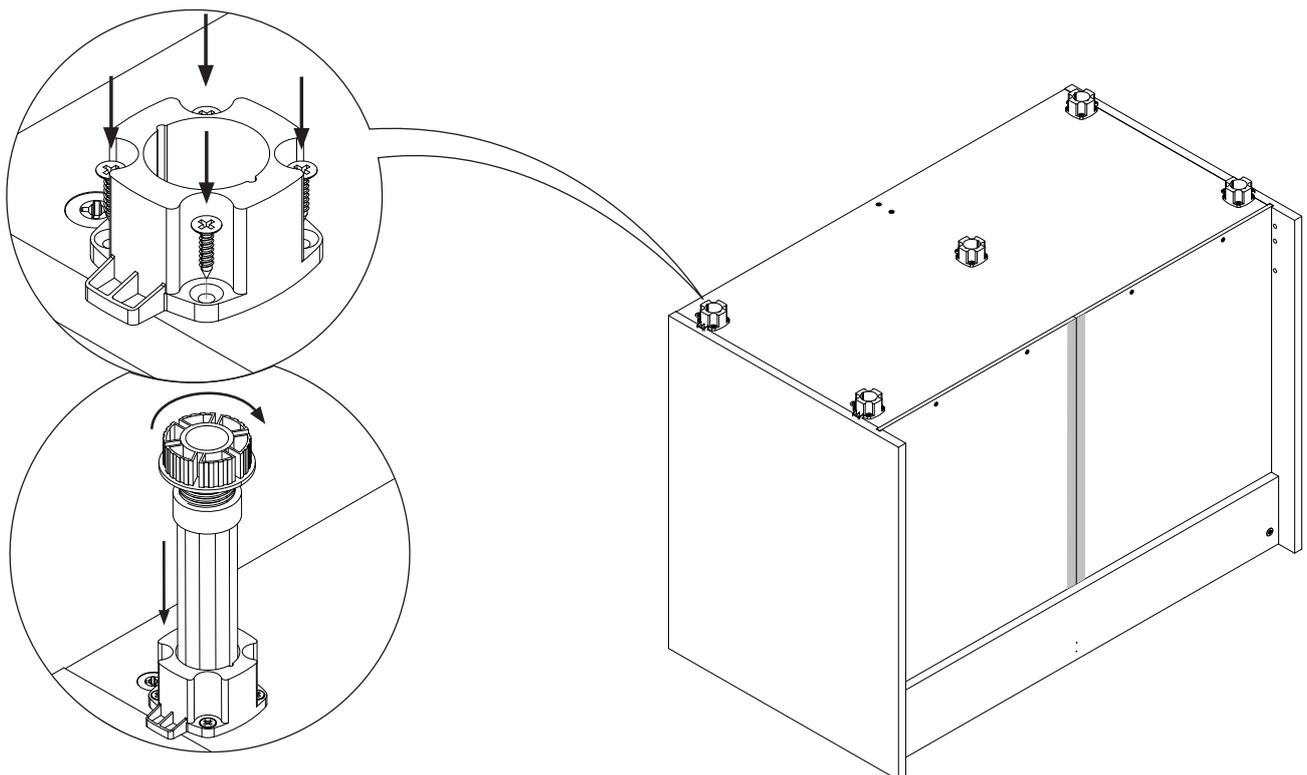


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 9.

Place fixing rail (**Z1**) flush with the front edge of the unit and up tight to the muntin post. Screw through the unit using 30mm screws (**K**) in the top and bottom, locations as shown.

Please refer to customer specific kitchen plan for left or right hand orientation.

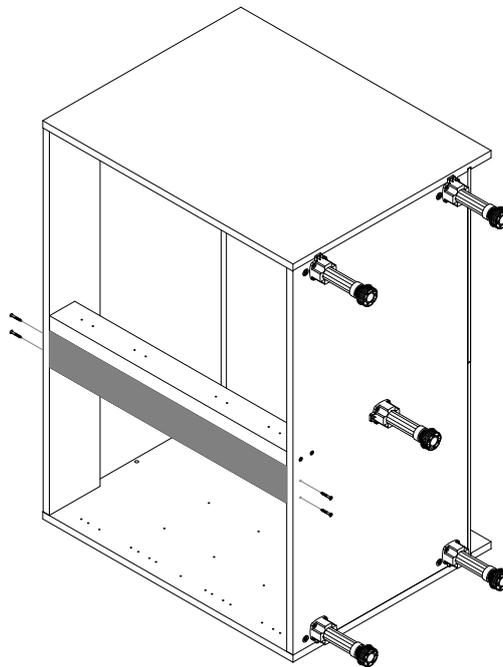

Step 10. Adjustable Corner Post





A. Cut panel (**Y**) to size according to **customer specific kitchen plan.**

B. Corner post size can be adjusted by positioning panel (**Yi**) along panel (**Yii**).

C. To create corner post, attach both panels (**Yi**) and (**Yii**) as shown. Screw through the back of panel (**Yii**) into panel (**Yi**) using 3 x 30mm screws (**K**) equally spaced.

D. Place the adjustable corner post together with the remaining fixing rail (**Z2**) flush as shown and screw together using 3 x 30mm screws (**K**) equally spaced.

Please refer to customer specific kitchen plan for left or right hand orientation.

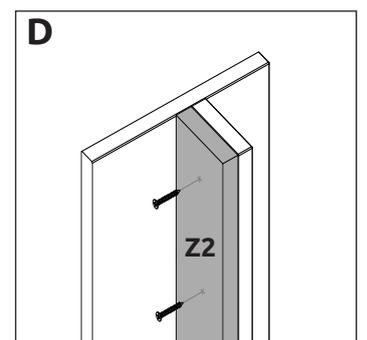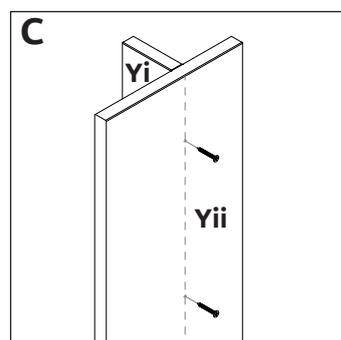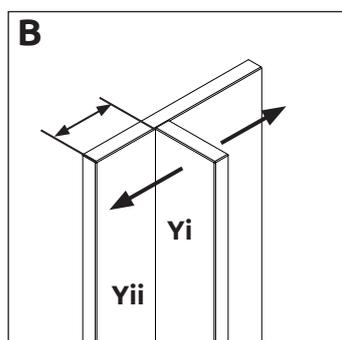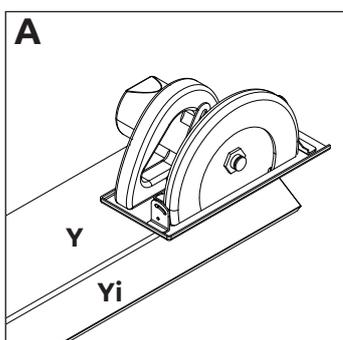


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 11.

Place adjustable corner post up to fixing rail (**Z1**) as shown and screw together from inside using 4 x 30mm (**K**) screws equally spaced as shown.

Make sure that the distance between the front of the corner post and the external face of the end panel is the width of the door + 2mm.

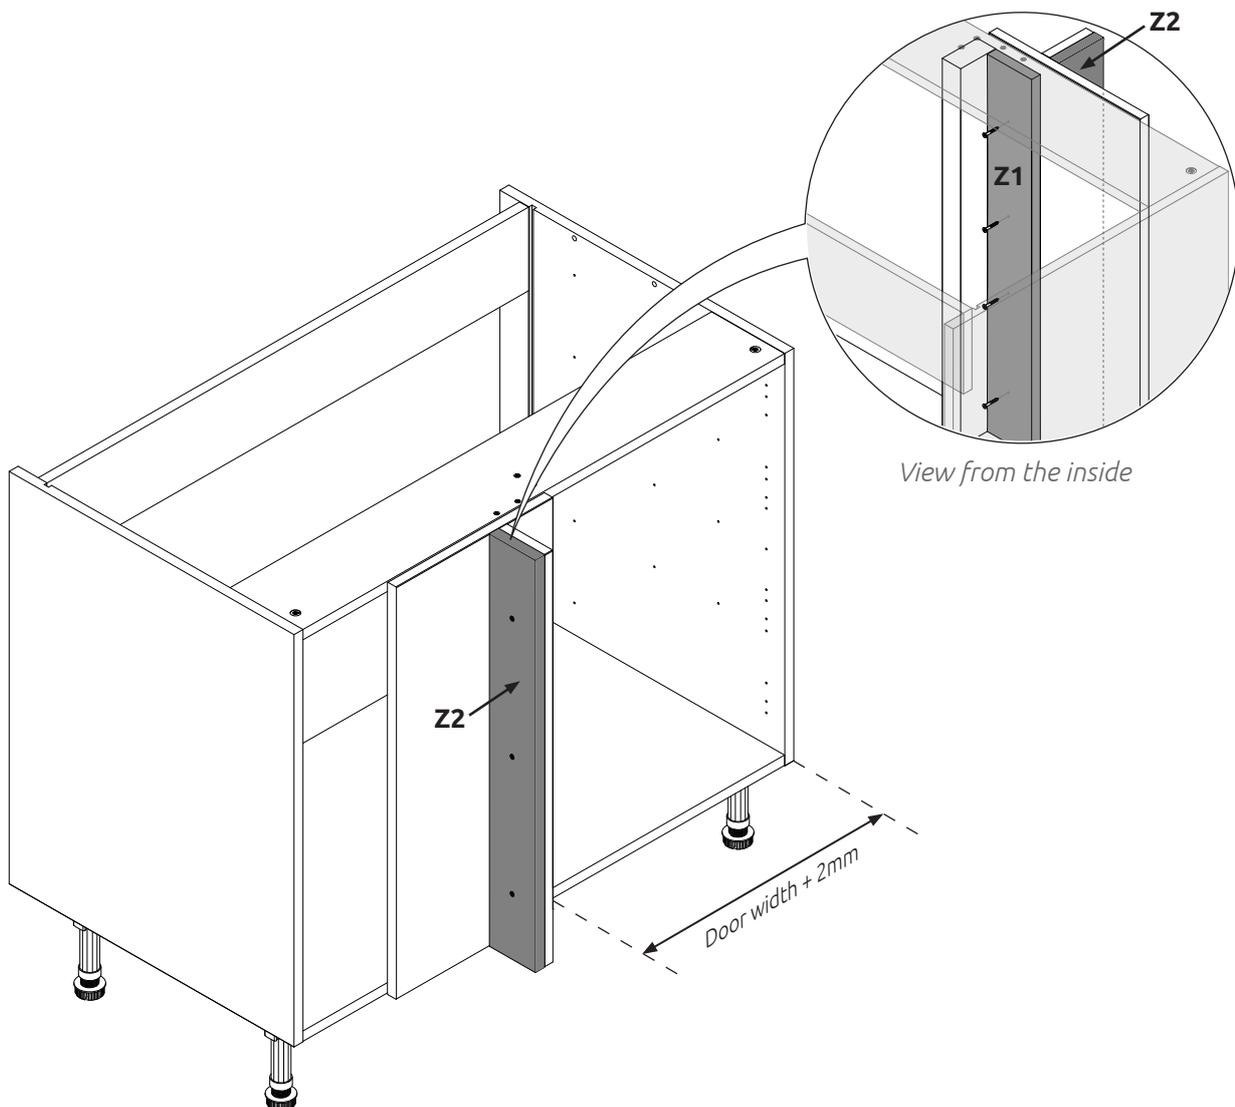


BASE UNIT

800-1000, Adjustable Corner Assembly Guide

Step 12.

Measure and cut blanking panel to required size. Secure blanking panel with 15mm screws (L), evenly spaced as shown. Ensure you screw 9mm in from the edge of the blanking panel to ensure to screw into the centre of the end panel, top rail and bottom fixed shelf.

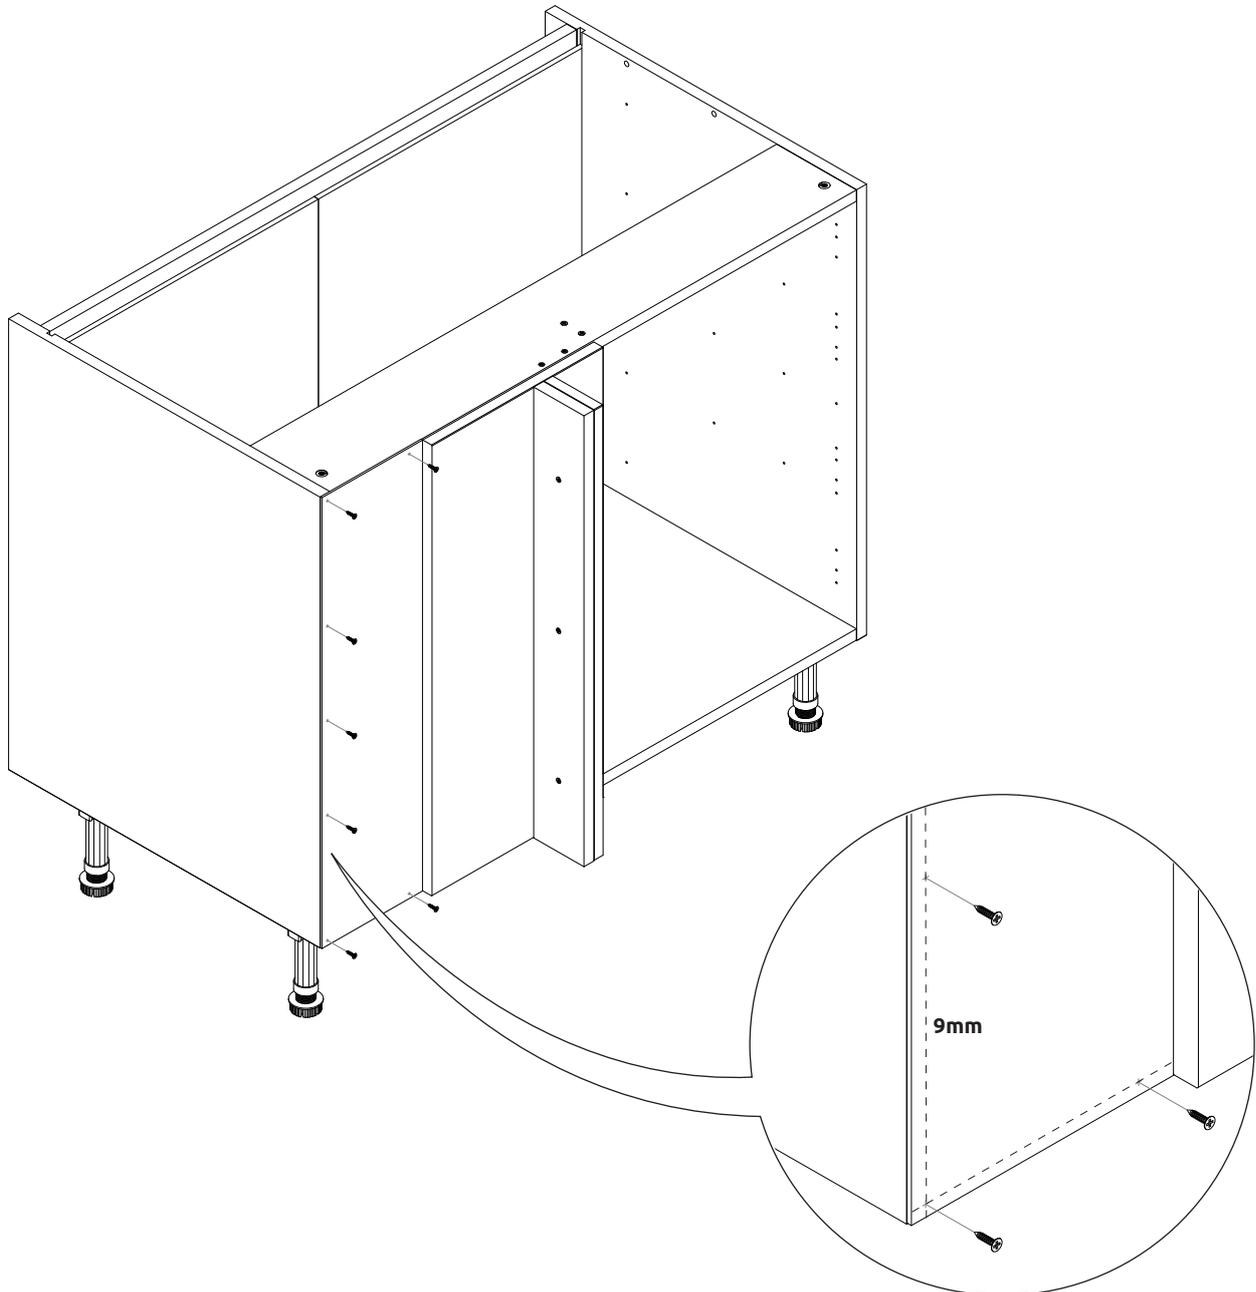


BASE UNIT

800-1000, Adjustable Corner Assembly Guide


MAGIC CORNER

Please refer to separate installation instructions included with your magic corner contents.
The middle shelf and hinges should be discarded when using the magic corner.

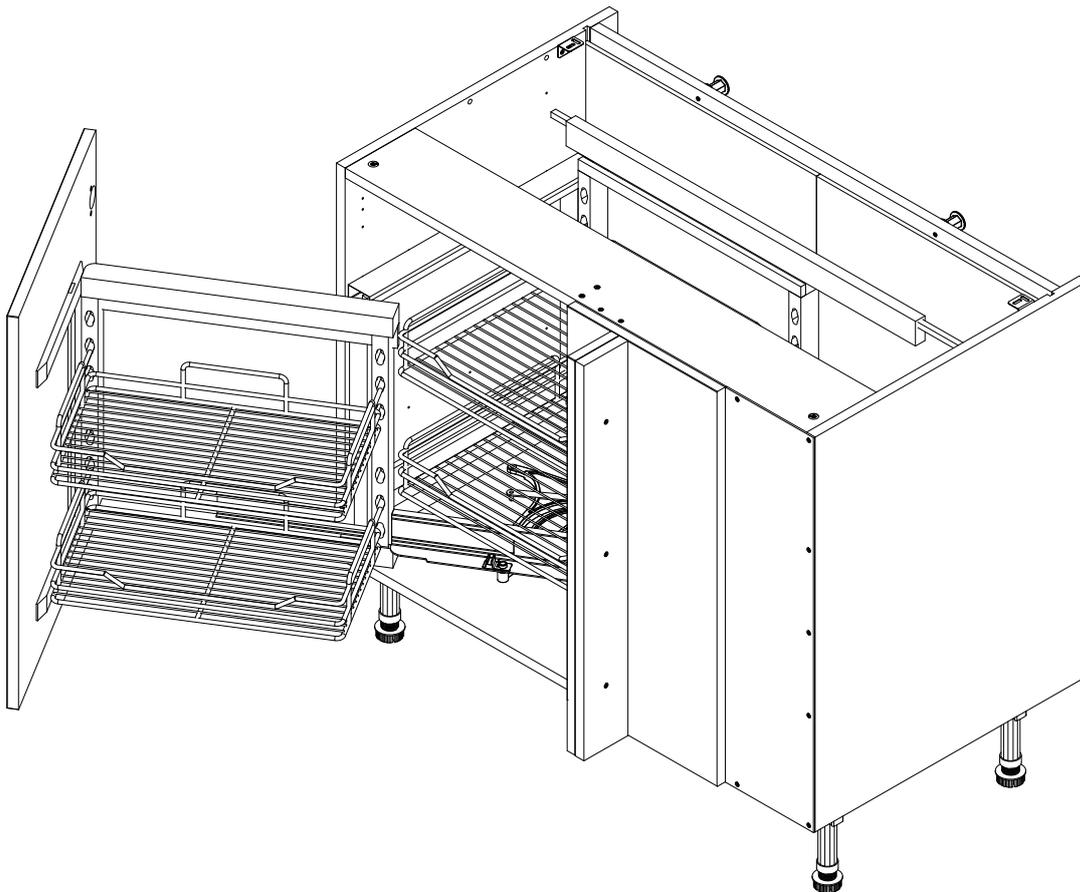

BASE UNIT



800-1000, Adjustable Corner Assembly Guide

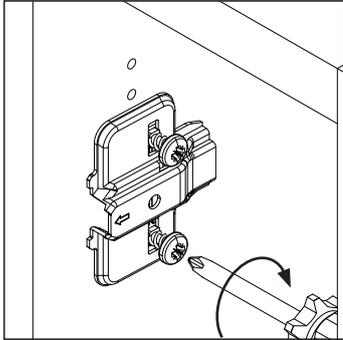

Step 13.

Attach hinge plates onto muntin post **(E)** as shown, using screws which are already positioned within the hinge plates.

Hinge side or sides to be mounted in accordance to customer specific kitchen plan.

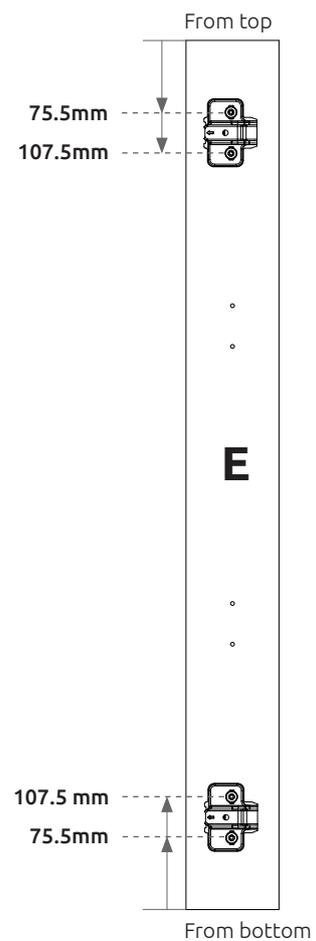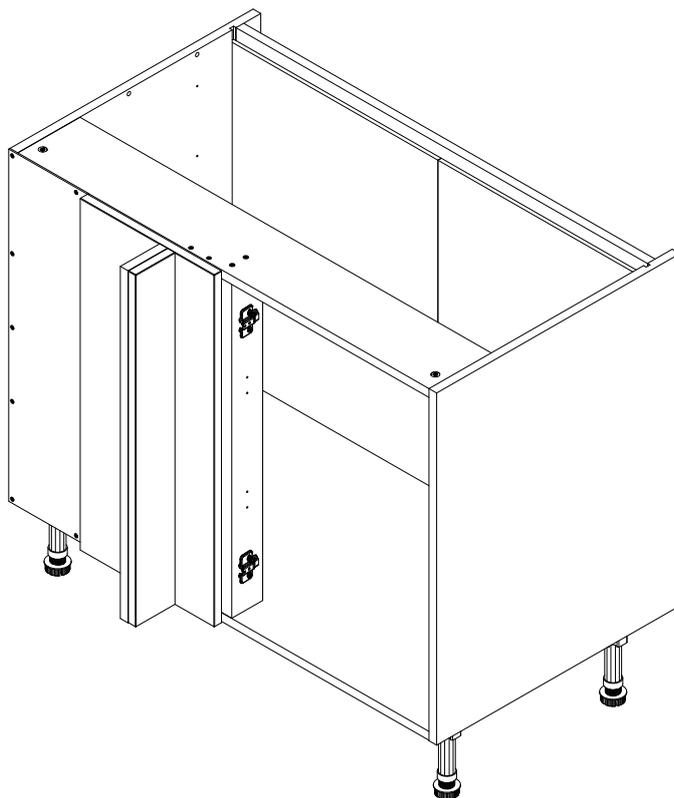


BASE UNIT

800-1000, Adjustable Corner Assembly Guide




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

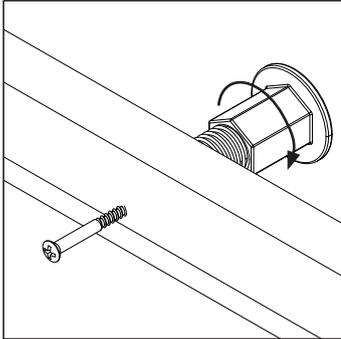


Step 14.

Ensure the unit is positioned correctly and level. Drill pilot holes through the back rail into the wall and insert wall plugs. Unwind space plugs until they contact both surfaces. Finally, secure to the wall using appropriate screws.

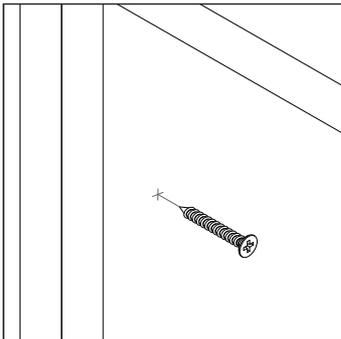



Step 15.

Screw into any side units (if applicable) using 30mm screws (**K**) provided to secure to unit. Screw through the inside face of the end panel at the top and bottom of both sides of the unit, place cover stickers (**M**) on the heads to conceal them.

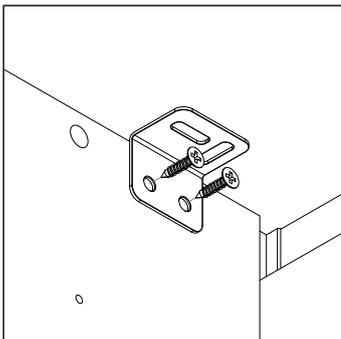

Step 16.

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the top rear of the unit on both sides.


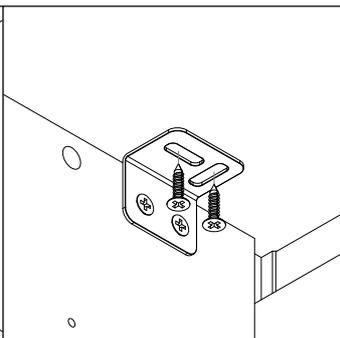
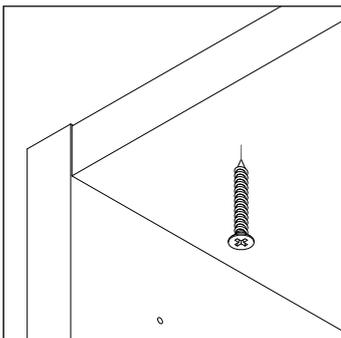



Step 17.



Screw up through the front rail and the L brackets into the worktop to secure it in place.

BASE UNIT

800-1000, Adjustable Corner Assembly Guide

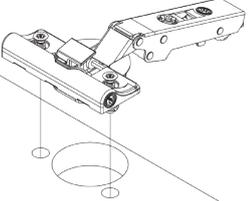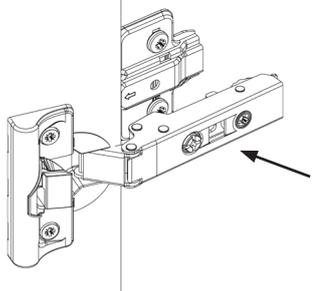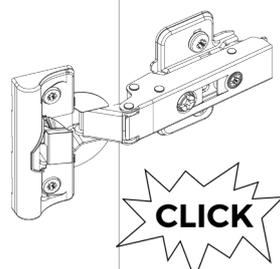	<p>HINGE ATTACHMENT AND ADJUSTMENT</p> <p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>  <p><i>Hinge dowels</i></p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

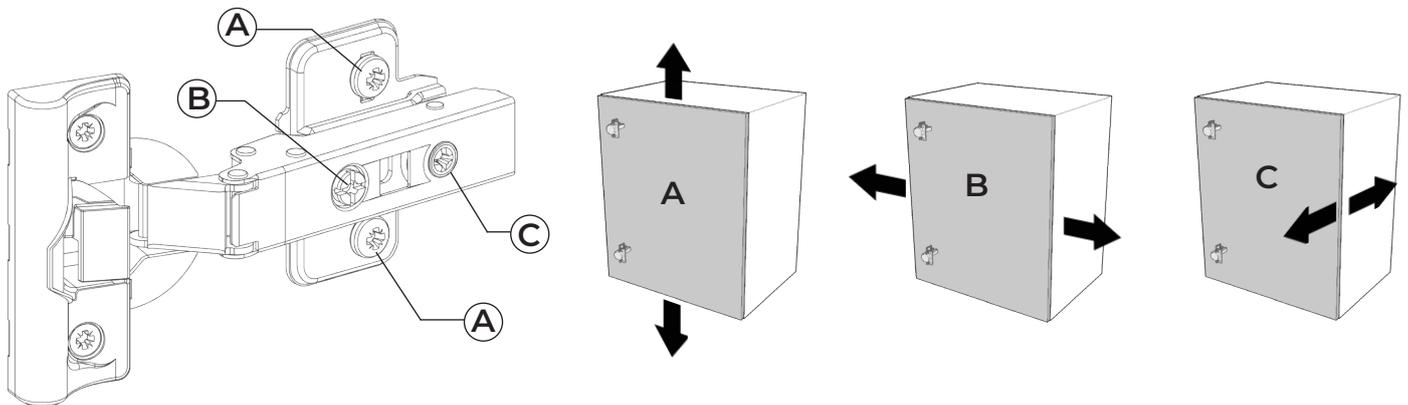

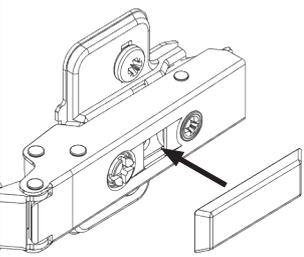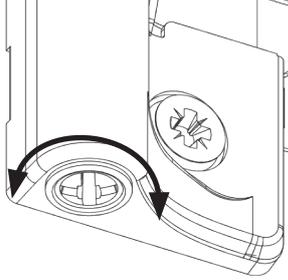	<p>Step 4. Fit cover caps to hinges and adjust soft-close to suit.</p>	
--	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

wren