



LINEA MILANO WALL UNIT

Curved Open Wall (0 - 3 shelves, 70mm & 242mm radius) - Fitting Guide

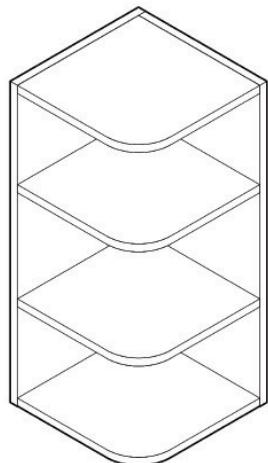

70mm radius

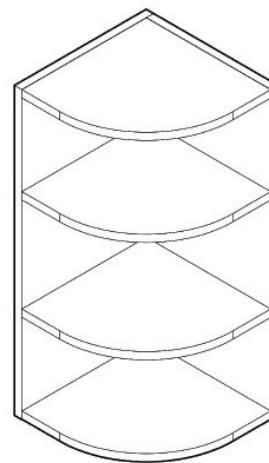

242mm radius

Unit Parts



4x30mm
Screws



6x Cover
Caps

Tools Required




Drill



Screwdriver



Clamp



Spirit Level



Before installing any wall cabinets, ensure the wall construction is strong enough to support the weight of the fully loaded unit and that appropriate fixings are used. Wall cabinets must be fully secured using all supplied hanging brackets and corner gussets, as specified in the installation guide.

If you are unsure, seek professional advice before proceeding.

This unit should be fitted only after the adjacent wall unit has been fully installed.


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

Removing the fittings

Remove all content so the unit is empty.


All fittings should be kept on a clean and level surface.

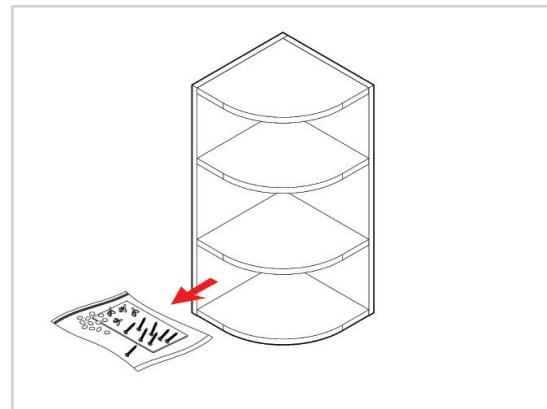

Pre drilling the unit

Pre drill **4** countersunk holes through the back of the unit.

The holes should be located in the corners of the back panel, and should be placed an equal distance from the nearest edges as shown.

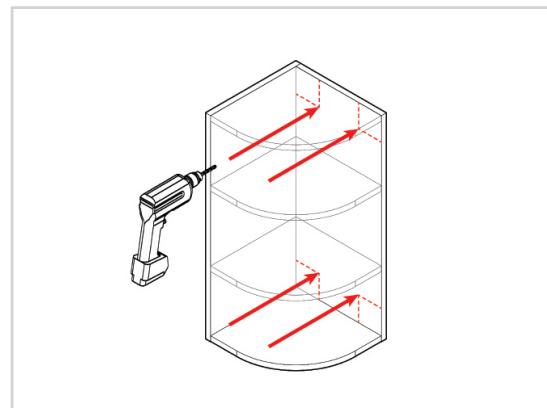

No screws or wall plugs are provided for attaching the unit to the wall. This is due to variations in wall construction.


Before drilling into the wall you MUST check for any hidden services or pipework within the walls.

Positioning the unit

Hold the unit in position next to the adjacent wall unit, and lined up against your wall markings.

Check that it is level in multiple places using a spirit level.

Use a drill through the pre drilled holes to mark the wall behind the unit. Remove the unit and install suitable wall fixings into the wall.

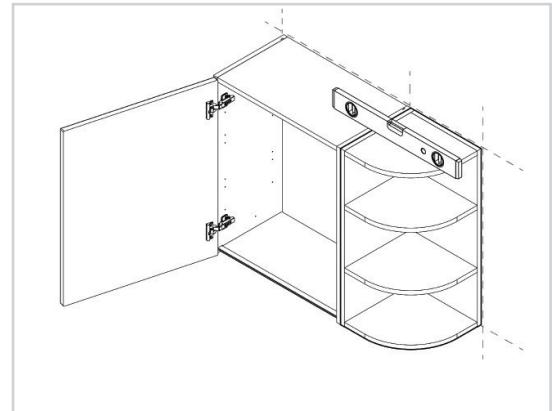


Securing the unit

Hold the unit in position next to the adjacent wall unit, and lined up against your wall markings.

Check that it is level in multiple places using a spirit level.

Use suitable screws to secure the unit to the wall.

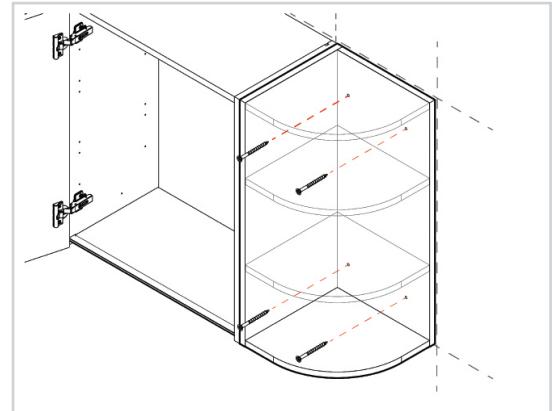


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed from the inside of the adjacent unit, into each corner of the unit.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

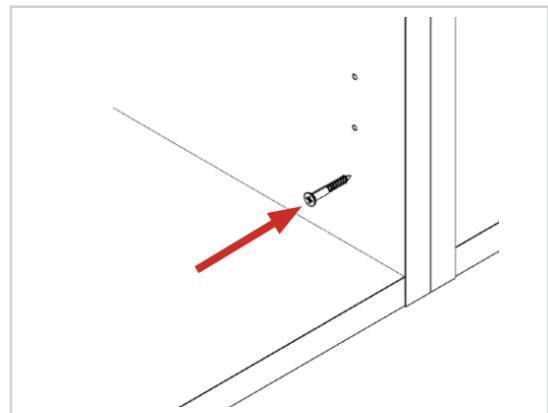

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

