


# PULL OUT WORKTOP

## Installation Guide

wren

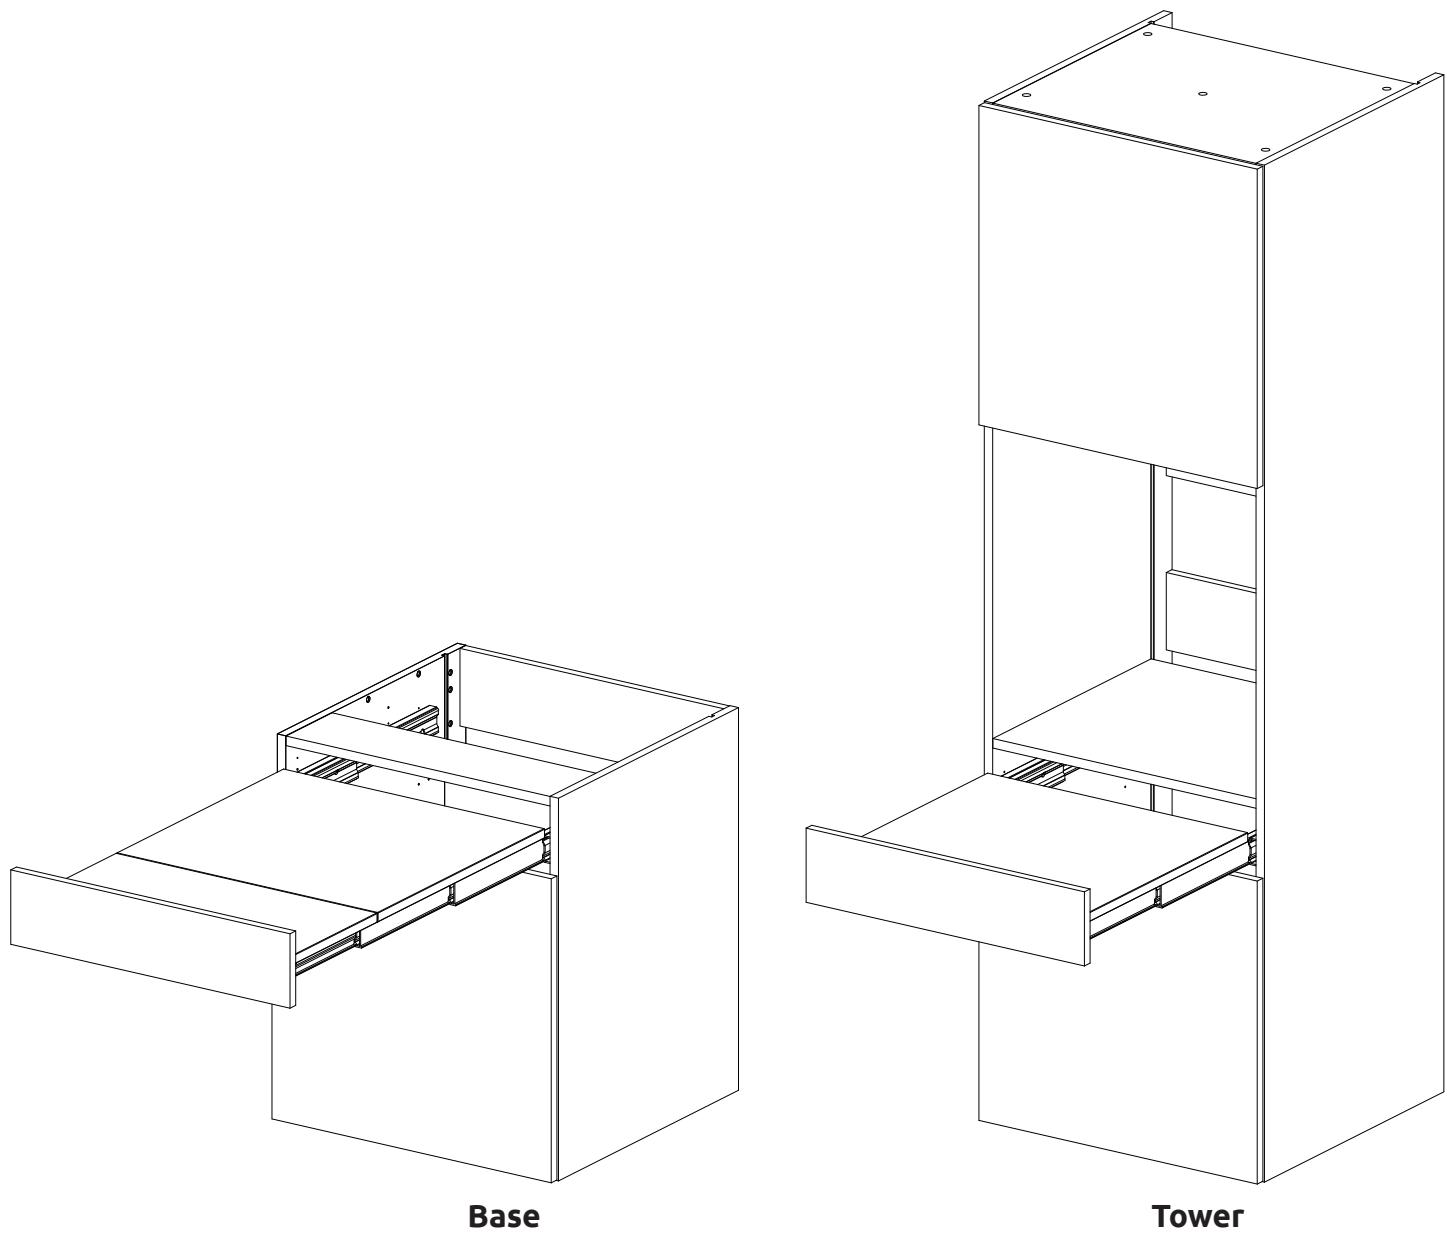

Base

Tower




# PULL OUT WORKTOP

## Installation Guide

wren

### Runner.

Extend the runner to access the screw holes. Align the runner with the positions marked on the end panels below. Secure the runner to the end panel using **4 x 15mm** runner screws per runner. Repeat process on each end panel.

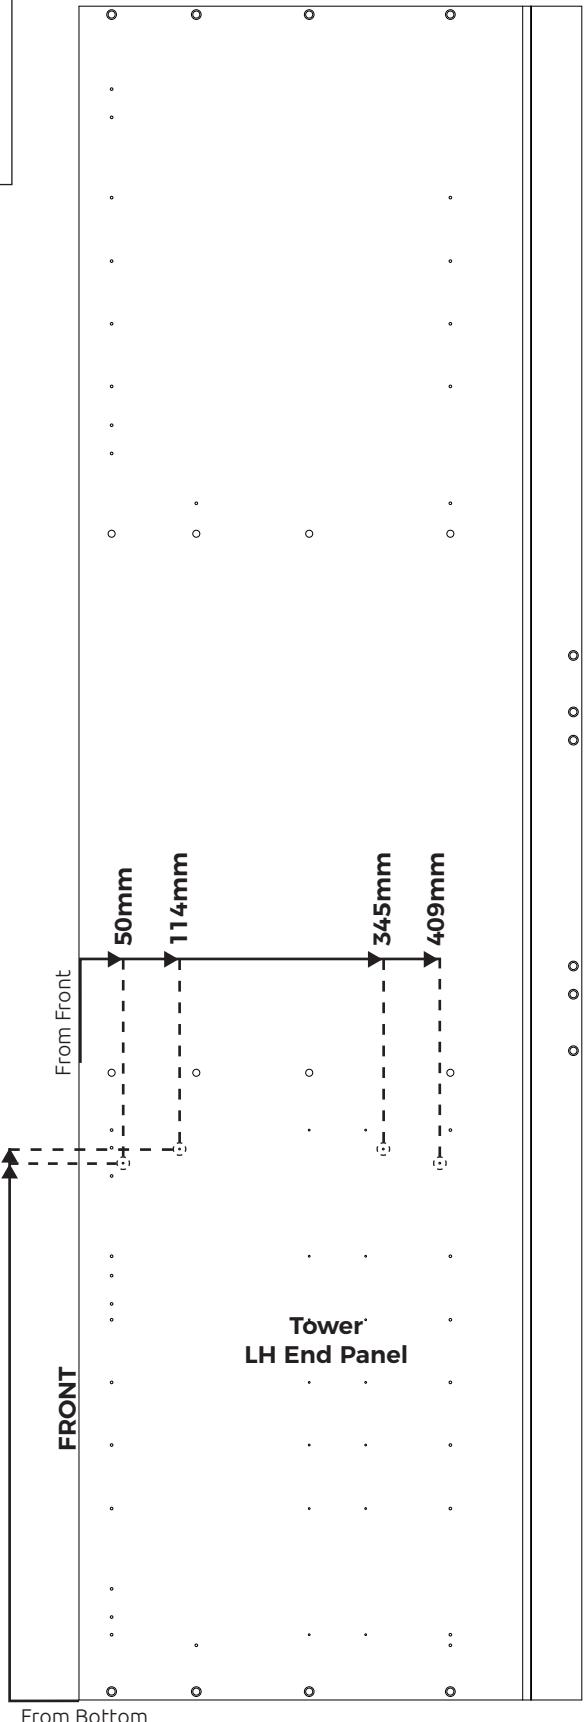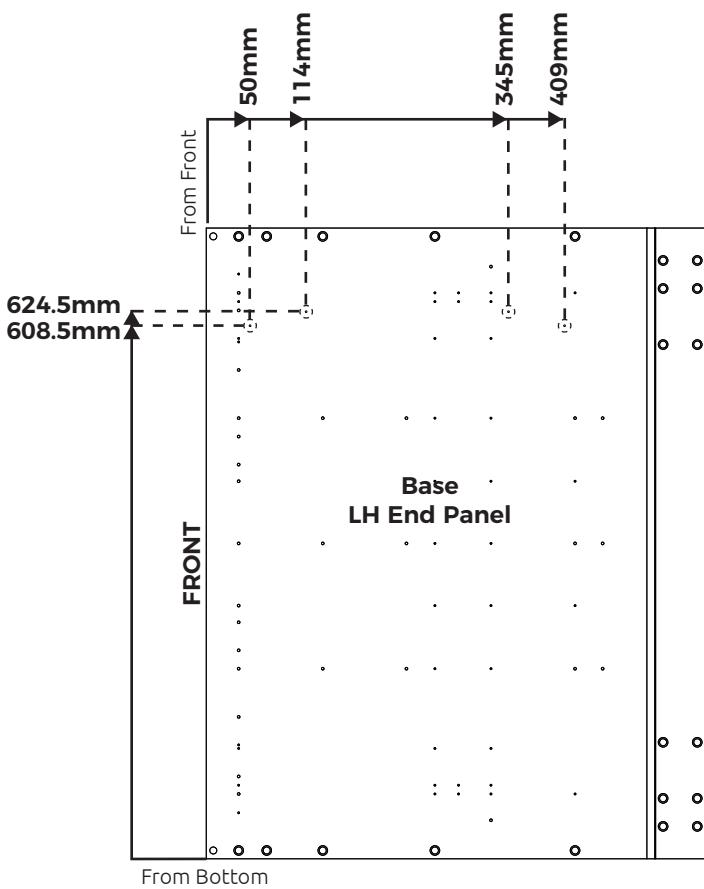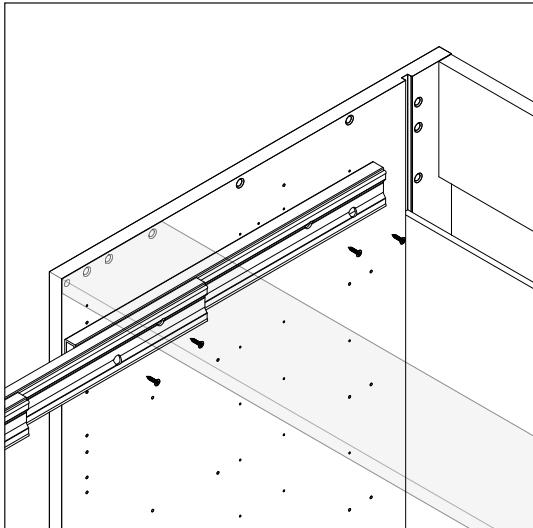




# PULL OUT WORKTOP

## Installation Guide

wren

### Frontal.

Attach the drawer frontal to the runner L brackets using **1 x 15mm** pan head screw per L bracket in the top horizontal hole using the dimensions shown below. Adjust the frontal to align with adjacent frontals by manoeuvring the frontal up or down / left or right ensuring a **2mm gap** above the drawer frontal and **4mm** below. Tighten screws once frontal is in the desired position. Fully secure in place by screwing through all remaining available holes with **4 x 15mm** pan head screws per L bracket.

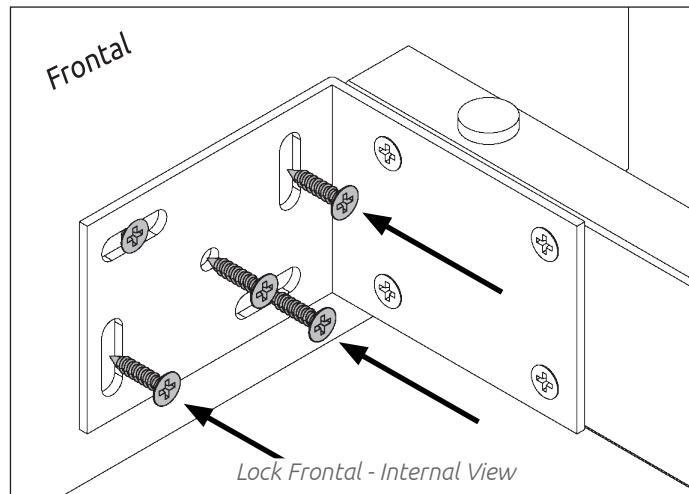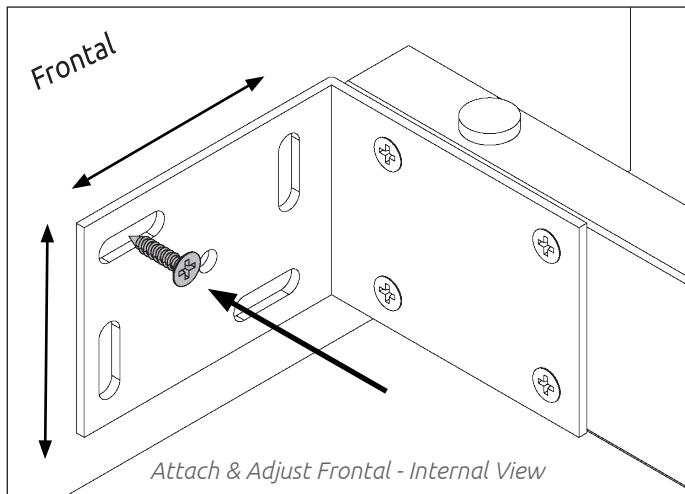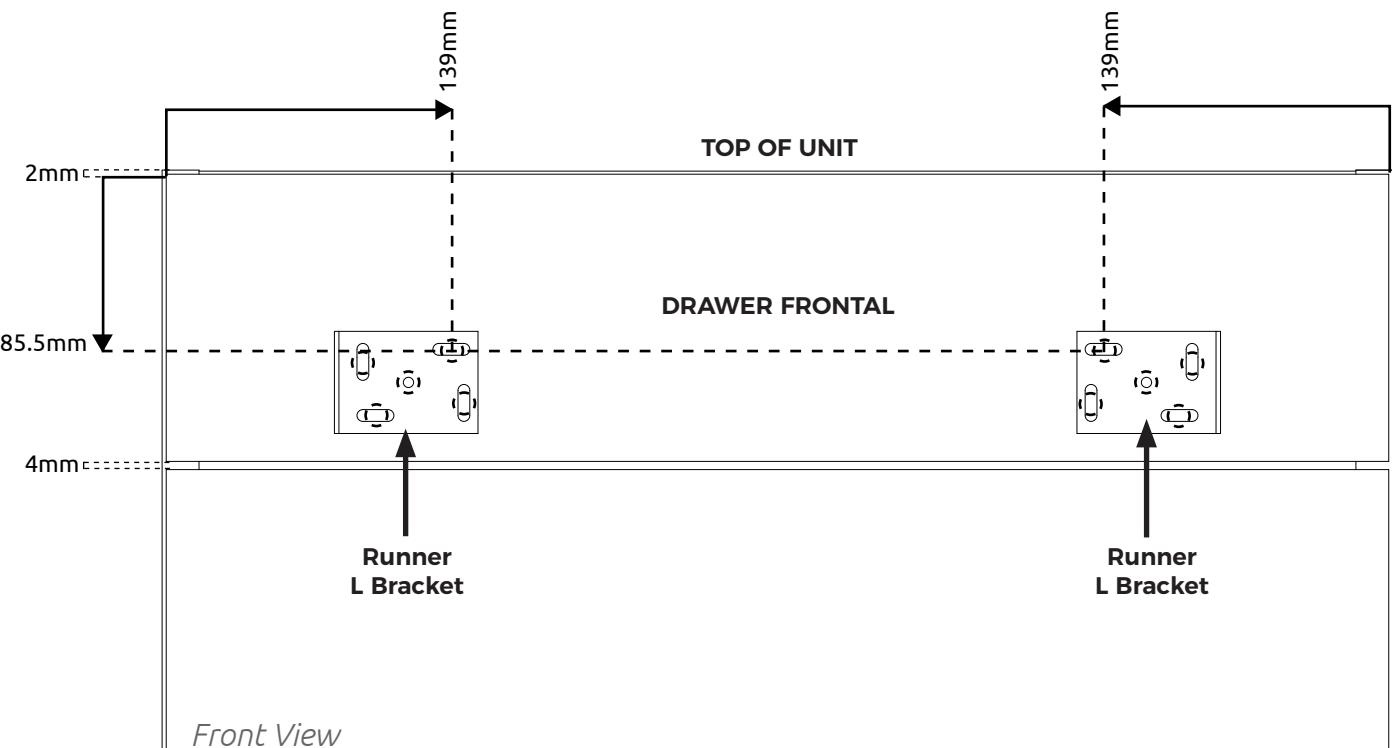


# PULL OUT WORKTOP

## Installation Guide

wren



**Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.**

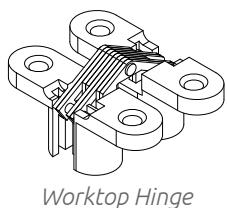


Worktop Hinge

### Worktop.


Connect both worktop sections together using worktop hinges. Insert Hinges into routed out sections on the side of the worktops and secure with screws provided.

For base units fully extend the runners on the unit and position the worktop in place on the runners.


For tower units push the frontal back until the 1st and 2nd runner sections are aligned (see Fig 1) then position the worktop on the runners.

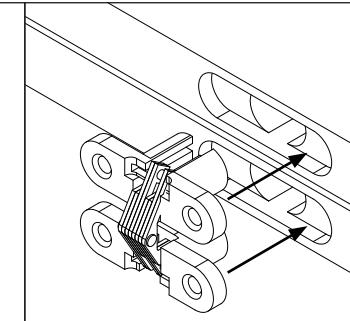

Insert Hinge

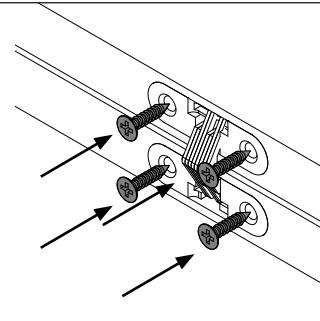


Secure Hinge

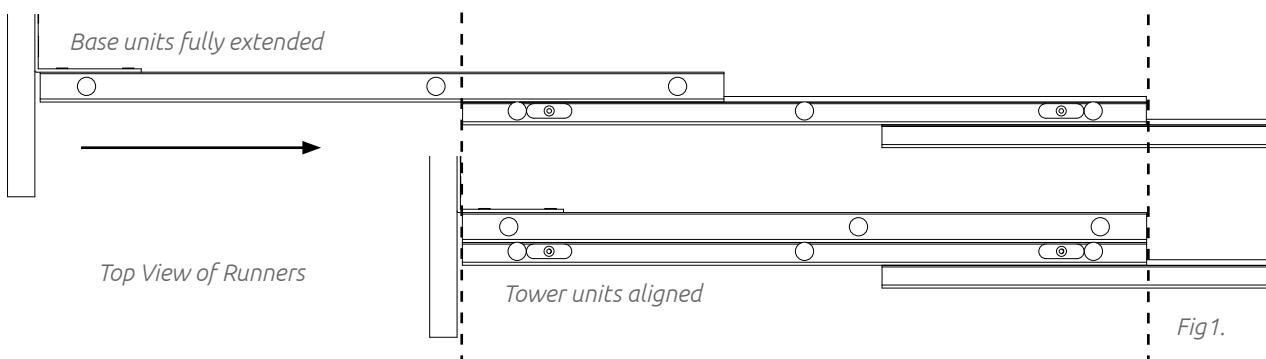


Ensure the worktop is centred to the unit as to not clash with the side panels when pushed inside. Maintain a 2mm gap between the frontal and the worktop.

Clamp the worktop to the runners to hold it in place and secure the worktop to the runners by screwing up through the runners into the worktop using appropriate screws. For tower units secure the frontal to the worktop using 2 x L bracket with 4 x 15mm screws per L bracket.

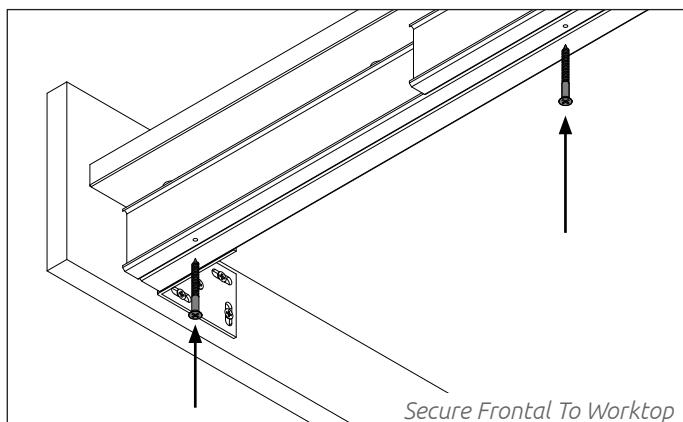

Secure Frontal To Worktop

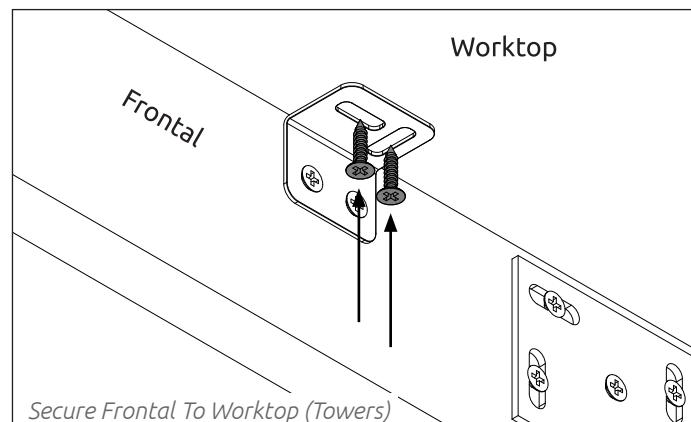

Secure Frontal To Worktop (Towers)