


BASE UNIT

700 Appliances Hideaway Assembly Guide

wren


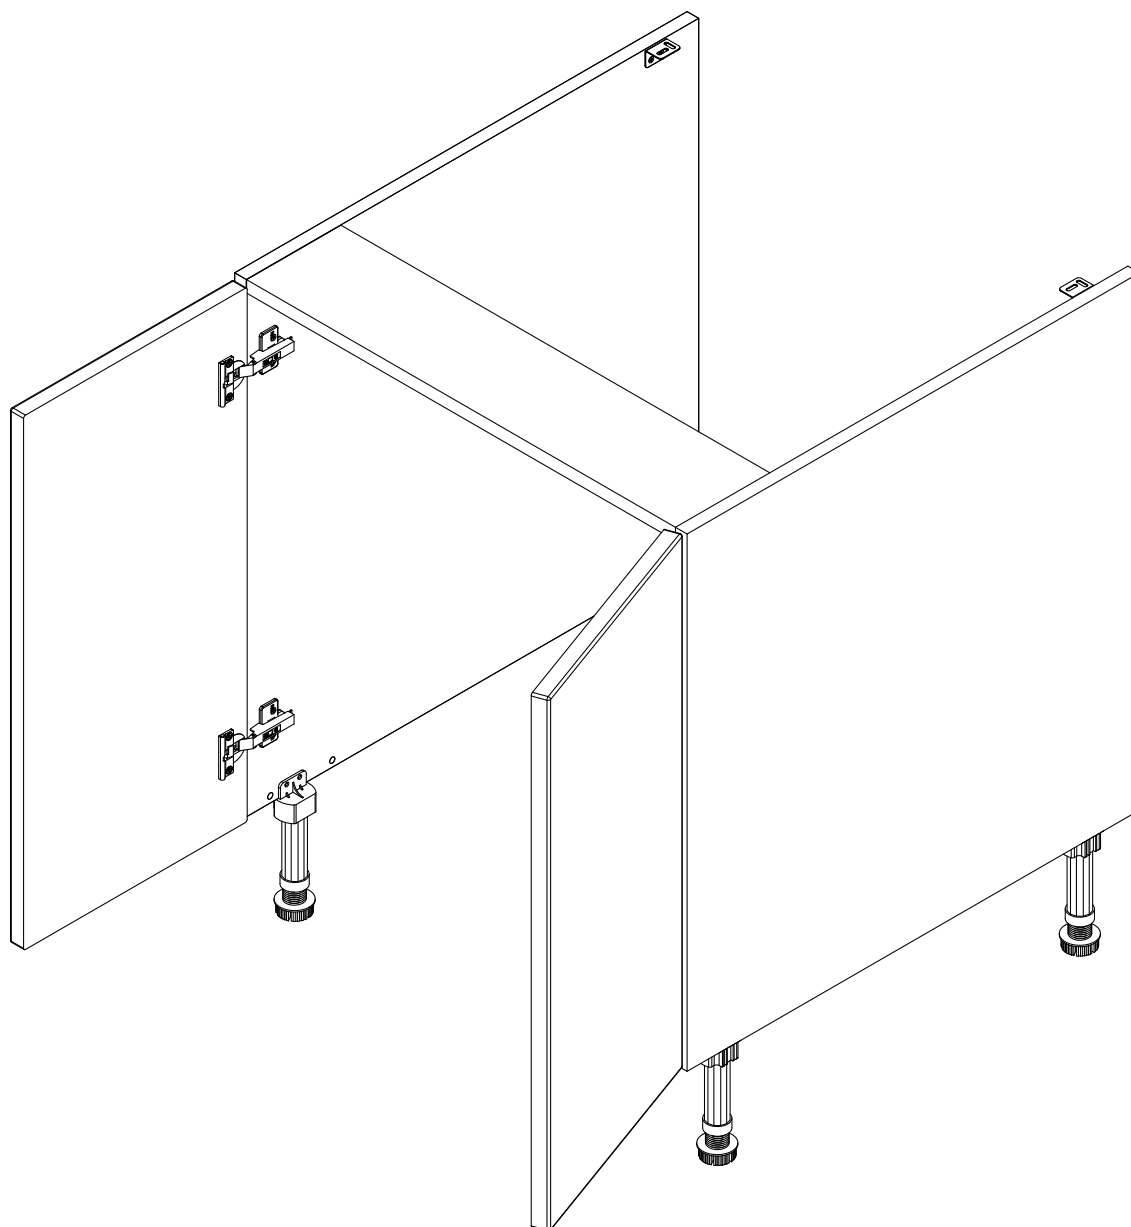




BEFORE YOU START
INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.
THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED



**TWO
MAN
JOB**

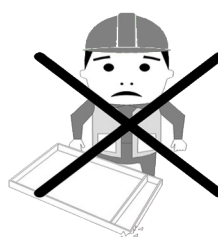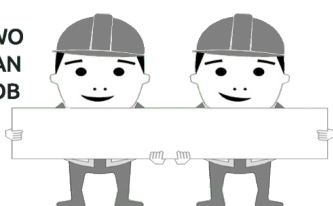

**PROTECT
AGAINST
DAMAGE**




PLANNING NOTE - VERY IMPORTANT:
This unit is designed to work with a minimum worktop depth of 630mm,
most freestanding appliances will fit behind the doors.
Check appliance requirements and kitchen plan prior to fitting.
Back of end panels (A) can be cut to suit.



Screws for attaching to worktop are not supplied as these vary depending on worktop material and thickness. Ensure appropriate fixings for attaching worktop are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.




**NOT to be used with
CAM DOWEL &
CAM LOCK**

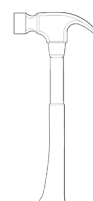

BASE UNIT

700 Appliances Hideaway Assembly Guide


wren

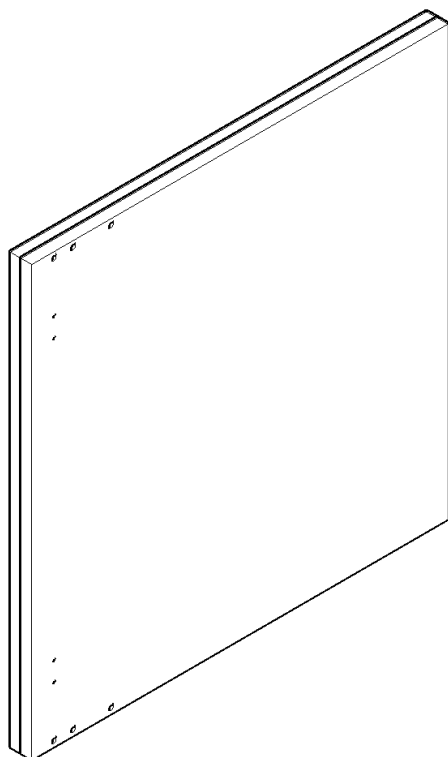

Panel A
x2 End Panel




Panel B
x1 Rail

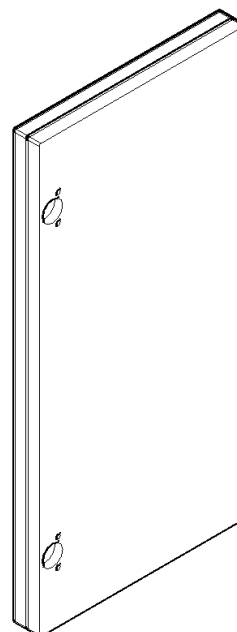


Frontals
x2
(Supplied Separately)




Legs
x4

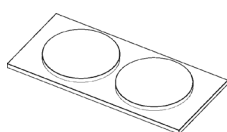


(N) x5
Door Buffer




(L) x32
15mm Screw

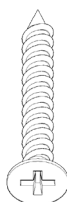


(K) x6
30mm Screw

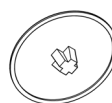


(M) x6
Per Colour
Screw
Head Cover Cap

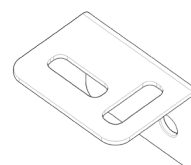

L Bracket LGE
x2

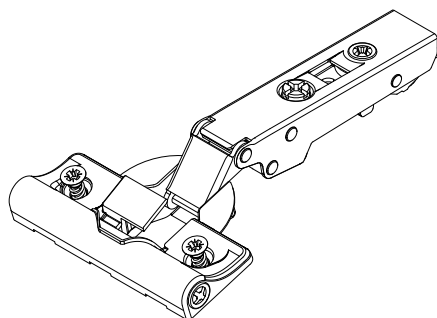


Hinges
x4 Inc Screws

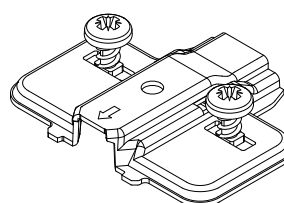

Mounting Plate
x4 Inc Screws



Step 1.

Secure both panels **(A)** to rail **(B)** with 6 wooden dowels per shelf as shown.

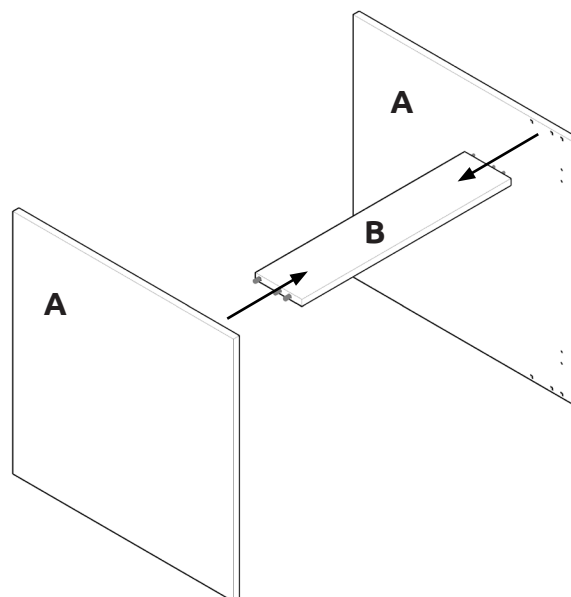

Step 2.

Secure each leg into place with 4 x 15mm screws **(L)**.
Ensure legs are screwed to the inside face of the end panels **(A)**.

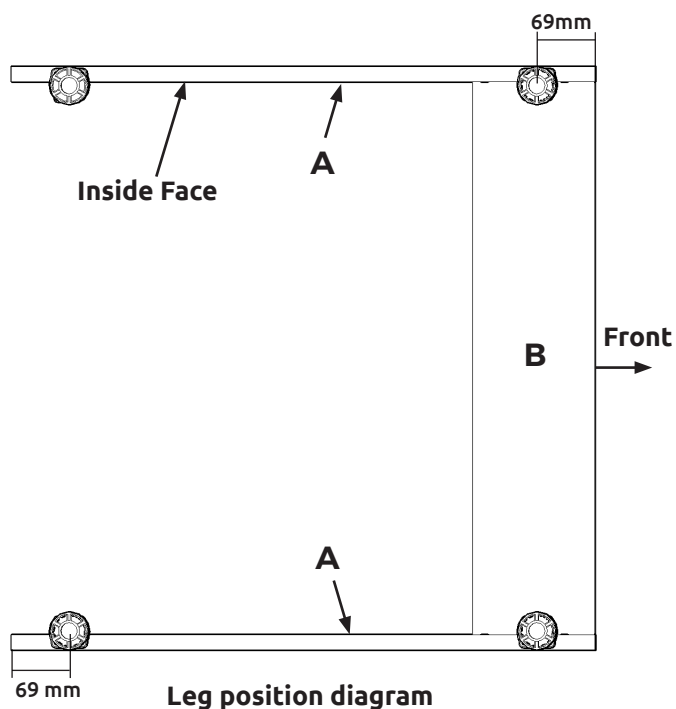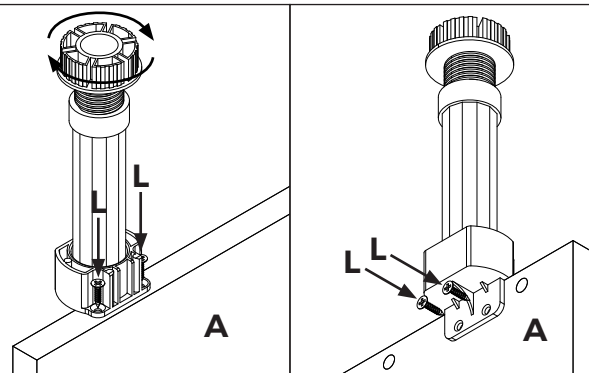

Step 3.

Adjust legs to 155mm before turning unit upright. Once in situ level accordingly.


It is important to lift the unit onto its legs, Do Not Tilt as depicted.



Step 4.

Hinge Mounting Plate


Attach hinge mounting plates onto both of end panels (**A**) in locations shown, using the screws which are already positioned within the hinge plates.

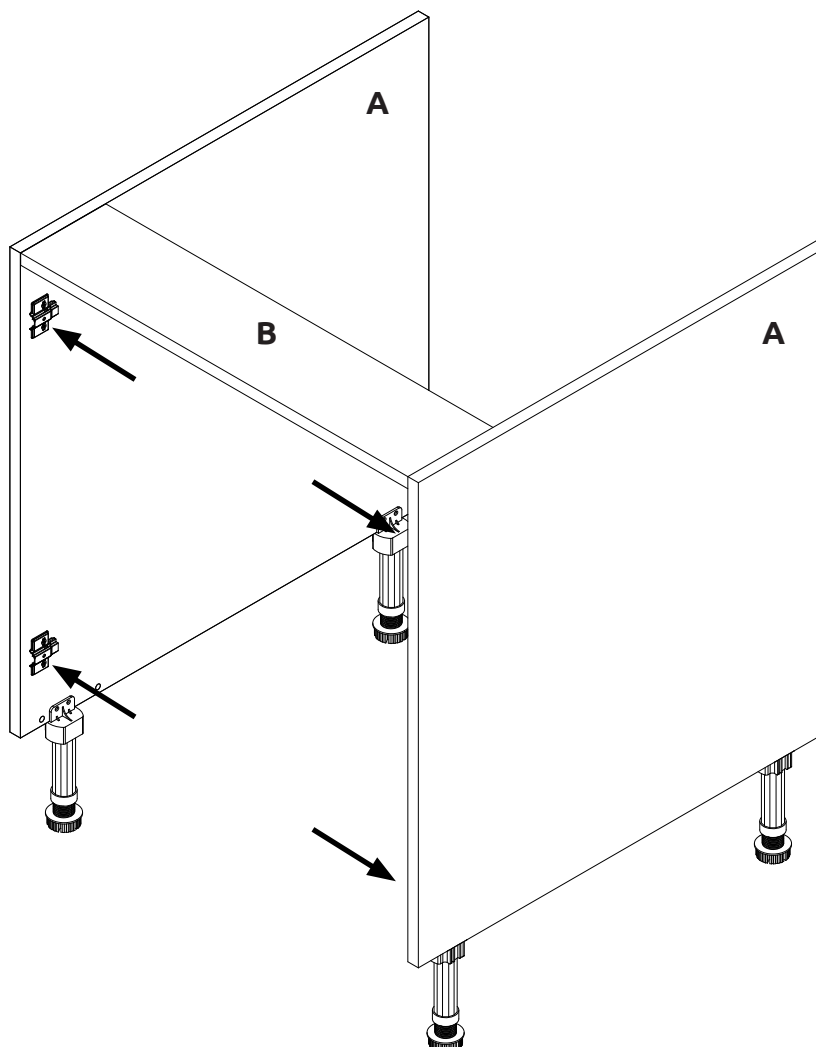

700 Appliances Hideaway Assembly Guide


Step 5.

Secure to adjacent units using 30mm screws **(K)**. Locate the screws at the top and bottom of the unit at the back and just to the rear of the hinge mounting plates at the front.

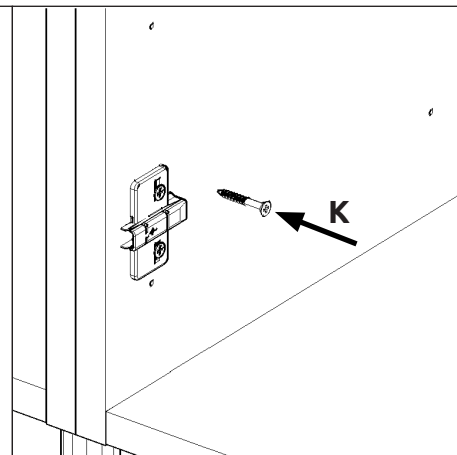


Step 6.

Attach the L brackets LGE to the inside of the end panels **(A)** at the top, towards the back on both panels, as depicted on the right.

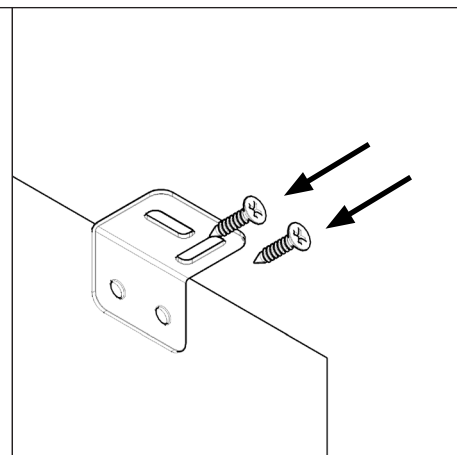





Step 7.


Screw up through the rail and L bracket(s) LGE into the worktop to secure it in place.


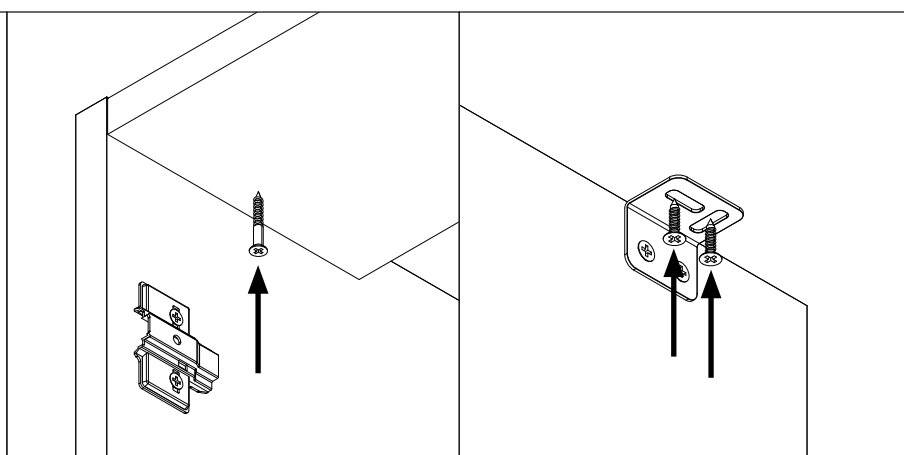


700 Appliances Hideaway Assembly Guide

Hinge Attachment and Adjustment

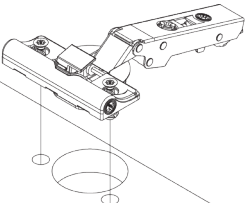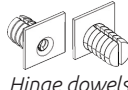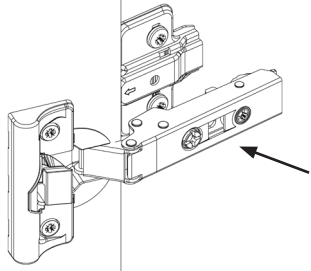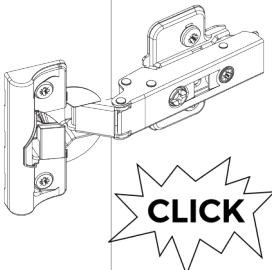	HINGE ATTACHMENT AND ADJUSTMENT Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws already located in the hinges and hinge dowels.  <i>Hinge dowels</i>	
	 CLICK	Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.		

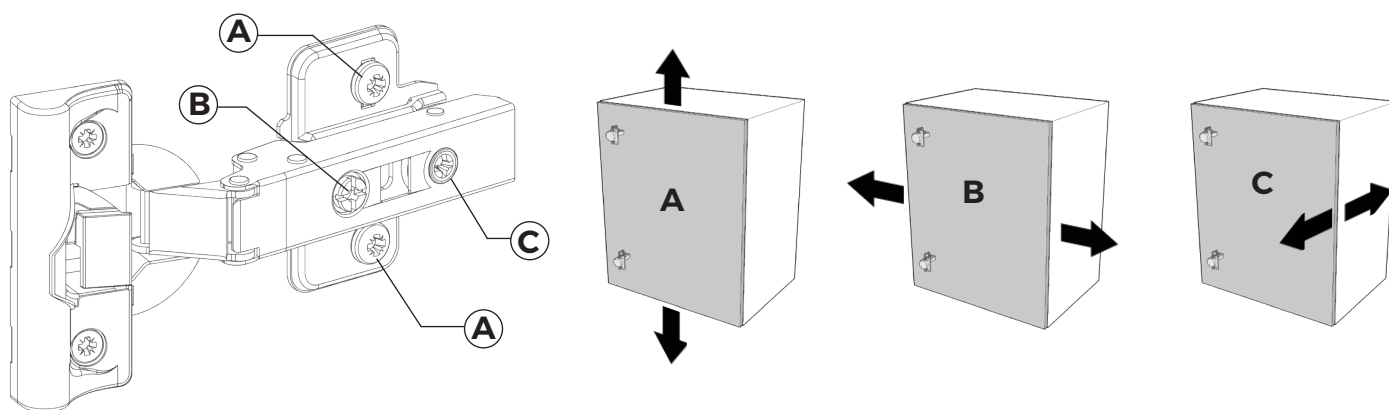

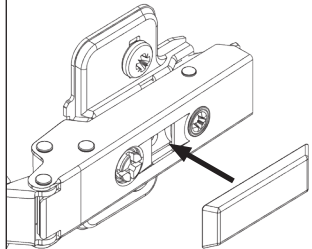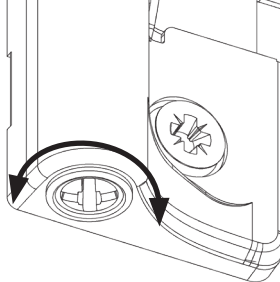	Step 4. Fit cover caps to hinges and adjust soft-close to suit.	
--	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

wren