




ROBE UNIT

Under Robe Fitting Guide

wren

FI.PK.BED.222.015 - UNDER ROBE 1


Supplied in pack:



6 x 30mm Screw



Legs for the underrobe are supplied with the robe that will be fixed on top of the underrobe.

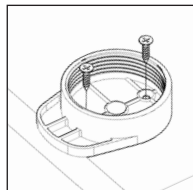


Step 1.

Position top section of legs as shown. Ensure the tabs on the legs are rotated towards the end panels. Secure with 2 x 15mm screws per leg. Attach bottom section of legs and set all legs to the same height.

400 - 600 Widths: 4 Legs


800 - 1000 Widths: 5 Legs

500 Width used for illustrative purposes only

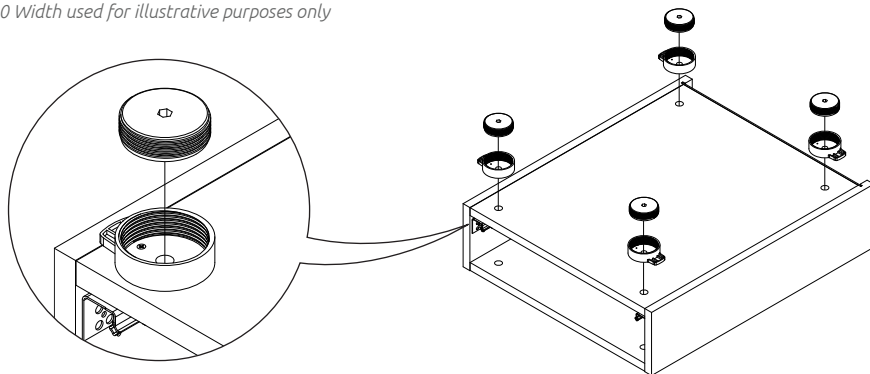



Step 2.

Lift the unit upright. Once in situ level accordingly, using an 8mm hex key from inside the unit. Attach leg packers to one side to level the unit on uneven surfaces.

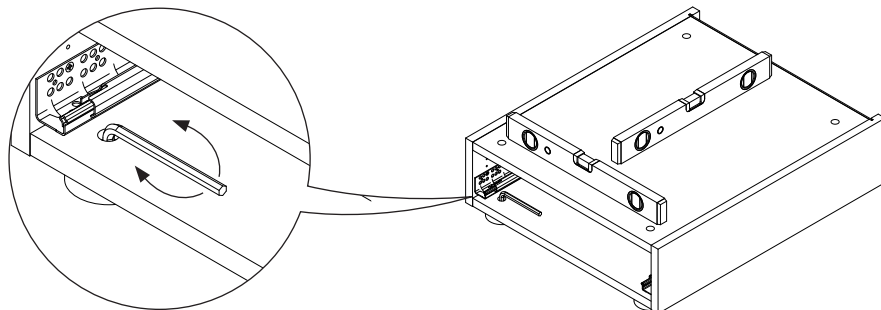

Step 3.

Position the robe on top of the under robe, ensure the front and sides are aligned with each other. Using the 30mm screws provided, screw down through the robe bottom fixed shelf into the under robe top fixed shelf to secure the units together. Cover screw heads with cover stickers provided to conceal them.

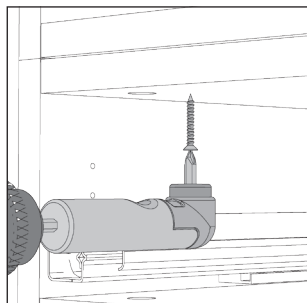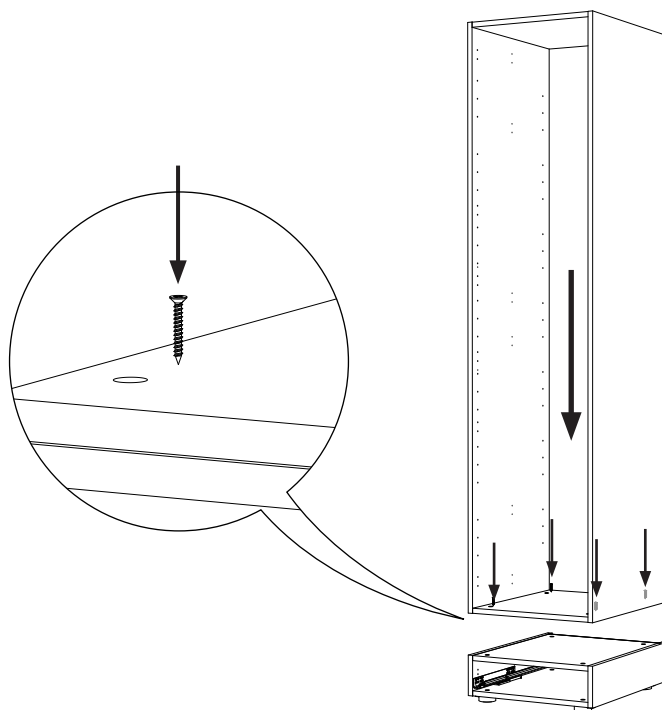

Alternative front screw location.

Using an angled drill attachment, the front screws only, can be secured from the underside by screwing up through the top fixed shelf of the under robe into the bottom fixed shelf of the robe unit.