



ROBE UNIT

Angled Robe Fitting Guide

wren

FI.PK.BED.222.021 - PEBBLE

(L) x8 15mm Screws 

(N) x2 Door Buffer 


4x 15mm Plastic Cover Caps 

(K) x8 30mm Screws 

12x Stick On Cover Cap 





Screws and fixings for attaching to walls are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

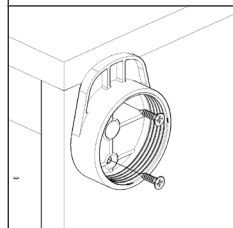

Step1.

Lift the robe and place it on its longest side.
Ensure the tabs on the legs are rotated towards the end panels.
Secure each of the legs in place with 2 x 15mm screws (L) per leg.
Attach bottom section of legs and set all legs to the same height.

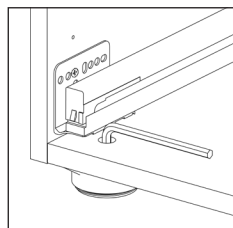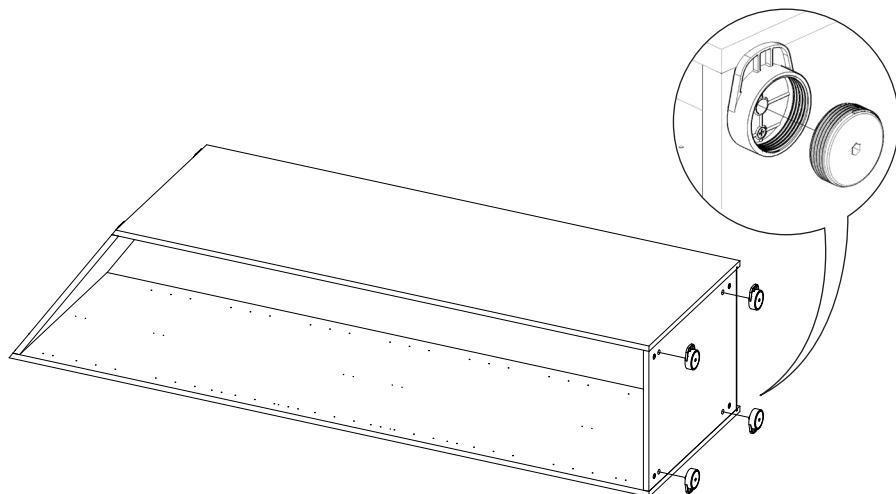


Step2.

Position the unit and level using an 8mm hex key from inside the unit.

Angled Robe Fitting Guide

FI.PK.BED.222.021 - PEBBLE

- Step 3.
- A. Pilot drill through the back panel and back rails of the unit.
- B. Screw the unit to the wall using appropriate screws.
- Cover screw heads with stick on cover caps.

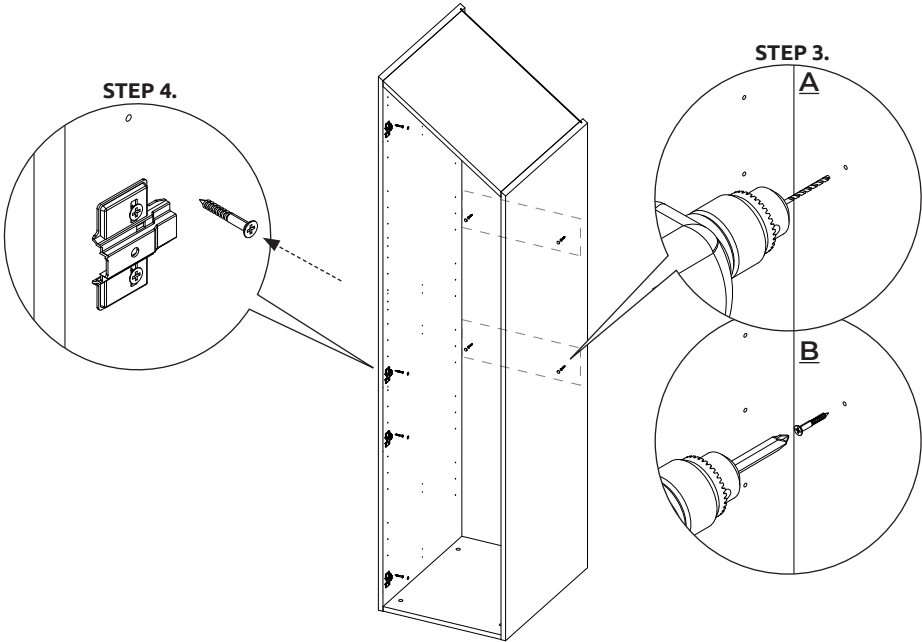

- Step 4.
- Screw into any adjacent units using 30mm screws (K) provided to secure the unit. Screw just to the rear of the hinge plate at the top and bottom on both sides. Place stick on cover caps on the heads to conceal them.

- Step 5.
- Cover 15mm leg holes in the bottom fixed shelf with 4 x Plastic Cover Caps.

- Step 6.
- Attach Filler panels around the units.
- The front of the fillers **MUST** be aligned with the front of the unit **NOT** the doors.

