


Page 1 Dishwasher Frontal Guide


Page 5 Fridge/Freezer Frontal Guide

Page 9 Washer/Dryer Frontal Guide


Dishwasher Frontal

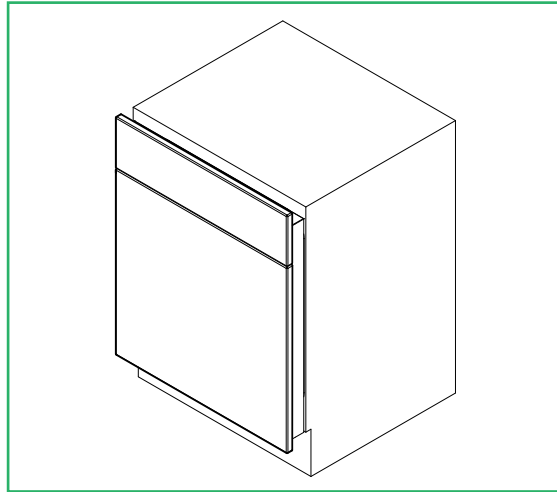

Unit Parts

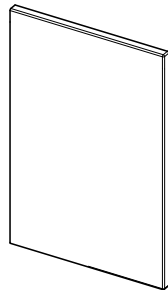

Frontal




2x
Connecting Plates
(If Required)




8x
15mm Screws
(If Required)


Tools Required

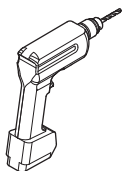

Drill

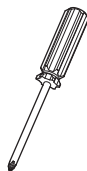


Screwdriver

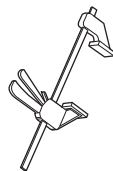


Clamp



Pencil

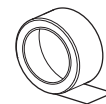

Masking Tape

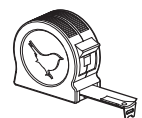

Tape Measure


This is a general guide for fitting frontals to integrated appliances.
Refer to the appliance manufacturers guide for the exact measurements and fitting order.

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any unnecessary cardboard or plastic should be flattened down and correctly disposed of.

Make sure the appliance is correctly positioned and fully installed before attaching the frontal.

Preparing the appliance



Attach any supplied mounting brackets or fittings to the appliance according to the manufacturer's instructions.

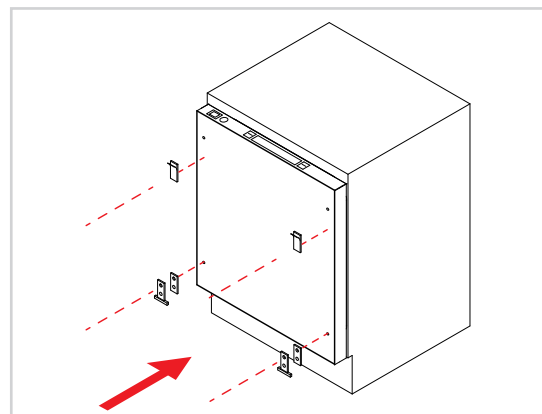

Connecting the frontal pieces (if required)

Place the frontal pieces face down on a piece of cardboard.

Use **2x** connecting plates and **8x15mm** screws to connect the frontal sections together as shown. Ensure the pieces are correctly aligned, and that a **2mm** gap is maintained between the frontal sections.

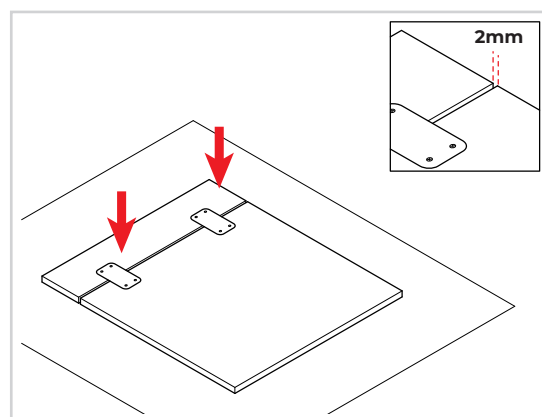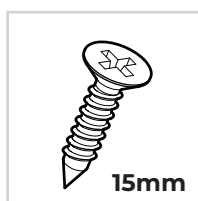


Preparing the frontal

Place the frontal face down on a piece of cardboard.

If a manufacturer's template is provided, use it to mark the mounting screw points on the back of the frontal.


If a template is not provided, measure and mark the locations of the mounting screws according to the appliance manufacturer's instructions.

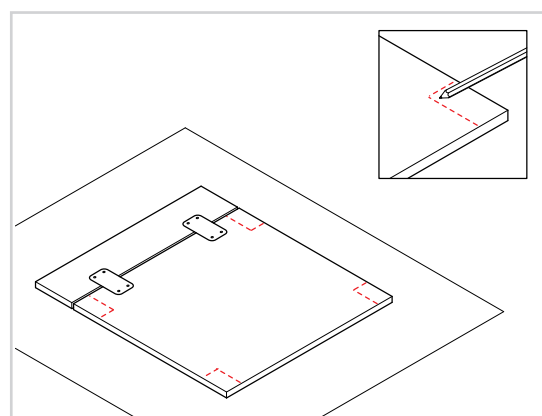

Pre drilling the frontal

Using an appropriately sized drill bit, pre drill the marked locations on the back of the frontal.

Use a piece of masking tape to mark the correct drill depth on the drill bit as shown in the image. This will help prevent drilling all the way through the frontal.

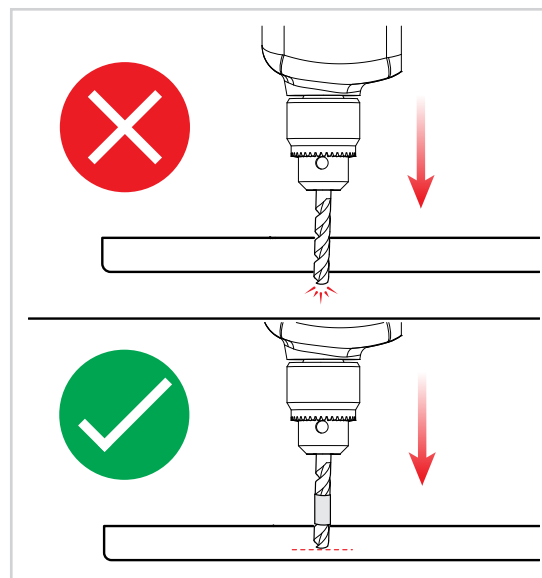


If the frontal requires a handle, it should be fitted before the next step.

For handle installation please review the following guides as required:

Bar, Bow and Cup Handles
Knob Handles
Pull Handles

Attaching the fixings


Attach any supplied appliance fixings to the back of the frontal .

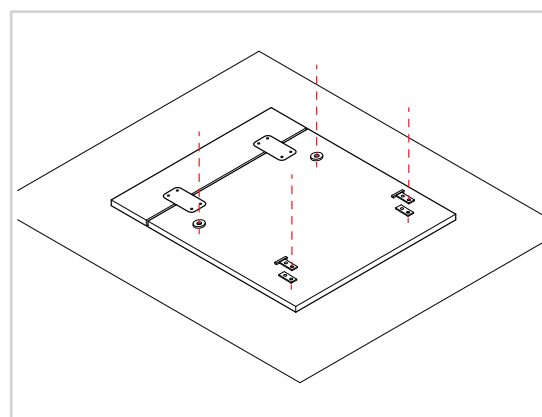

Attaching the frontal

Clamp the frontal in position, and attach it to the appliance using the screws provided by the manufacturer.


Remove the clamps.

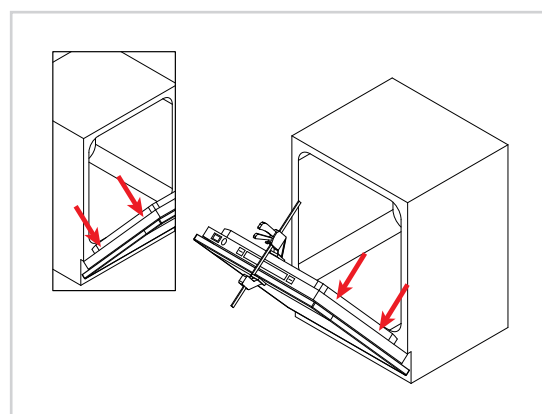

Adjusting the frontal


Make any necessary adjustments to the appliance hinges so that the frontal is correctly aligned with the adjacent units and frontals.

Follow the manufacturer's instructions to make the adjustments.

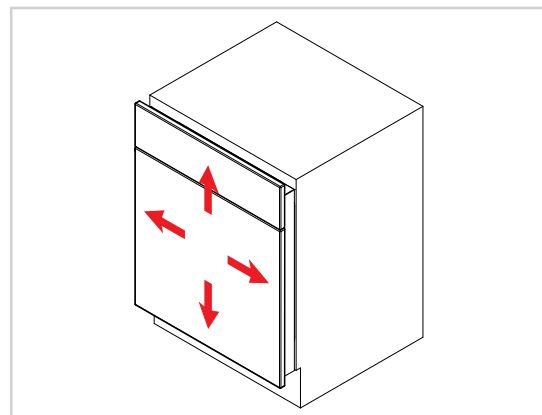


Cleaning the appliance and frontal


Finally, the appliance and frontal should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

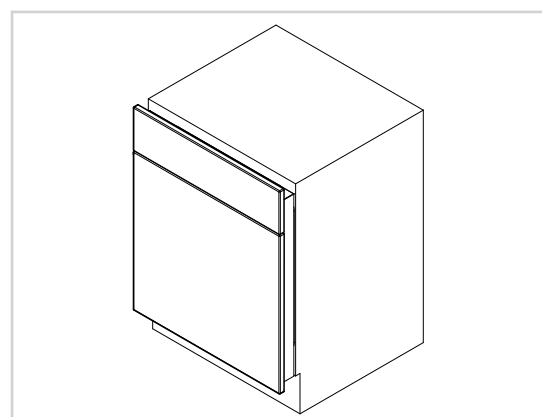


Fridge / Freezer Frontal

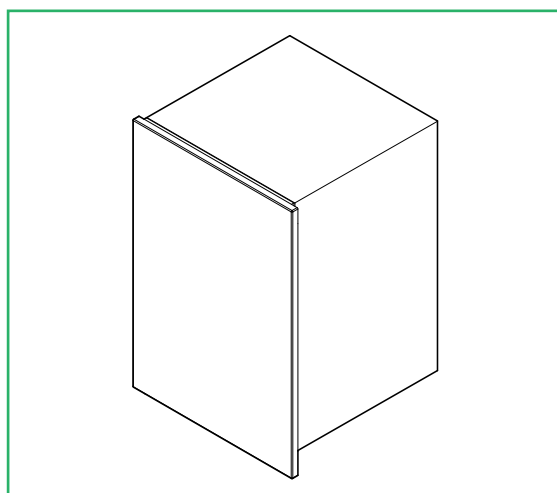

Unit Parts

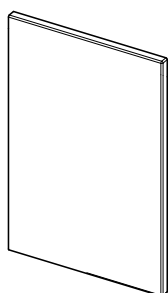

Frontal




2x
Connecting Plates
(If Required)




8x
15mm Screws
(If Required)


Tools Required

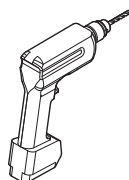

Drill




Screwdriver



Pencil



Masking Tape

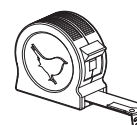

Tape Measure


This is a general guide for fitting frontals to integrated appliances.
Refer to the appliance manufacturers guide for the exact measurements and fitting order.

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any unnecessary cardboard or plastic should be flattened down and correctly disposed of.

Make sure the appliance is correctly positioned and fully installed before attaching the frontal.

Preparing the appliance



Attach any supplied mounting brackets or fittings to the appliance according to the manufacturer's instructions.

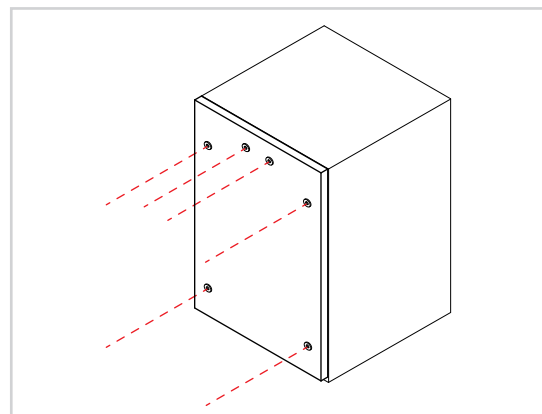

Connecting the frontal pieces (if required)

Place the frontal pieces face down on a piece of cardboard.

Use **2x** connecting plates and **8x15mm** screws to connect the frontal sections together as shown. Ensure the pieces are correctly aligned, and that a **2mm** gap is maintained between the frontal sections.

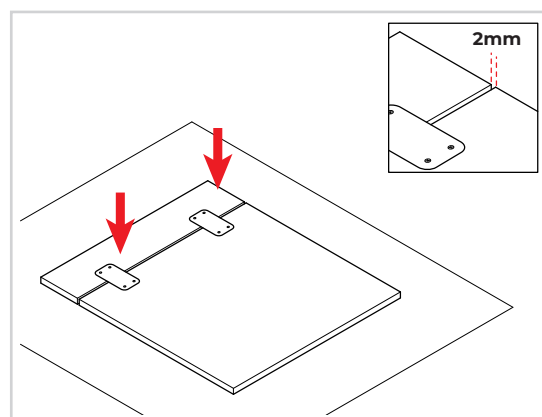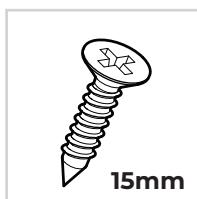


Preparing the frontal

Place the frontal face down on a piece of cardboard.

If a manufacturer's template is provided, use it to mark the mounting screw points on the back of the frontal.


If a template is not provided, measure and mark the locations of the mounting screw and hinge plate points according to the appliance manufacturer's instructions.

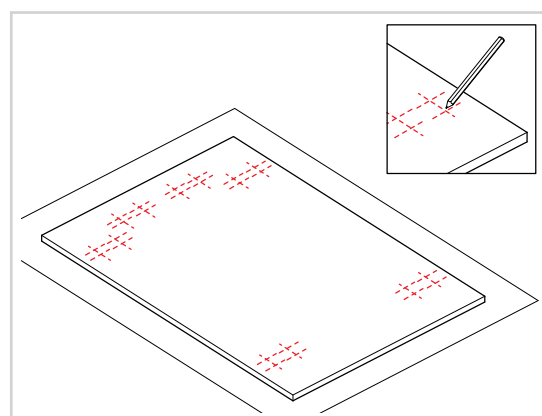

Pre drilling the frontal

Using an appropriately sized drill bit, pre drill the marked locations on the back of the frontal.

Use a piece of masking tape to mark the correct drill depth on the drill bit as shown in the image. This will help prevent drilling all the way through the frontal.

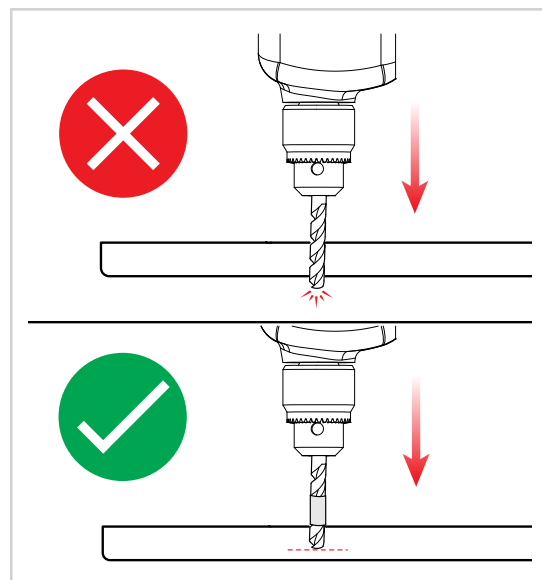


If the frontal requires a handle, it should be fitted before the next step.

For handle installation please review the following guides as required:

Bar, Bow and Cup Handles
Knob Handles
Pull Handles

Attaching the fixings


Attach any supplied appliance fixings to the back of the frontal.

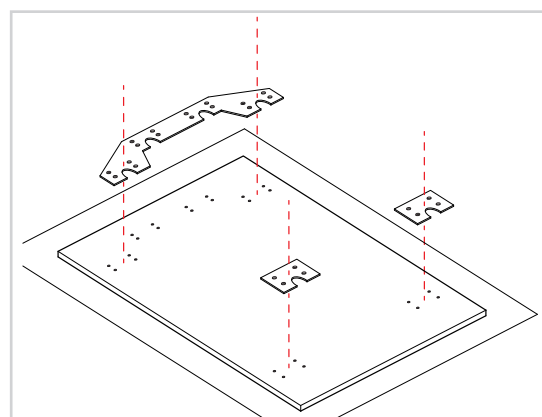

If you have J-Pull or handleless frontals, you may need to install any fixing L-brackets at the top of the frontal upside down, so as to avoid screwing into the frontal where the material is thinnest.

Attaching the frontal


Attach the frontal to the appliance and secure it using any brackets and screws provided by the manufacturer.

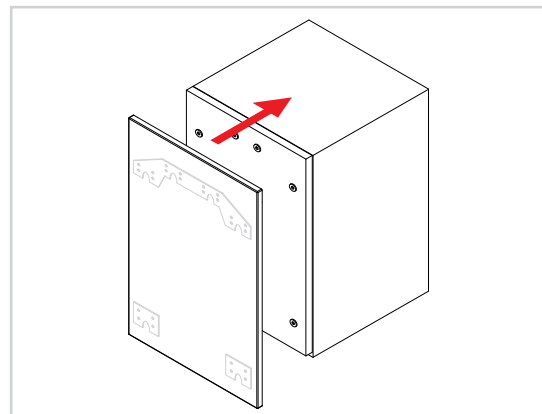

Adjusting the frontal


Make any necessary adjustments to the appliance hinges so that the frontal is correctly aligned with the adjacent units and frontals.

Follow the manufacturer's instructions to make the adjustments.

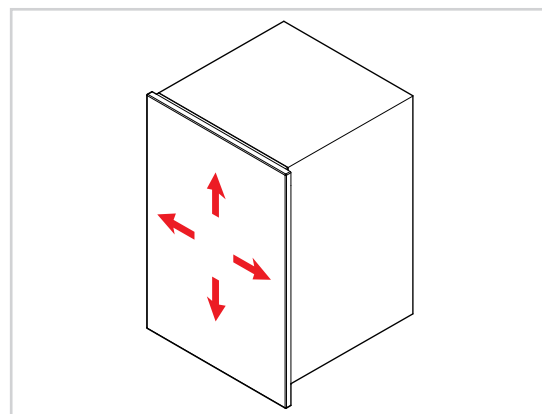


Cleaning the appliance and frontal


Finally, the appliance and frontal should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

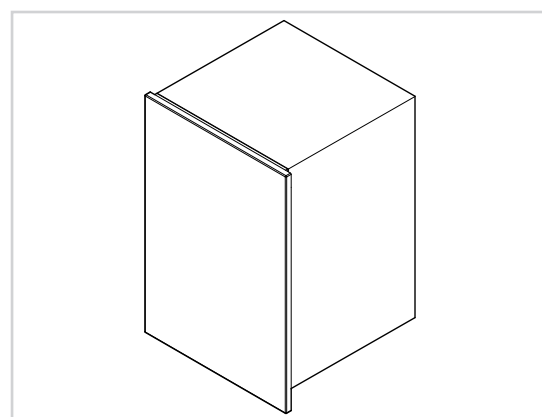


Washer / Dryer Frontal

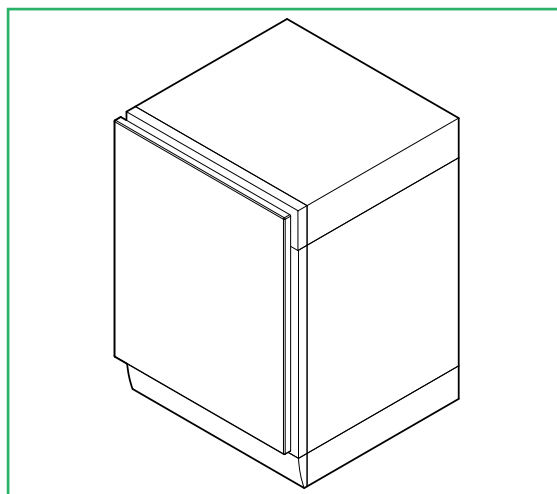

Unit Parts

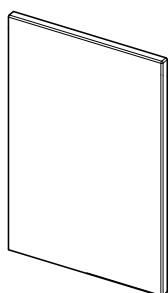

Frontal




2x
Connecting Plates
(If Required)




8x
15mm Screws
(If Required)


Tools Required

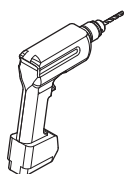


Drill



Screwdriver




Forstner Bit



Pencil



Masking Tape



Tape Measure


This is a general guide for fitting frontals to integrated appliances.
Refer to the appliance manufacturers guide for the exact measurements and fitting order.

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any unnecessary cardboard or plastic should be flattened down and correctly disposed of.

Make sure the appliance is correctly positioned and fully installed before attaching the frontal.

Preparing the appliance



Attach any supplied fittings to the appliance according to the manufacturer's instructions.

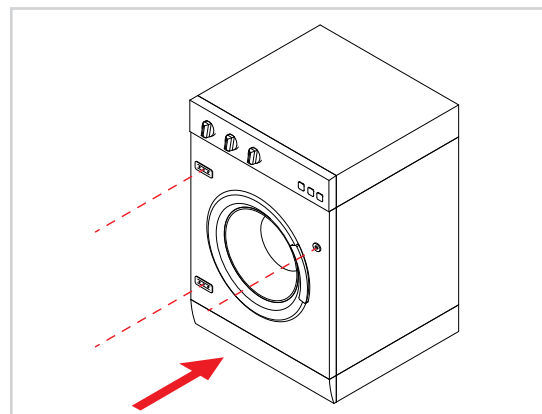

Connecting the frontal pieces (if required)

Place the frontal pieces face down on a piece of cardboard.

Use **2x** connecting plates and **8x15mm** screws to connect the frontal sections together as shown. Ensure the pieces are correctly aligned, and that a **2mm** gap is maintained between the frontal sections.

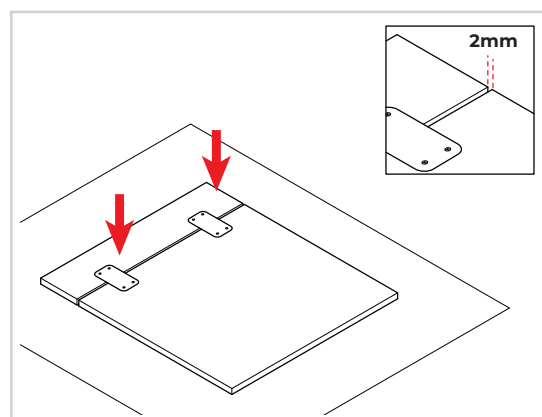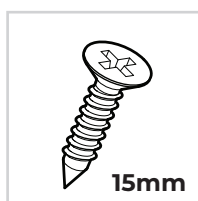


Preparing the frontal

Place the frontal face down on a piece of cardboard.

If a manufacturer's template is provided, use it to mark the mounting screw and hinge mounting points on the back of the frontal.

If a template is not provided, measure and mark the locations of the mounting screw and hinge mounting points according to the appliance manufacturer's instructions.

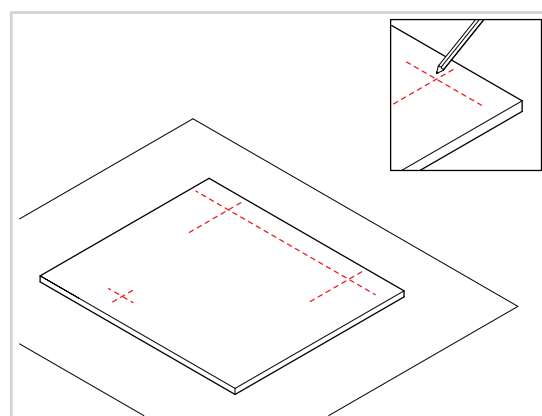


Pre drilling the frontal

Using an appropriately sized Forstner drill bit, drill the marked locations for the hinge cups on the back of the frontal.

Work carefully in multiple passes, placing the hinge cup in the hole to check and ensure you drill to the correct depth and NOT all the way through the frontal.

Use an appropriately sized drill bit to drill any other locations required for other fittings. Use a piece of masking tape to mark the correct drill depth on the bit. This will help prevent drilling all the way through the frontal.

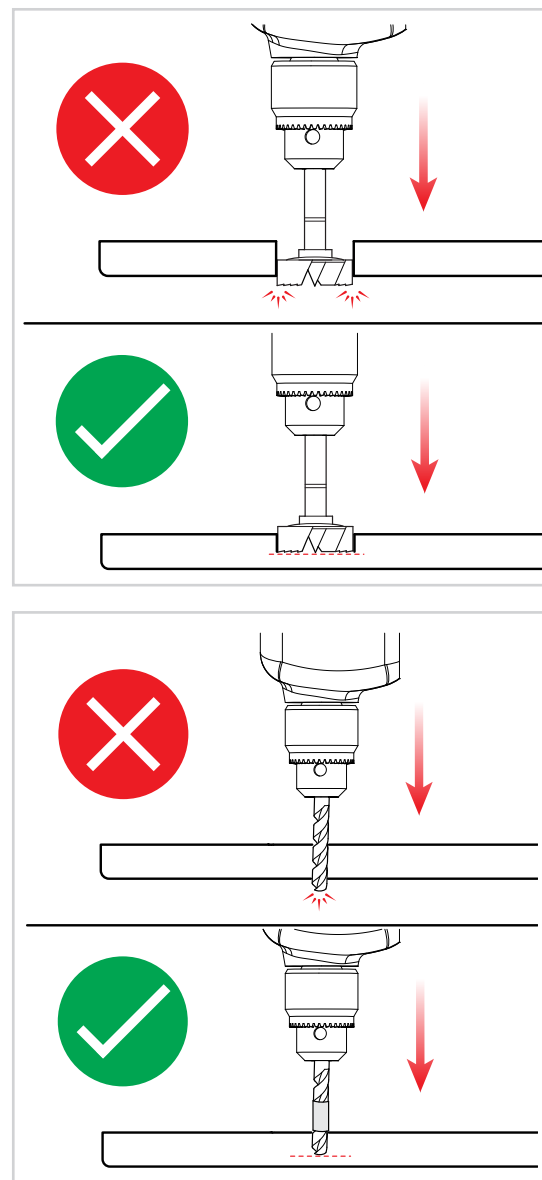


If the frontal requires a handle, it should be fitted before the next step.

For handle installation please review the following guides as required:

Bar, Bow and Cup Handles
Knob Handles
Pull Handles


Attaching the fixings

Attach the supplied hinges and any appliance fixings to the back of the frontal.

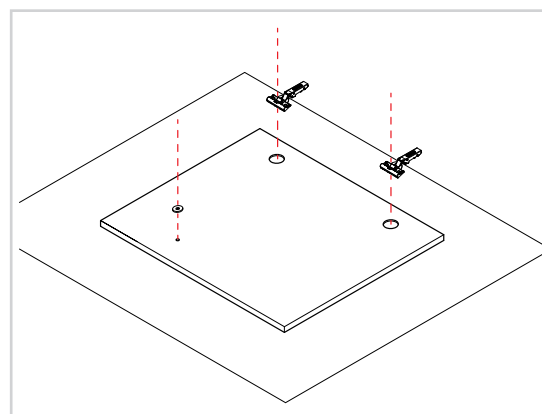

Attaching the frontal


Attach the frontal to the appliance using the screws provided by the manufacturer.

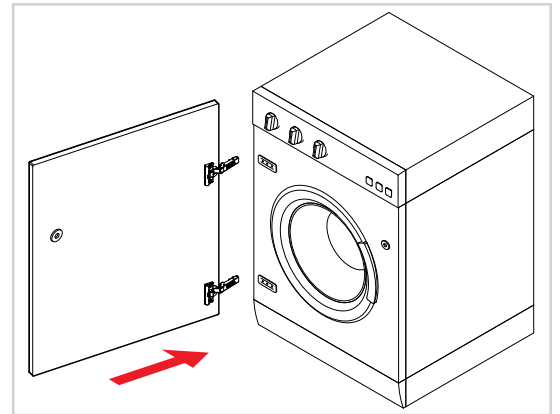

Adjusting the frontal

Make any necessary adjustments to the appliance hinges so that the frontal is correctly aligned with the adjacent units and frontals.

Follow the manufacturer's instructions to make the adjustments.

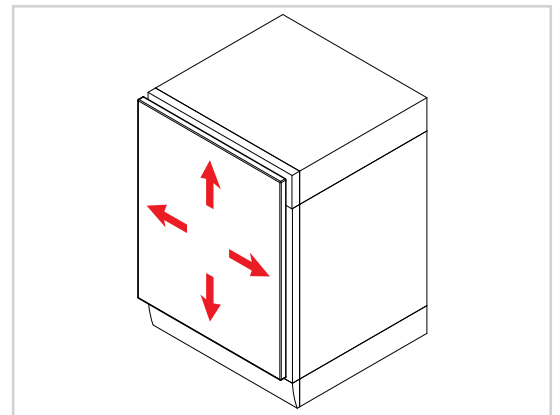

Cleaning the appliance and frontal

Finally, the appliance and frontal should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

