



L-corner Wall (Door, Solid Top) Fitting Guide**Cabinet Parts**


4x 1 1/4" screws

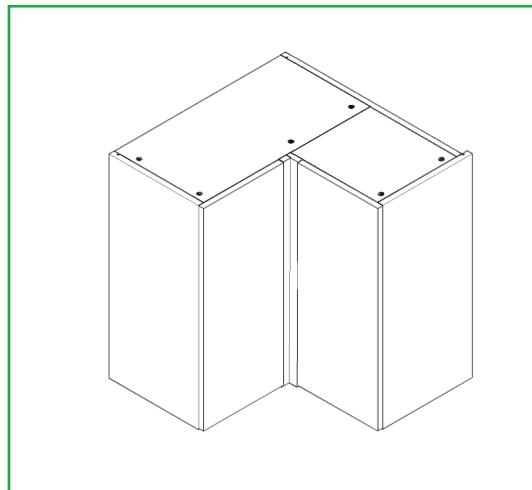

8x 5/8" screws

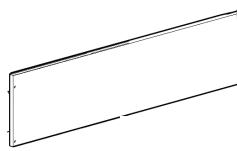

2x Shelves



2x Door Buffers



1x Corner post



8x Shelf Supports

Tools Required

Drill



Stud Finder




Screwdriver



Clamp



Spirit Level



Tape Measure



Before installing any wall cabinets, ensure the wall construction is strong enough to support the weight of the fully loaded cabinet and that appropriate fixings are used.

If you are unsure, seek professional advice before proceeding.


Remember to take care when unpacking. Please keep your workspace clean, clear, and tidy when working. This will help keep all items safe from damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

A minimum of two people will be needed to lift the cabinet.

Removing the fittings


All of the fittings need to be removed from the inside of the cabinet, so it is empty.

Keep all of the fittings on a clean, level surface, and place any shelves in the door safe pack along their longest length.

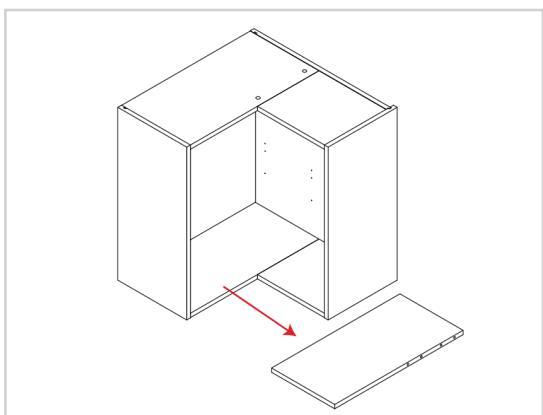

Locating the studs

Using a stud finder, locate the studs where the cabinet will be installed and mark the wall above and below where the cabinet will sit.

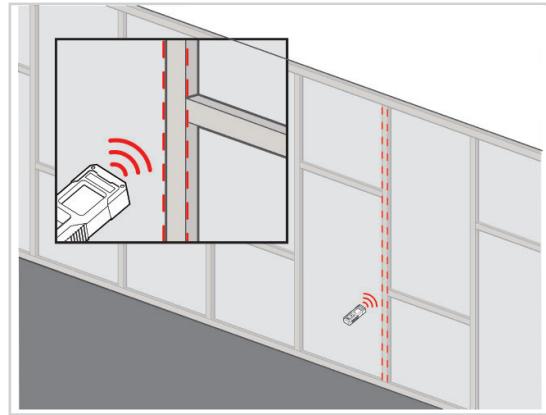


For help on determining the sort of wall you have, please refer to the "Room Preparation Guide."

No screws or wall plugs are provided for attaching the cabinet to the wall. This is due to variations in wall construction.


Checking the cabinet is level

Before installing the cabinet, hold the cabinet against the wall and check that it is level in multiple places using a spirit level.

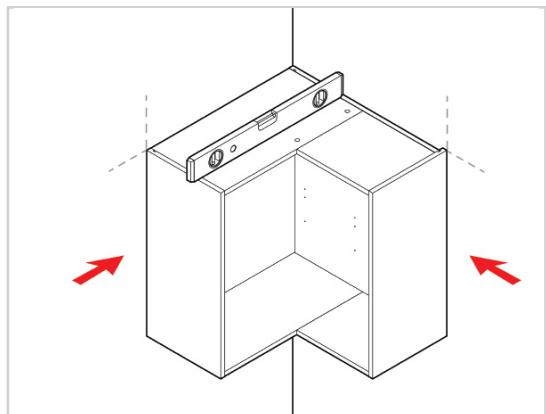

Securing the cabinet


Secure the cabinet in **2** places along the top rail and in **2** places along the bottom rail, where the studs are located (on both sides of the cabinet), using the appropriate fixings.

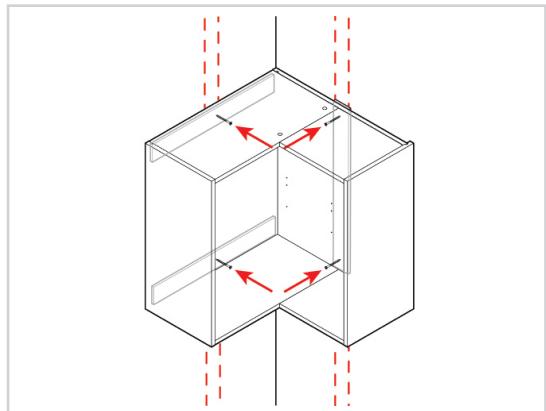


Fixing the shelves

Find where the shelf will be installed. Then insert the shelf pegs into the pre-drilled holes.


Add the fixing plate to the bottom of the large shelves. Secure the fixing plates with **2x 5/8"** screws. Ensure the fixing plates are evenly spaced.

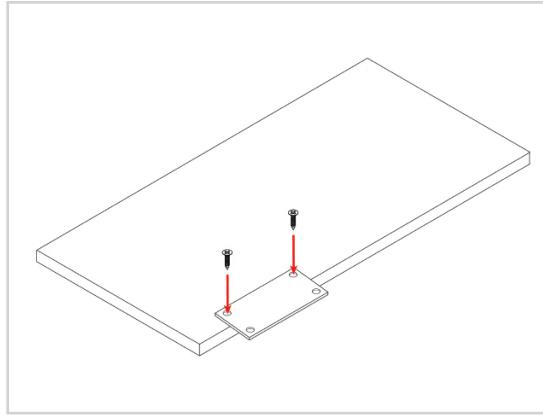


Now, lift the large shelf into position onto the shelf pegs inside the cabinet, ensuring the fixing plates are at the bottom. Make sure the shelf touches the back panel.

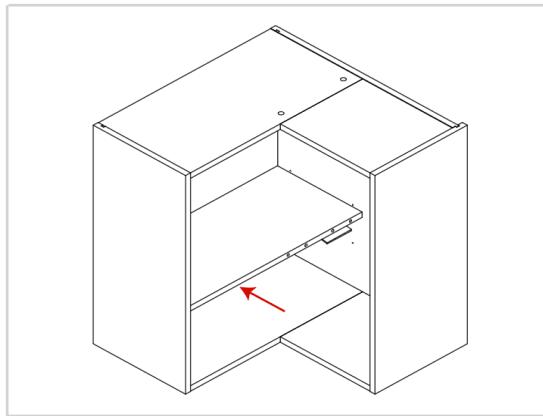

Next, rest the small shelf onto the shelf pegs and over the fixing plates.

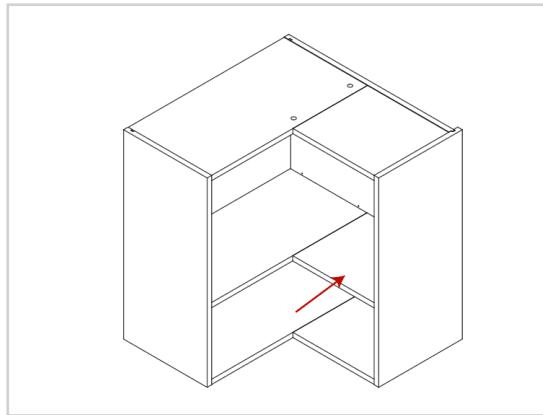


Lastly, join each of the fixing plates with **2x 5/8"** screws to the small shelf by drilling upward to attach the shelves together.

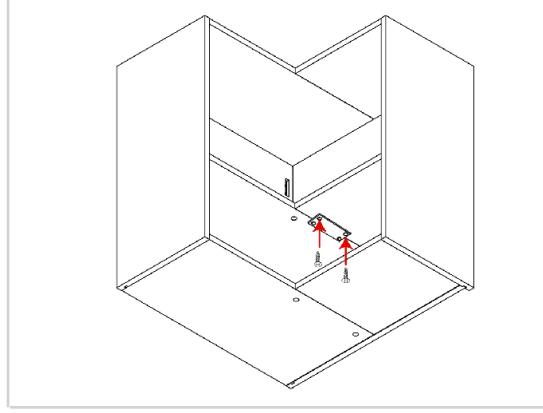

Attaching the hinge plates


Attach the hinge mounting plates to both of the side panels as shown, using the screws that are already positioned within the hinge plates.

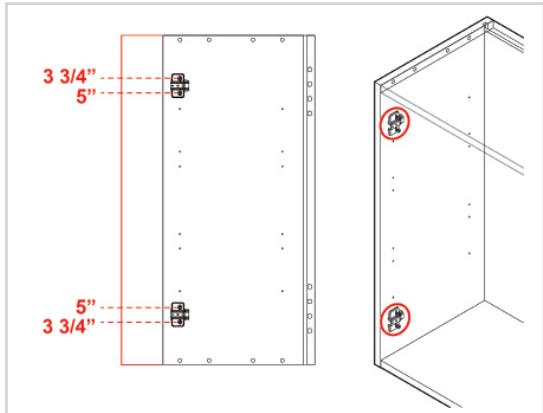

Attaching the hinges to the frontal

Insert the hinges into the top and bottom holes on the frontal.


Secure the hinges by tightening **2x** screws with the hinge dowels attached. These are already positioned within the hinges.

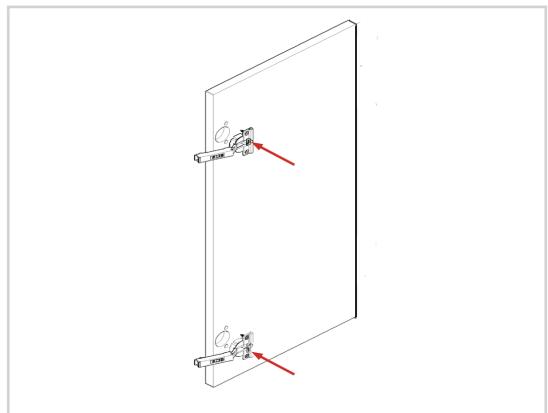

Connecting the corner post


Align the corner post to the frontal. Equally space **2x** fixing plates to the back of the frontal and the corner post. Ensure a **1/8"** gap is maintained between the frontal and the post once fixed together.

Screw in place using **4x 5/8"** screws per fixing plate.

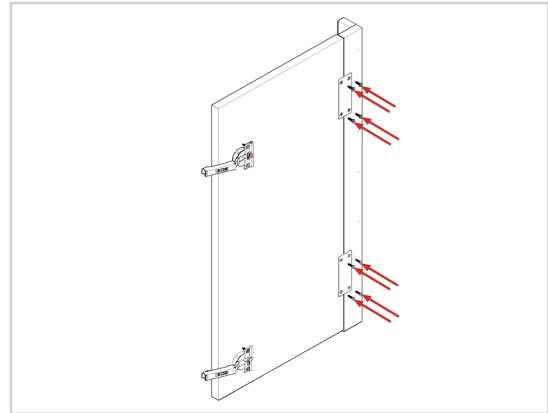


Securing adjacent cabinets

To secure an additional cabinet, fix **2** screws at the front of the cabinet, just behind the hinge plates, and **2** screws at the rear of the cabinet at the top and bottom, using **1 1/4"** screws.

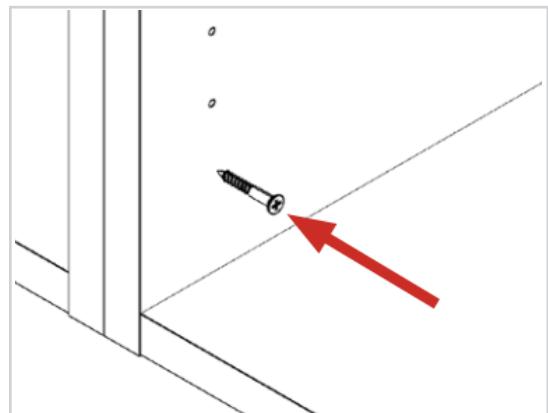


Attaching the frontal

The frontal needs to be re-attached to the cabinet. Position the hinge arm on the hooks on the hinge plate, then push the rear of the hinge arm towards the hinge plate until it clicks.

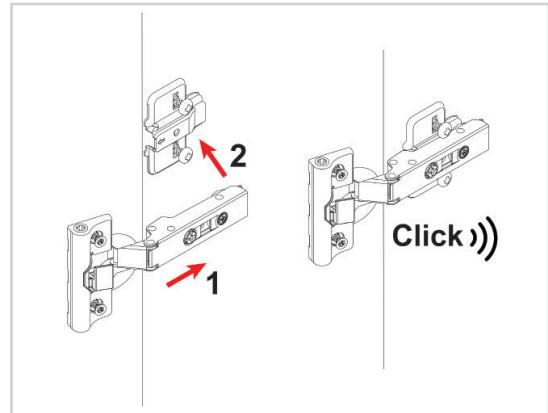


Adding door buffers

Position **1x** door buffer in the top corner and **1x** door buffer in the bottom corner of the cabinet, as seen in the image.

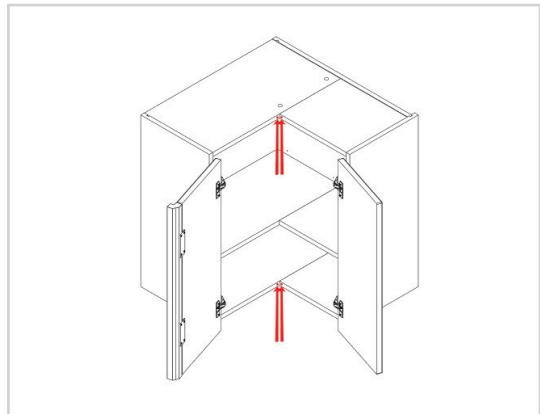

Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

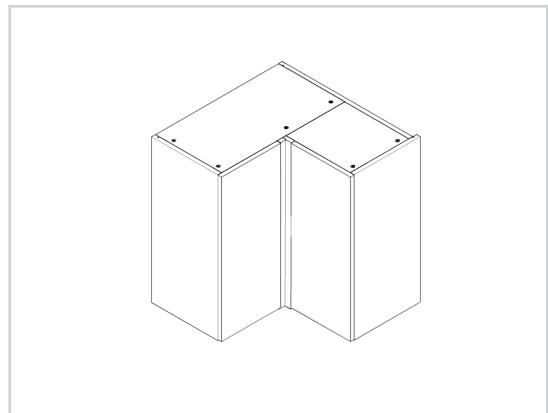

**For door alignment please review the following installation guide:
Door - Door Hinge Adjustment**