



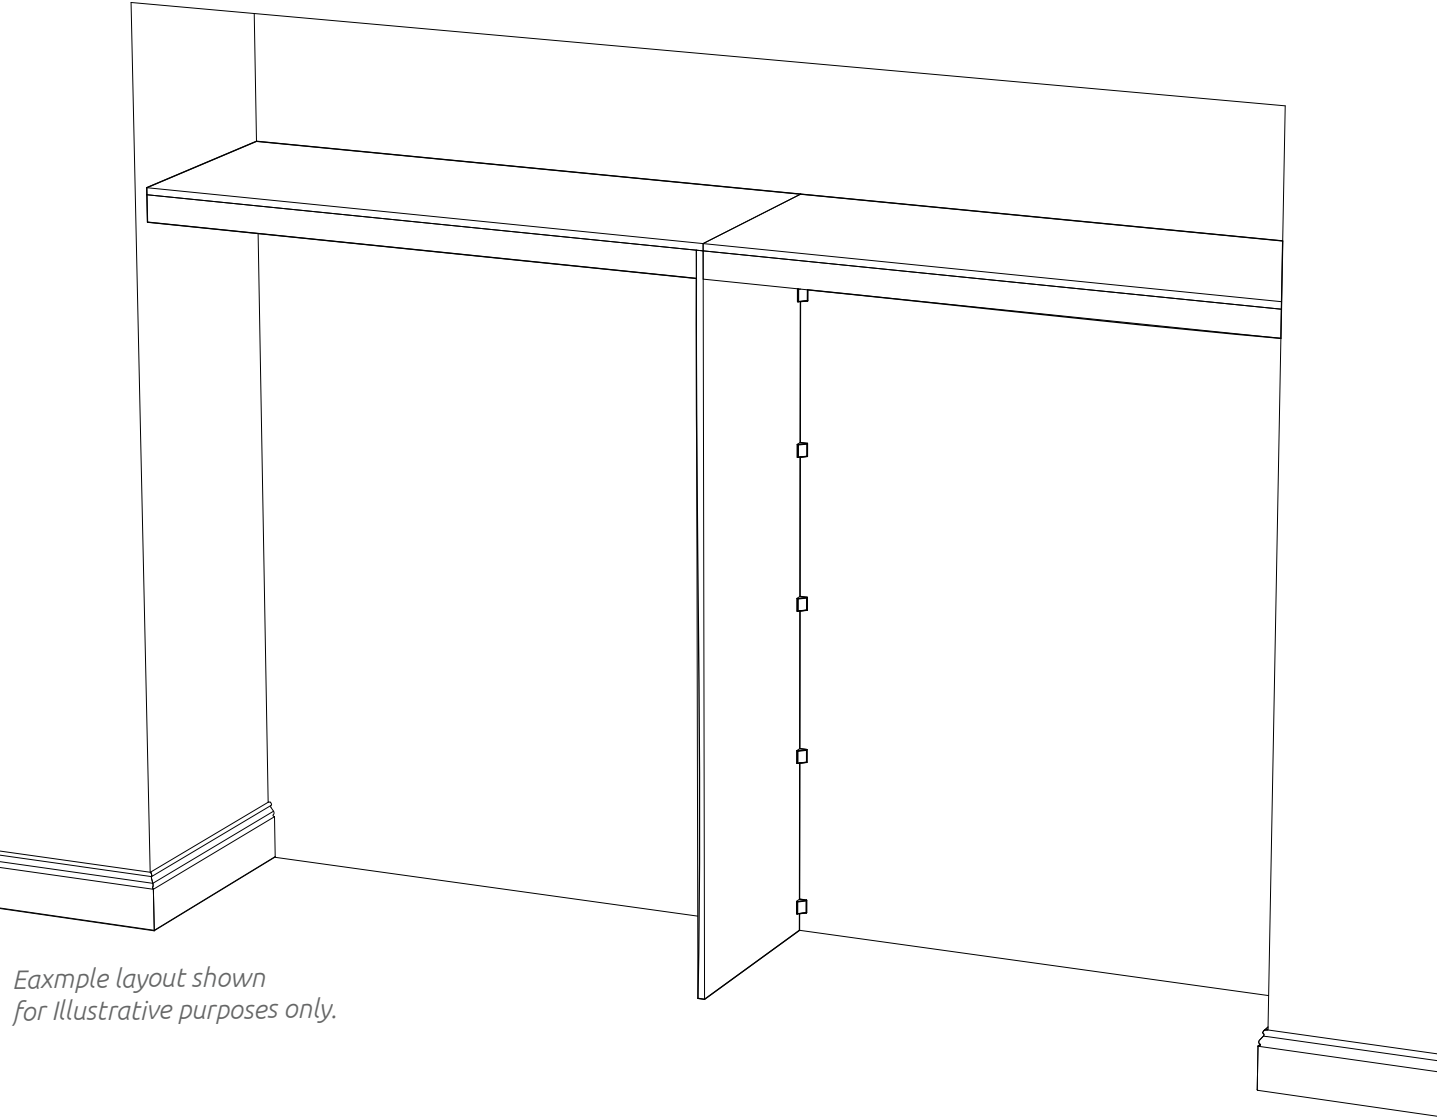

*Example layout shown
for illustrative purposes only.*

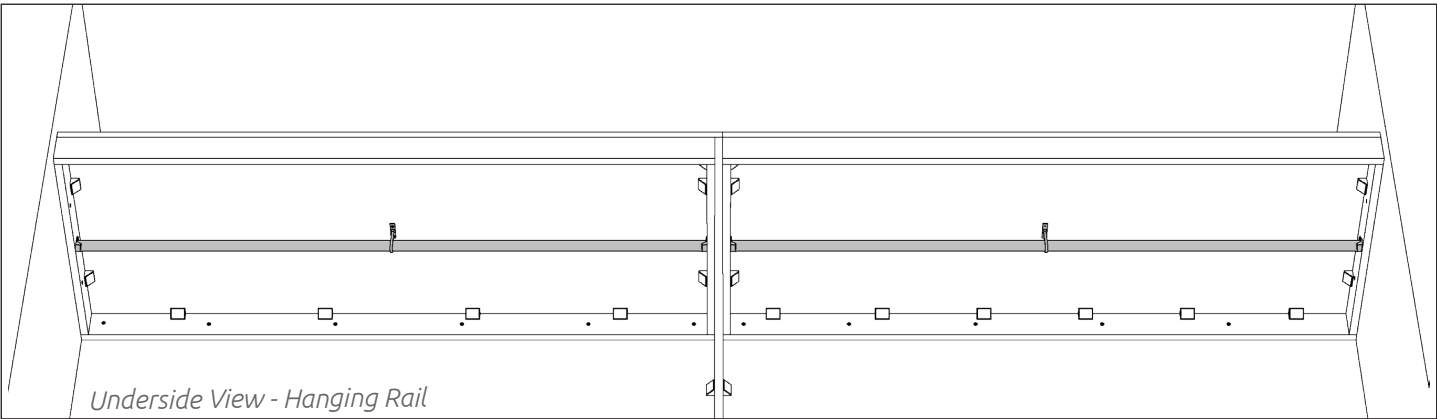


Open Shelf With Hanger Installation Guide

Step 1.

Measure the width of the opening, if the opening is greater than 2100 a divider panel is required. Cut the divider to the required height and secure to the wall and floor using the Conti blocks provided.

Screws for securing to the wall and floor are not provided.


Measure and mark the required height for the shelf, if using a divider the **MAX height is 2120mm**.

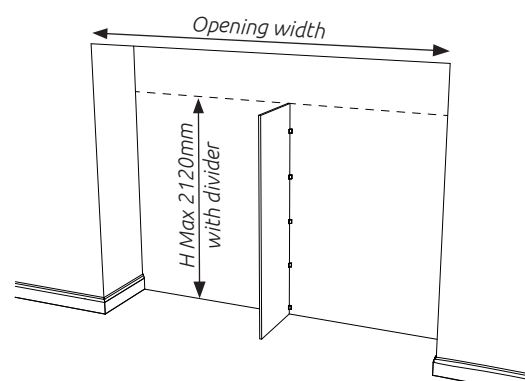

Step 2.

Cut the front and back rails to the required width. Position at the marked height or inline with the divider (if divider is used) and fix the back rail to the wall using appropriate screws.


Screws for securing to the wall are not provided.

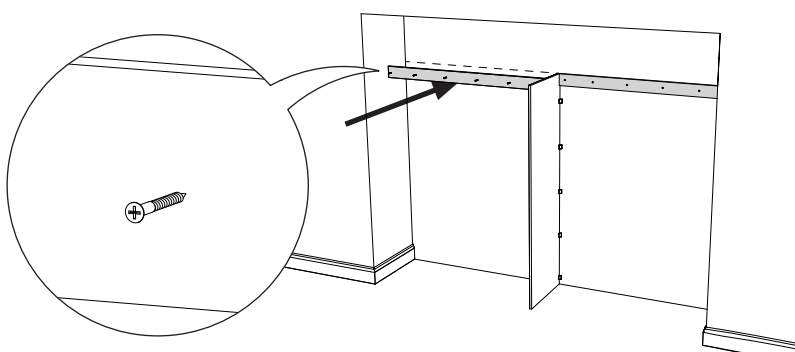

Step 3.


Cut the side rails to the required width. Rail width is shelf depth minus 36mm. Position at the marked height inline and level with the back rail/divider and fix the rail to the wall using appropriate screws.

Screws for securing to the wall are not provided.

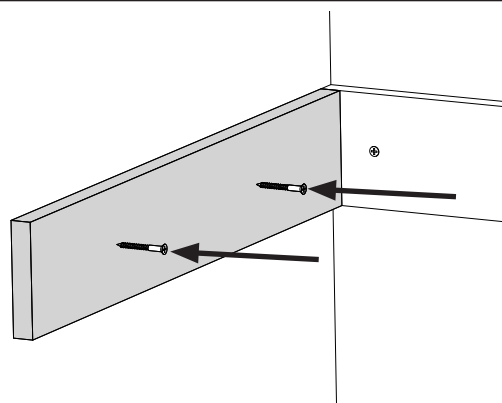

Step 4.

Mark and cut the shelf panel using the opening width measurement. If using a divider panel, ensure one of the shelf panels sits on top of the divider as shown.

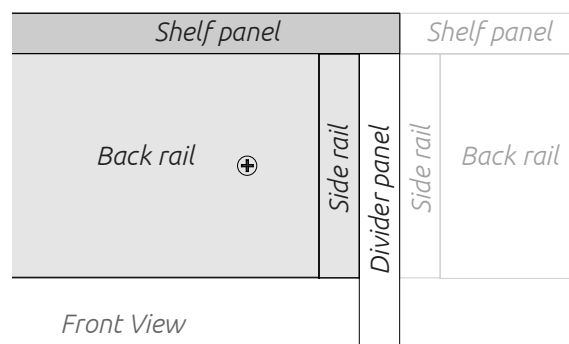




Open Shelf With Hanger Installation Guide

Step 5.

Position the shelf on top of the rails and secure in place using the provided conti blocks.

Equally space the blocks along the back rail(s).




Equally space 1-2 blocks along the side rails depending on the depth of the shelf.

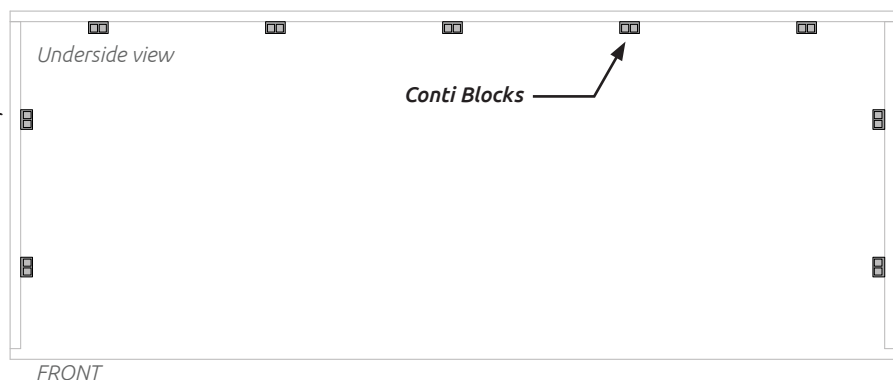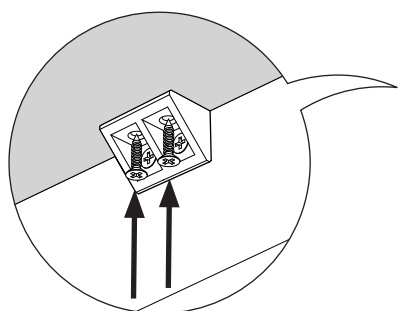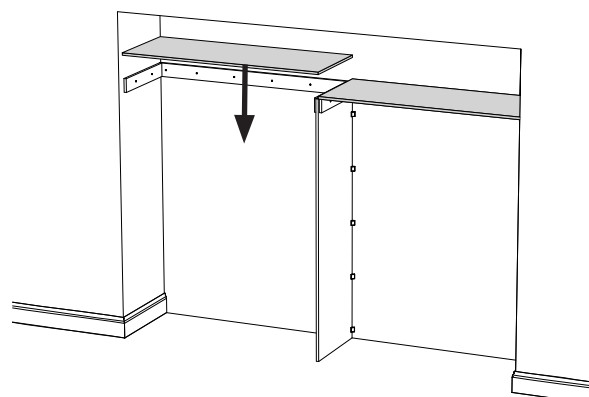

Step 6.


Position the front rail against the side rails and top shelf and secure in place using the provided Conti blocks.

Equally space the blocks 250 - 350mm apart along the front rail(s).

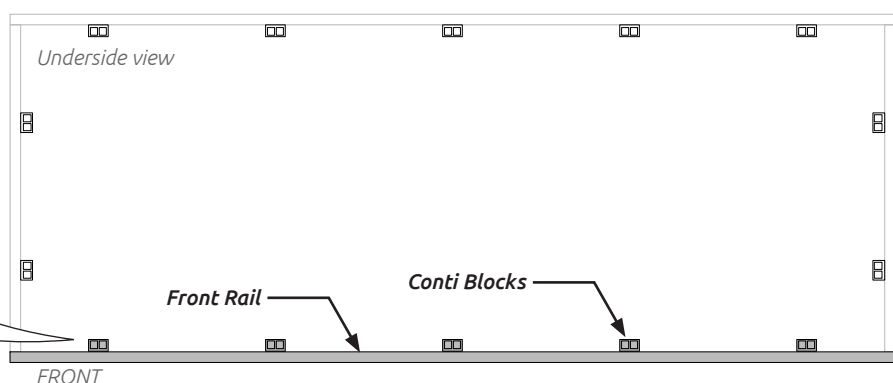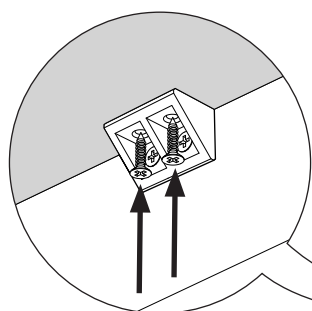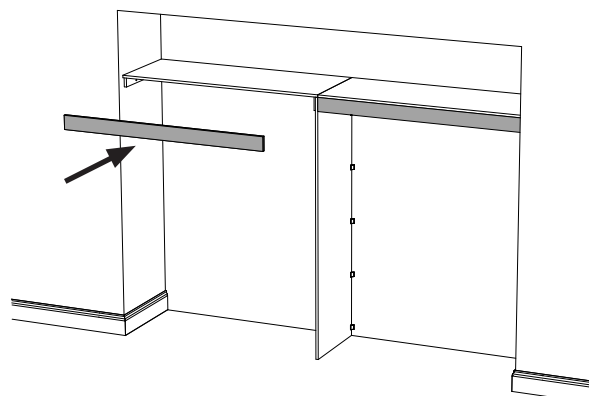

Step 7.

Fully secure the front rail to the side rails using the provided Conti blocks. Position a block in the corner on either side and secure to the front and side rail using the screws provided.

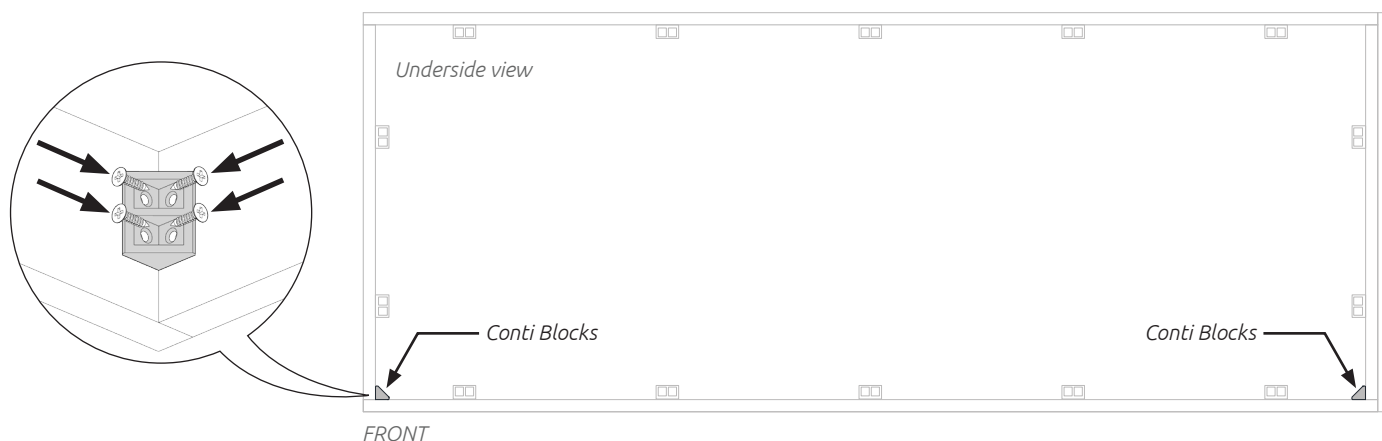


Step 8.

Measure appropriately (if centre support is required include this in the measurement) and attach the hanging rail plates to both side rails using 2 x 15mm screws per plate.

For shallow-depth open shelves, use a clothes hanger to ensure the hanging rail is set forward enough.

Measure between the two plates and cut the hanging rail to size.

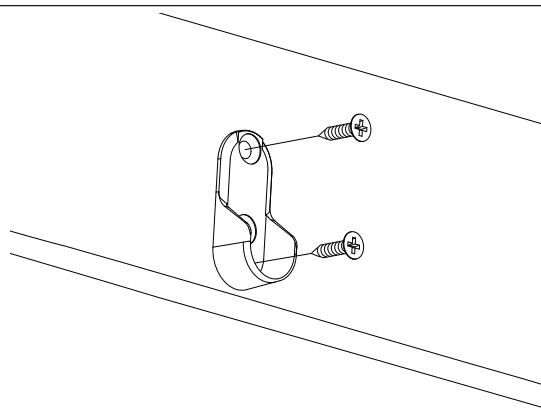

Step 9.

Slide the centre support onto the hanging rail. Position the hanging rail in location on the hanging rail plates. Ensure the centre support is in the middle of the rail and secure the centre support to the shelf using 2 x 15mm screws.

