

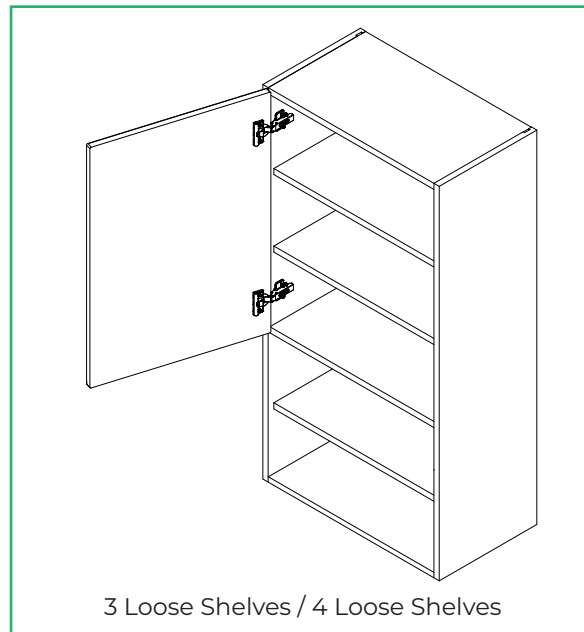


Wall Cabinet

Countertop Hutch (Door, Solid Top) - Fitting Guide

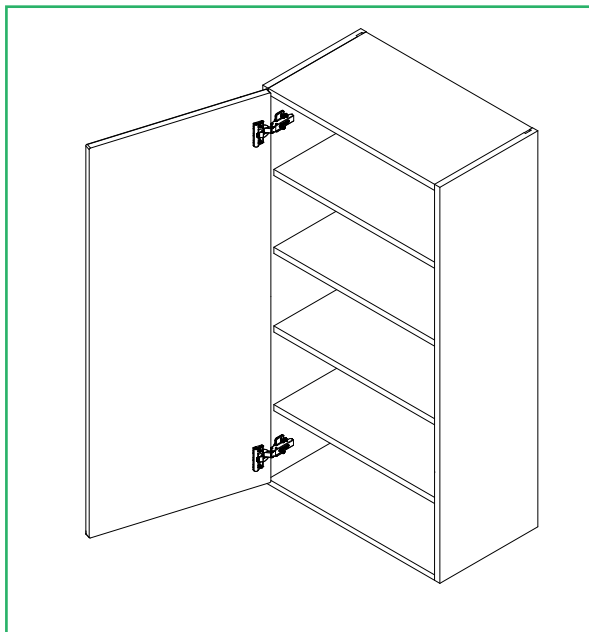


Cabinet Parts



8 x
1 1/4" Screws



18x
Cover Caps

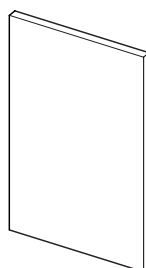

Shelves




Shelf Supports



5x
Door Buffers


Tools Required

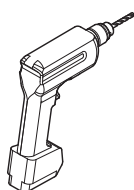


Drill




Stud Finder




Screwdriver

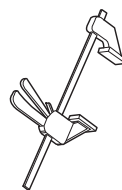

Clamp



Spirit Level

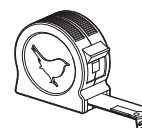

Tape Measure


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

A minimum of two people will be needed to lift the cabinet.

Before lifting the dresser into position, the countertop needs to be in place.

Removing the frontal


Before installing the cabinet, the frontal needs to be removed by pulling the release catch.

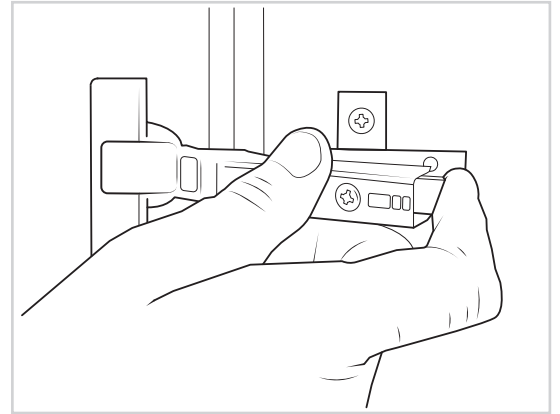

Removing the fittings


All of the fittings and loose shelves need to be removed from the inside of the cabinet, so it is empty.

Keep all of the fittings and shelves on a clean and level surface.

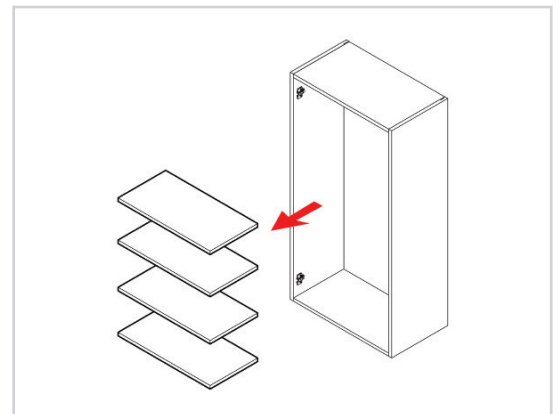

Locating the studs

Using a stud finder, locate the studs where the cabinet will be installed and mark the wall above and below where the cabinet will sit.

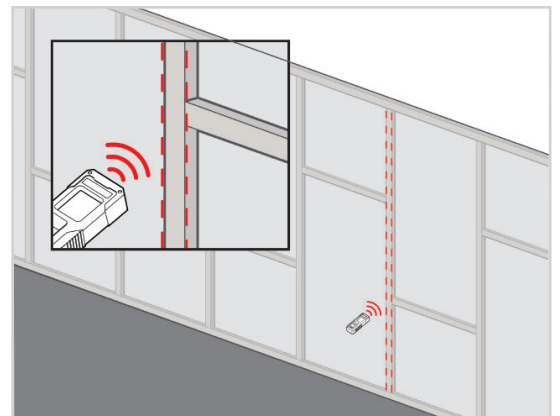


For help on determining the sort of wall you have, please refer to the “Room Preparation Guide.”

Lifting the cabinet into place

Lift the cabinet into place against the wall and align it with the wall markings that will have been drawn during the room preparation stage.

Use a spirit level to ensure the cabinet is level from front to back, left to right, and diagonally.

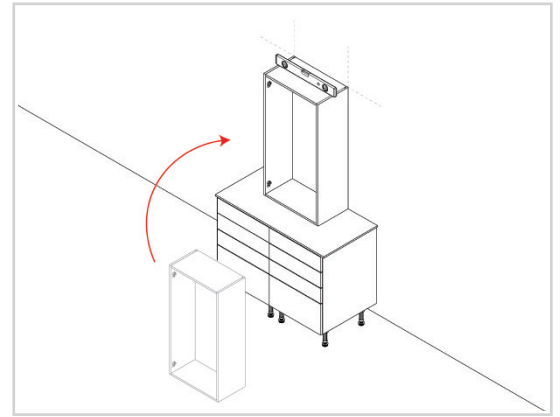


Screws and fixings for attaching the cabinet to the wall are not provided, as these vary depending on the wall material and construction. Check that the appropriate fixings for the wall construction are used.

Securing the cabinet

Secure the cabinet in **2** places along the top rail and in **2** places along the bottom rail, where the studs are located.


Use appropriate fixings.

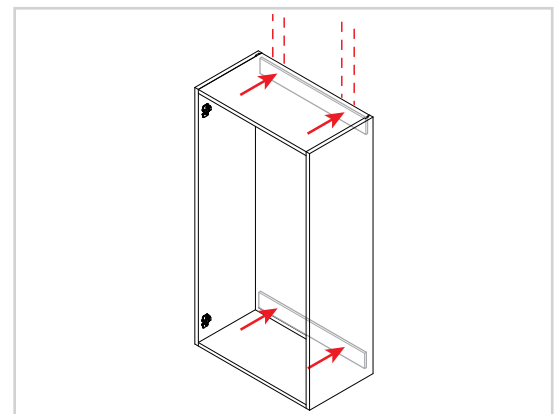

Securing adjacent cabinets

To secure the cabinet, clamp in place and screw through each corner of the inner side of the adjacent cabinet using the **4x1 1/4"** screws provided.


The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

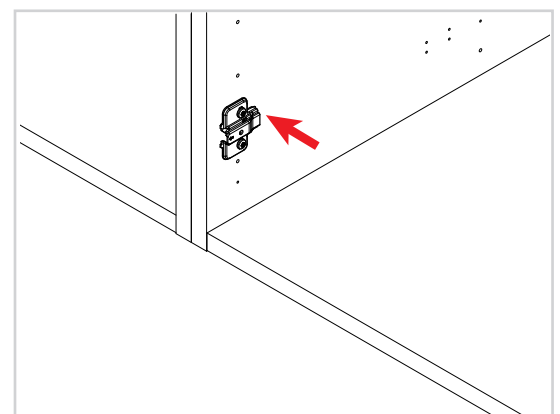

Positioning the shelves


Find where the shelves will be installed. Then insert the shelf pegs into the pre-drilled holes.

The shelves will touch the back of the cabinet when installed. If there is a gap between the back panel and the shelf, this means the shelf has been installed back to front and the shelf needs to be rotated.

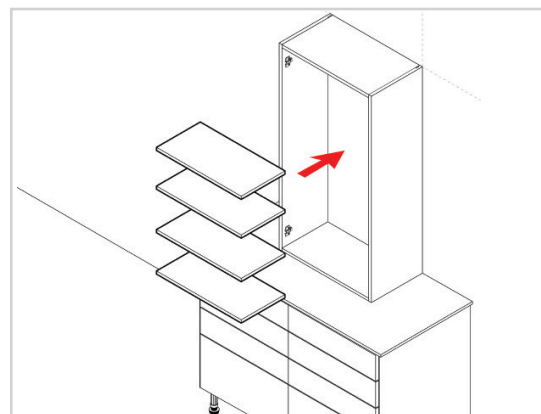


Attaching the frontal

The frontal needs to be re-attached to the cabinet. Position the hinge arm on the hooks on the hinge plate, then push the rear of the hinge arm towards the hinge plate until it clicks.

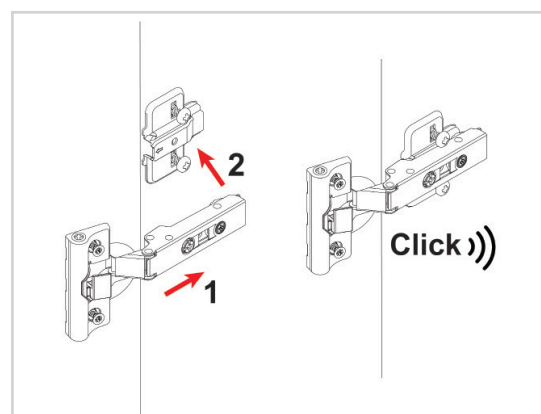


Adding the door buffers

Position the door buffers on the cabinet, as shown in the image.

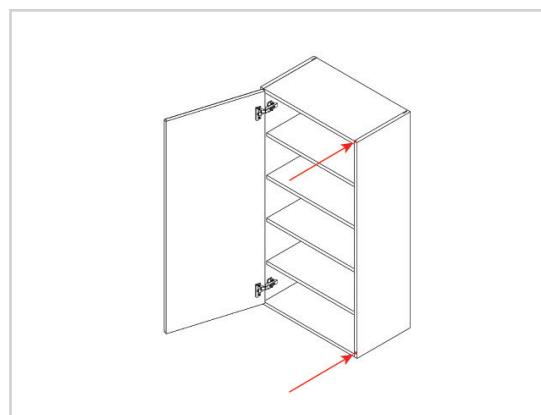

Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

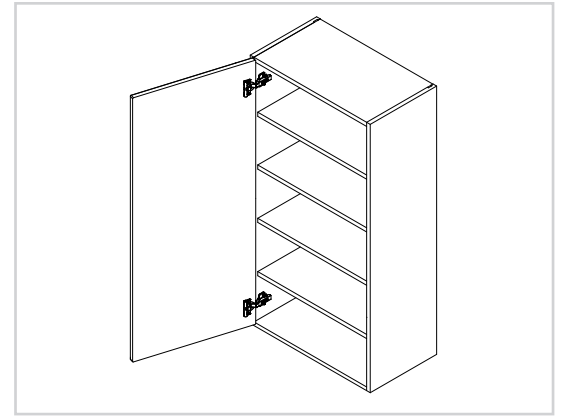

**For door alignment please review the following installation guide:
Door - Door Hinge Adjustment**