



Base Cabinet

Feature Base Top Box (Drawer, Solid Top) - Fitting Guide

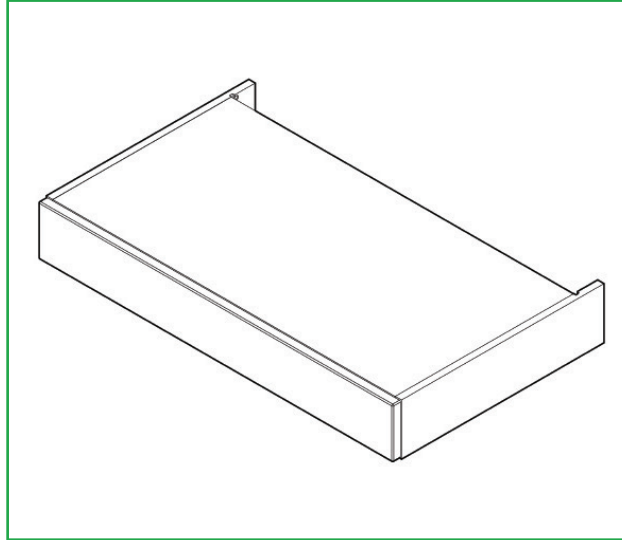

Cabinet Parts

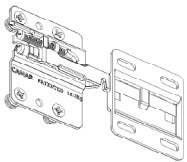

2x
Camar Anti-tip
Wall Plate (RH & LH)




4x 5/8"
screws



12x 1 1/4"
screws



2x
L-Brackets



5x
Door Buffer



24x
Cover Caps

Tools Required



Drill



Mallet



Screwdriver



Clamp



Spirit Level



Tape Measure


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

A minimum of two people will be needed to lift the cabinet.

Removing the drawer, fixtures and fittings


Remove all fixtures and fittings from the drawer and keep on a clean and level surface and grouped by product.

Before installing the cabinet, remove the drawer. This is done by pulling the drawer all the way out, and then pulling the front upwards.

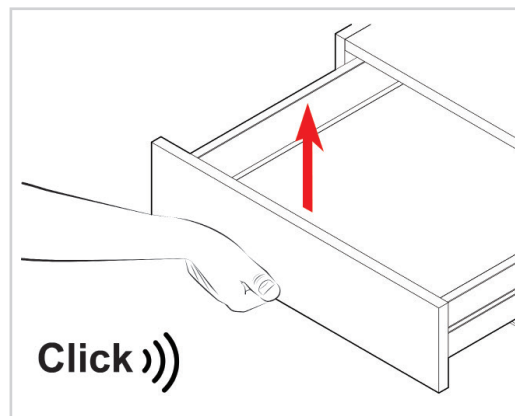

Installing the L-brackets

Secure the L-brackets internally in both bottom corners of the cabinet at the rear using **2x5/8"** screws per bracket.

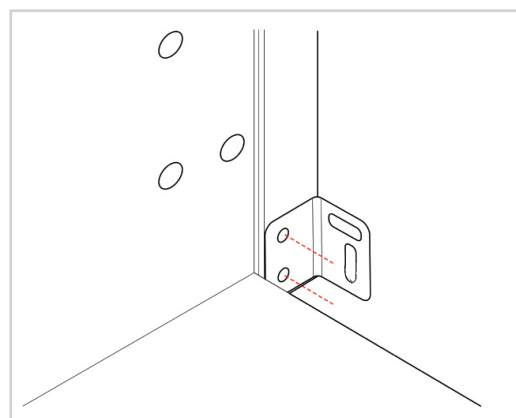


Installing the wall hanging bracket

Place the cabinet on its side to allow better access to insert and secure the hanging bracket.

Please note that the brackets are not identical, ensure that the correct bracket is placed on the appropriate side of the cabinet.

Insert the hanging bracket into the pre-drilled holes using a mallet, then secure using the screws provided with the bracket.

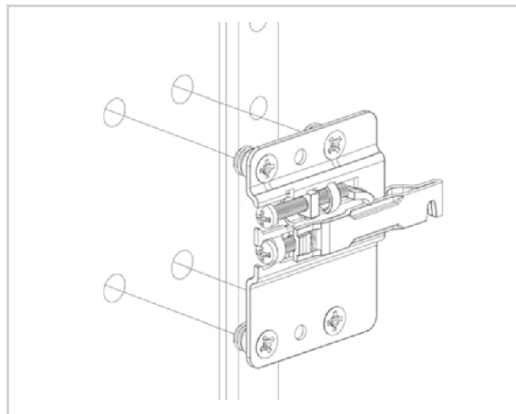


Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

Finding the fixing point for the wall brackets

Draw a line on the wall **4 1/8"** below the top line of the cabinet (already marked). This is where the bottom of each bracket will sit.

Draw a vertical line **3/4"** inside either side of the pre marked wall cabinet positions. The outer edge of each bracket will sit against this line.

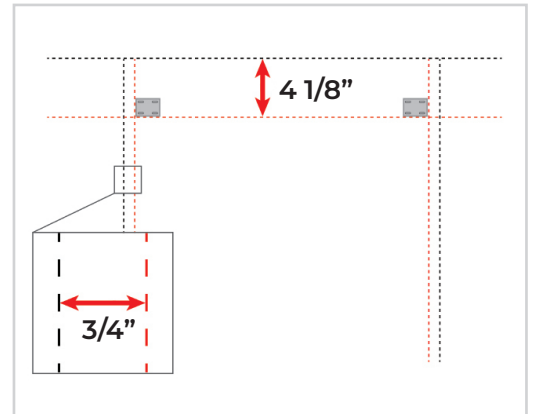

For help on determining the sort of wall you have, please refer to the "Room Preparation Guide."



No screws or wall plugs are provided for attaching the cabinet to the wall.
This is due to variations in wall construction.

Attaching the wall hanging bracket to the wall

Position the **2x** hanging brackets as shown and mark the holes onto the wall.

Remove the hanging bracket, then drill and plug the locations of the markings using appropriate wall fixings.


Attach the hanging bracket onto the wall by screwing through the holes on the hanging bracket.

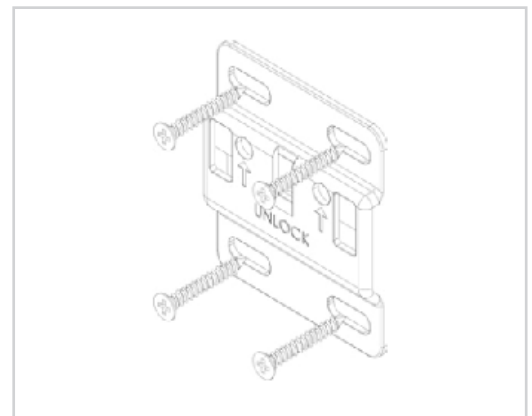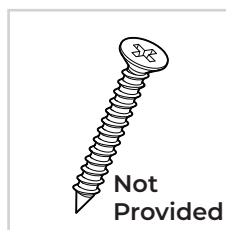

Lifting the cabinet into place

Lift the cabinet against the wall slightly higher than its finished height. Insert the hook into the wall hanging brackets and then lower the cabinet down, as illustrated.

Before releasing the cabinet, gently tug it to check it is securely supported by the hanging brackets.

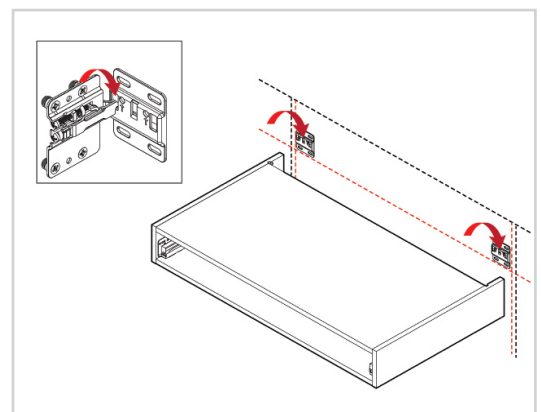


Adjusting the wall brackets

Using the points below, adjust the cabinet to suit.

Point 1 – Turn this screw to adjust the height of the cabinet.


Point 2 – Turn the screw to adjust the depth of the cabinet.

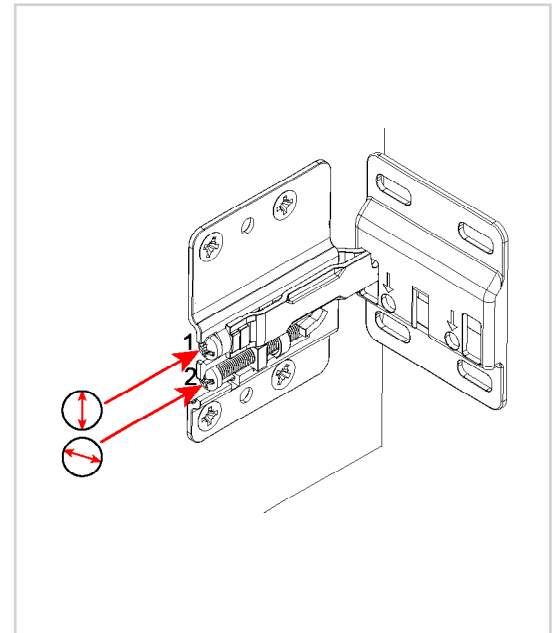

No screws or wall plugs are provided for attaching the cabinet to the wall.
This is due to variations in wall construction.

Securing the cabinet to the wall



Secure the cabinet to the wall by screwing through the L-bracket into the wall.

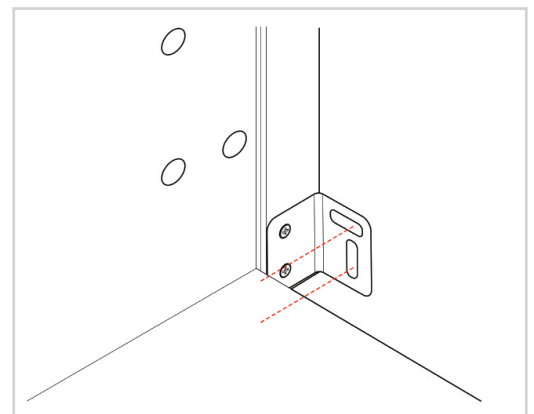

Securing adjacent cabinets

To secure the cabinet, clamp in place and screw through each corner of the inner side of the adjacent cabinet using the **4x1 1/4"** screws provided.


The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

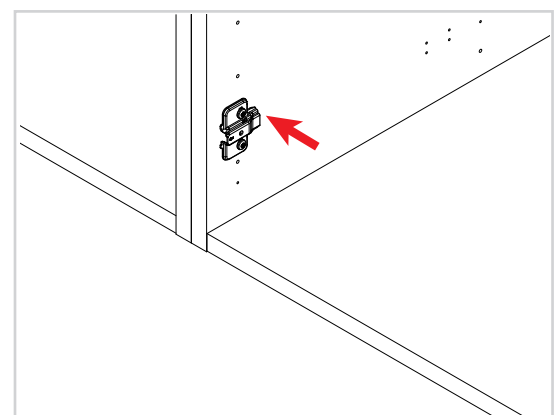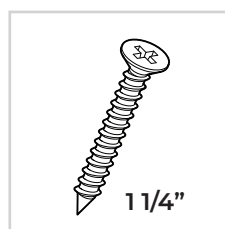

Inserting the drawer


Slide the drawer onto the runners. Make sure the runner mechanism and the drawer side grooves line up.

Push the drawer back into the cabinet. Once it has been positioned on the runners and pushed in you should hear a click.

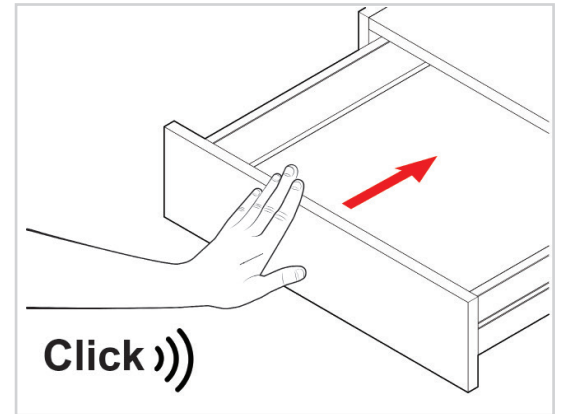


Adding the drawer buffers

Add **1x** door buffer to each side of the drawer along the cabinet edge, as shown in the diagram.

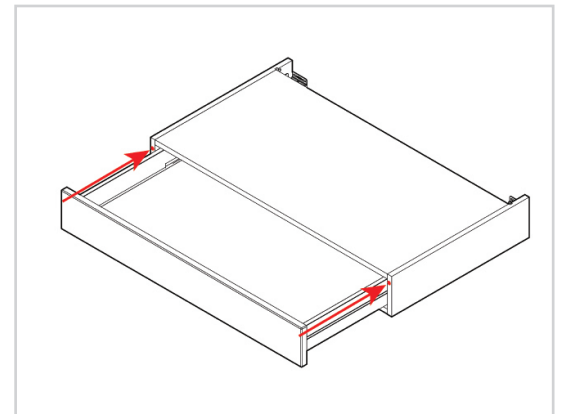

Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

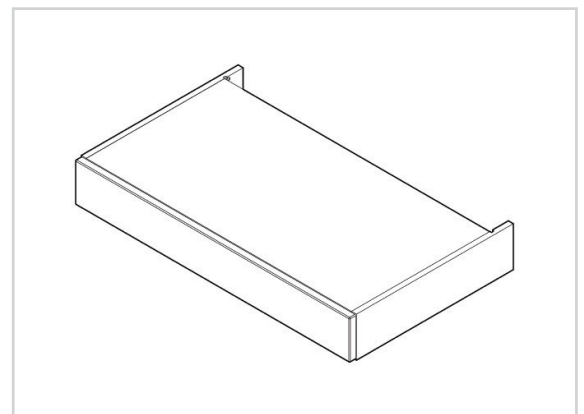

For drawer alignment please review the following installation guide:
Drawer - Drawer Hinge Adjustment