


PRO-SERIES

**wren**  
KITCHENS

# Microwave Base Cabinet


Appliance Base (Drawer, Open Top, 5 Legs) - Fitting Guide

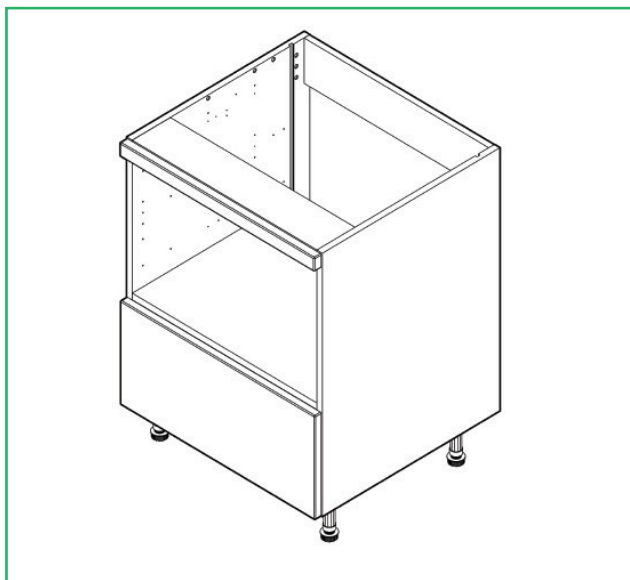

## Cabinet Parts




32x  
5/8"  
Screws




6x  
1 1/4"  
Screws



18x  
Cover Caps



4x  
Legs



2x  
Toe Kick  
Clips



5x  
Door  
Buffers



2x  
L-Brackets



2x  
Small  
L-Brackets



Drawer  
Cover Caps

## Tools Required



Drill




Stud Finder



Mallet



Screwdriver

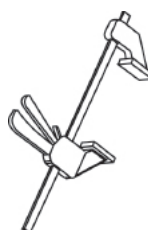

Clamp



Spirit Level



Tape Measure


Remember to take care when unpacking. Please keep your workspace clean, clear, and tidy when working. This will help keep all items safe from damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

A minimum of two people will be needed to lift the cabinet.

### Removing the drawers, fixtures, and fittings

Remove all fixtures and fittings from the drawer and keep them on a clean, level surface.

Also, remove all drawers from the cabinet by pulling the drawer all the way out of the cabinet and lifting the drawer upwards.

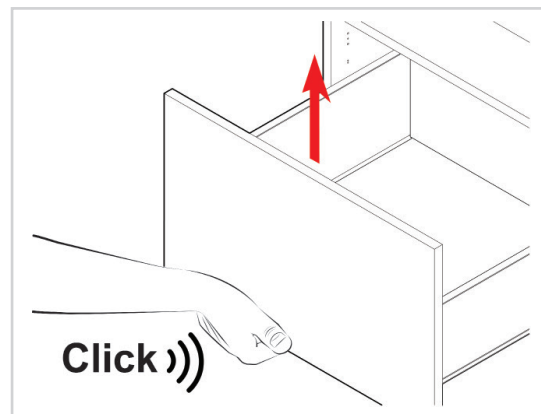


### Securing the legs

Secure each of the cabinet legs to the cabinet using **2x 5/8"** screws per leg.

Make sure the legs are positioned as seen in the image to support the end panel.


Set the leg height to **4 9/16"**. The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

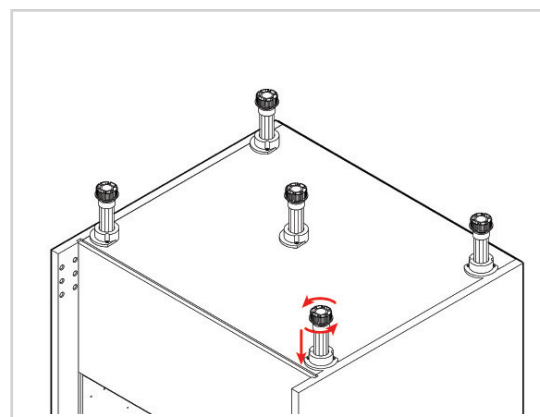

### Notching out the side panel (when required)


In order to allow for any horizontal pipework running behind the cabinet, some cabinets will require the back of the cabinet side to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

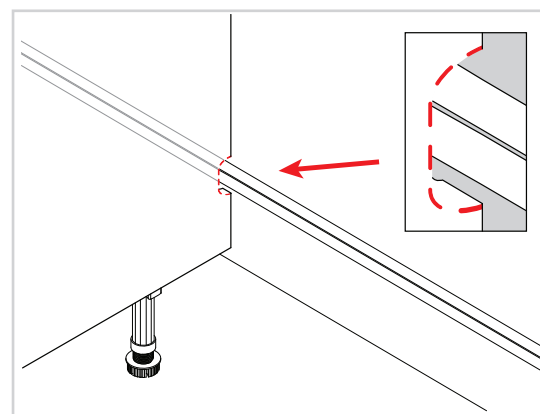

## Locating the stud


Using a stud finder, locate the studs where the cabinet will be installed and mark the wall where the cabinet will sit.

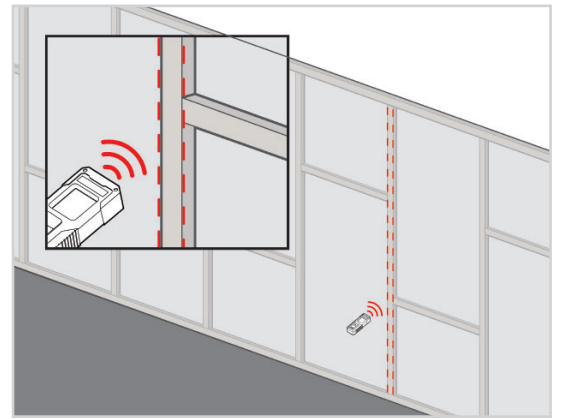

For help on determining the sort of wall you have, please refer to the “Room Preparation Guide.”

## Attaching the small L brackets to the cabinet


Attach the small L brackets to the cabinet in the locations shown underneath the front top rail. Use **1x 5/8"** screw per bracket.

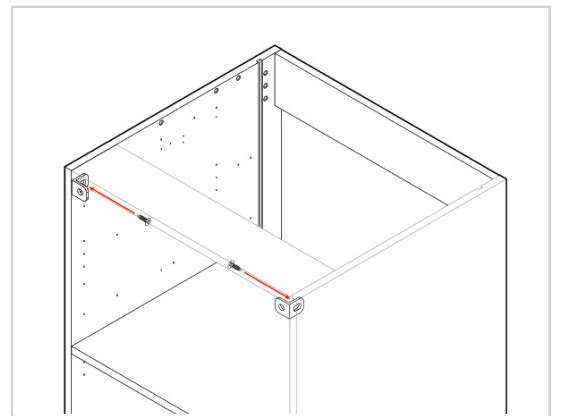

## Positioning the filler


Clamp the filler in position on the front of the cabinet as shown.

Make sure the bevelled edge of the filler is facing upwards, and that the top of the filler is flush with the top of the cabinet.

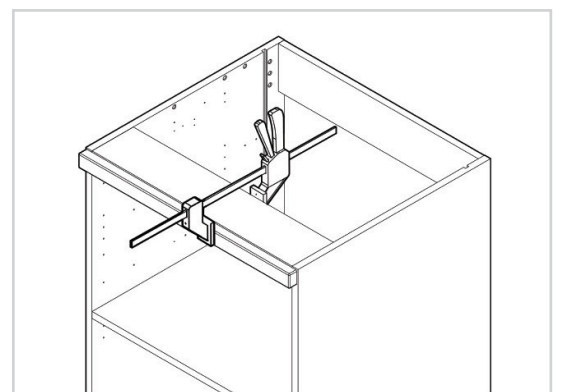

## Attaching the filler

Attach the filler to the front of the cabinet using **2x 5/8"** screws through the small L brackets and into the back of the filler as shown.

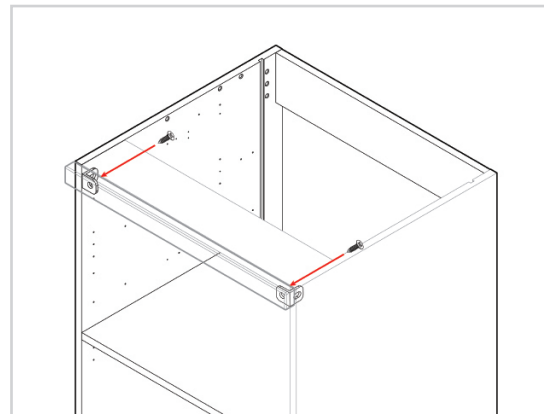


## Lifting the cabinet into place

When lifting the cabinet into place, do **not** tilt, as this can damage the legs.

Position the cabinet against the wall.

Use a spirit level to ensure the cabinet is level from front to back, left to right, and diagonally.

Adjust the legs if required.

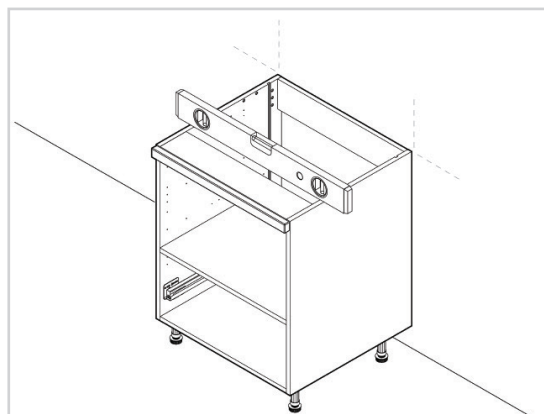

**Screws and fixings for attaching the cabinet to the wall are not provided, as these vary depending on the wall material and construction. Check that the appropriate fixings for the wall construction are used.**


## Drilling the cabinet and wall

Drill 2 holes through both the rear top rail and the wall at the marked locations.

For guidance on the appropriate wall fixing/screws for each wall type, please consult the **"Room Preparation Guide."**


Once complete, lift and move the cabinet away from the wall, then drill a pilot hole at the marked positions.

Lift and reposition the cabinet, ensuring it is level and in line with the wall markings.

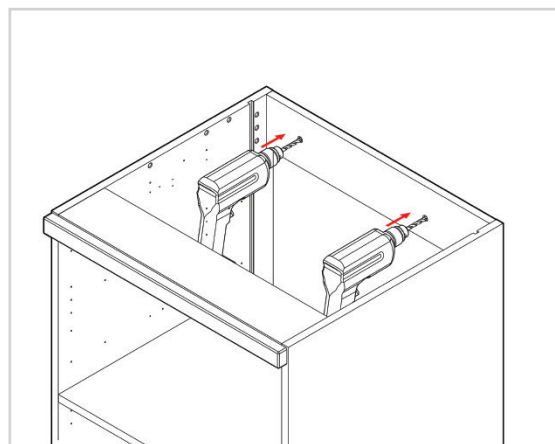


## Attaching the cabinet to the wall

Insert the screws (not provided) into the drilled holes and secure the cabinet to the wall.

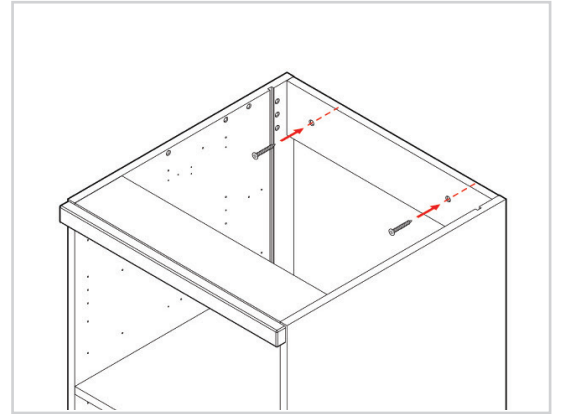

## Securing adjacent cabinets


Any adjacent cabinets need to be secured using the **1 1/4"** screws provided. Screw to the rear of both hinge plates and to the rear of the cabinet at the top and bottom.

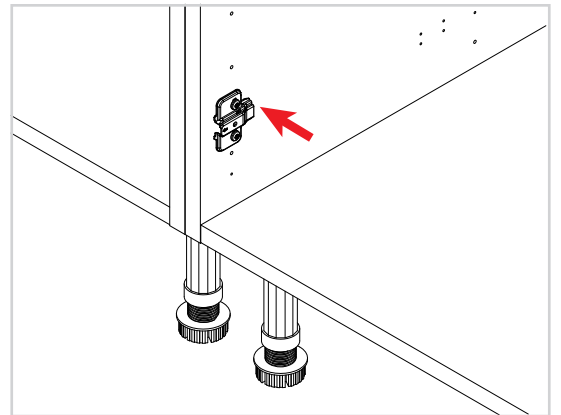

## Inserting the drawer


Slide the drawer onto the runner, making sure the runner mechanism and the drawer side grooves line up.

Once positioned on the runners, push the drawer back into the cabinet. You will hear a click when it is inserted correctly.

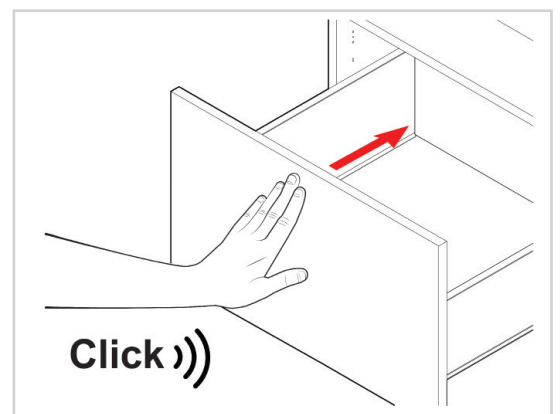


## Adding the drawer buffers

Add **1x** door buffer to each side of the drawer along the cabinet edge, as shown in the image.

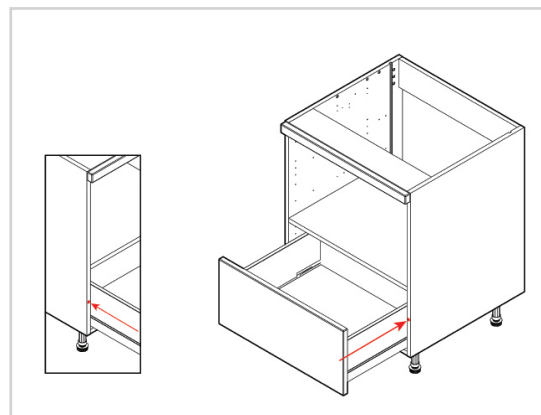

## Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

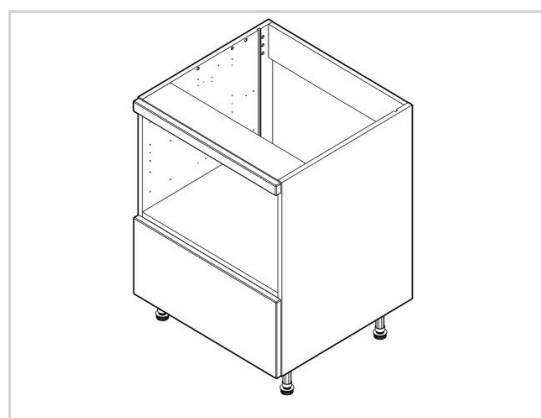

To install the microwave, please refer to the manufacturer's guides.

Store the toe kick clips and the remaining 5/8" screws.  
These will be used later when attaching the toe kick.

Store the L-brackets.  
These will be used later when installing the countertop (laminated or timber).

For drawer alignment please review the following installation guide:  
**Drawer- Drawer Hinge Adjustment**