




# Base Cabinet

## Base Top Box (Drawer, Solid Top) - Fitting Guide

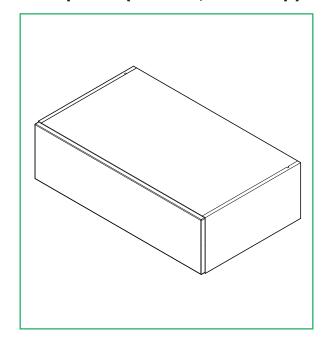

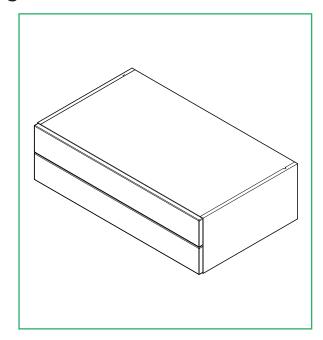

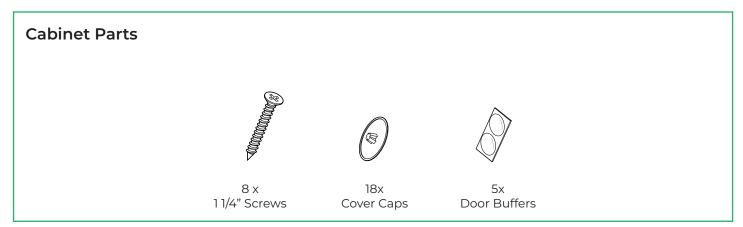




Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

### A minimum of two people will be needed to lift the cabinet.

# Removing the drawers, fixtures and fittings

Remove all fixtures and fittings from the cabinet and keep on a clean and level surface and grouped by product.


Before installing the cabinet, remove the drawers. This is done by pulling each drawer all the way out, and then pulling the front upwards.

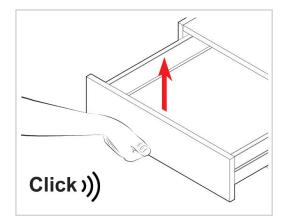

Before drilling into the wall you MUST check for any hidden services or pipework within the walls.

#### Locating the studs


Using a stud finder, locate the studs where the cabinet will be installed and mark the wall above and below where the cabinet will sit.

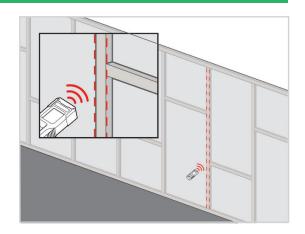

For help on determining the sort of wall you have, please refer to the "Room Preparation Guide."

#### Checking if the cabinet is level

Before installing the cabinet, hold the cabinet against the wall and check that it is level in multiple places using a spirit level.

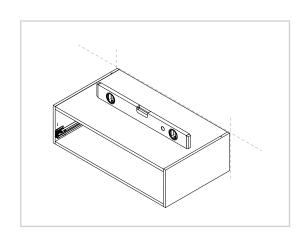


Screws and fixings for attaching the cabinet to the wall are not provided, as these vary depending on the wall material and construction. Check that the appropriate fixings for the wall construction are used.

#### Securing the cabinet

Secure the cabinet in 2 places along the top rail and in 2 places along the bottom rail, where the study are located.

Use appropriate fixings.



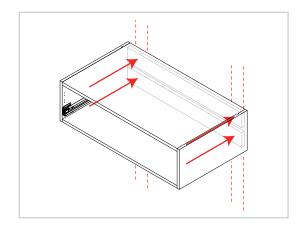


### Securing adjacent cabinets

To secure the cabinet, clamp in place and screw through each corner of the inner side of the adjacent cabinet using the **4x1 1/14"** screws provided.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

If there are no adjacent units in place, the cabinet can be secured by screwing through the top into the countertop or cabinet above.




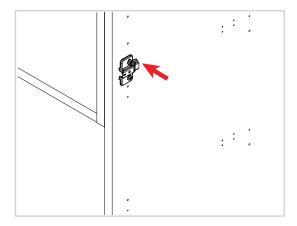

## Inserting the drawers


Slide the drawer onto the runners. Make sure the runner mechanism and the drawer side grooves line up.

Push the drawer back into the cabinet. Once it has been positioned on the runners and pushed in you should hear a click.

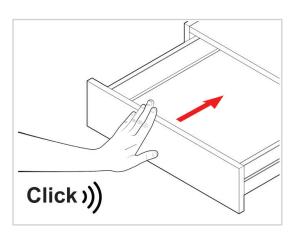


## Adding the drawer buffers

Add **1x** door buffer to each side of the drawer along the cabinet edge, as shown in the diagram.

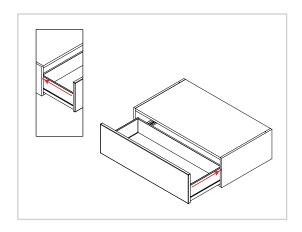

## Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

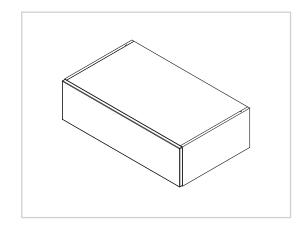

For drawer alignment please review the following installation guide: **Drawer** - Drawer Hinge Adjustment

