


WALL UNIT

600, Tall Adjustable Corner Assembly Guide

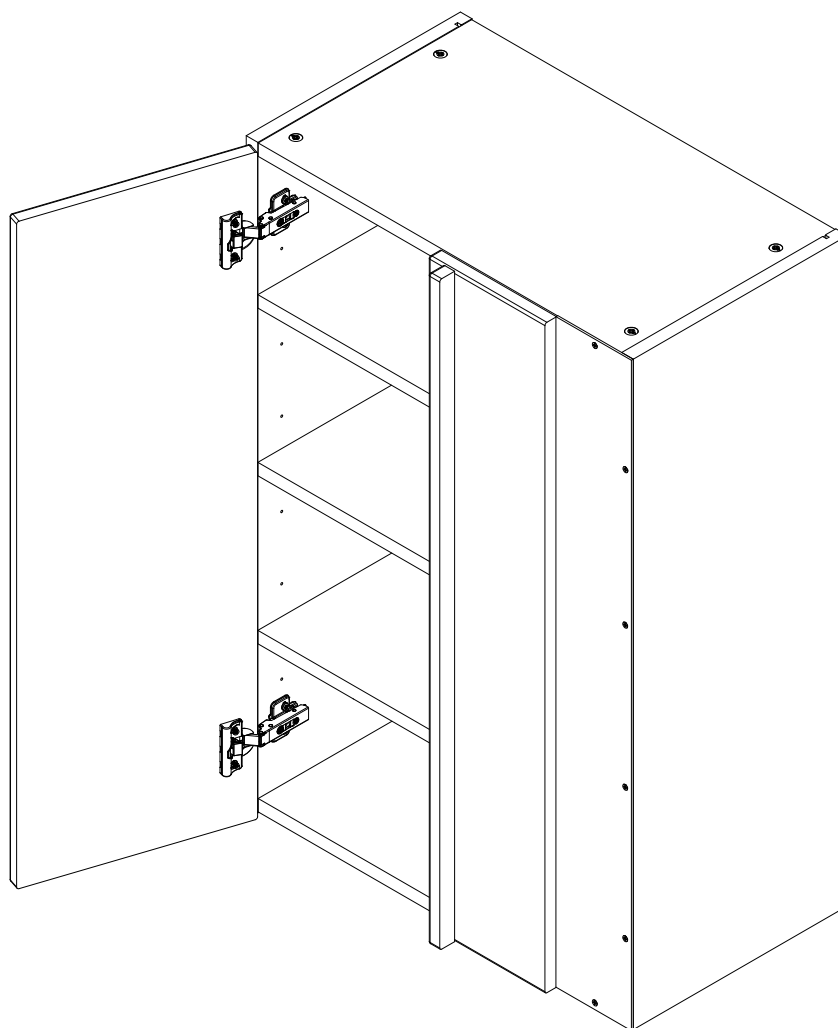

600 Tall Adjustable Corner

WALL UNIT




600, Tall Adjustable Corner Assembly Guide



BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.


THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

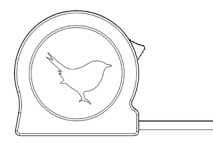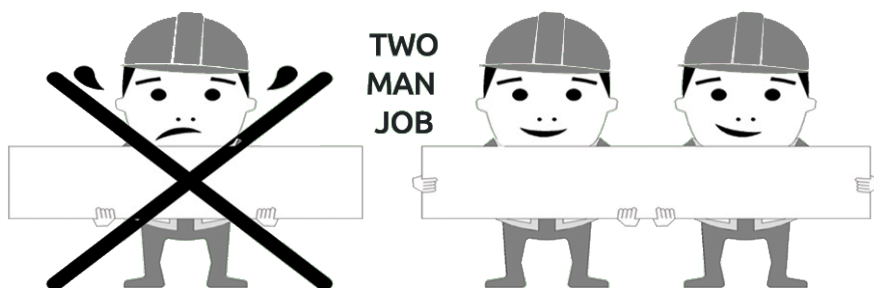

NOT to be used with
CAM LOCK

WALL UNIT


600, Tall Adjustable Corner Assembly Guide

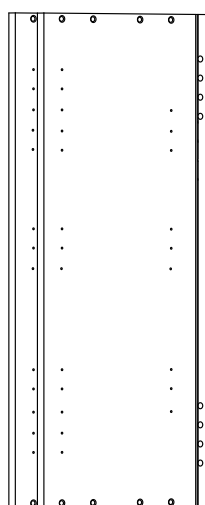

Panel A
x2 End Panel



Panel B
x1 Back Panel

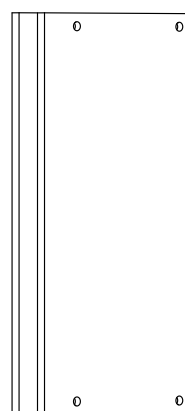


Panel C
x2 Fixed Shelf




Shelf
x3 Loose Shelf



Frontal
x1 Front Panel
(Packed Separately)




Blank Panel
x1 Blanking Panel




Panel Y
x1 Corner Post Panel

WALL UNIT


600, Tall Adjustable Corner Assembly Guide




(F) x8
Wooden Dowel




(L) x21
15mm Screw




(S) x4
20mm Screw




(K) x4
30mm Screw



(G) x8
Cam Dowel (Expanding)




(H) x8
Cam Lock




L Bracket SML
x2




(M) x4
Cover Sticker

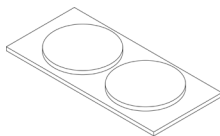


(N) x1
Door Buffer




(T) x10
Back Panel Support Clip




(Z) x12
Shelf Peg Metal

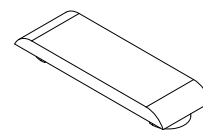


Hanging Bracket Cover Cap
x 2

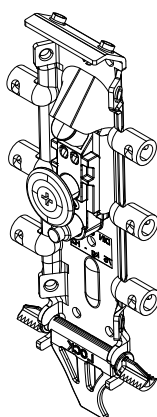


Hanging Bracket
x 2 Inc Screws

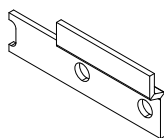


Hanging Bracket Plate
x 2

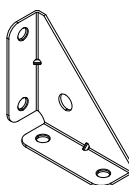

Corner Gusset
x 2

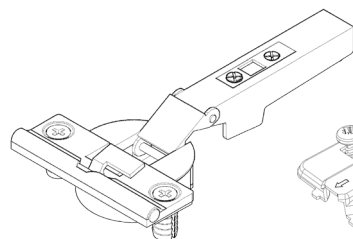

Hinge
Inc Screws & Cover Plate

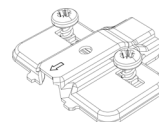



Hinge Mounting Plate
Inc Screws

WALL UNIT

600, Tall Adjustable Corner Assembly Guide

Step 1.

Seat dowels (**F**) into holes in both end panels (**A**) as shown.

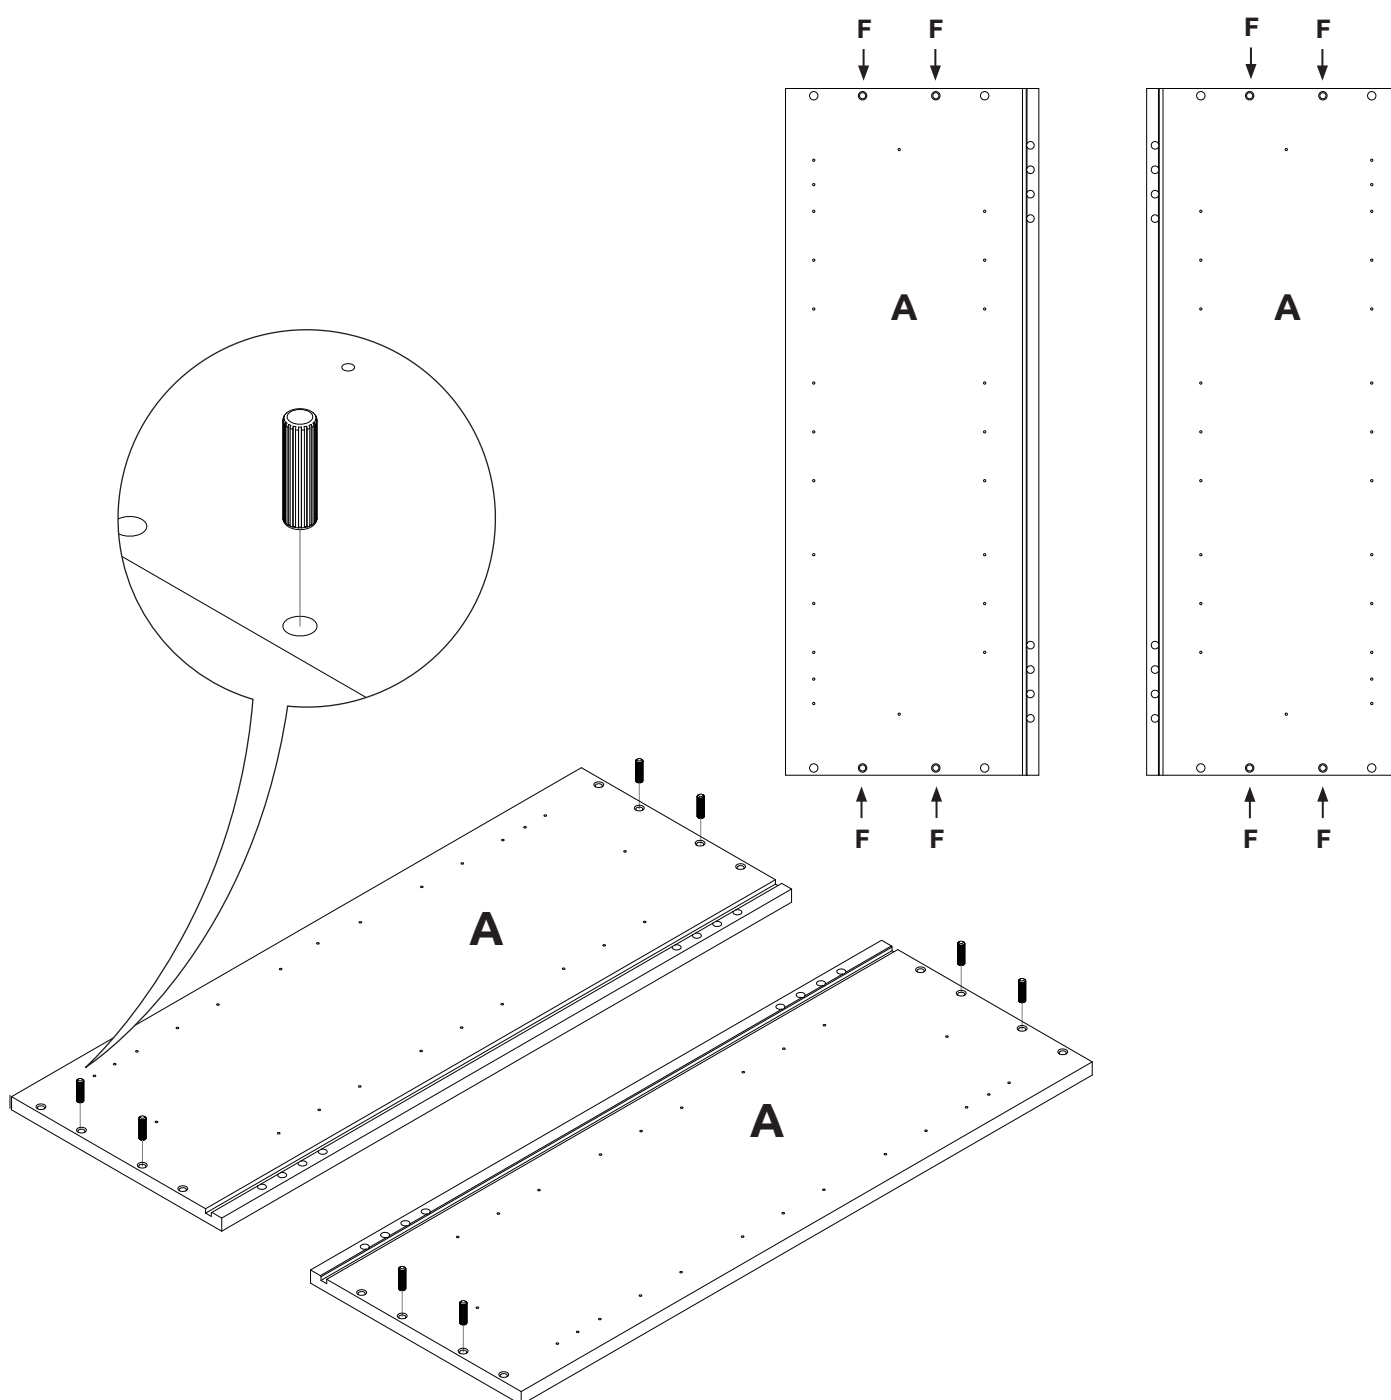
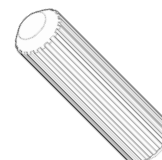


WALL UNIT

600, Tall Adjustable Corner Assembly Guide

Step 2.

Seat expanding cam dowels **(G)** into holes in both end panels **(A)** as shown.

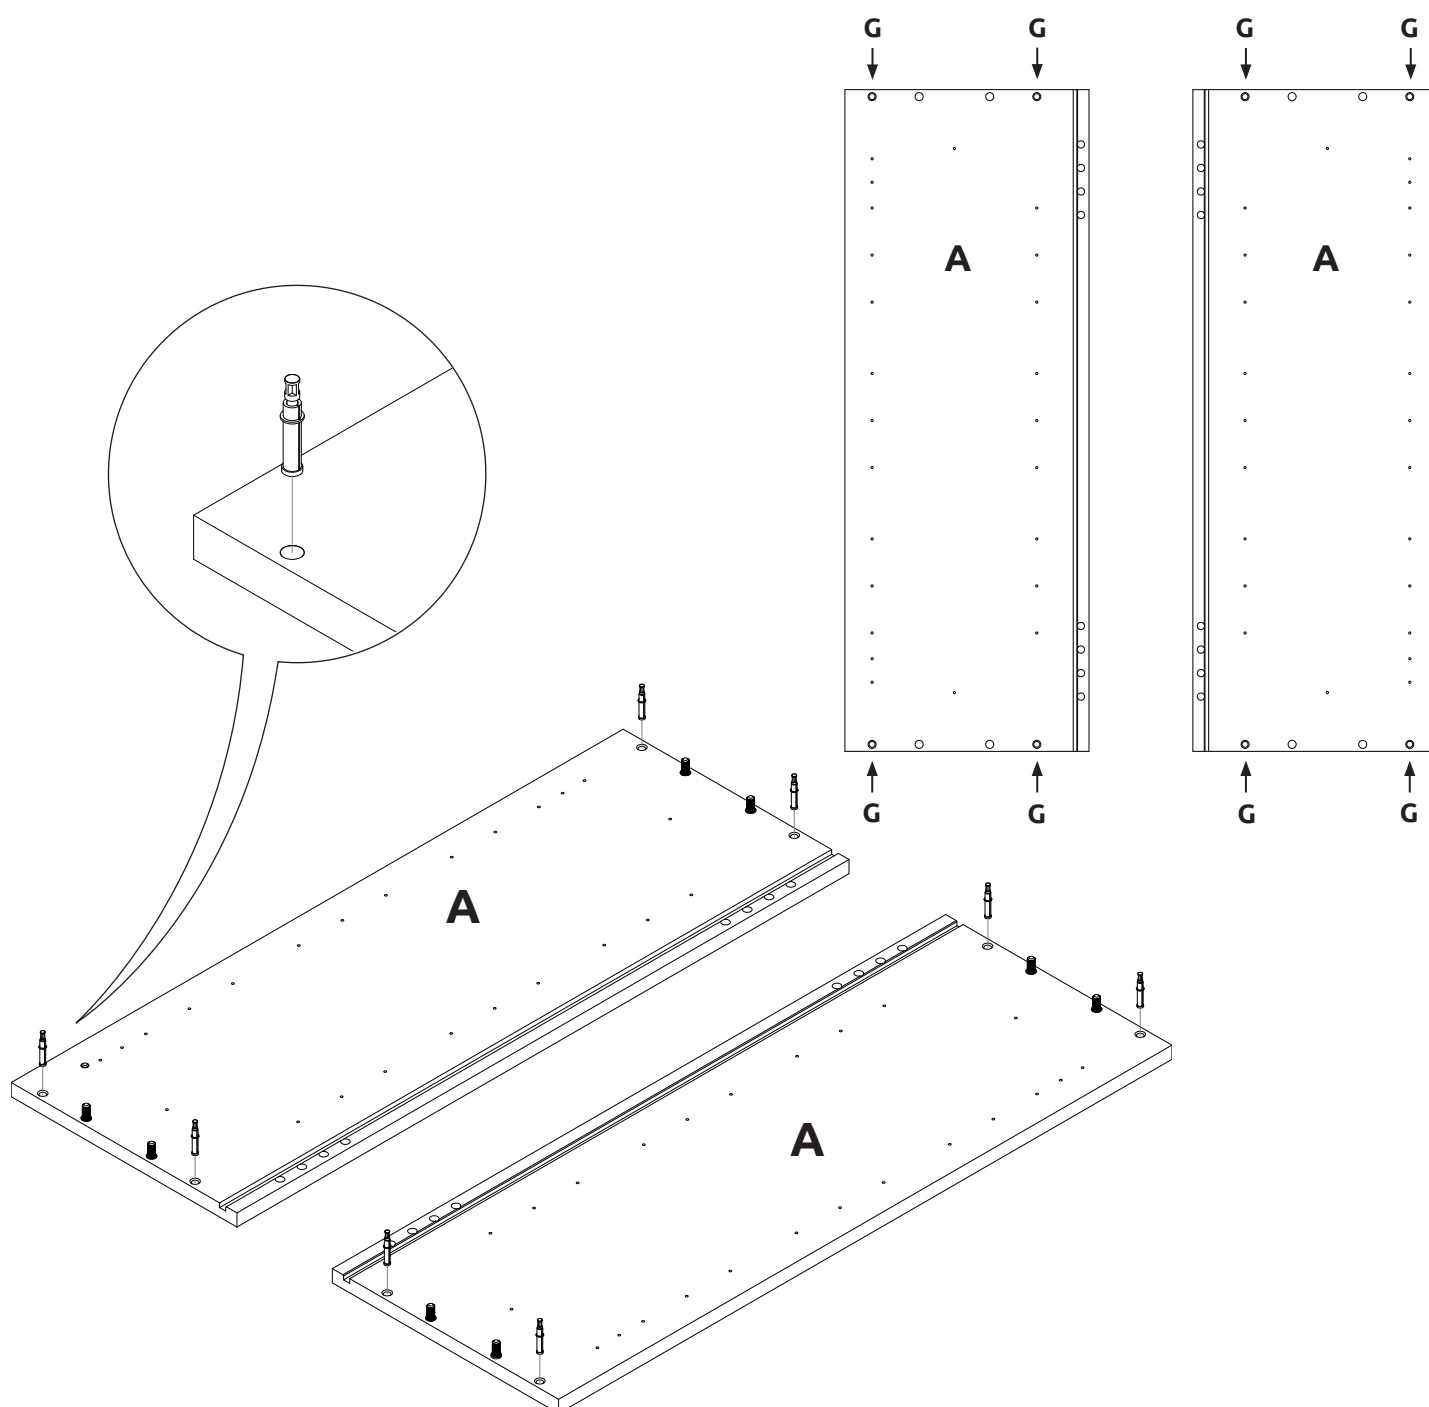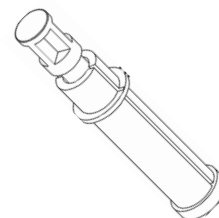

WALL UNIT


600, Tall Adjustable Corner Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

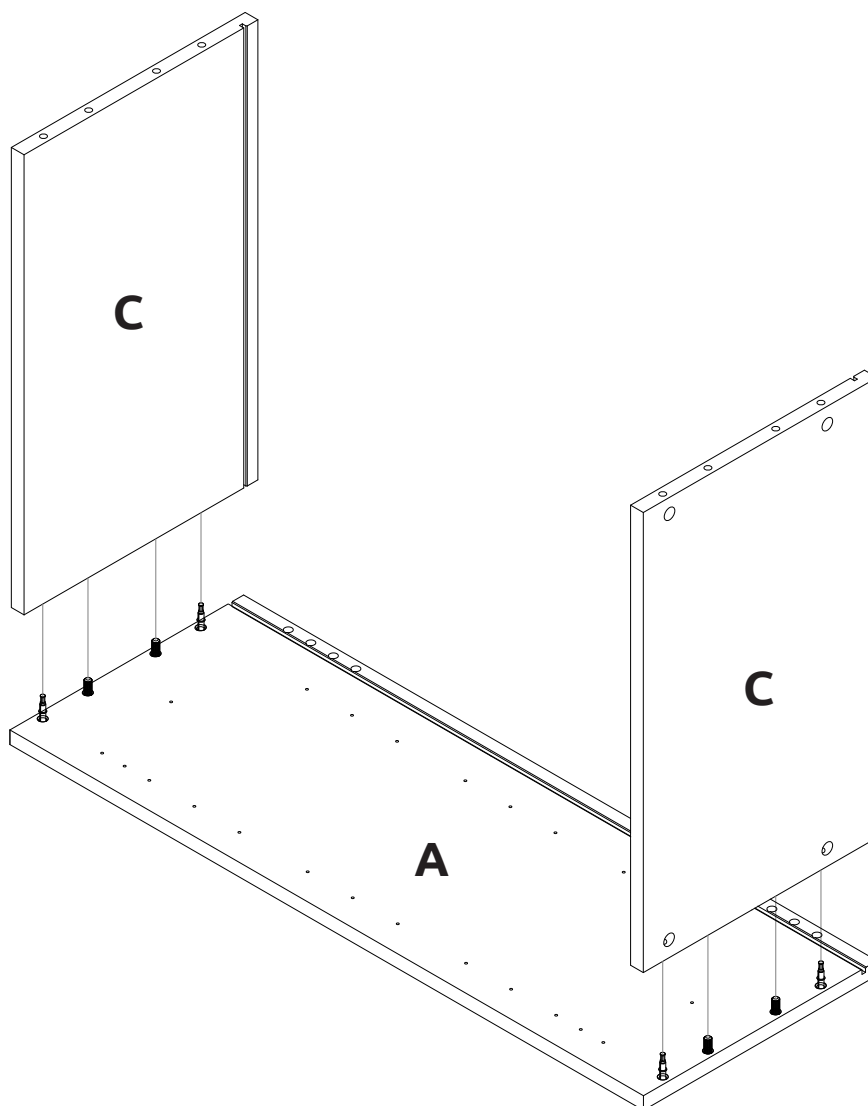


WALL UNIT

600, Tall Adjustable Corner Assembly Guide

Step 4.

Slide back panel **(B)** into grooves of panels **(C)** and end panel **(A)**.

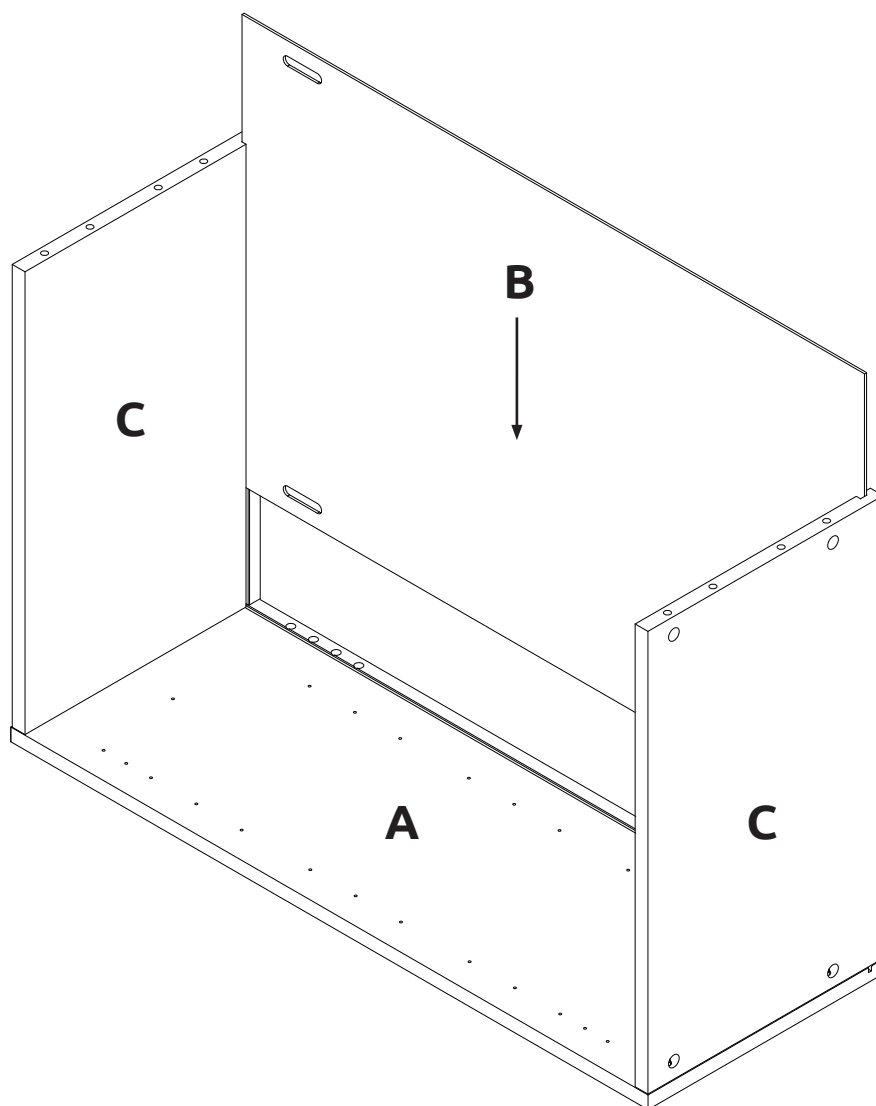


WALL UNIT

600, Tall Adjustable Corner Assembly Guide



Step 5.

Attach end panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.

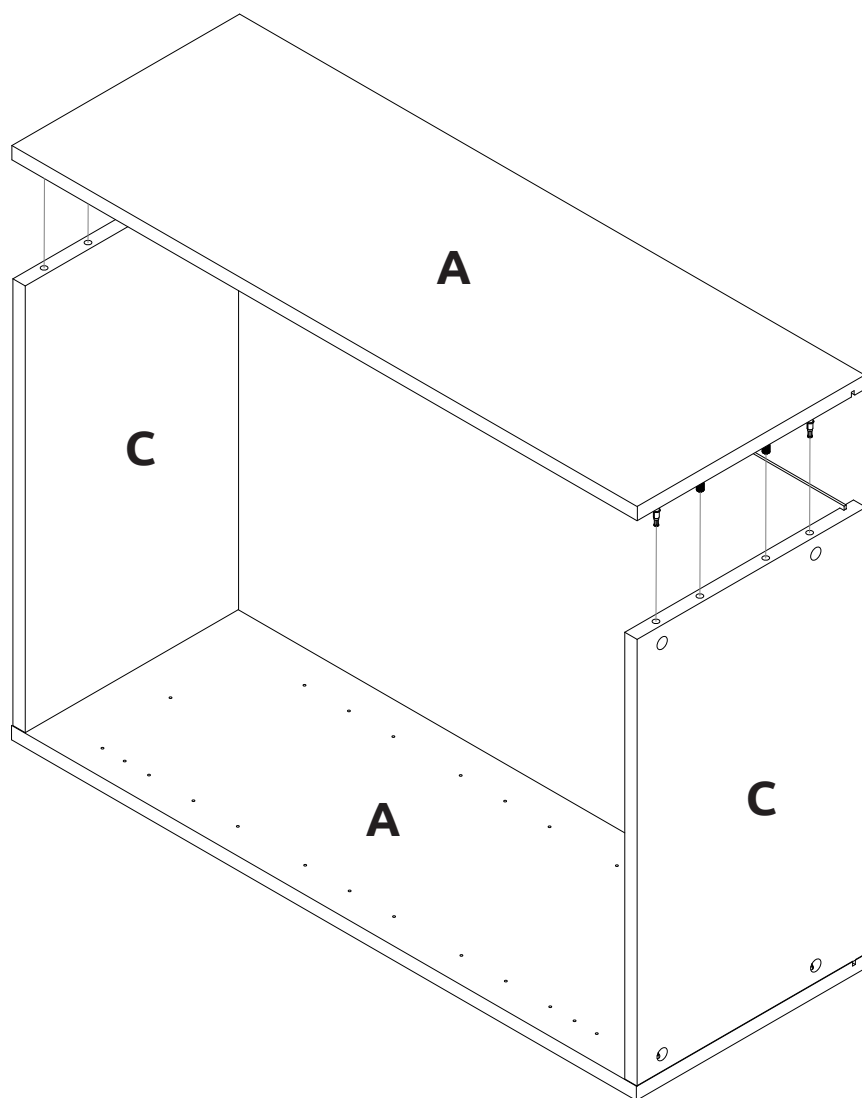

WALL UNIT

600, Tall Adjustable Corner Assembly Guide

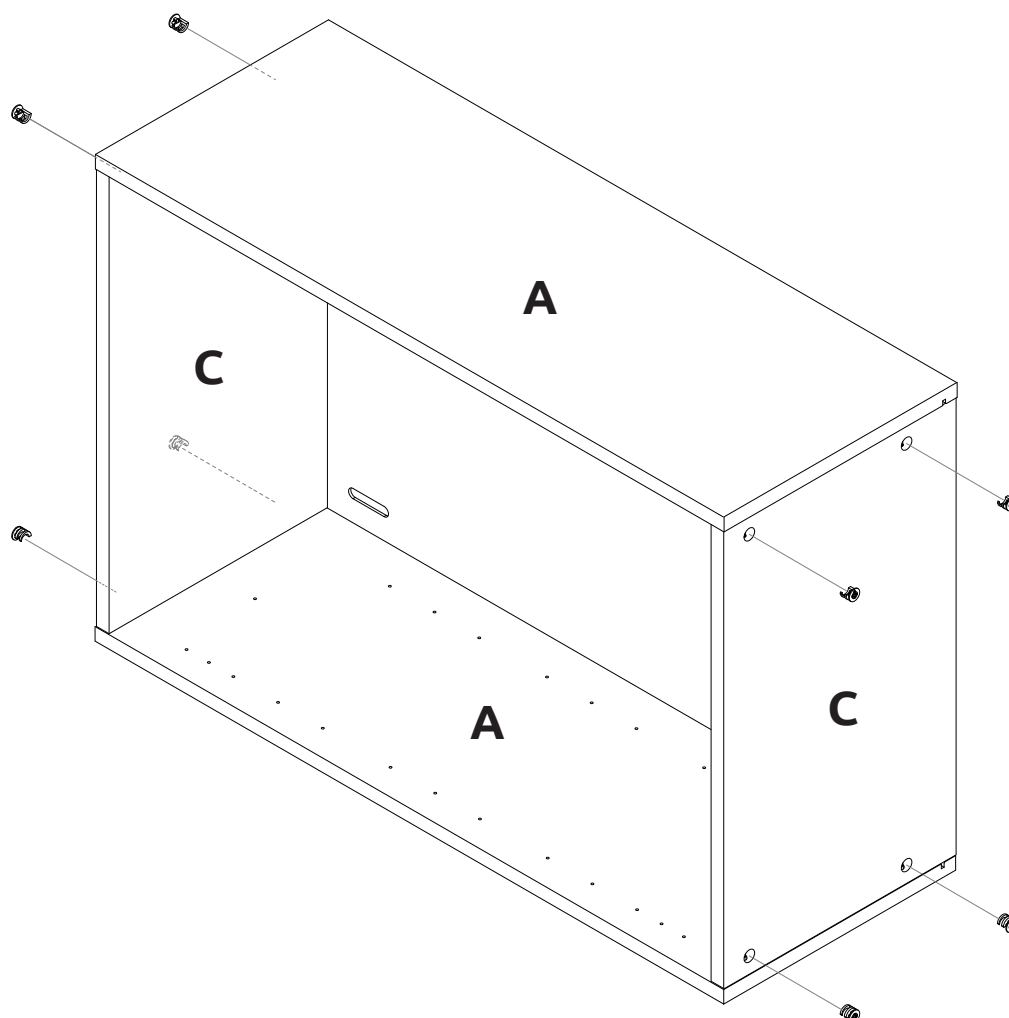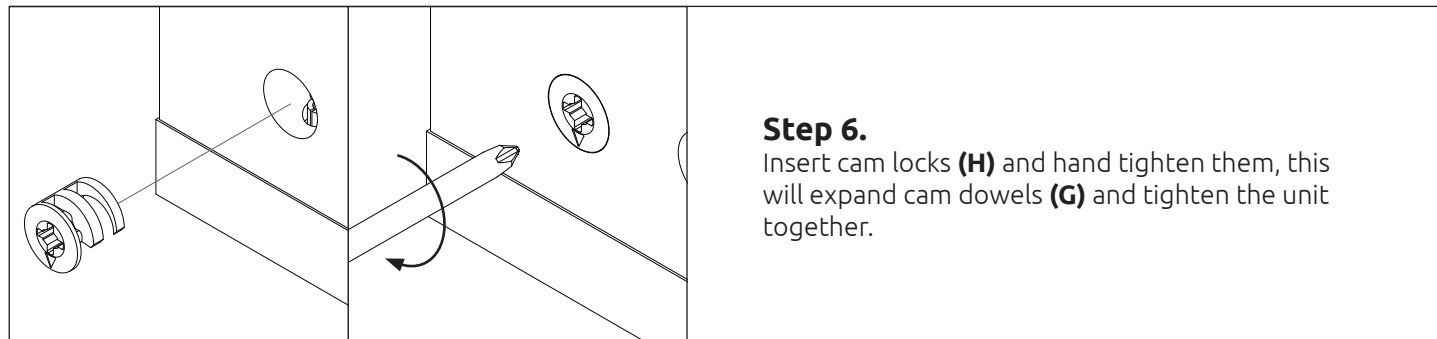


Do **not** use power tools with cam lock **(H)**

WALL UNIT

600, Tall Adjustable Corner Assembly Guide



Step 7.

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)** & **(C)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screws.

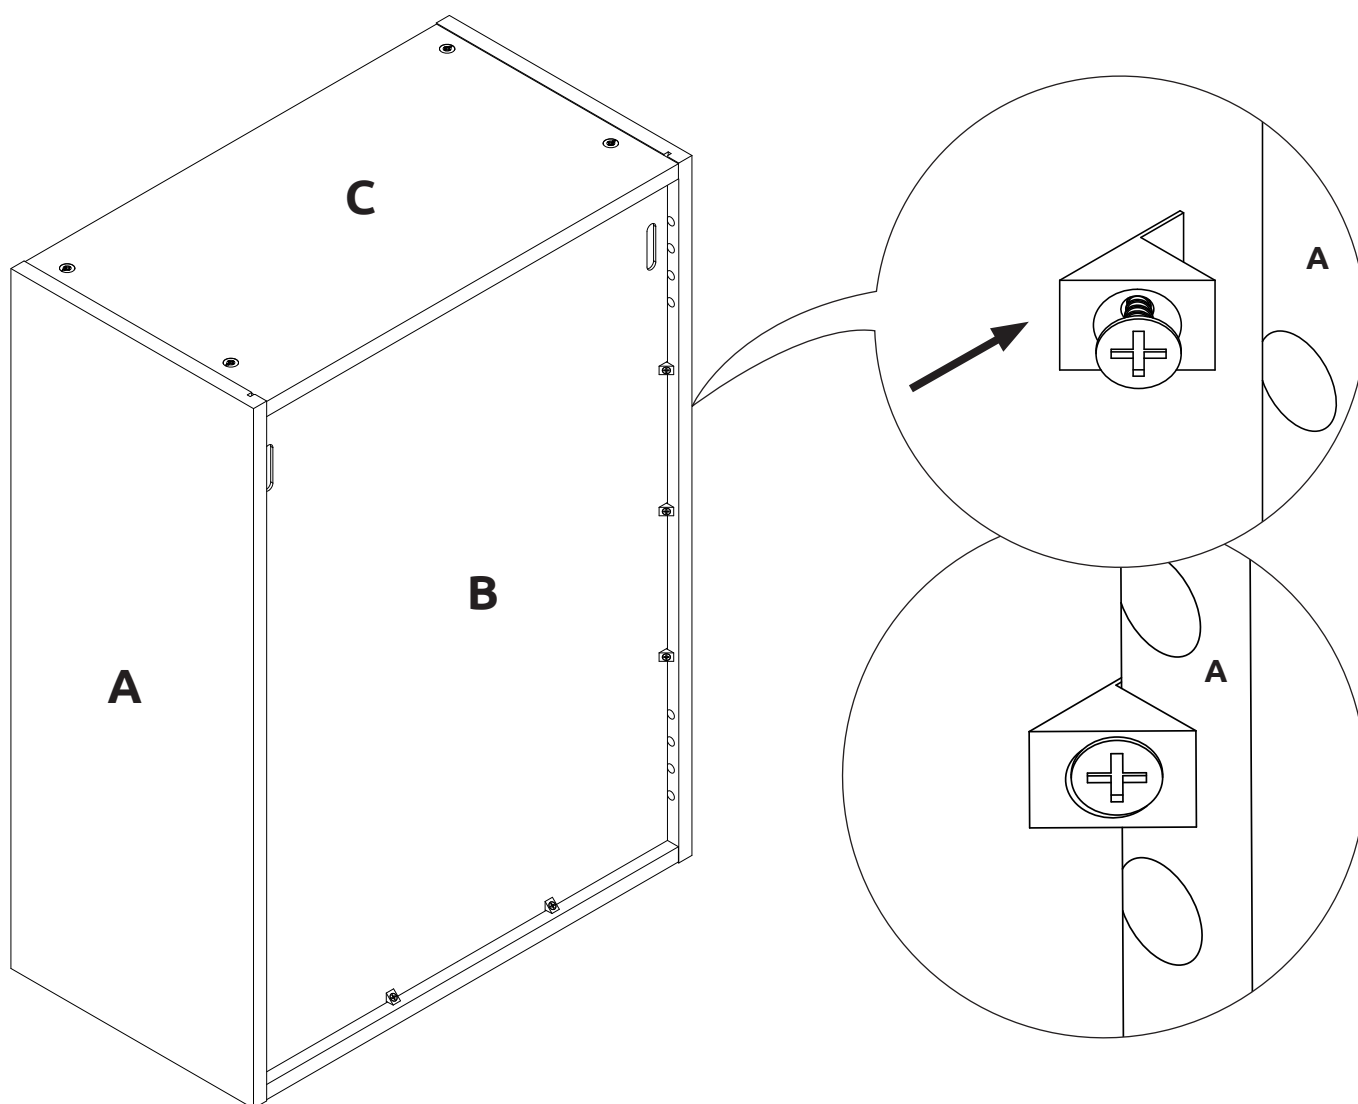

WALL UNIT

600, Tall Adjustable Corner Assembly Guide

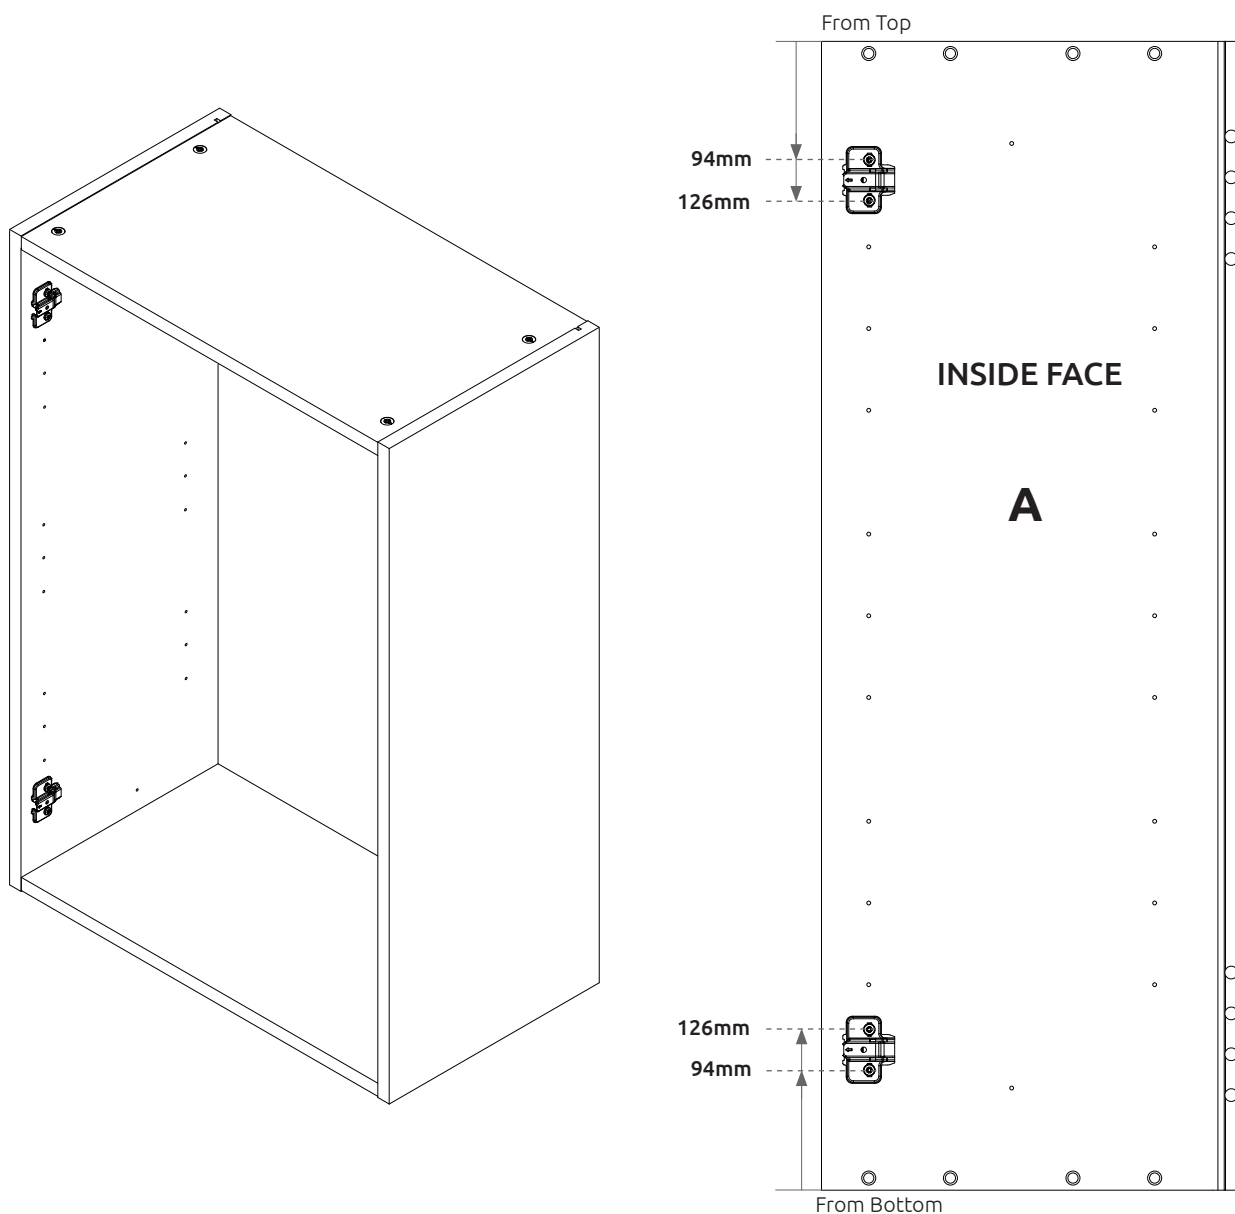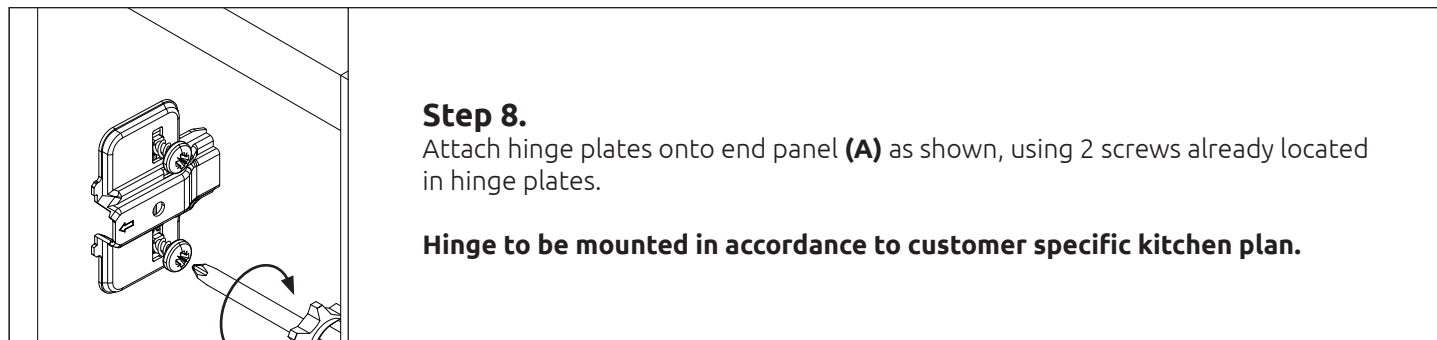

WALL UNIT

600, Tall Adjustable Corner Assembly Guide



Step 9.

Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

A. Insert hanging bracket into pre-drilled holes.


B. Rotate locking lever 180 degrees.

C. Secure with provided 2 x 20mm screws (**S**) per bracket.

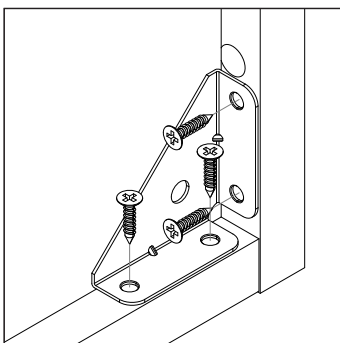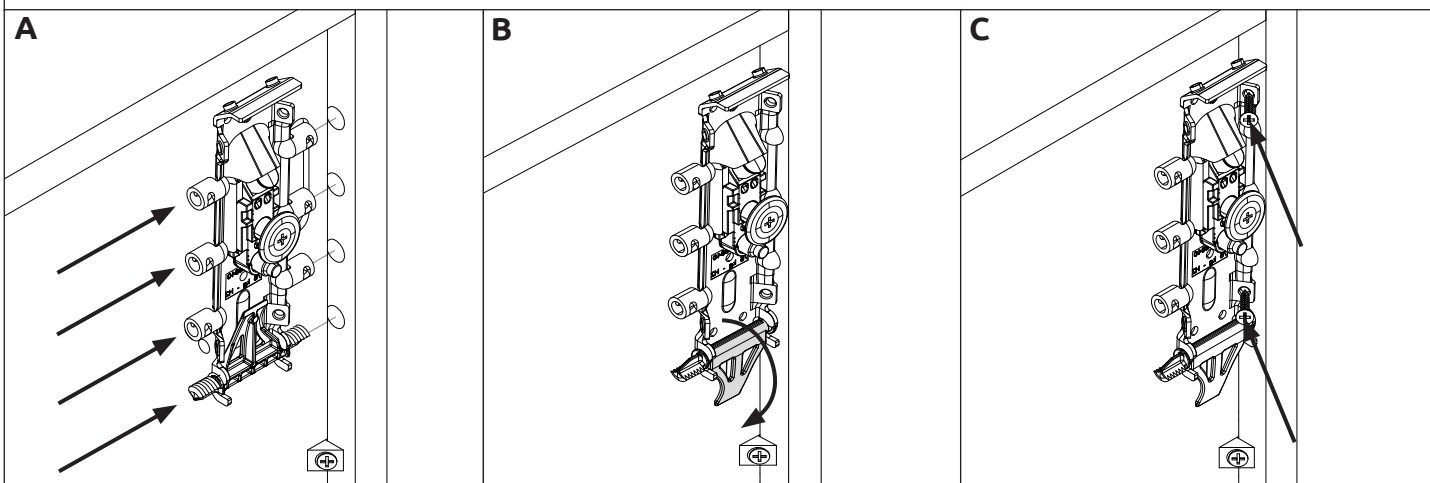

Step 10.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

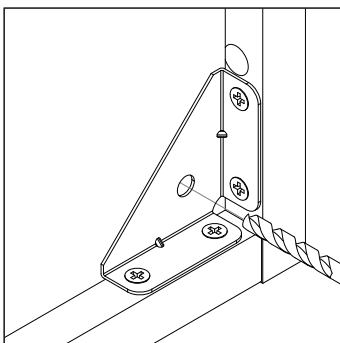

Step 11.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

WALL UNIT


600, Tall Adjustable Corner Assembly Guide



Care to be taken. Hanging procedure is necessary for a safe installation.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

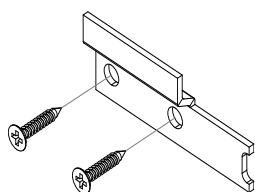


Step 12.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.





View from behind of unit




Step 13.

Hang the unit using the large screw head on the wall hanging brackets to hook onto the wall hanging plates.

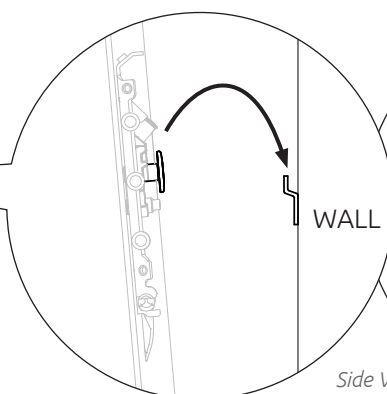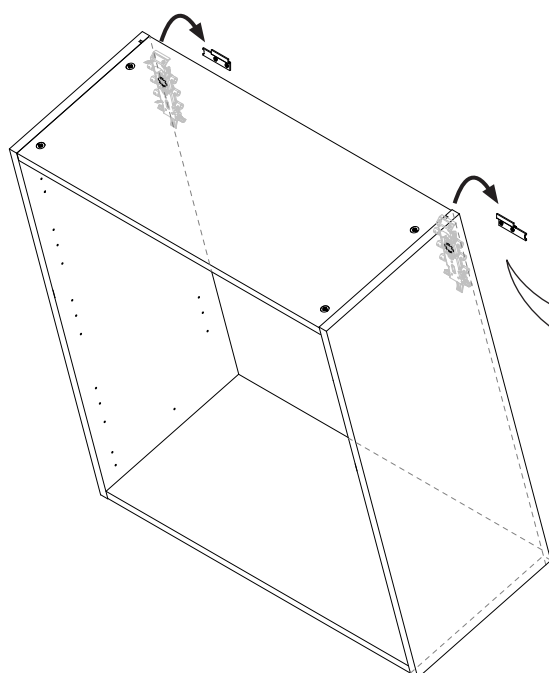

Side View

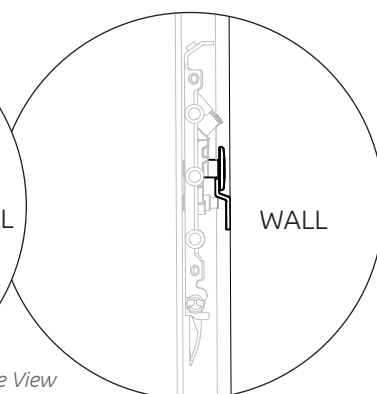



WALL

WALL UNIT

600, Tall Adjustable Corner Assembly Guide

Step 14.

Using points **a**, **b** & **c** adjust the unit to suit.

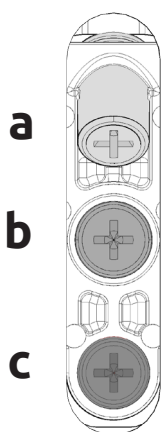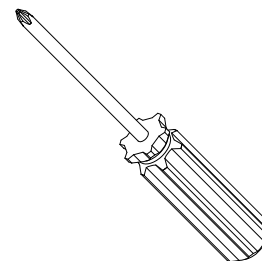

Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

Point b.


Adjust the depth using centre screw.

Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

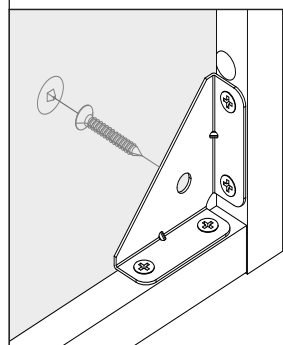

Step 15.

Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 11** into the wall. Place cover stickers (**M**) on the heads to conceal them.

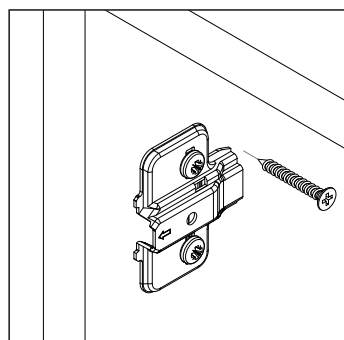

Step 16.

Screw into any adjacent units using 30mm screws (**K**) provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom, place cover stickers (**M**) on the heads to conceal them.

WALL UNIT




600, Tall Adjustable Corner Assembly Guide

Step 17. Adjustable Corner Post

A. Cut panel (Y) to size according to **customer specific kitchen plan**.



B. Corner post size can be adjusted by positioning panel (Yi) along panel (Yii).

C. To create corner post, attach both panels (Yi) and (Yii) as shown. Screw through the back of panel (Yii) into panel (Yi) using 4 x 30mm screws (K) equally spaced.

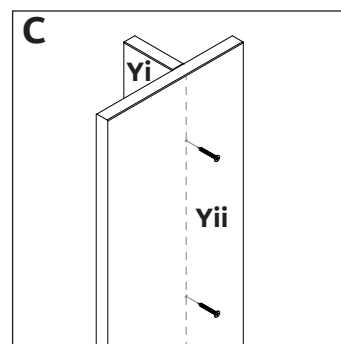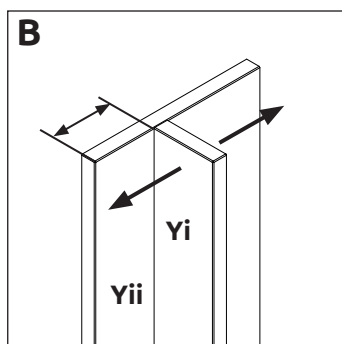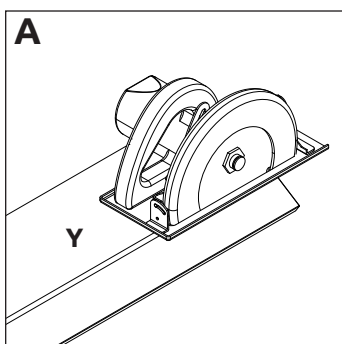

Step 18.

Attach the corner post to the unit using the 2 x L brackets SML and 4 x 15mm screws (L) at the top and bottom.

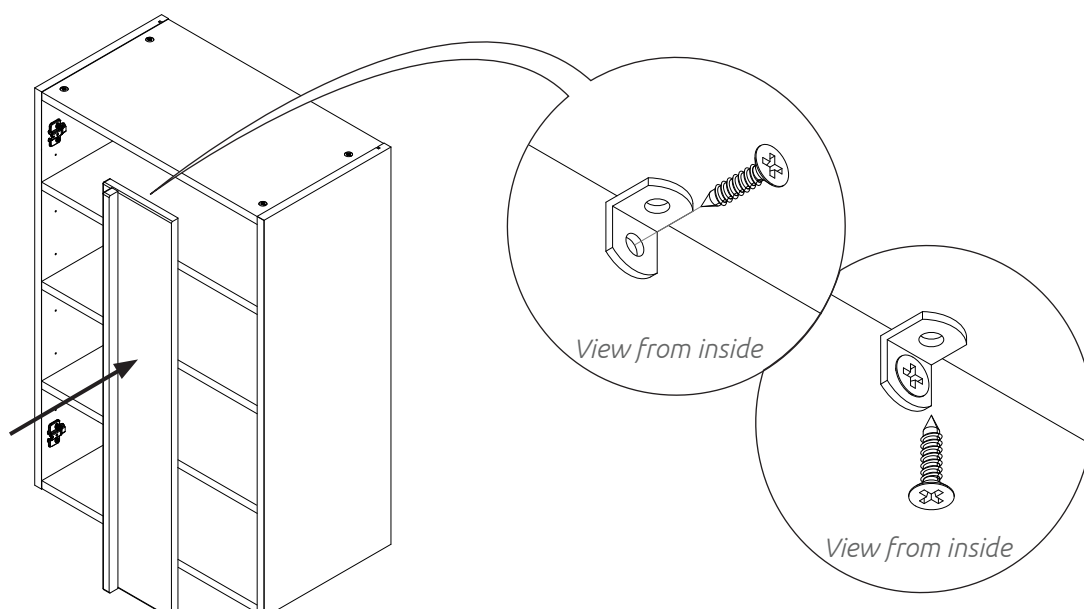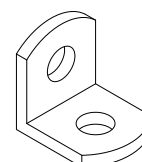


WALL UNIT

600, Tall Adjustable Corner Assembly Guide




Step 19.


Measure and cut blanking panel to required size. Attach to the unit using 15mm screws (**L**), evenly spaced as shown. Ensure you screw through the blanking panel 9mm in from edges into the end panel and fixed shelves to secure in place.


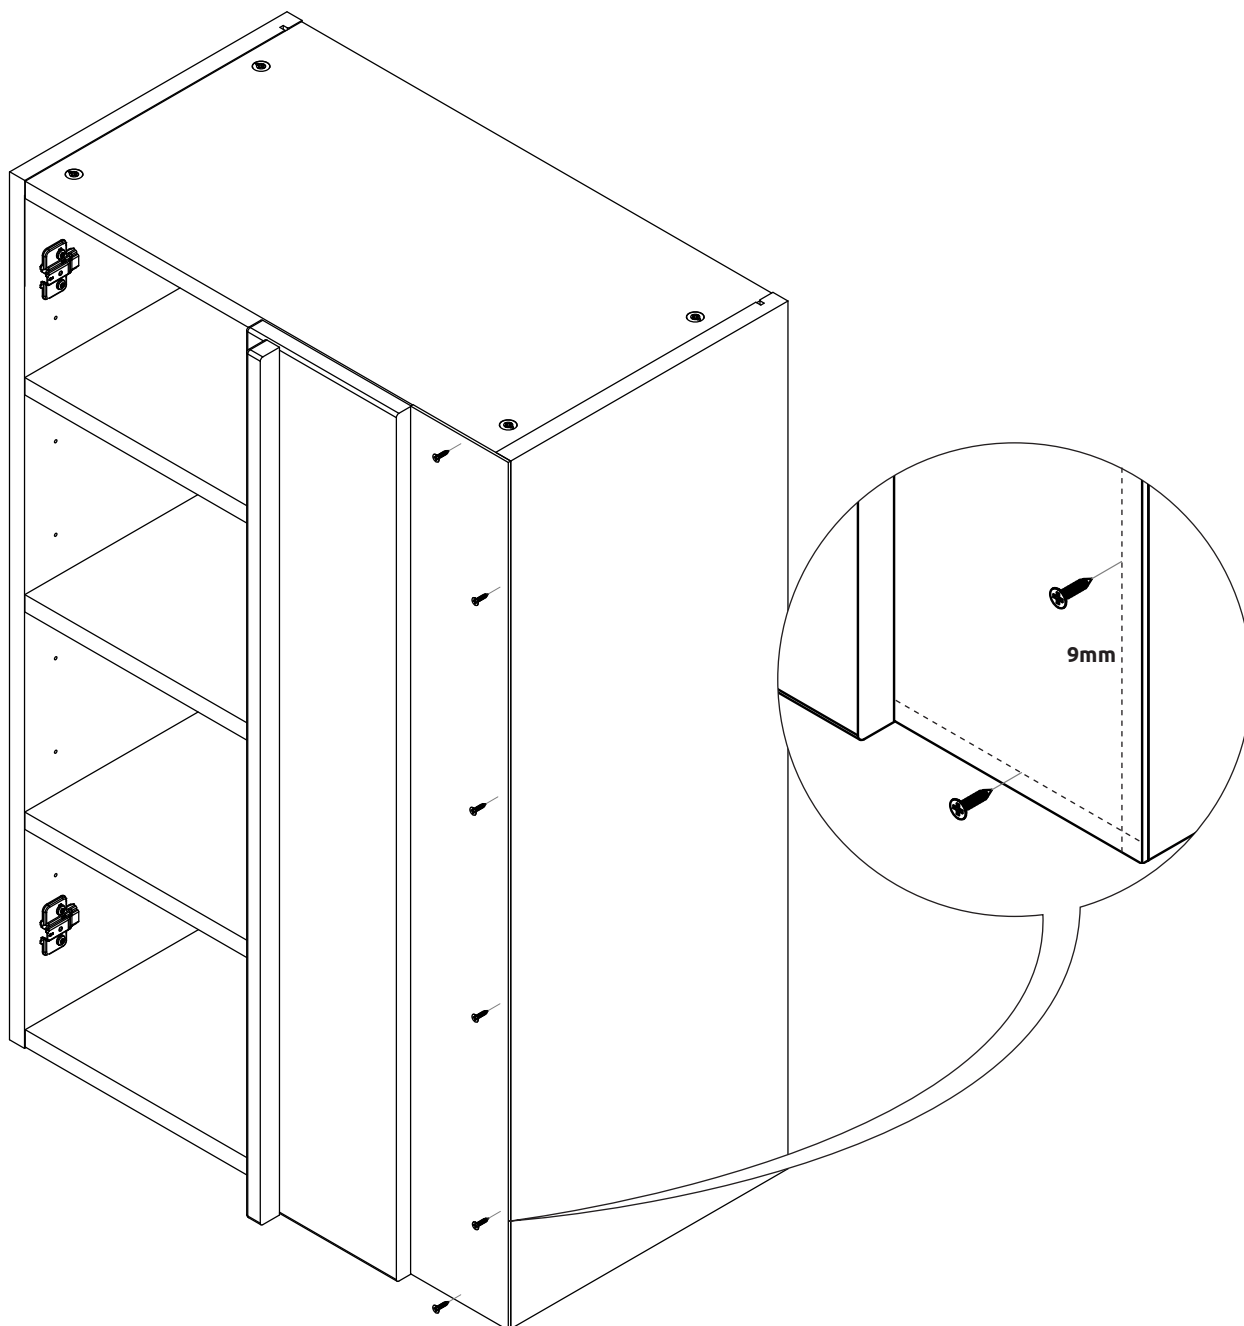


WALL UNIT

600, Tall Adjustable Corner Assembly Guide

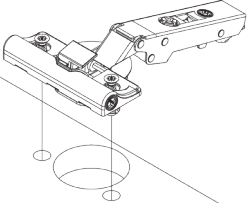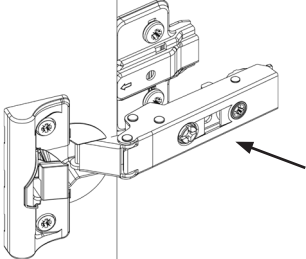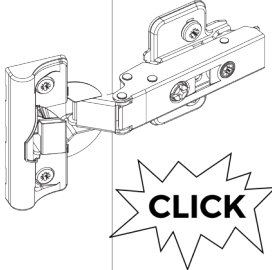	HINGE ATTACHMENT AND ADJUSTMENT Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.  <i>Hinge dowels</i>	
	 CLICK	Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.		

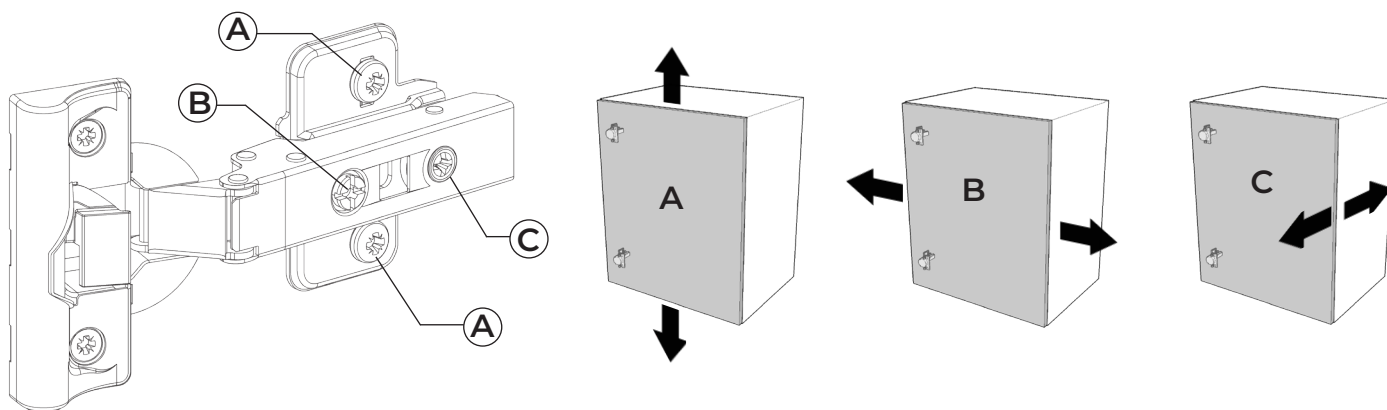

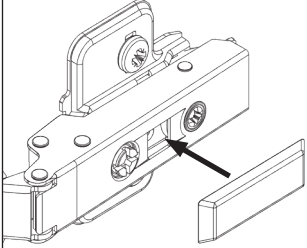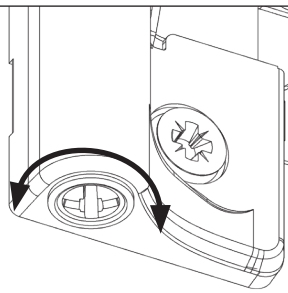	Step 4. Fit cover caps to hinges and adjust soft-close to suit.	
--	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.



WALL UNIT

600, Tall Adjustable Corner Assembly Guide

wren