


WALL UNIT

672, Tall L Corner Assembly Guide

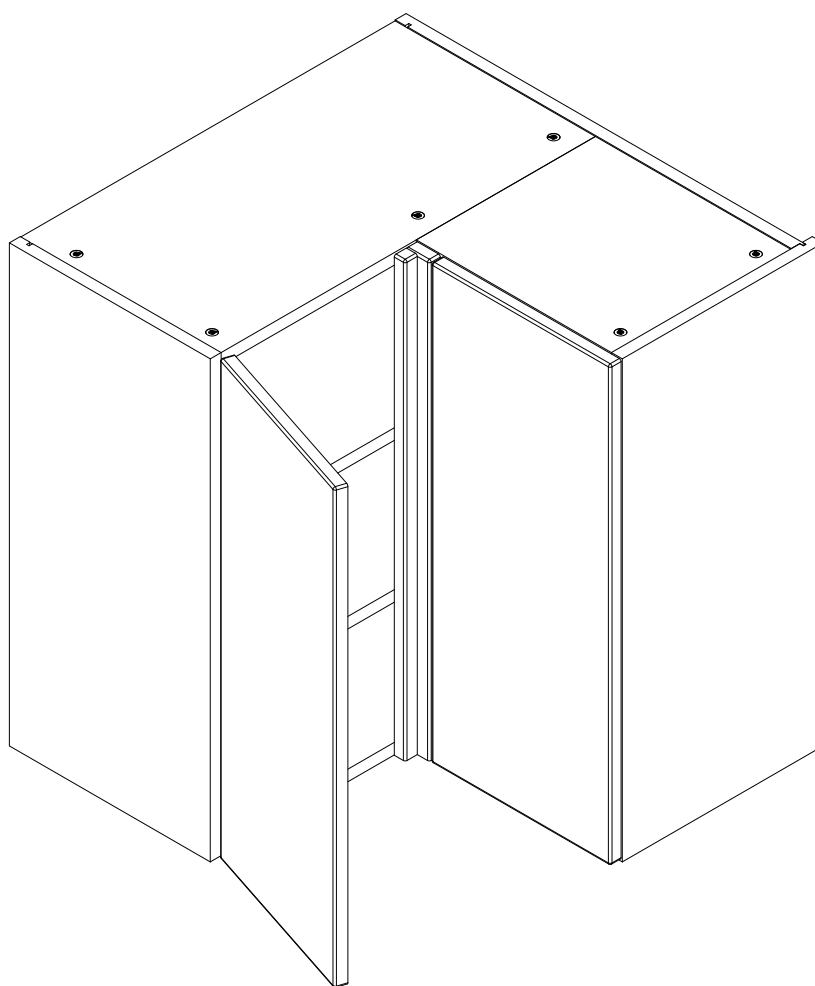

672 L Corner

WALL UNIT



672, Tall L Corner Assembly Guide





BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

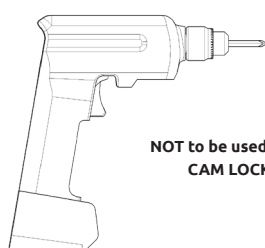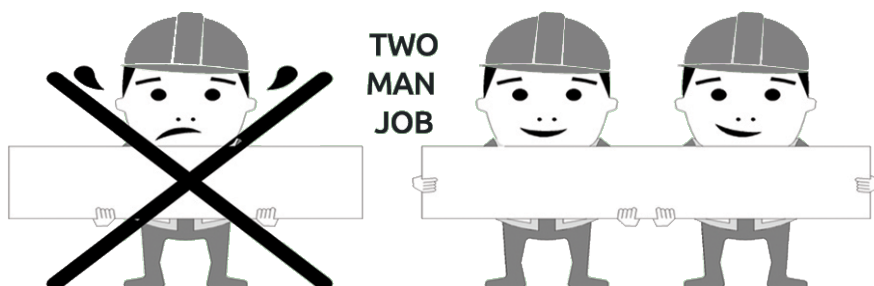


NOT to be used with
CAM LOCK

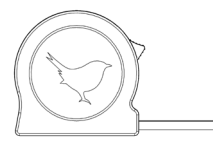


WALL UNIT


672, Tall L Corner Assembly Guide

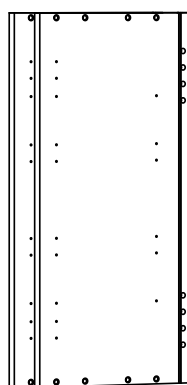


Panel A
x2 End Panel

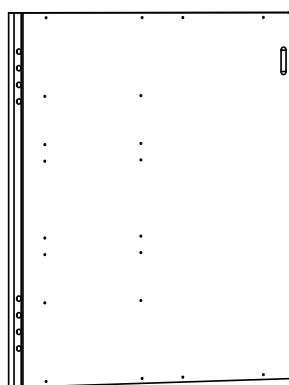


Panel B
x1 Back Panel

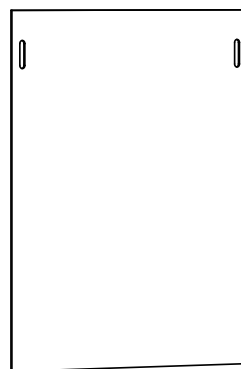


Panel S
x1 Back Panel

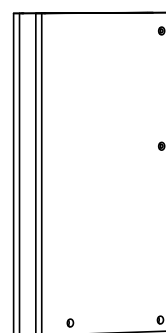


Panel C
x2 Fixed Shelf

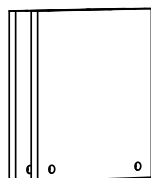


Panel D
x2 Fixed Shelf

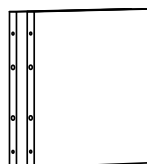

Small Shelf
x2 Small Loose Shelf

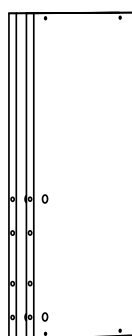

Large Shelf
x2 Large Loose Shelf

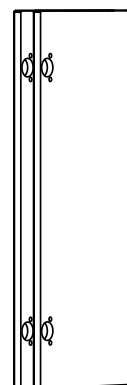


Frontal
x2 Front Panel
(Packed Separately)




Corner Post
x1 Corner Post
(Packed Separately)

WALL UNIT


672, Tall L Corner Assembly Guide




(F) x16
Wooden Dowel




(L) x16
15mm Screw



(S) x6
20mm Screw



(K) x4
30mm Screw




(P) x8
45mm Screw




(W) x8
Cam Dowel



(G) x8
Cam Dowel (Expanding)




(H) x16
Cam Lock

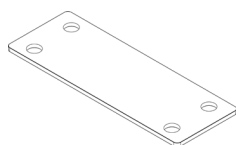


(U) x2
Fixing Plate




(M) x4
Cover Sticker

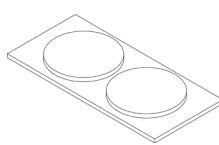


(N) x2
Door Buffer




(T) x10
Back Panel Support Clip




(Z) x12
Shelf Peg Metal

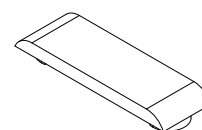


Hanging Bracket Cover Cap
x 3

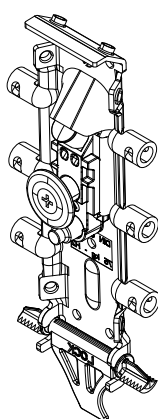


Hanging Bracket
x 3 Inc Screws

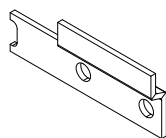


Hanging Bracket Plate
x 3

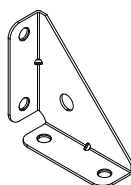

Corner Gusset x 2

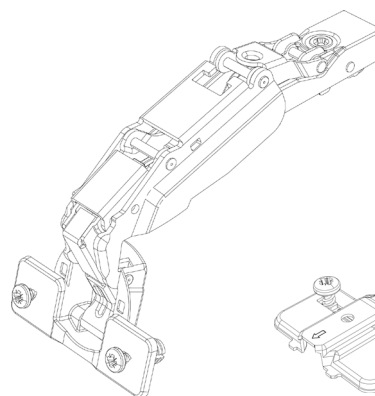

Hinge
Inc Screws & Cover Plate

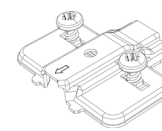




Hinge Mounting Plate
Inc Screws

WALL UNIT

672, Tall L Corner Assembly Guide



Step 1.

Seat dowels **(F)** into holes in both end panels **(A)** as shown.

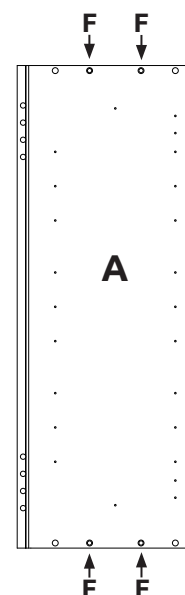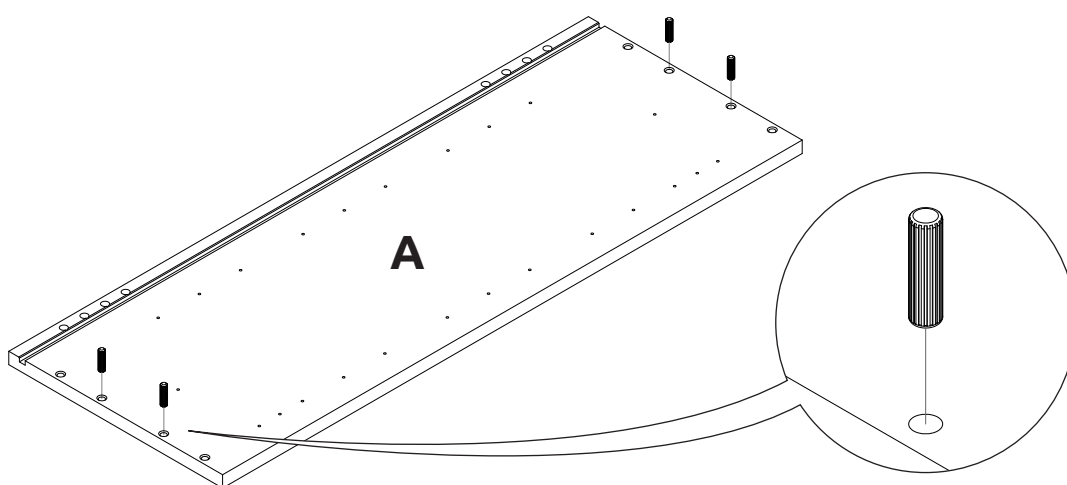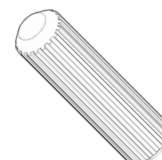

Step 2.

Seat expanding cam dowels **(G)** into holes in both end panels **(A)** as shown.

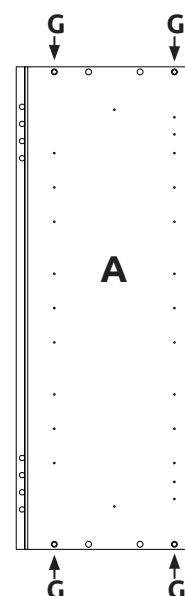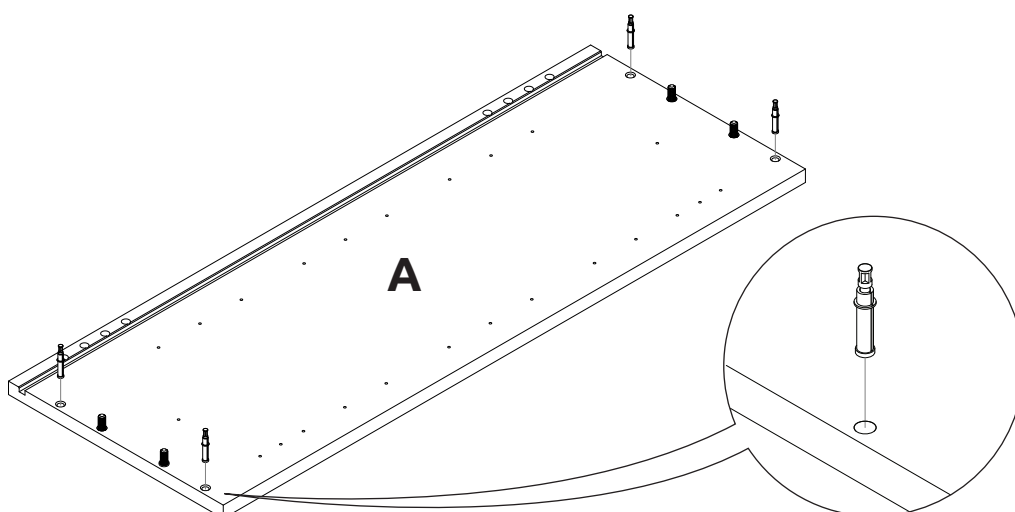

WALL UNIT


672, Tall L Corner Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.





All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

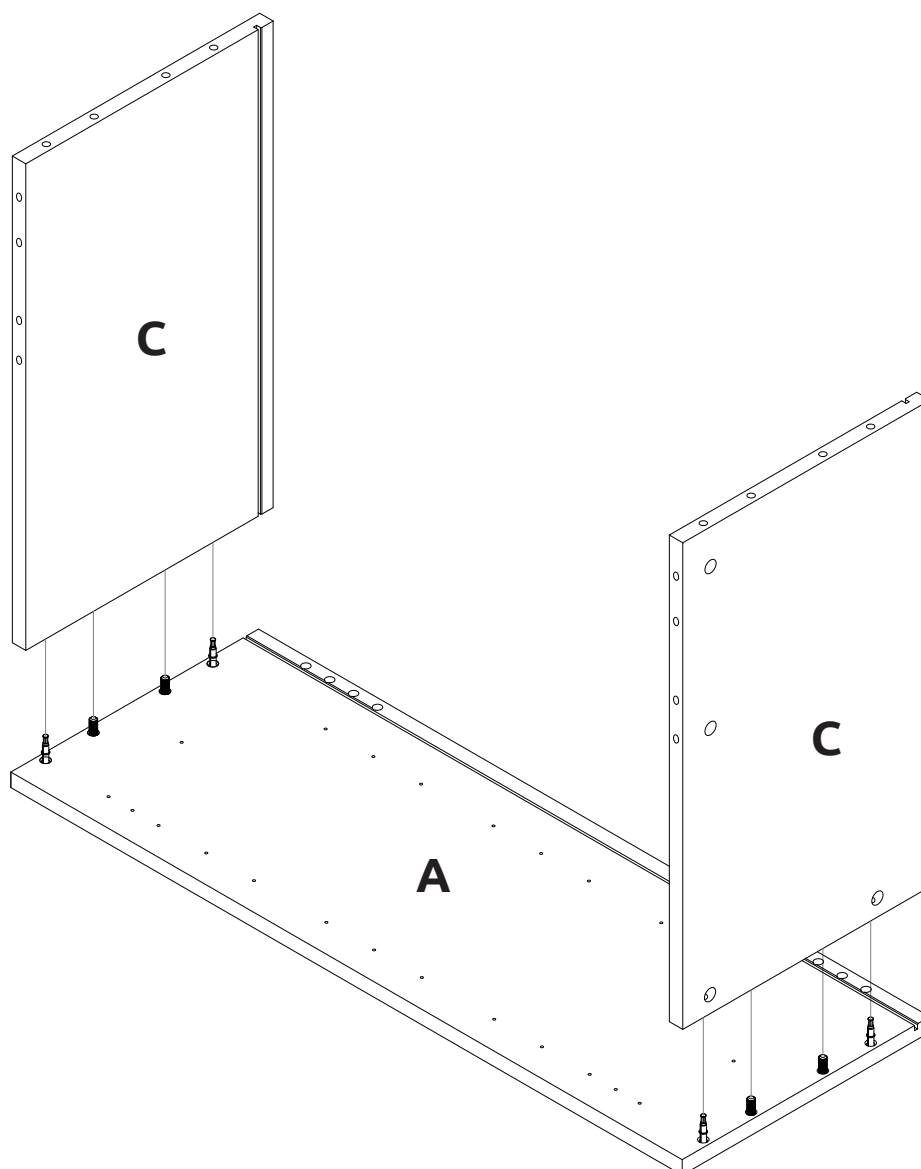

WALL UNIT

672, Tall L Corner Assembly Guide

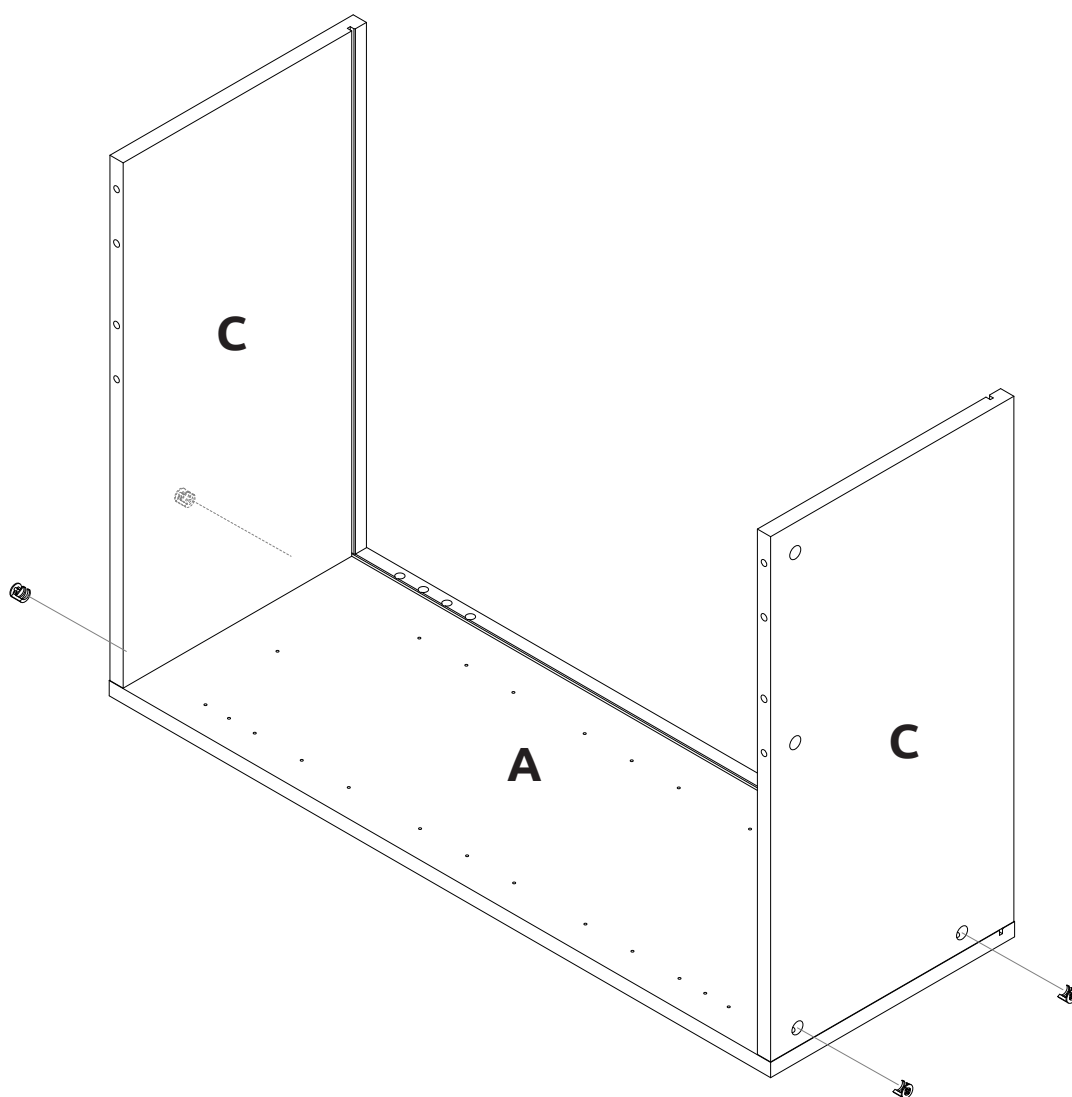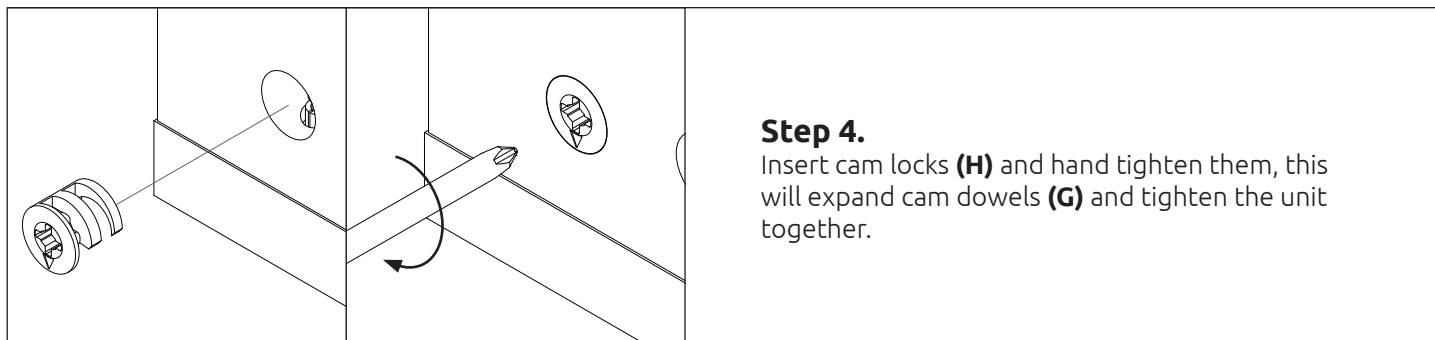

Do **not** use power tools with cam lock **(H)**

WALL UNIT


672, Tall L Corner Assembly Guide

Step 5.

Attach panels **(D)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.





All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

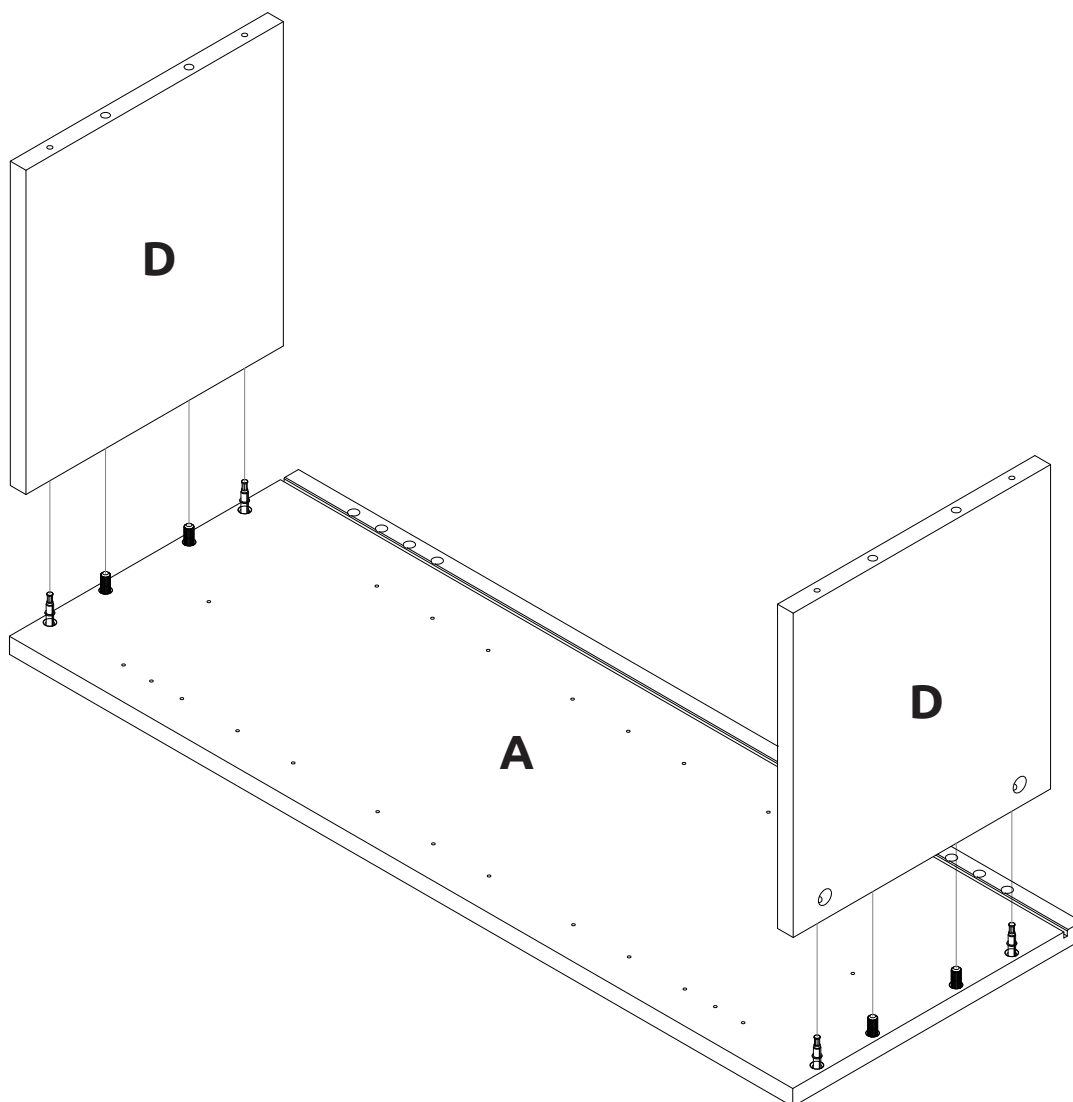

WALL UNIT

672, Tall L Corner Assembly Guide

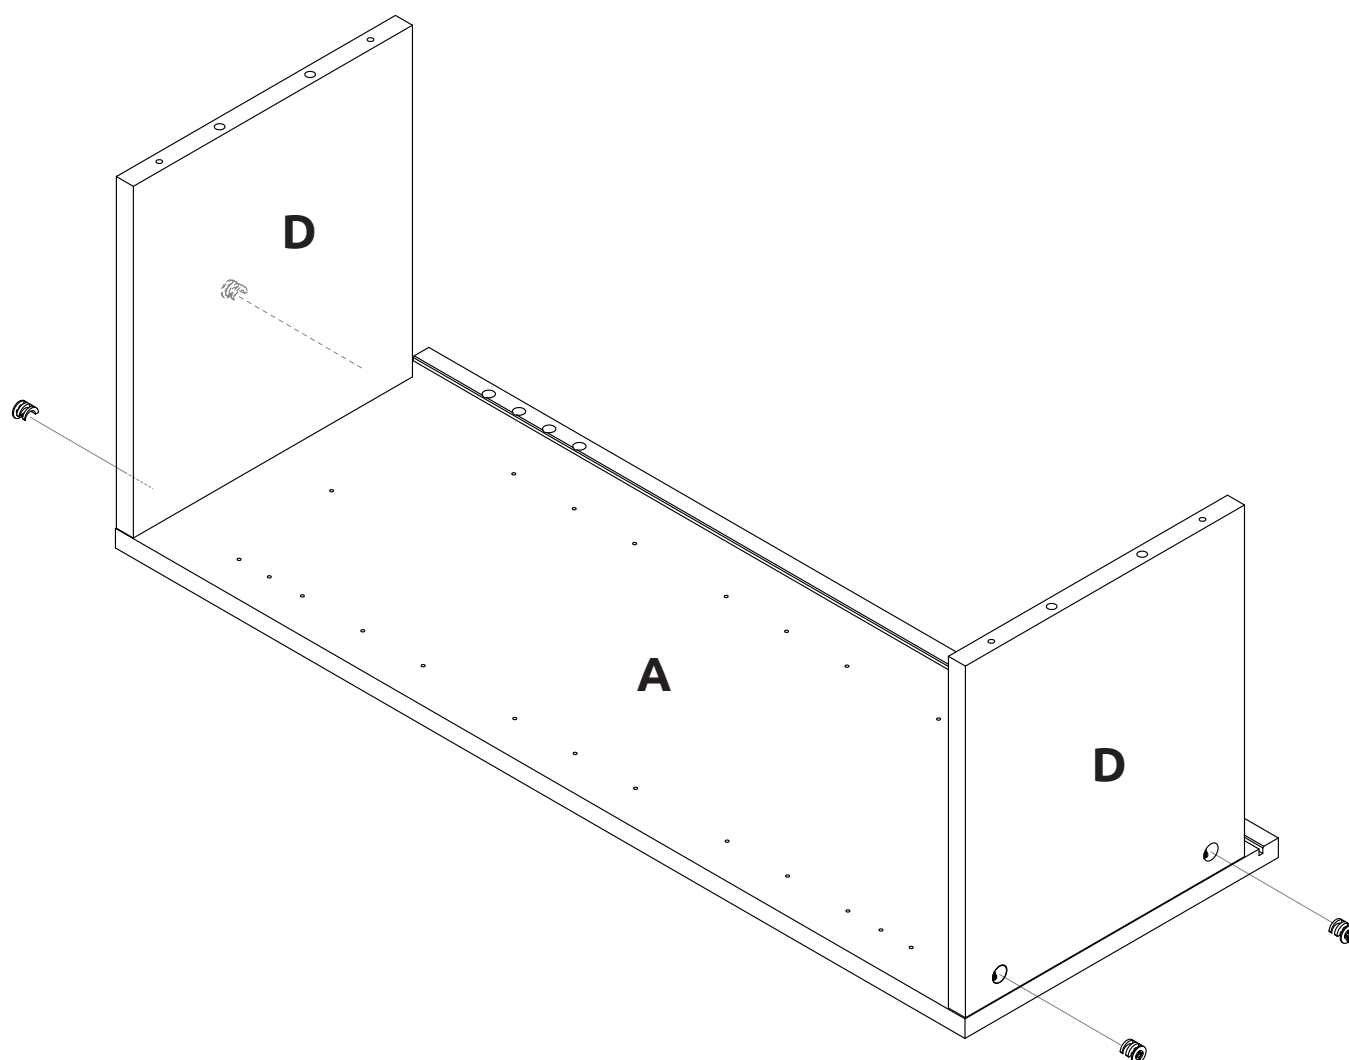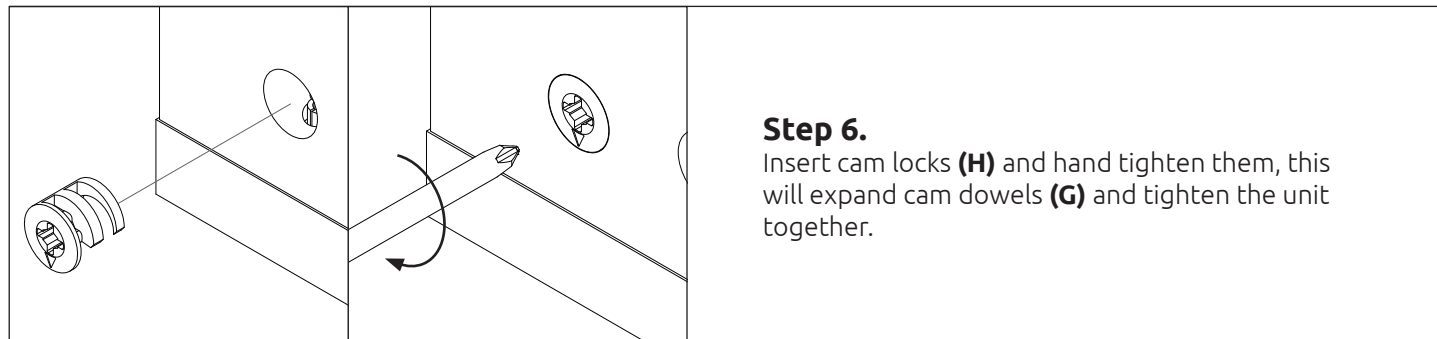



Do **not** use power tools with cam lock **(H)**

WALL UNIT

672, Tall L Corner Assembly Guide

Step 7.

Seat dowels (**F**) and cam dowels (**W**) into holes in panel (**D**) as shown.

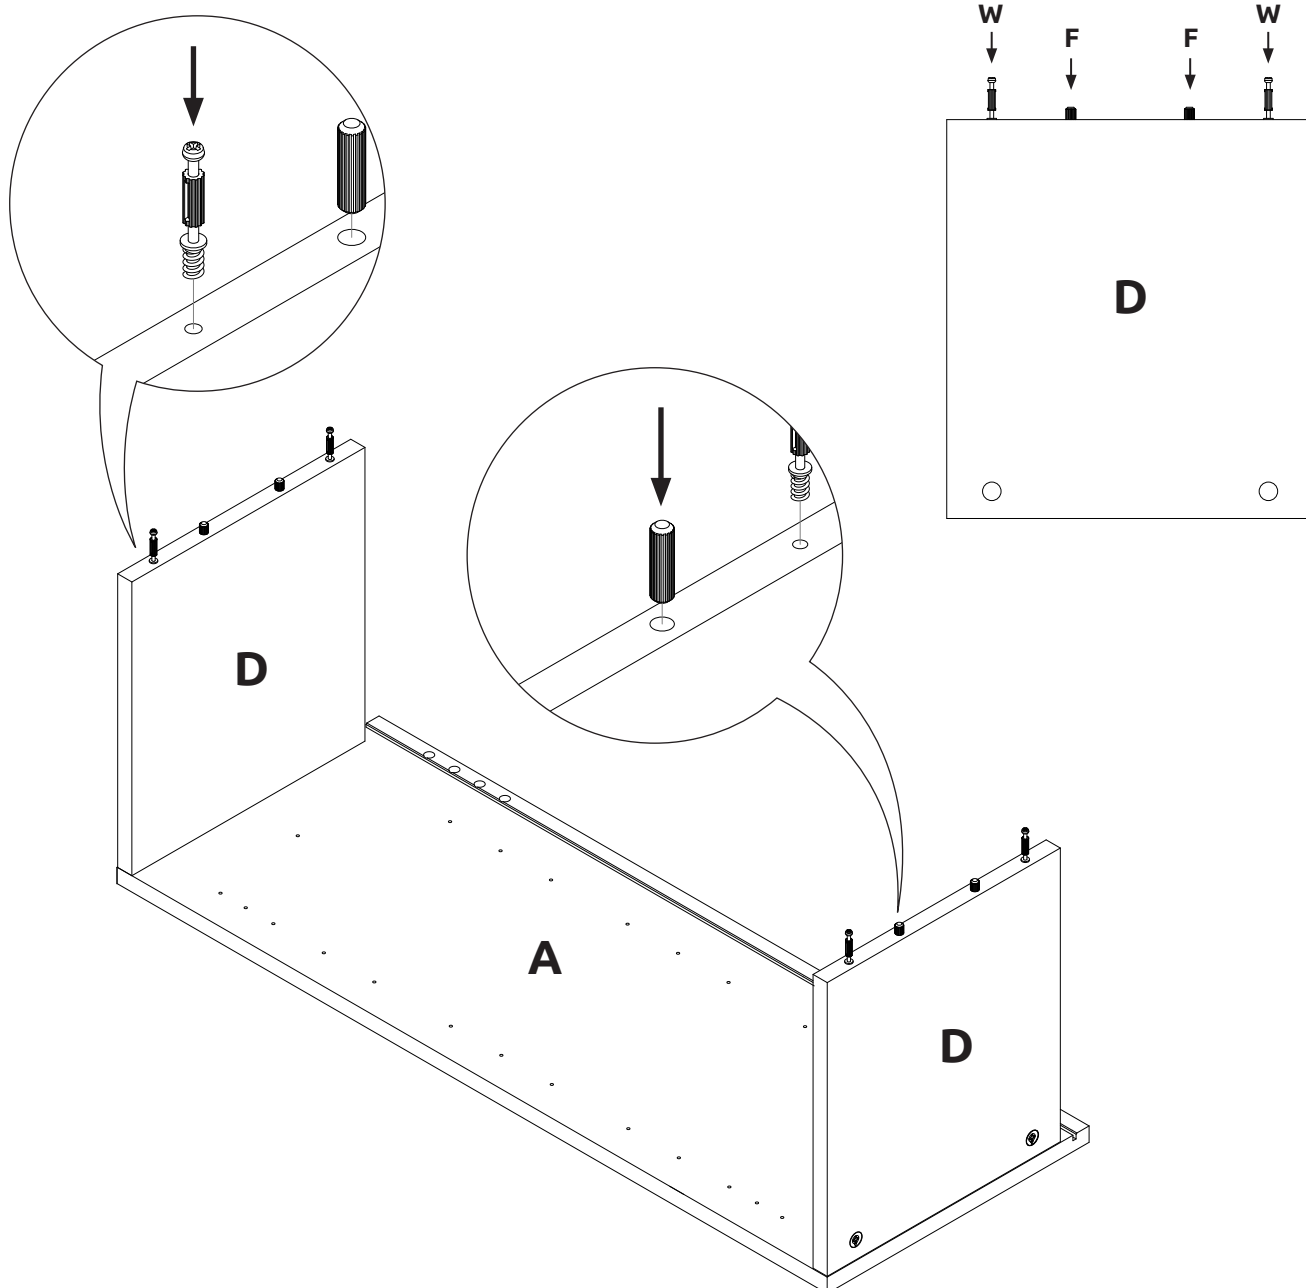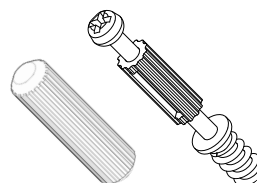


WALL UNIT

672, Tall L Corner Assembly Guide



Step 8.

Attach panels **(D)** to panels **(C)**, using cam dowels **(W)**, and wooden dowels **(F)** in positions as shown.

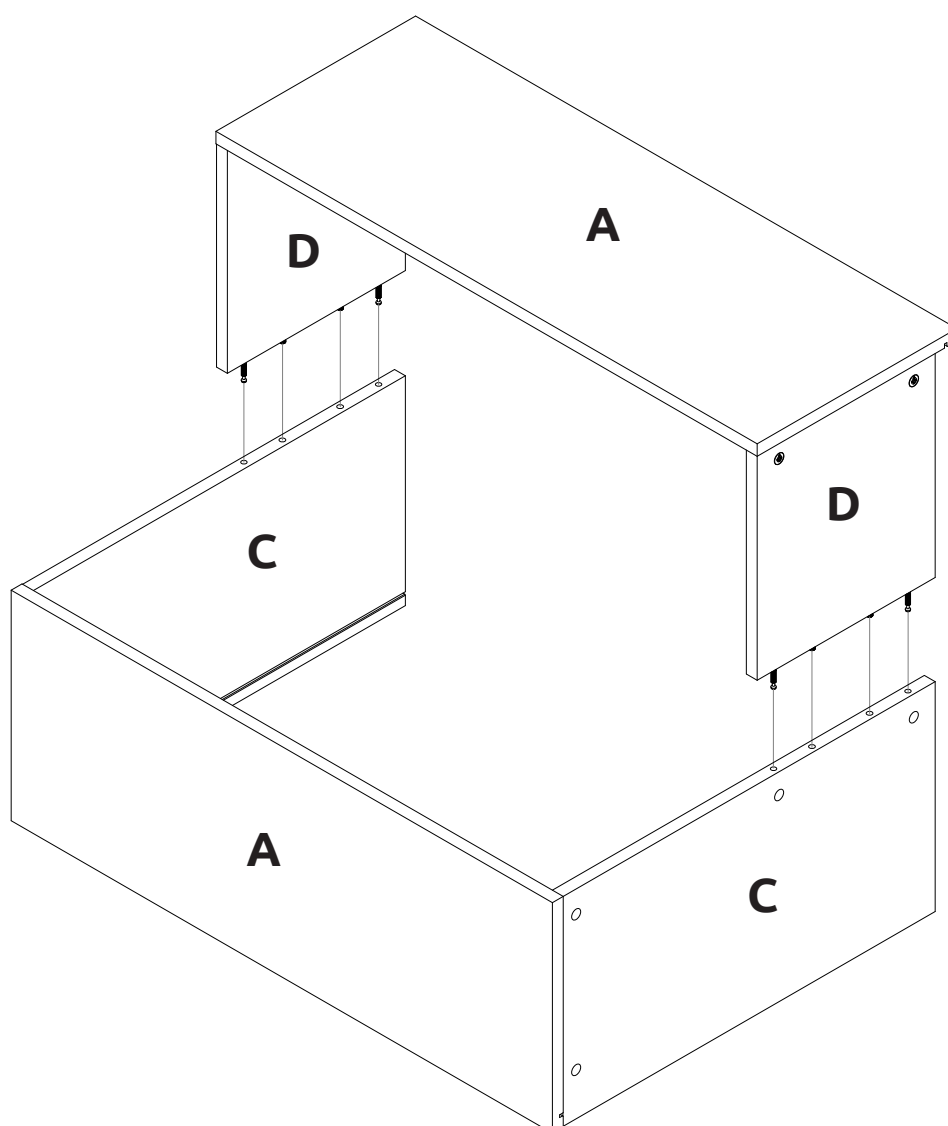

WALL UNIT

672, Tall L Corner Assembly Guide

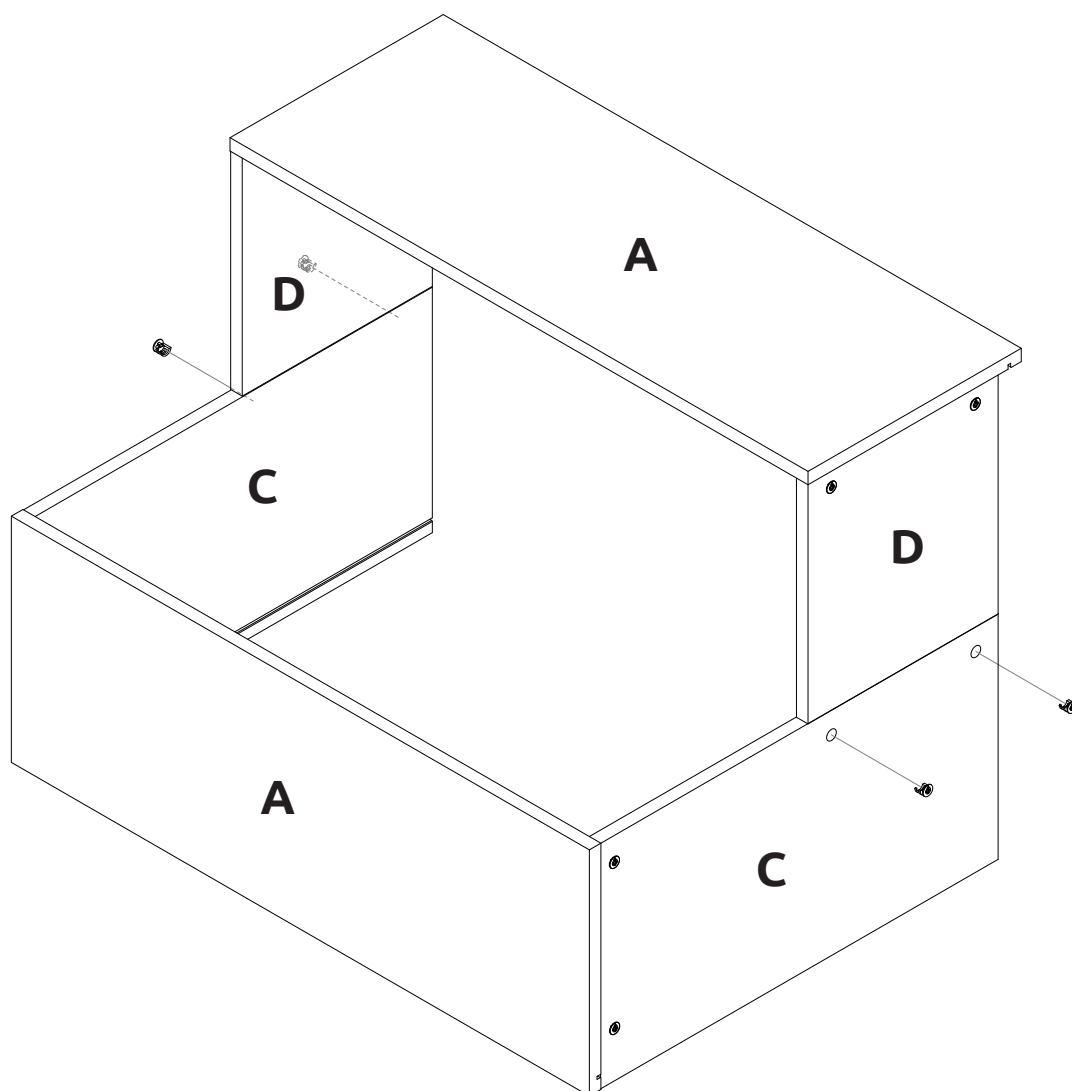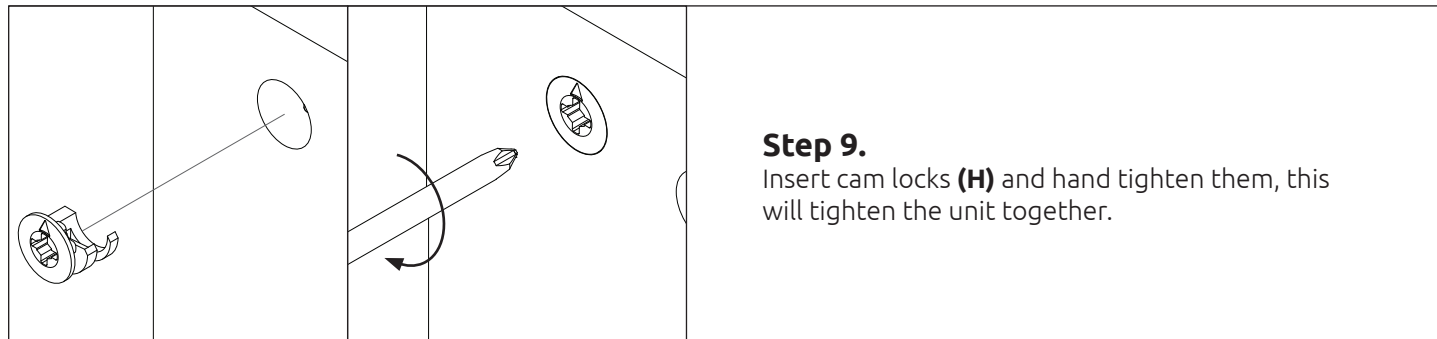



Do **not** use power tools with cam lock **(H)**

WALL UNIT

672, Tall L Corner Assembly Guide

Step 10.

Slide back panel **(S)** into groove of panels **(C)** and **(A)**. See Fig1.

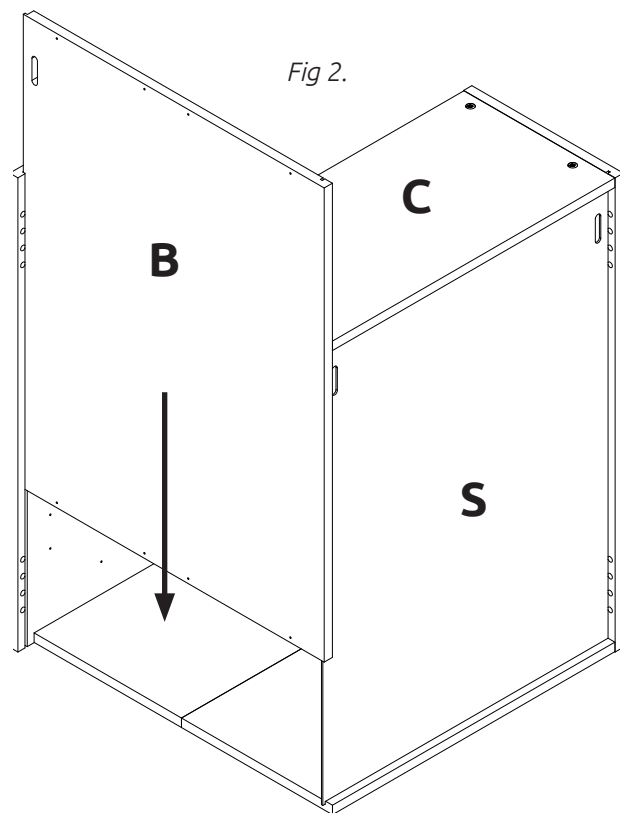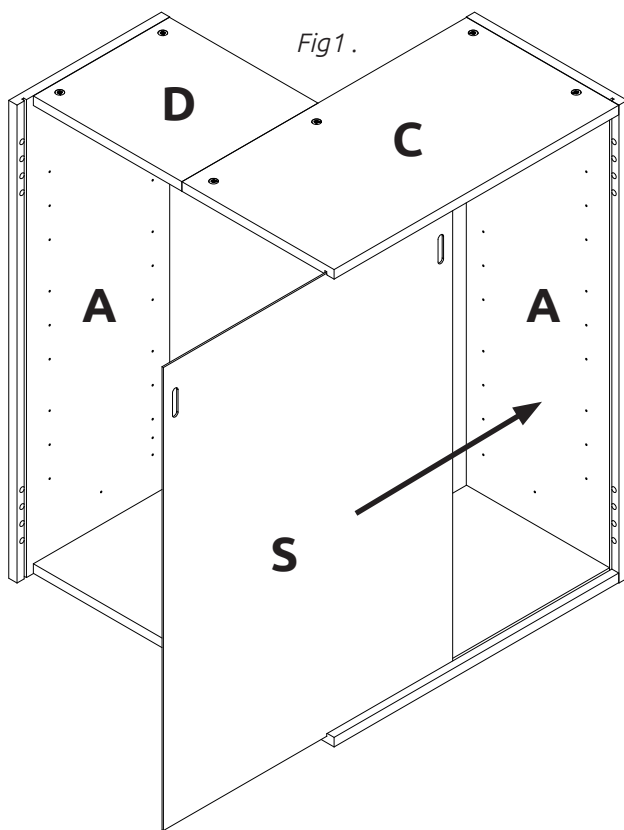

Step 11.

Slide back panel **(B)** into groove of side panel **(A)** while also allowing panel **(S)** slide into the groove of panel **(B)**. See Fig 2.

WALL UNIT


672, Tall L Corner Assembly Guide

Step 12.

A. Ensure all panels are square. Secure back panel **(B)** to panels **(C)** & **(D)** with 8 x screws **(P)** using pre-drilled pilot holes.

B. Slide 10 x back panel clips **(T)** into the groove of both panels **(A)**, **(B)** & **(C)**.

The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

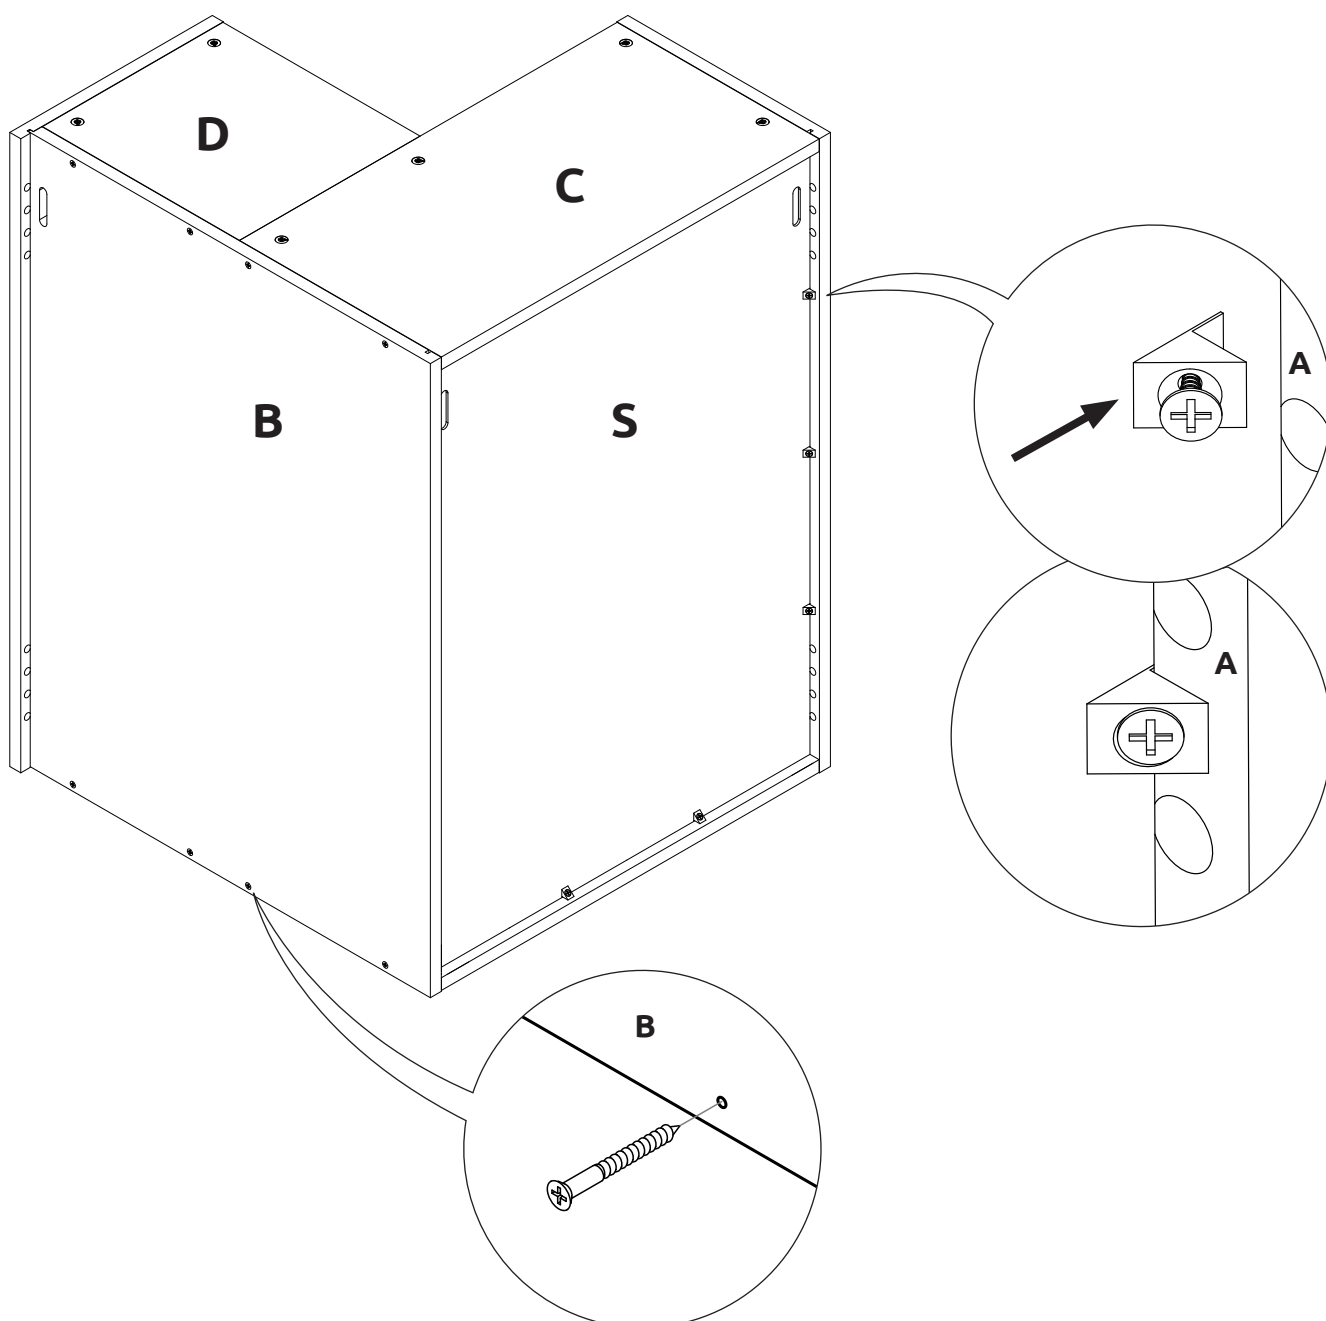

WALL UNIT

672, Tall L Corner Assembly Guide

LOOSE SHELF ASSEMBLY- Install inside unit after the unit has been fully installed.

Step 1.

Seat dowels **(F)** and cam dowels **(W)** into holes in small shelf as shown (See fig. 1).




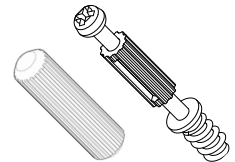


Fig1 .

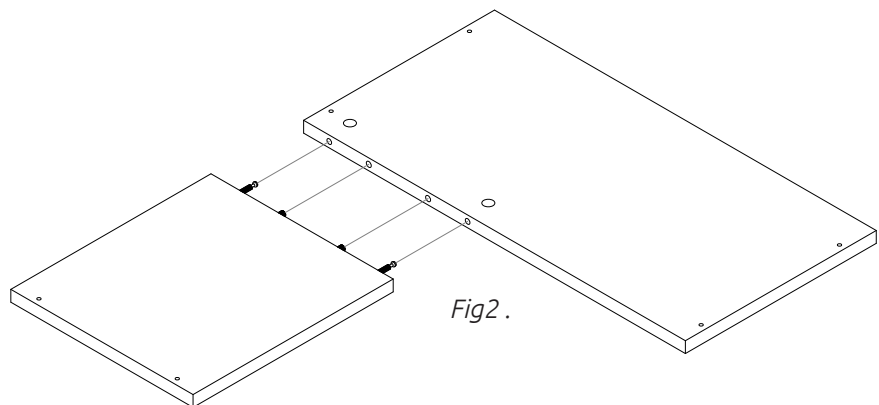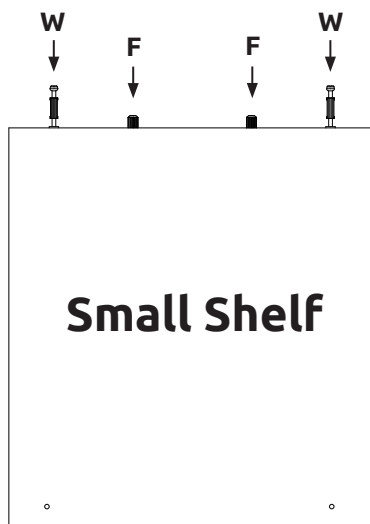

Step 2.

Attach small shelf to large shelf, using cam dowels **(W)**, and wooden dowels **(F)** in positions as shown (See fig.2).



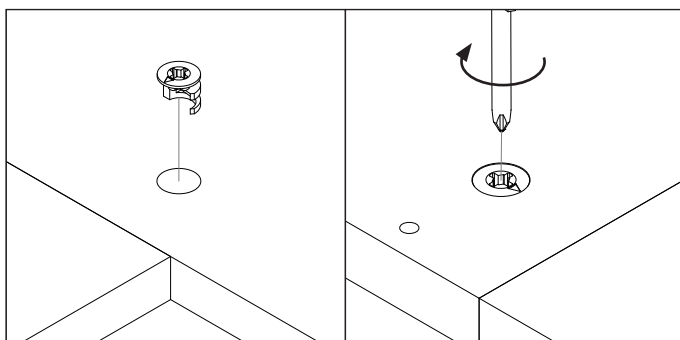


Step 3.

Insert cam locks **(H)** and hand tighten them, this will tighten the unit together.

WALL UNIT

672, Tall L Corner Assembly Guide

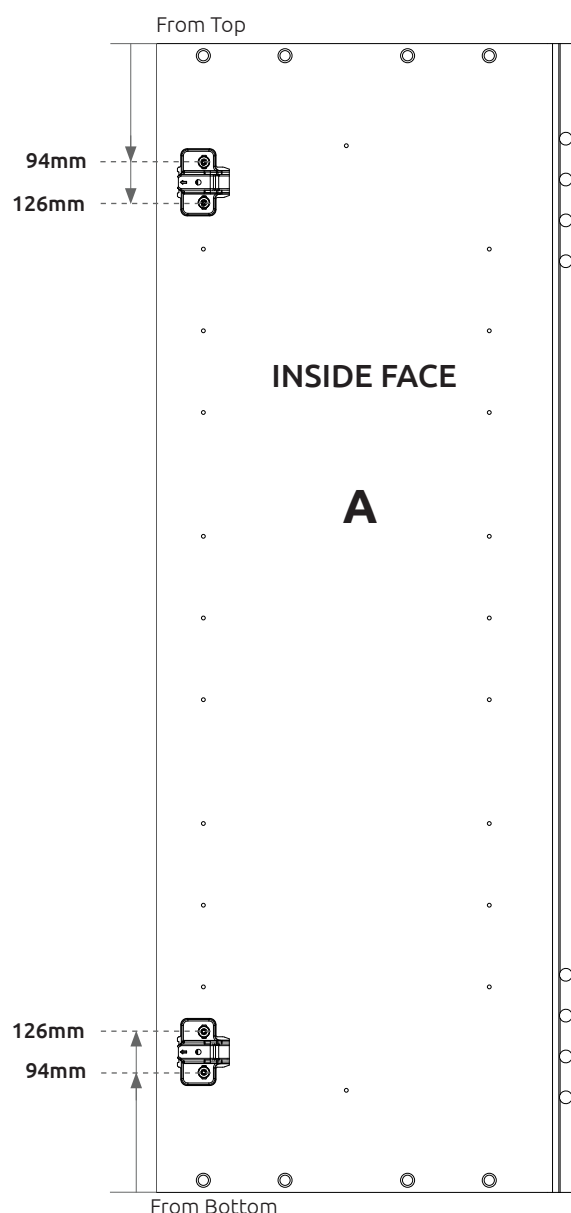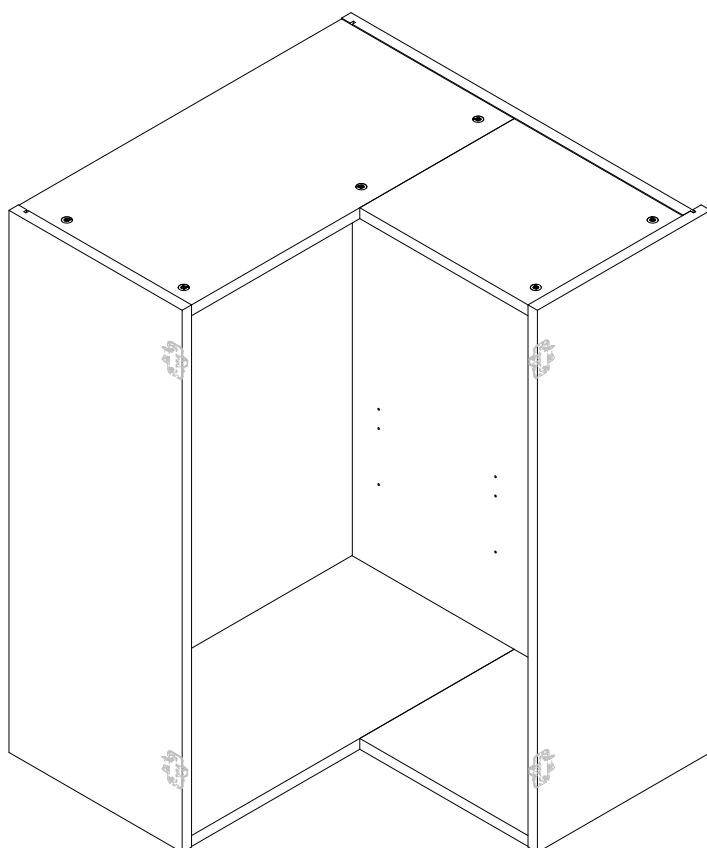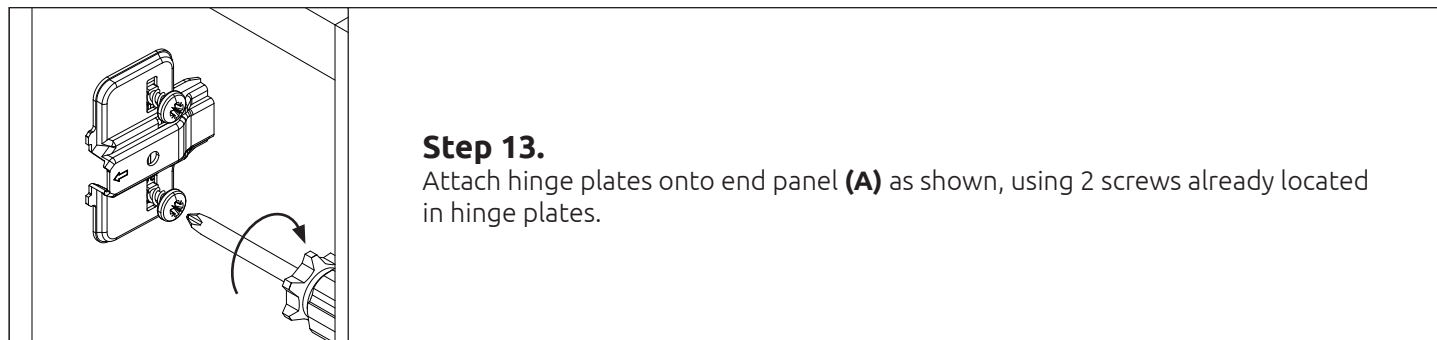

WALL UNIT

672, Tall L Corner Assembly Guide



Step 14.

Hanging brackets steps **A**, **B** & **C** to be carried out on all sides as shown.

A. Insert hanging bracket into pre-drilled holes.


B. Rotate locking lever 180 degrees.

C. Secure with provided 2 x 20mm screws (**S**) per bracket.

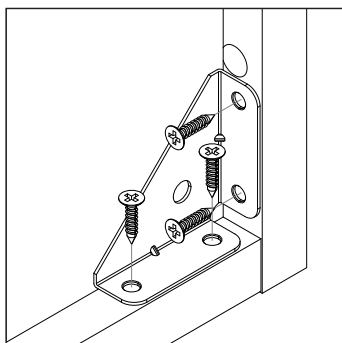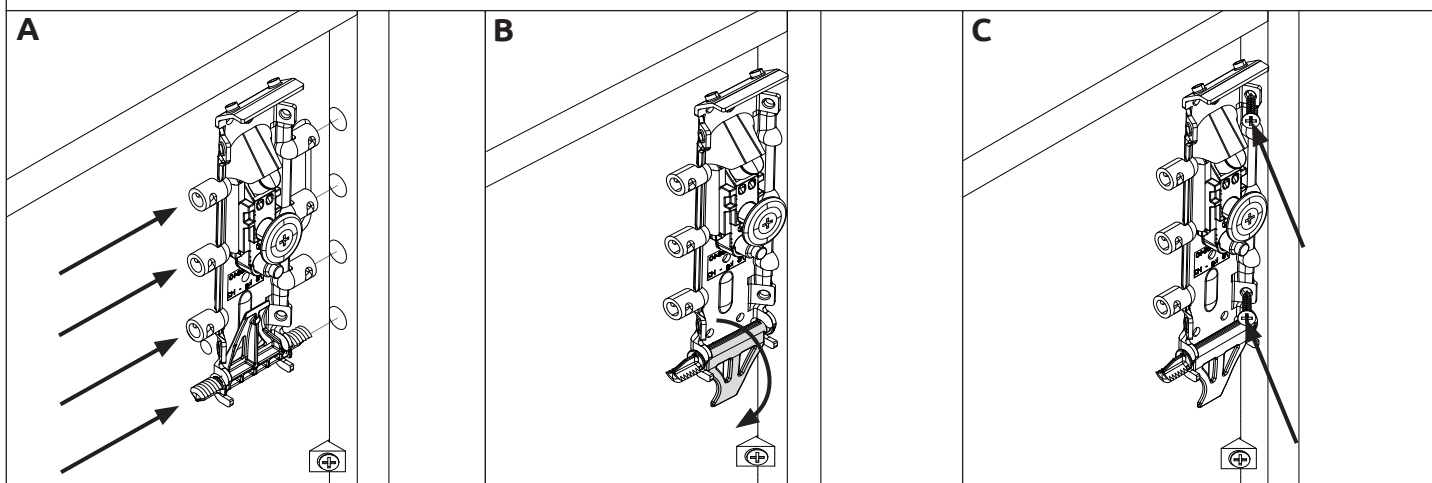

Step 15.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

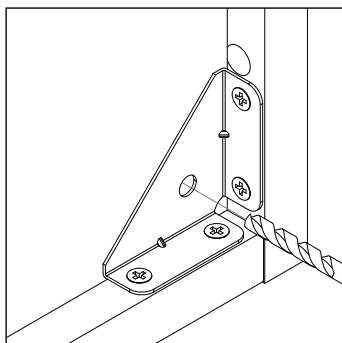

Step 16.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

WALL UNIT


672, Tall L Corner Assembly Guide



Care to be taken. Hanging procedure is necessary for a safe installation.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

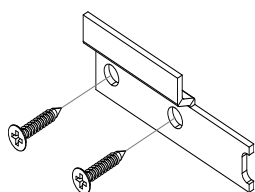


Step 17.

Measure appropriately and attach the 3 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

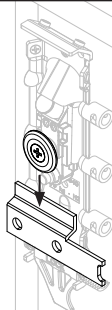


View from behind of unit

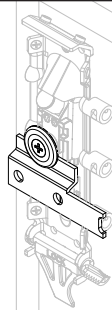


Step 18.

Hang the unit using the large screw head on the wall hanging brackets to hook onto the wall hanging plates.

Ensure all 3 hanging brackets are securely on the 3 hanging plates.

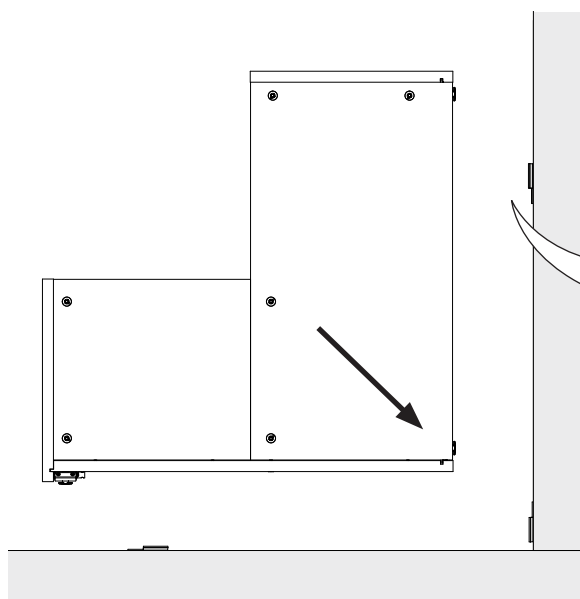

Plan View

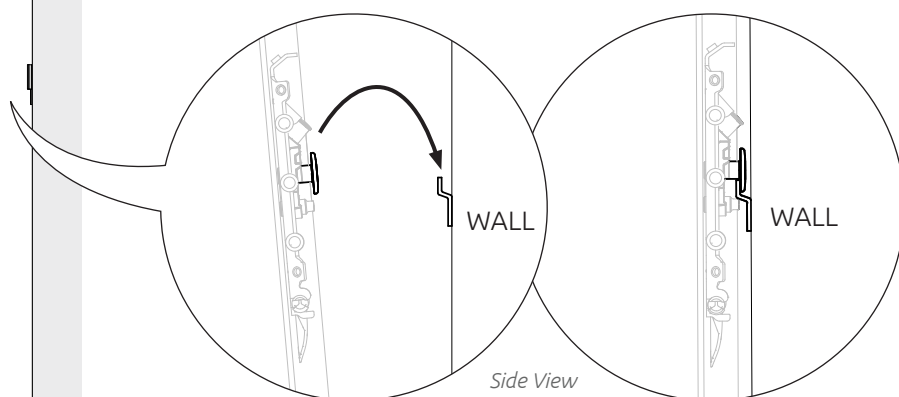



Side View

WALL UNIT

672, Tall L Corner Assembly Guide

Step 19.

Using points **a**, **b** & **c** adjust the unit to suit.

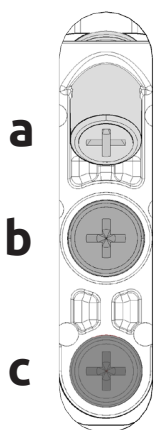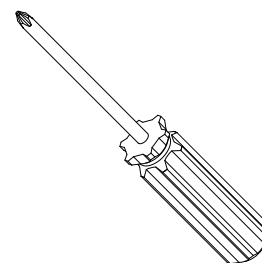

Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

Point b.


Adjust the depth using centre screw.

Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

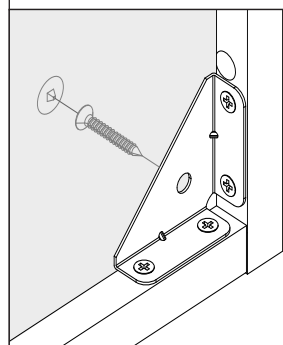

Step 20.

Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 15** into the wall. Place cover stickers (**M**) on the heads to conceal them.




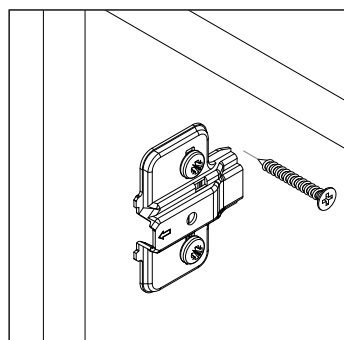


Step 21.

Screw into any adjacent units using 30mm screws (**K**) provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom of both sides of the unit, place cover stickers (**M**) on the heads to conceal them.

WALL UNIT

672, Tall L Corner Assembly Guide

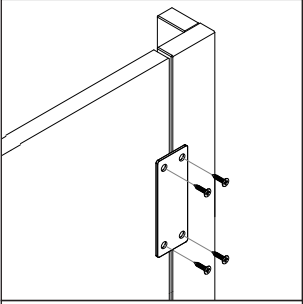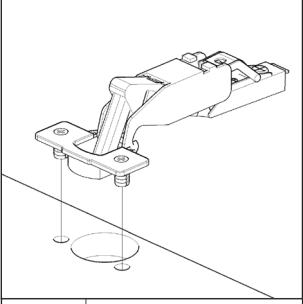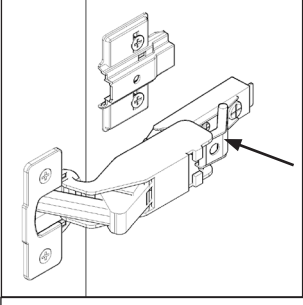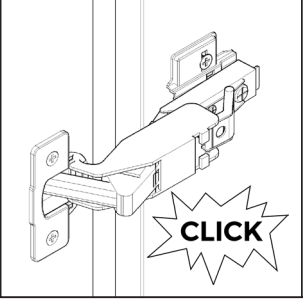	FRONTAL AND HINGE ATTACHMENT Step 1. Align corner post to frontal. Equally space 2 fixing plates (U) to the back of frontal and corner post. Ensure a 2mm gap is maintained between frontal and corner post once fixed together. Screw in place using 4 x 15mm screws (L) per fixing plate (U).	
	Step 2. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws already located in the hinges.	
		Step 3. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 4. Adjust hinges to suit, using the highlighted screw(s) shown.		

