


Walkthrough Doorway Fitting Guide

FI.PK.BED.222.036 - Infinity Plus

x8 Hinge Mounting
Plates Inc. Screws



x8 Hinges Inc. Screws
& Cover Plate



x8 30mm Screws



x4 45mm Screws



x2 Door Buffer



x8 Stick On Cover Cap
per colour




Step 1.

Measure the required dimension for the doorway opening.

Ensure that the opening between robes is 800mm or 1000mm wide, depending on customer specific bedroom plan.

Example Bedroom Layout

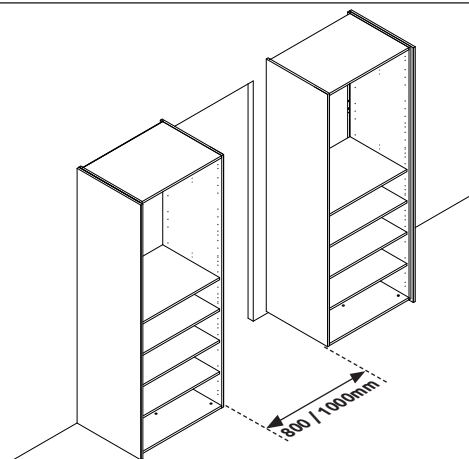


Step 2.

Cut filler 1 and 2 to a length of 2100 mm.

Cut filler 3 to size depending on the opening width:

800mm Opening = 764mm Filler


1000mm Opening = 964mm Filler

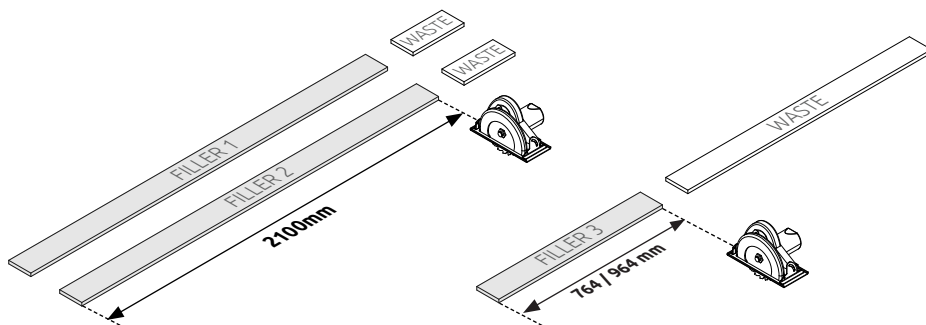

Walkthrough Doorway Fitting Guide


Step 3.

Mark hinge plate locations on filler 1 and 2 as shown.

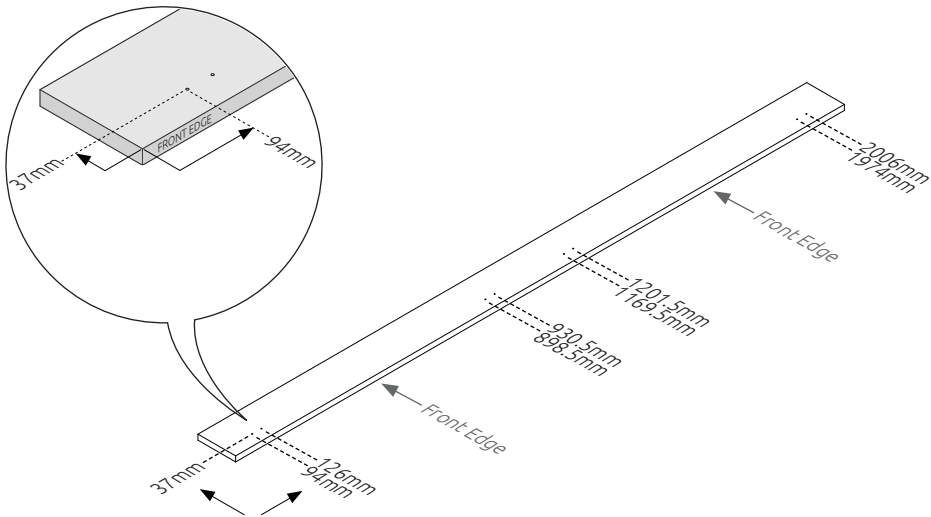

Step 4.

Construct a U Frame using the fillers and 45mm screws provided. Screw into the centre of Filler 3 (9mm from the edge on both sides). **Ensure that the hinge plate marks face inward and align on both sides.**

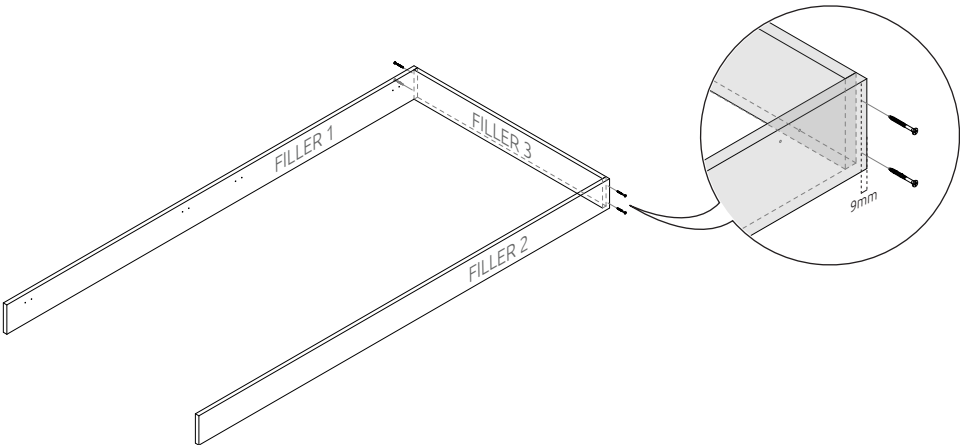


Walkthrough Doorway Fitting Guide

Step 5.

Position the frame between the robes so that the hinge plate markings, located 37mm from the edge, face the front. **Ensure that the front of the frame is flush with the front, top and bottom of the adjacent robes.**

Secure the frame to the adjacent units using 30mm screws provided. Screw in between the hinge hole markings to ensure the screws are concealed once the hinge plates are installed *See Fig 1 and Fig 2.*


Example Bedroom Layout

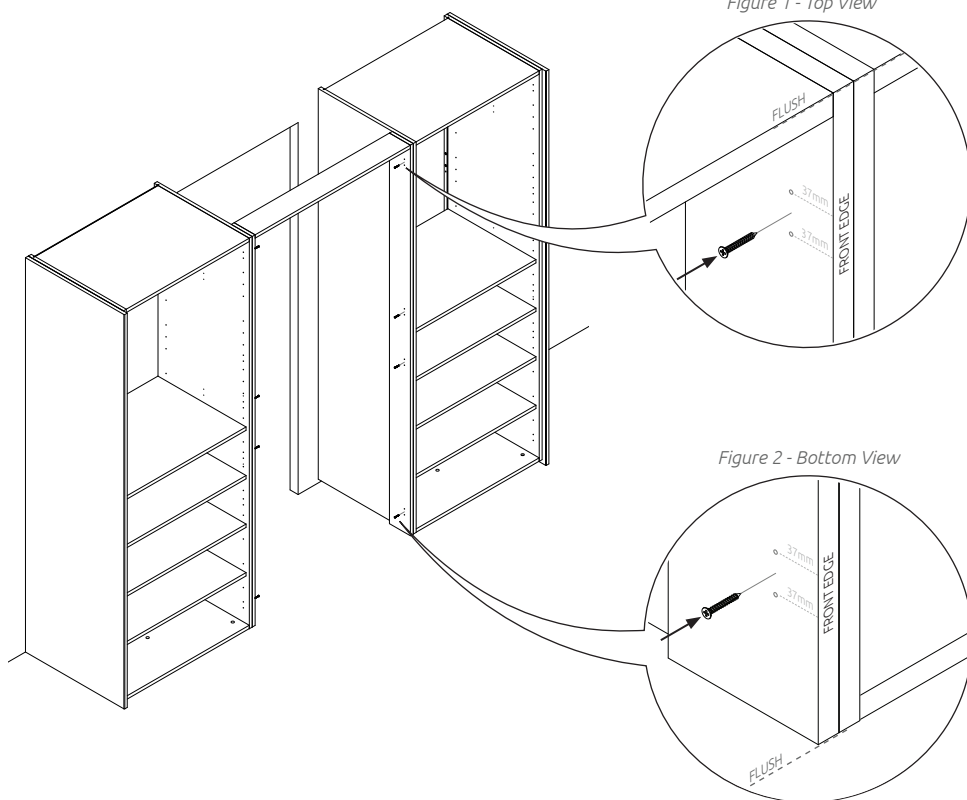

Step 6.




Attach hinge plates onto filler 1 and 2 as shown using 2 screws already in hinge plates.


Ensure the plates are aligned with the pre-marked holes before securing.


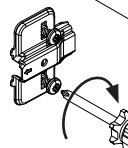


Walkthrough Doorway Fitting Guide

Hinge Attachment and Adjustment

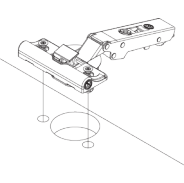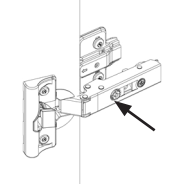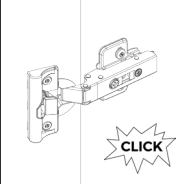	Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.  <i>Hinge dowels</i>	
		Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.		

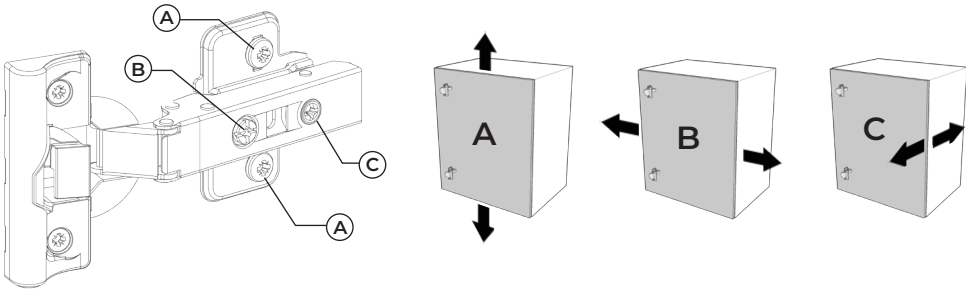

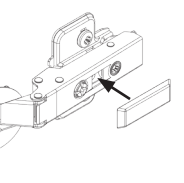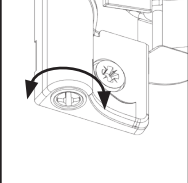	Step 4. Fit cover caps to hinges and adjust soft-close to suit.	
 The top and bottom hinges MUST be adjusted to the SAME STRENGTH.		