


FEATURE UNIT

wren


Bedside Feature Unit Fitting Guide

FI.PK.BED.222.025



Supplied in pack:



(x 8)
30mm Screw

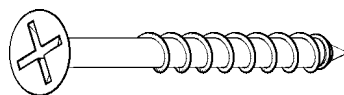

(x 30)
45mm Screw

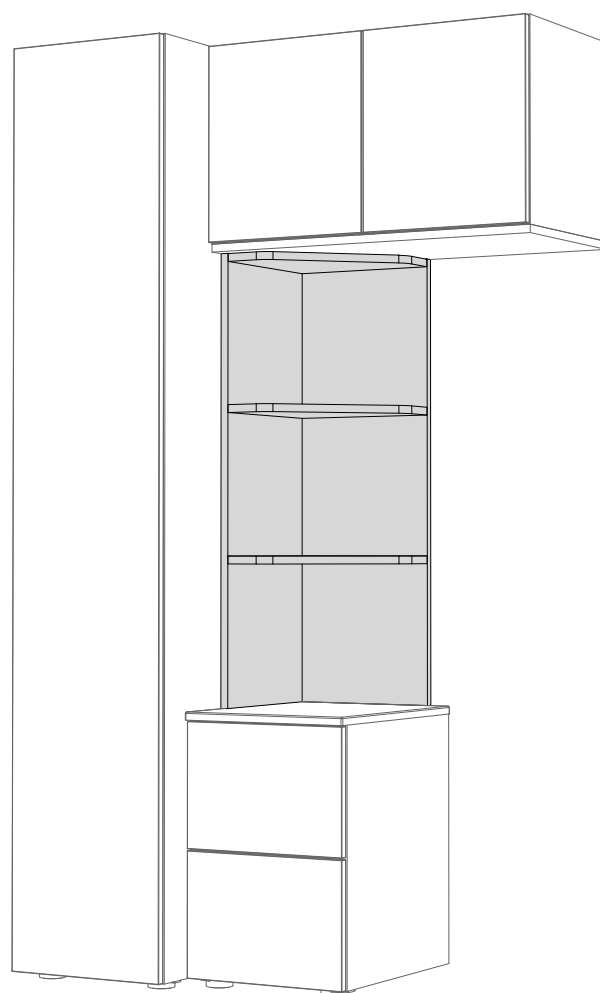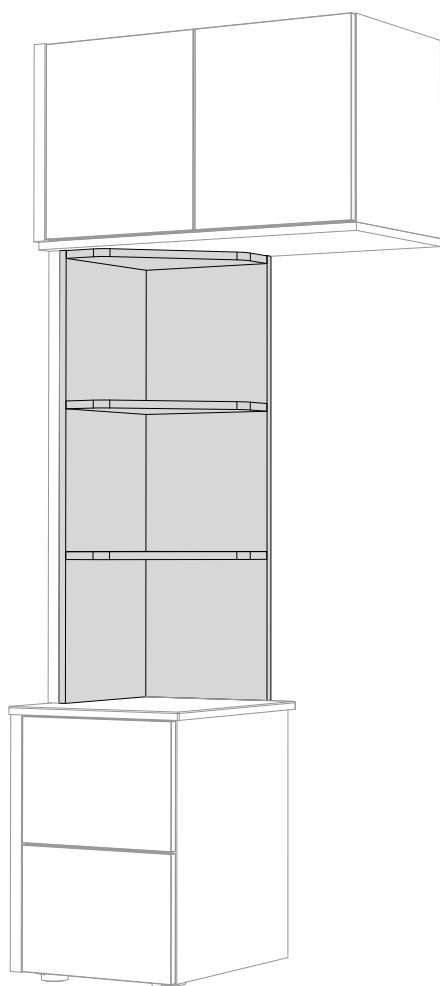

FEATURE UNIT

Bedside Feature Unit Fitting Guide

FI.PK.BED.222.025

wren

Step 1.

Secure the side and the back panel together using 6 x 45mm screws provided through the pre drilled holes.
(See Fig 1)

Step 2.

Position the shelves and secure in place using 8 x 45mm screws per shelf through the pre-drilled holes.
(See Fig 2)

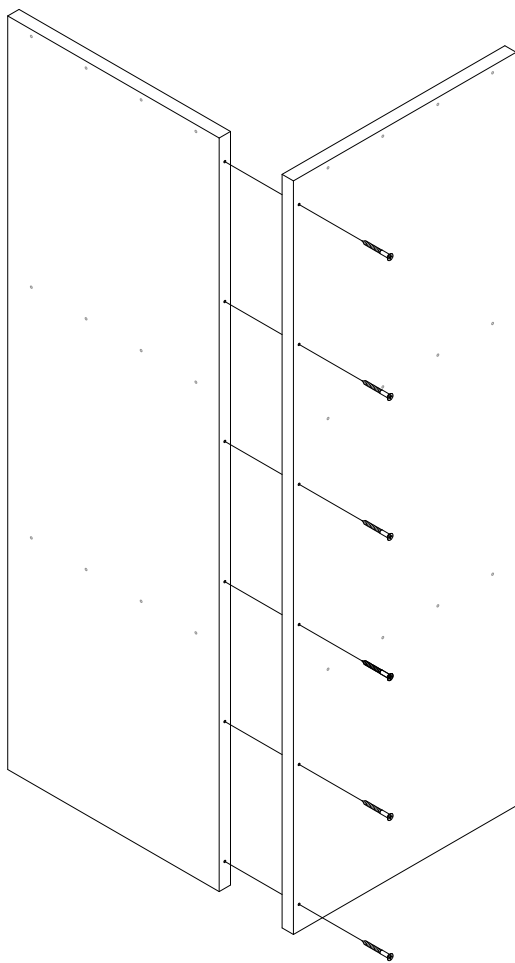


Fig 1.

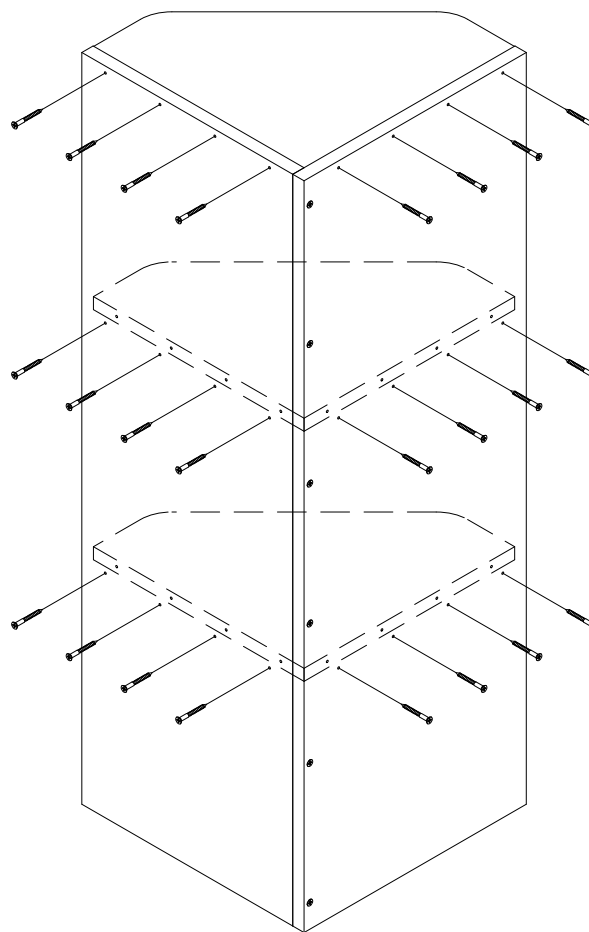


Fig 2.

FEATURE UNIT

Bedside Feature Unit Fitting Guide

FI.PK.BED.222.025

wren


Under Robe Decor Placement.

A - Under Robe Decor - Full depth of bridging unit.

B - Pelmet / Cornice installed in line with frontal, under robe decor to the back of pelmet.

C - Modern Pelmet installed upside down this will conceal the raw edge of the pelmet and decor. Pelmet aligned with frontal.

D - Traditional Pelmet / Cornice installed in line with front of unit, under robe decor to the back of pelmet.

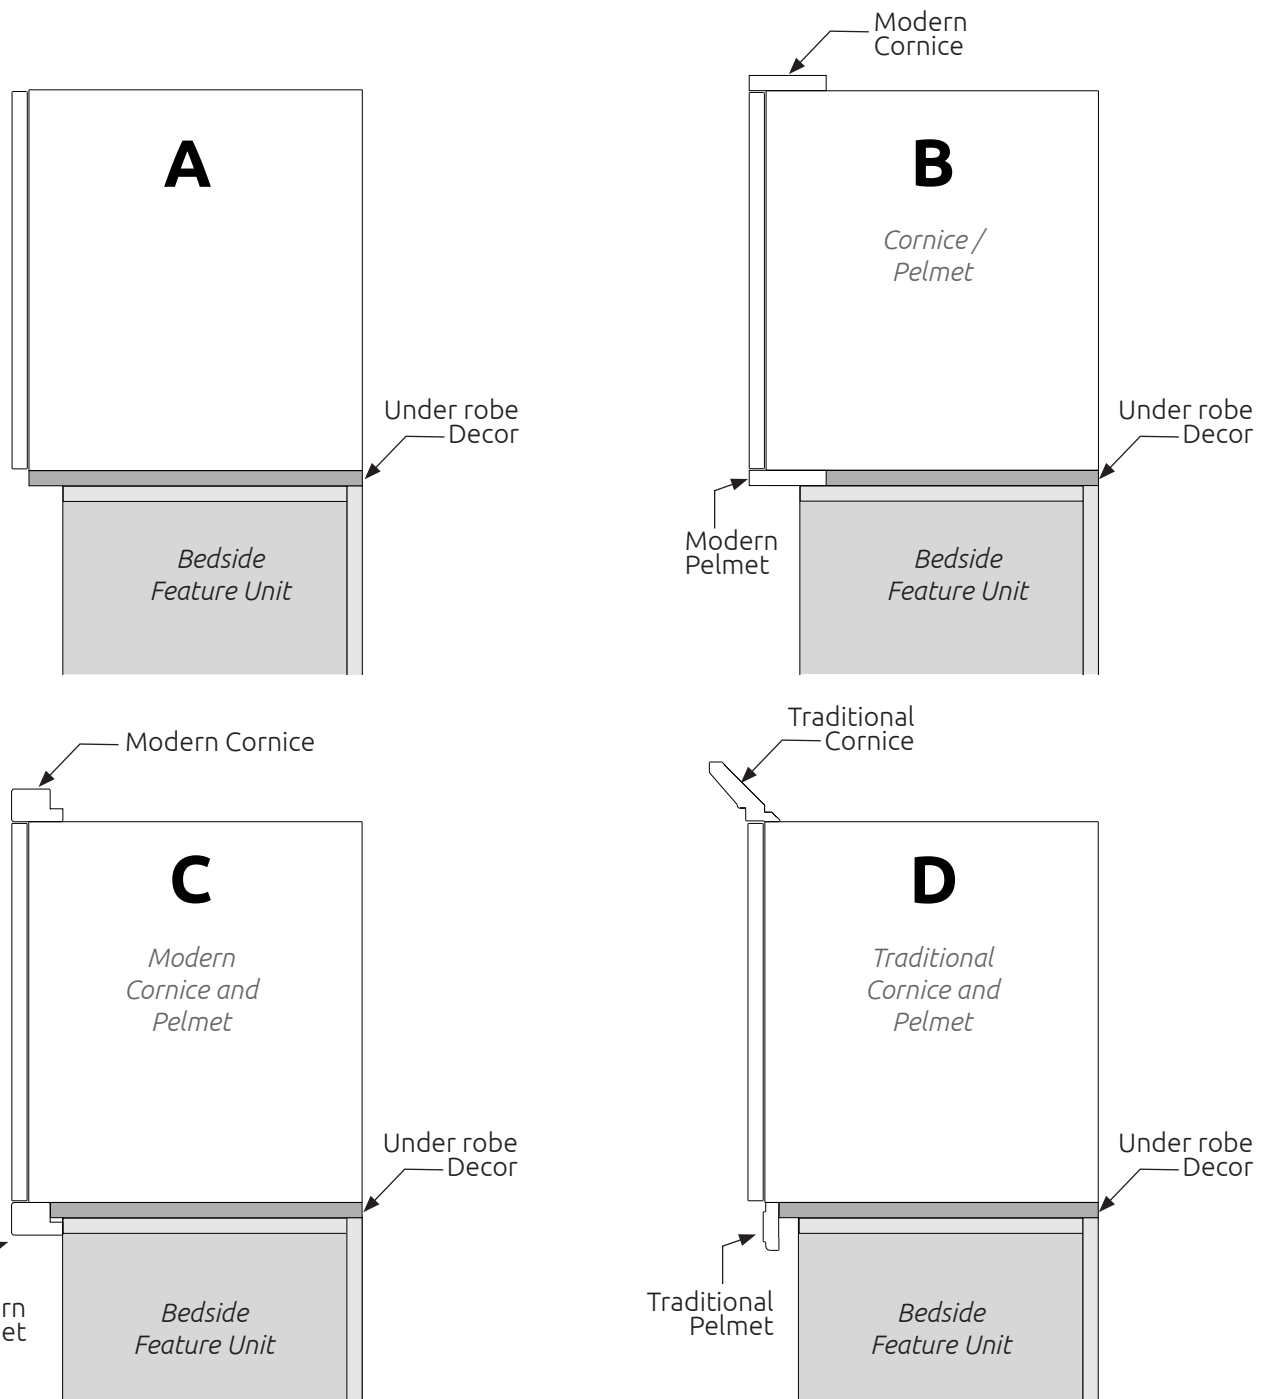

FEATURE UNIT

wren

Bedside Feature Unit Fitting Guide

FI.PK.BED.222.025

Step 3.

Fit Chest and Bridging units as specified with the supplied instructions.
Fit all required Decor panels and chest tops.
(See Fig 3)

Step 4.

Insert feature unit into the opening and secure to all possible adjoining units and wall. (See Fig 4)
(If the unit is next to a wall, attach fillers using standard procedure.)

Screws for securing to walls are not provided.

Cover screw heads using cover stickers provided.

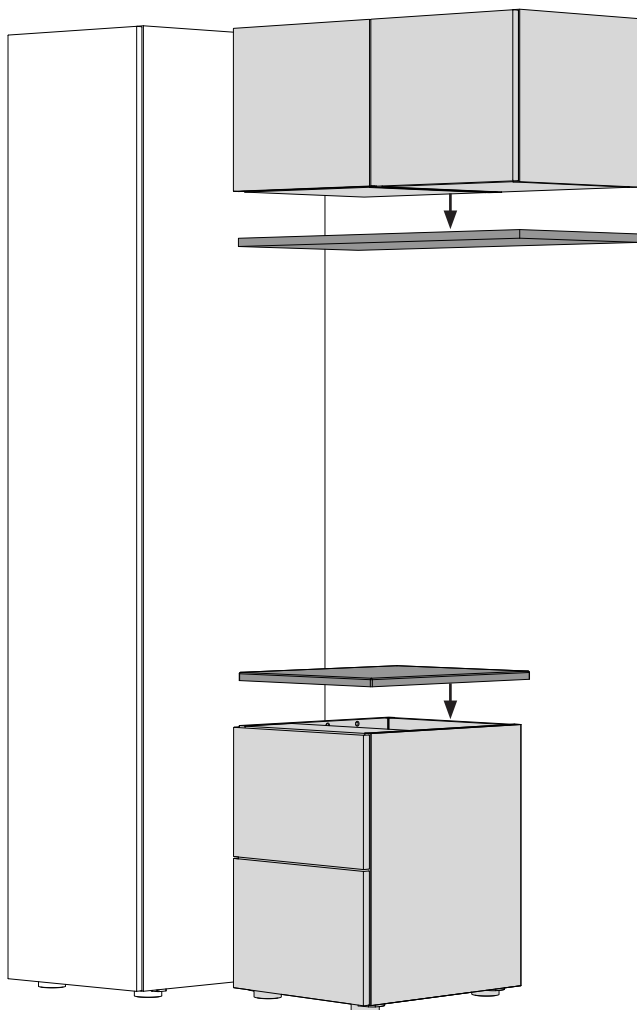


Fig 3.

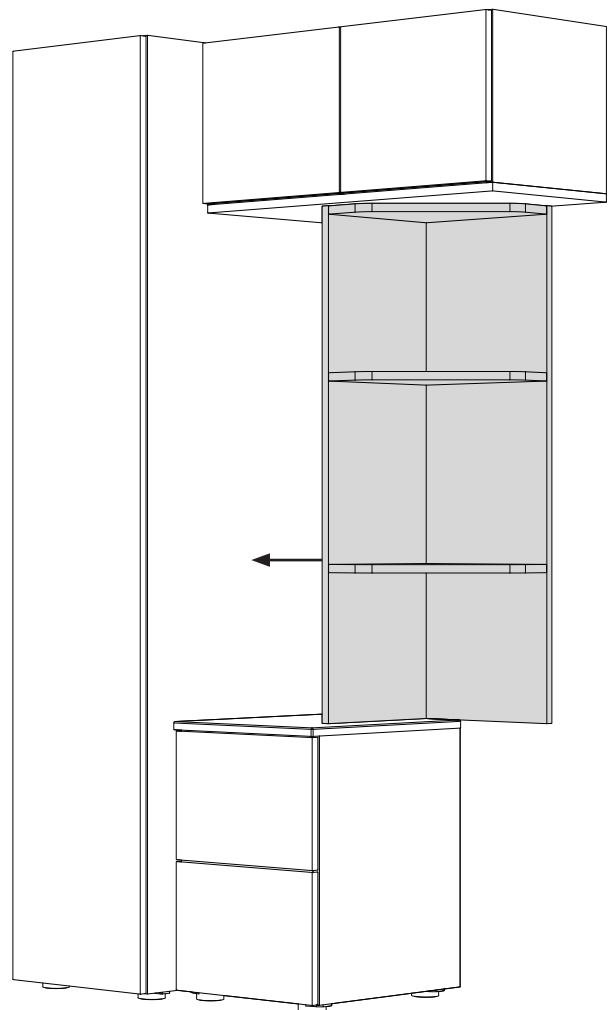


Fig 4.