


BOB'S

Discount Furniture®

Jensen White Bathroom Cabinet 2314003001

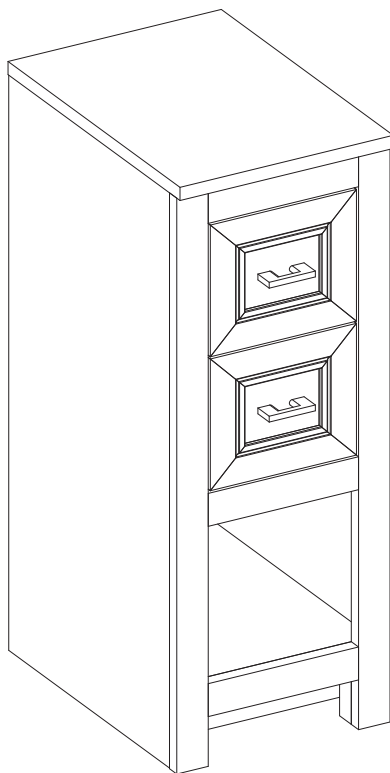


WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

TTT-20641

MADE IN VIETNAM

PACKAGE CONTENTS

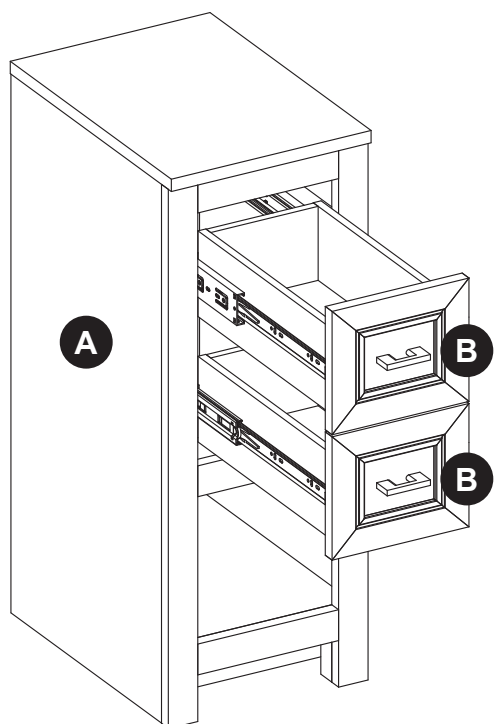

PART	DESCRIPTION	QUANTITY
A	Cabinet	1
B	Drawer (preassembled to Cabinet (A))	2

HARDWARE CONTENTS (NOT SHOWN ACTUAL SIZE)

AA



Touch Up Pen
Qty. 1

BB



Screw
Qty. 12

CC



Handle (Options)
Qty. 2

SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- There are several assembly steps, including unpacking, that require two adults.

CAUTION

- Before installation, carefully use scissors or utility knife to cut and unwrap all parts. Make sure you DO NOT discard the hardware.
- Follow these instructions closely, take your time, and use care while assembling this floor cabinet.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Installation Time: 20 minutes.

Tools Required for Installation (not included): Phillips screwdriver, utility knife or scissors, power drill with drill bit.

Helpful Tools (not included): Measuring tape, level

INSTALLATION INSTRUCTIONS


1. Remove the drawers (B) preassembled in cabinet (A) by fully extending drawers. Locate the black plastic levers on the metal glide tracks at the left and right sides of the drawer box. To disengage the drawer box from the glides, simultaneously push down the right plastic lever and push up the left plastic lever while gently pulling out the drawer.

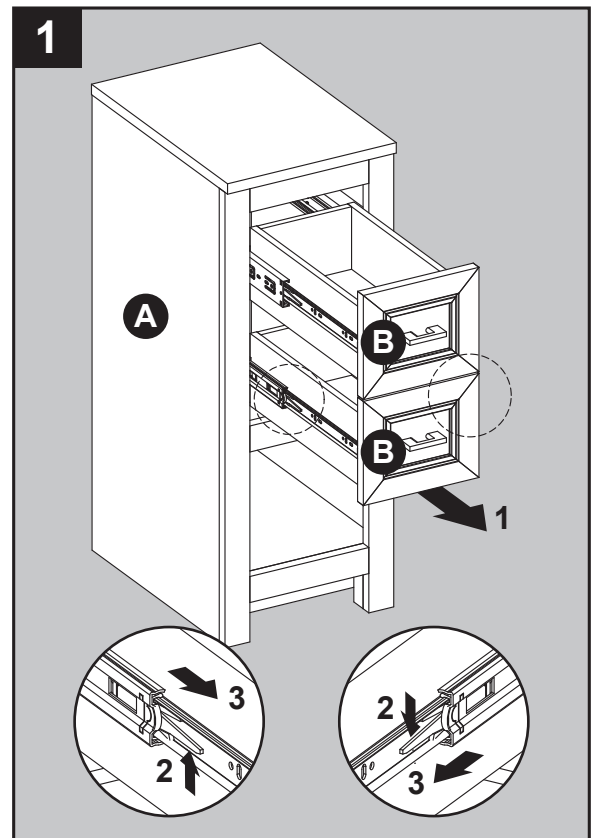

INSTALLATION INSTRUCTIONS


2. Clean area where the cabinet (A) will be permanently located prior to beginning installation, ensuring the cabinet (A) will not interfere with any plumbing or electrical lines once mounted.

Locate wall studs and mark locations. With the help of another adult, place completed cabinet assembly in its final location. Adjust the height of the cabinet (A) by twisting the adjustable leveler foot pins on the bottom of each leg. Twist clockwise to decrease height or twist counter-clockwise to increase cabinet height. Using hardware appropriate for your wall type such as cabinet screw or toggle bolt (not included), secure cabinet (A) to preferably two wall studs anywhere through the cabinet mounting bar. Be careful not to disturb any electrical or water lines that may be concealed in the wall.

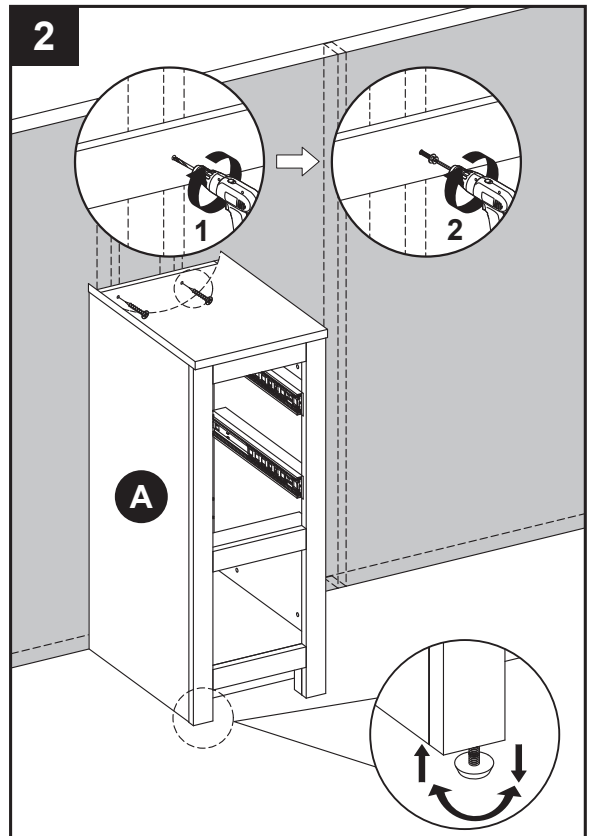

3. **For installation in combination with one or more vanity with Top (Model #2621VM-25-400/421; 2621VM-31-400/421, sold separately):**

With the help of another adult, firmly push the cabinet (A) and vanity together. Then, screw screws (BB) through the pilot holes on the inside of the cabinet (A) into the vanity. Repeat this step on the other side if using more than one vanity or cabinet.

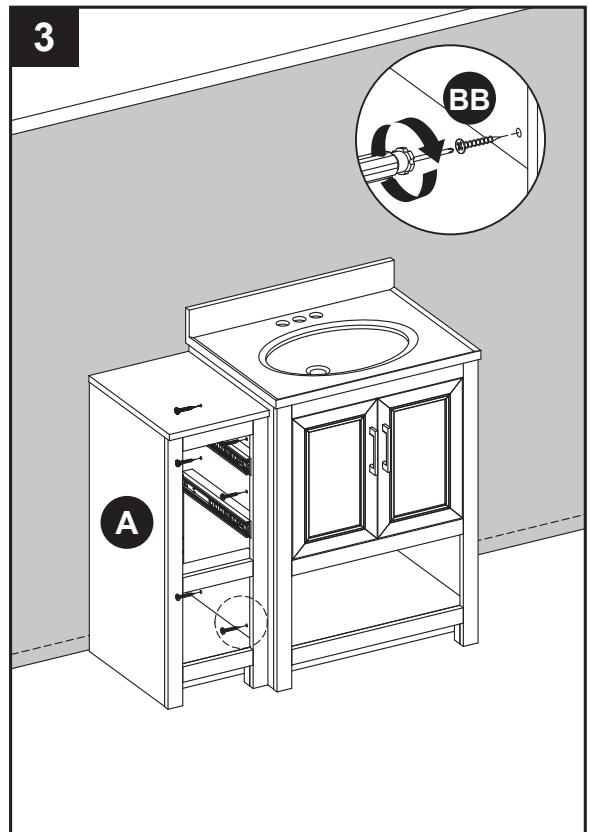

Hardware Used


BB

Screw



x 12


INSTALLATION INSTRUCTIONS

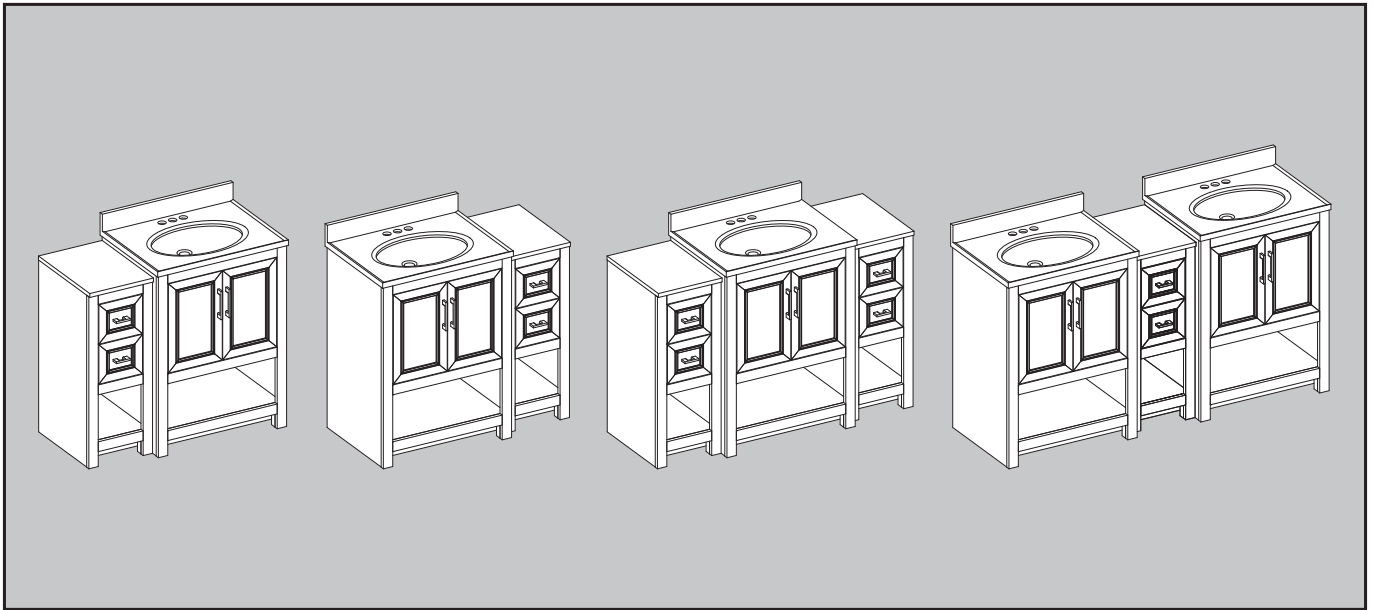

Refer to the options above to install cabinet (A) to the vanity.

4. To reinstall drawers (B) into the cabinet (A), fully extend metal glide. Carefully align the drawer glide track (attached to side of the cabinet) with glide track (attached to side of the drawer box). Making sure the drawer is aligned and centered onto glide, gently push drawer. Keep drawer box centered and straight.

CAUTION: DO NOT force drawer or damage to glide may occur. If drawer does not slide in with ease, remove and try again from the start.

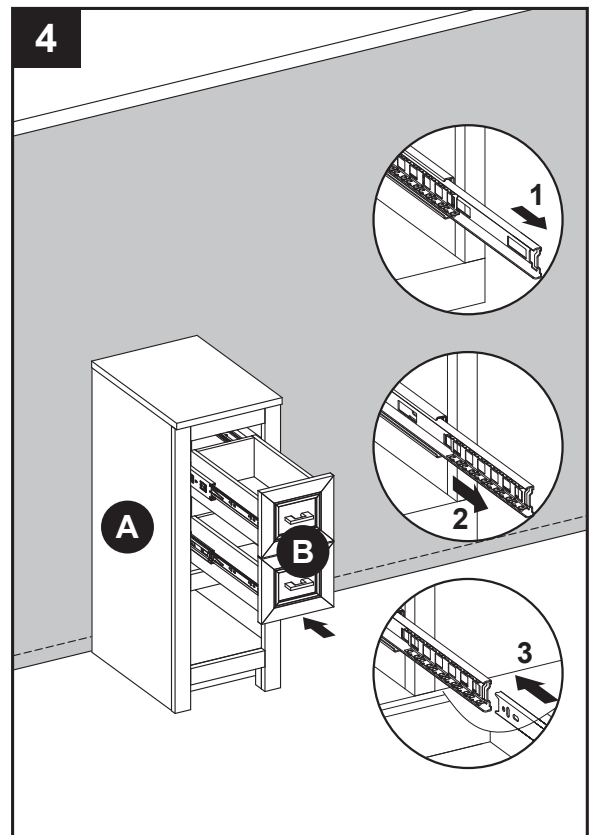

INSTALLATION INSTRUCTIONS

Note: This cabinet comes with two different handle options.

5. One set of handles (CC) are packaged separately in the box. If you would like to switch handles, simply remove the existing handles and attach the other finish, as illustrated in the diagram.

Hardware Used



Handle



x 2

