



**EXTREME
DUTY**

**Engineered durability,
extreme duty 4x4 performance.**



Application: NIP54200-XPB

Fitting Instructions for Nissan Navara NP300 Twin Turbo

1. Remove the standard exhaust from the DPF (Diesel Particulate Filter) backward and retain the steel gasket from the DPF Flange.
2. Remove and retain all rubber exhaust hangers and securing bolts from vehicle.
3. Fit standard exhaust rubber hangers to the new exhaust with the arrow on the standard rubbers pointing to the front of the vehicle.
4. Fit O² and exhaust temp sensor plugs to the first intermediate pipe.
5. Fit the first intermediate pipe to the DPF with the retained gasket, supplied M10x1.25 nuts and retained rubber hanger bolts and tighten finger tight.
6. Fit the muffler/muffler replacement pipe to the first intermediate pipe with four M8x1.25x35mm bolts, eight M8 flat washers and M8x1.25 lock nuts tighten, finger tight. Refer Figure 1.

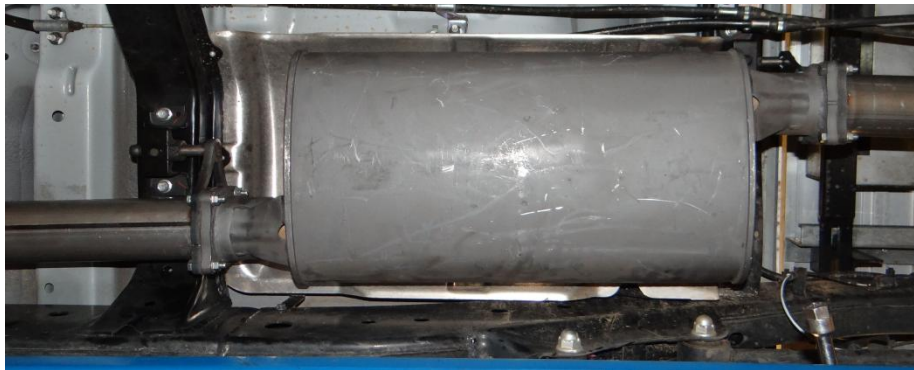


Figure 1.

7. Fit the rear intermediate pipe/over axle pipe to the muffler/muffler replacement pipe with four M8x1.25x35mm bolts, eight M8 flat washers, M8x1.25 lock nuts and retained rubber hanger bolts and tighten finger tight.
8. Fit tail pipe to vehicle with four M8x1.25x35mm bolts and eight M8 flat washers tighten M8x1.25 lock nuts, finger tight.
9. Tighten all bolts and nuts from front to back of the vehicle and test for leaks.

NOTE: WE RECOMMEND FITTING THIS PRODUCT EITHER ON A 4 POST HOIST OR ON THE GROUND

ProMan

A ROCK SOLID REPUTATION

70-84 Miller Street, Epping, Victoria 3076
Phone (+61 3) 8401 8500 Facsimile (+61 3) 9401 4869



redbackexhausts.com.au