
ERICH JAEGER

Installation instructions

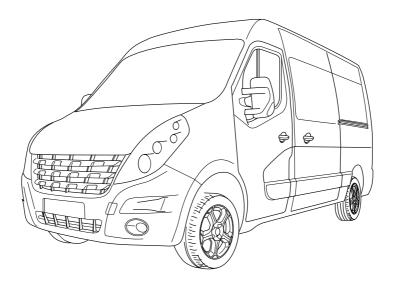


750058

RENAULT Master 3


11/12 >>



SCAN FOR LATEST INSTRUCTIONS

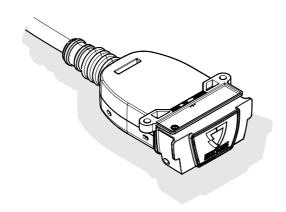











Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.


It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


750058a221119B8 1 / 16

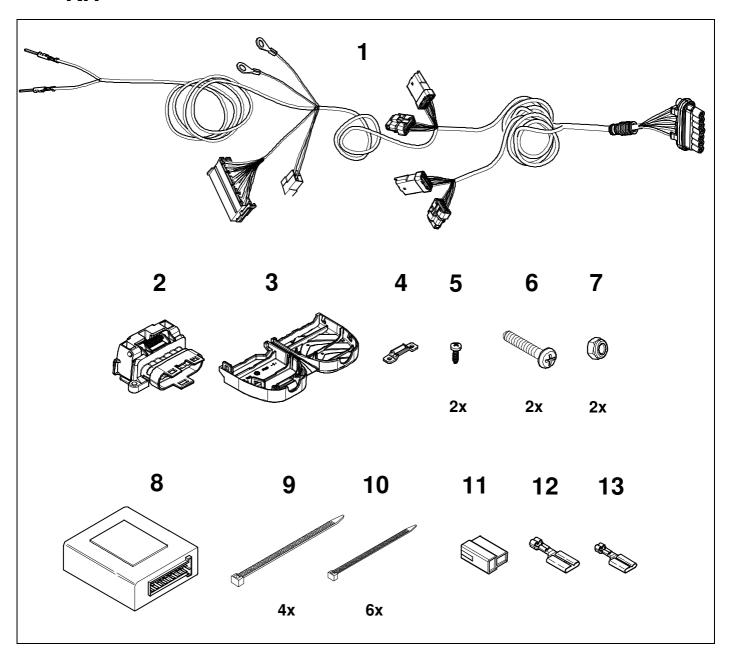



TOOLS

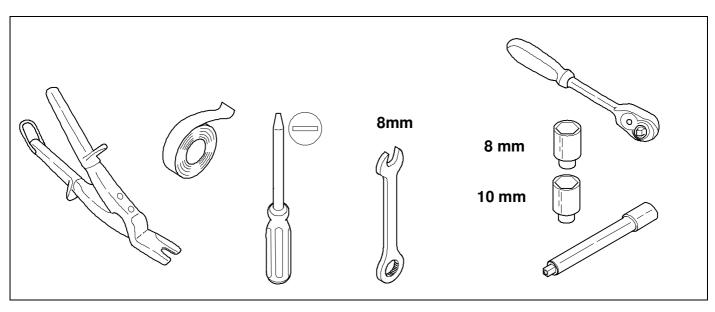


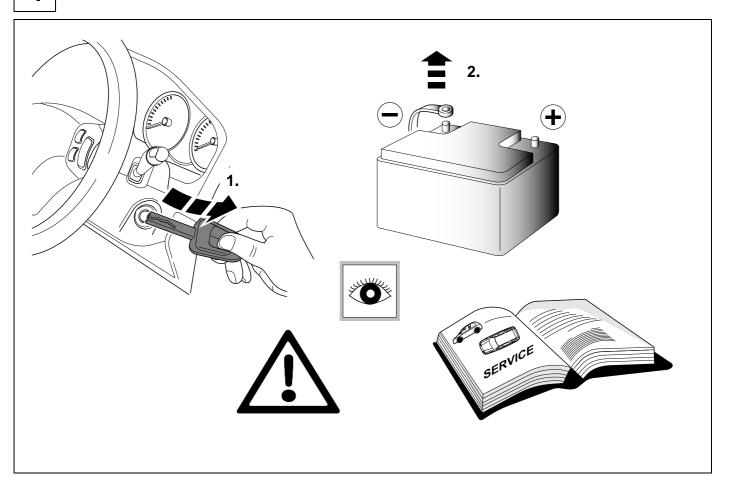


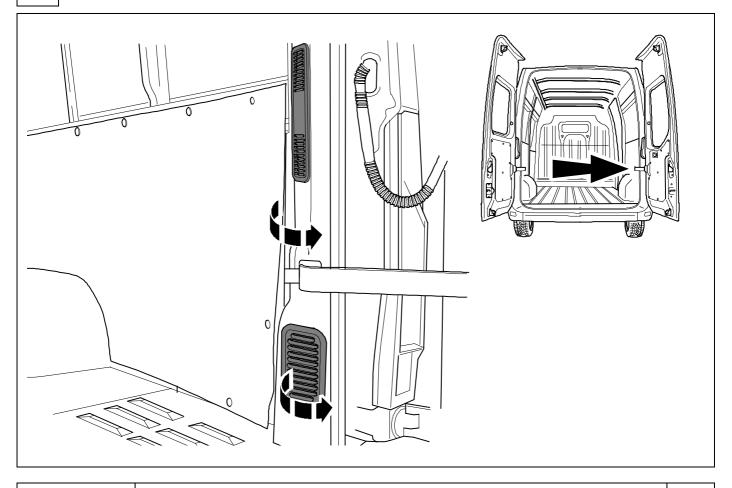


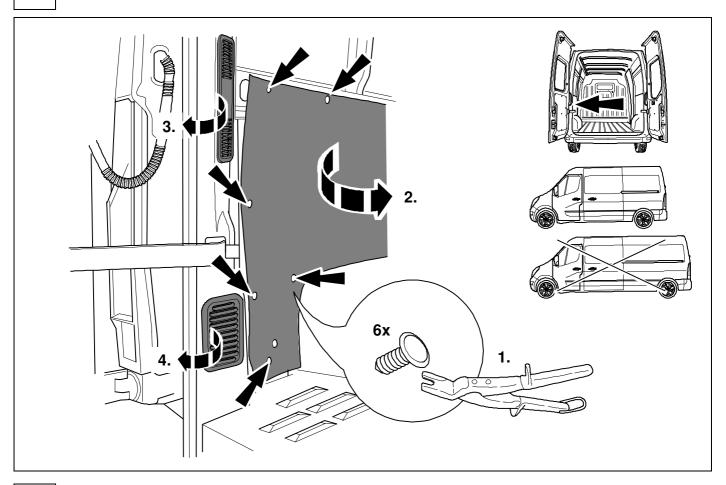


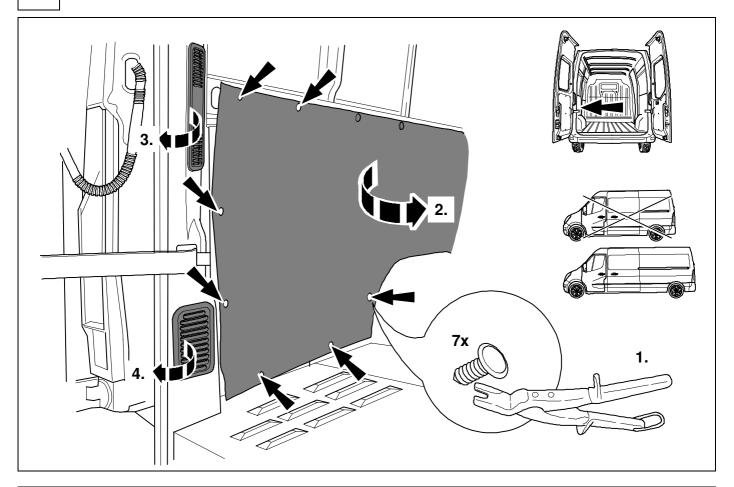


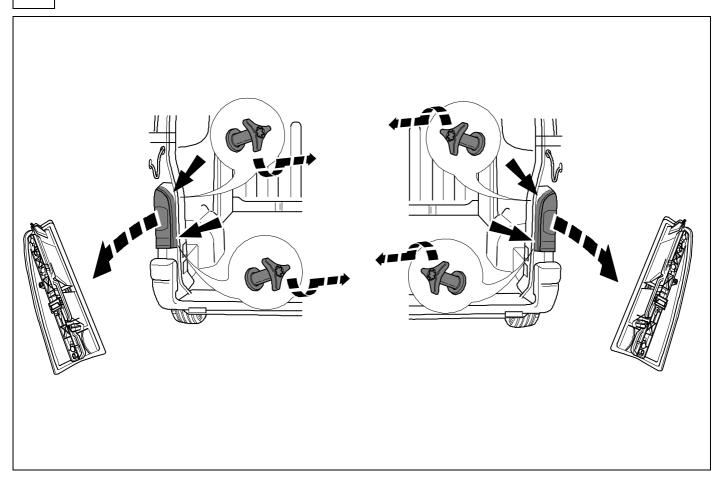

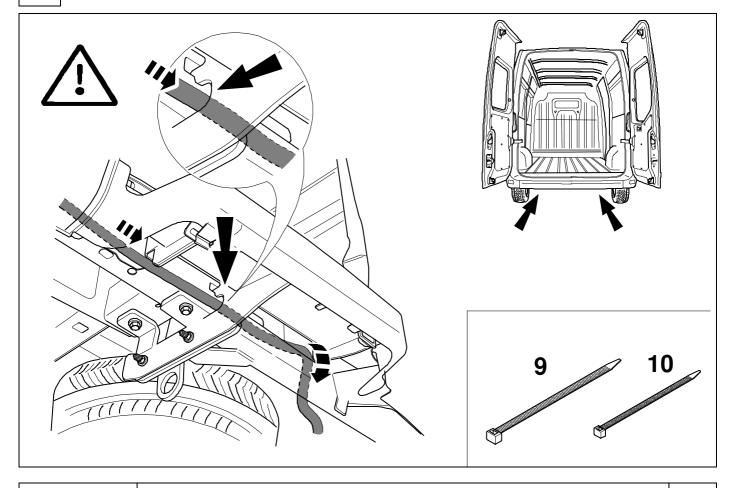


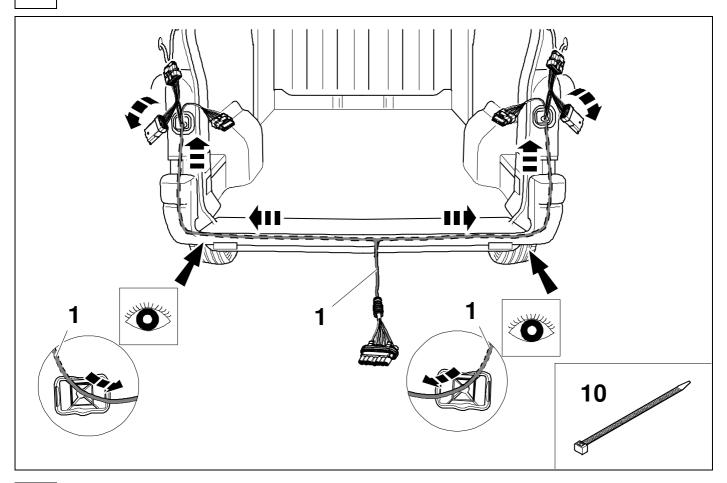


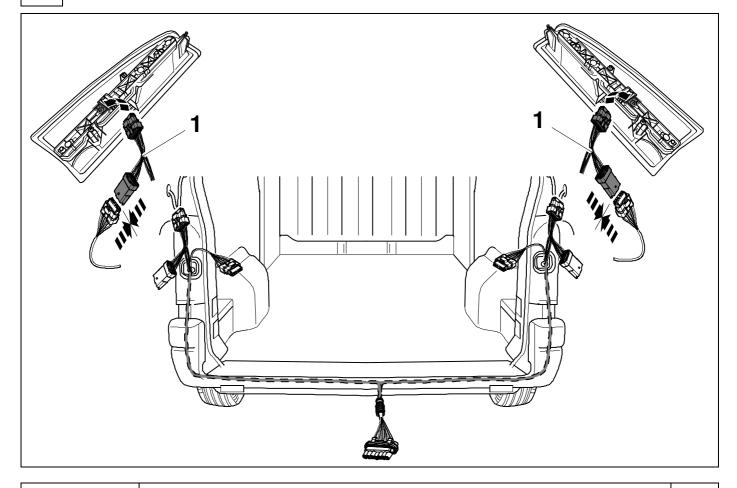


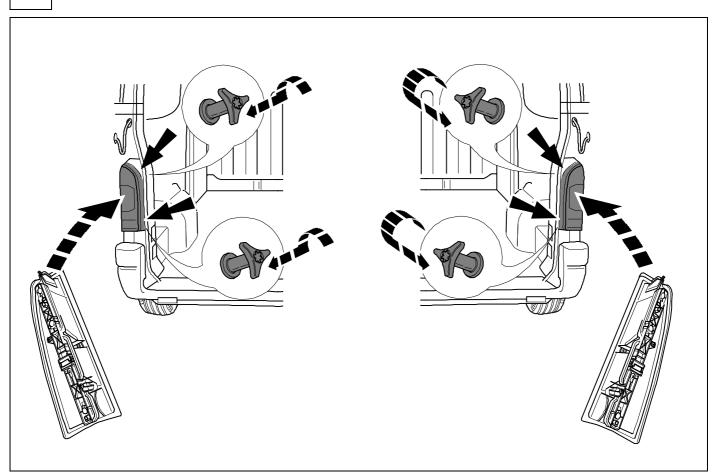





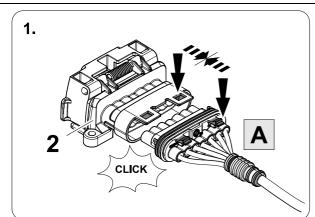


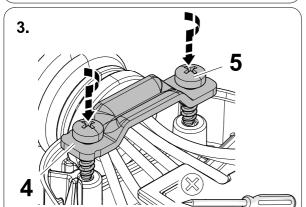


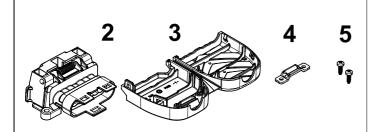

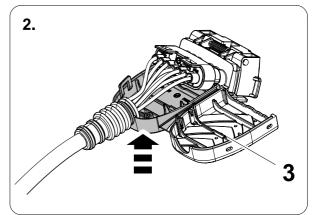

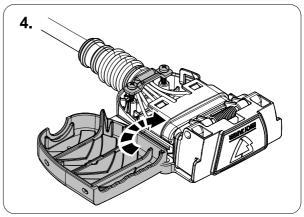

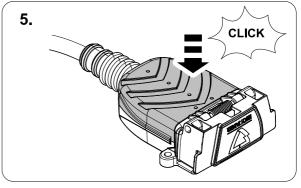


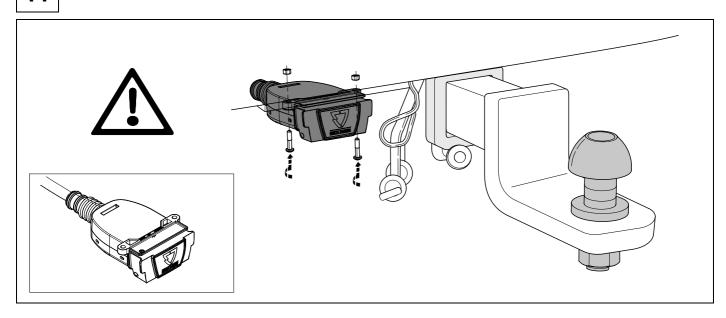






1	ye	\Diamond
2	bk	1 3 2 4 R
3	wh	÷
4	gn	ightharpoonup
5	bu	
6	rd	Stop
7	bn	


13	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
GB	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

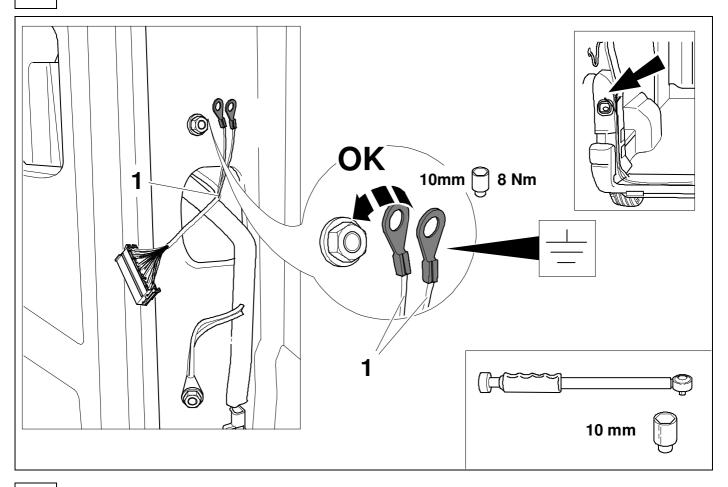


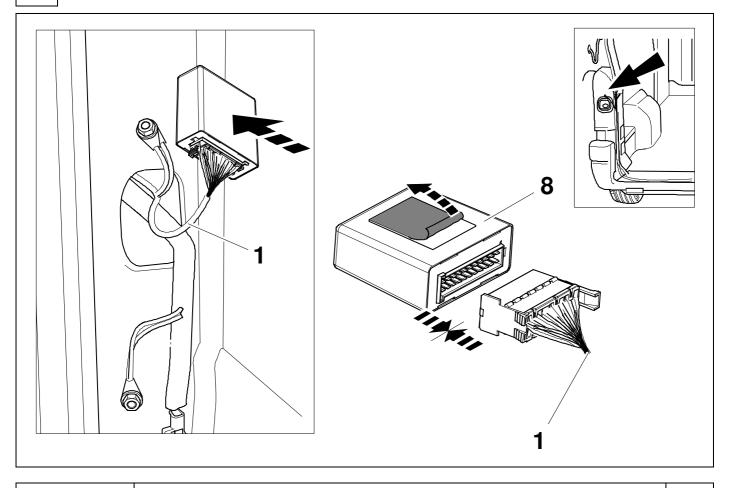


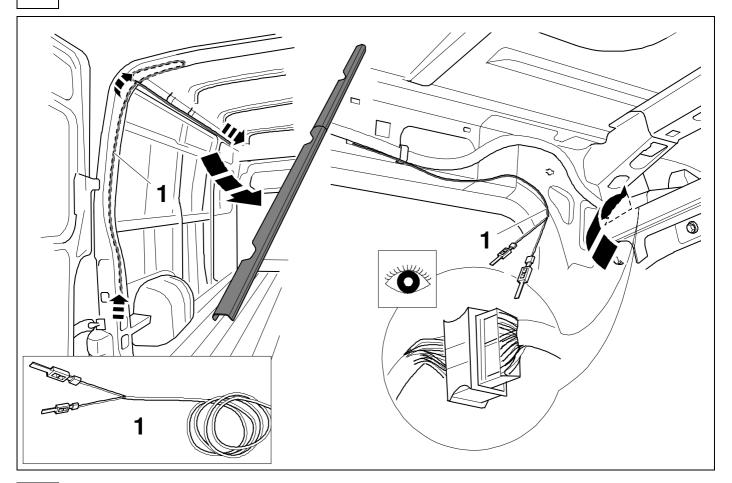


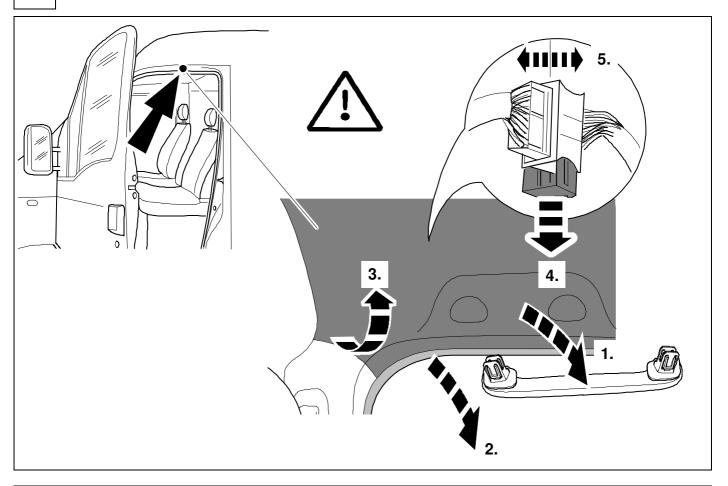


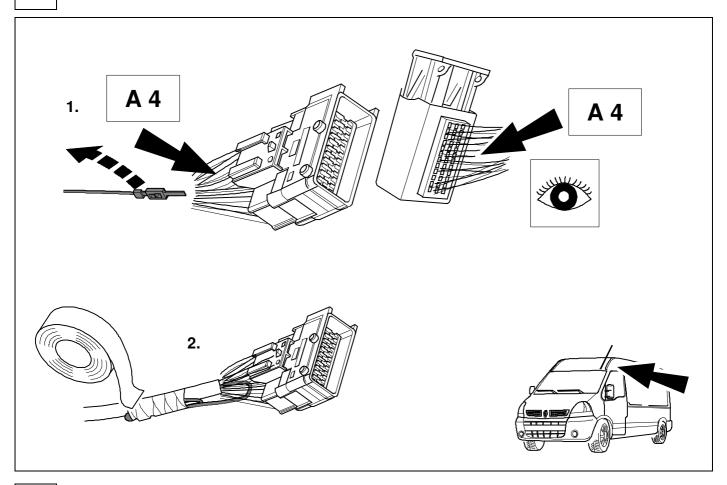

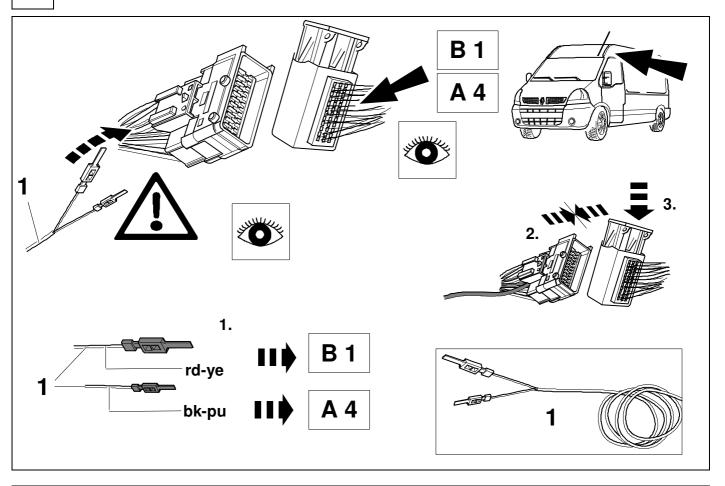

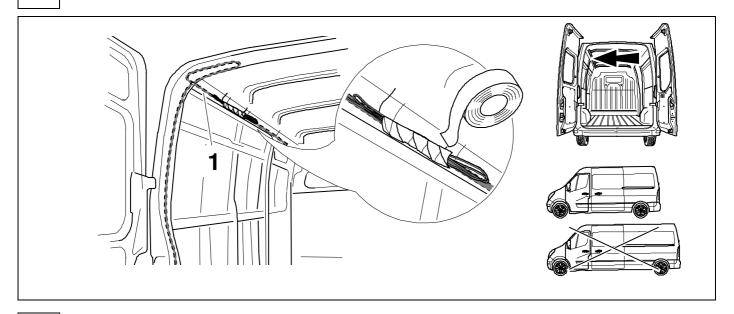

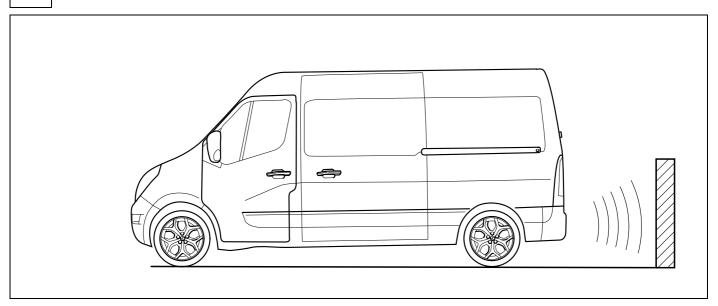

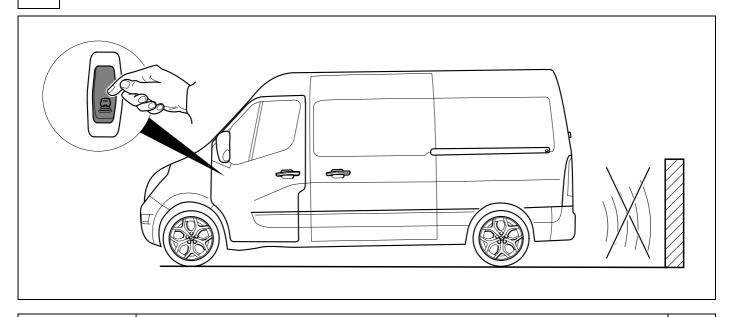

23 OPTIONAL







13





Trailer Brake Preparation






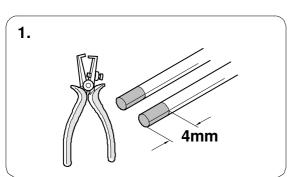


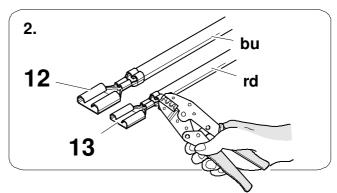

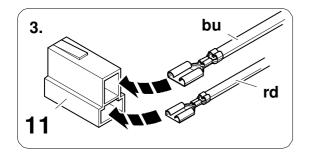


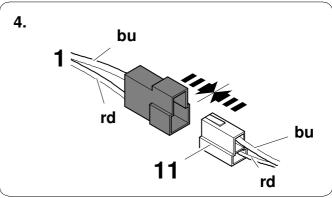


11 12 13

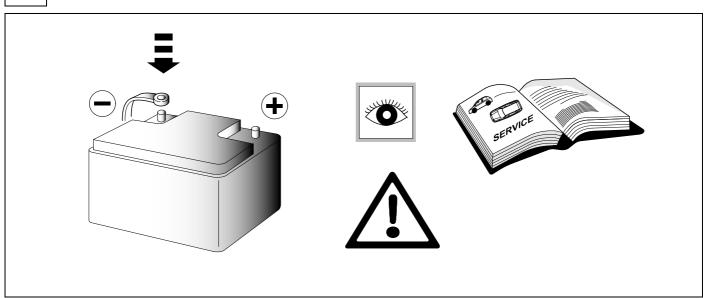


25 CHECK ALL LIGHTING FUNCTIONS

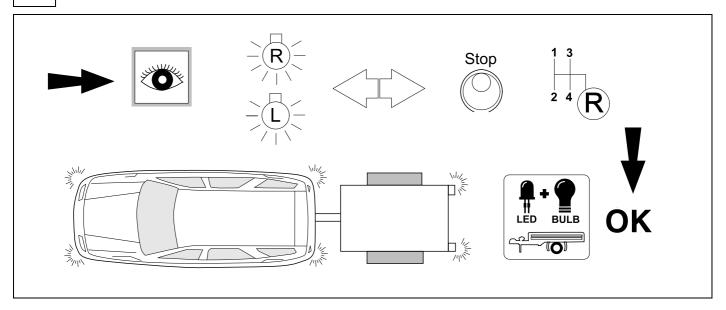

26 CHECK BULB OUT DETECTION

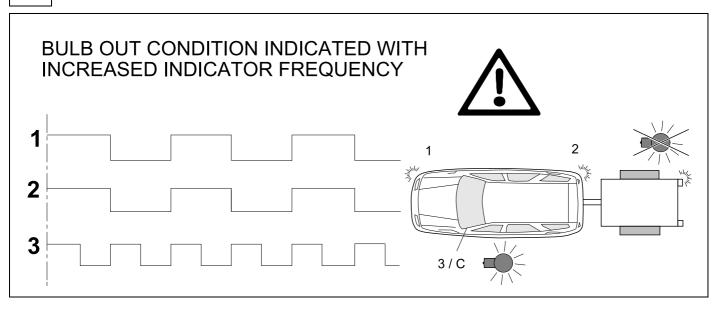

750058a221119B8 15 / 16

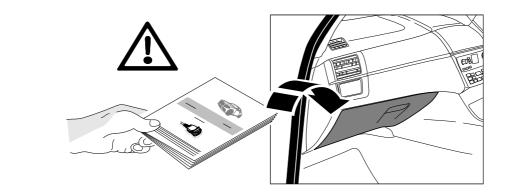



Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.

750058a221119B8 16 / 16