



## HOLDEN COMMODORE VE UTE 10/07 - 04/13

PART NO.

**UNT275RS****Tools Required:**


Trim release tool, 10mm Socket, Ratchet &amp; Side cutters, Flat bladed screwdriver.

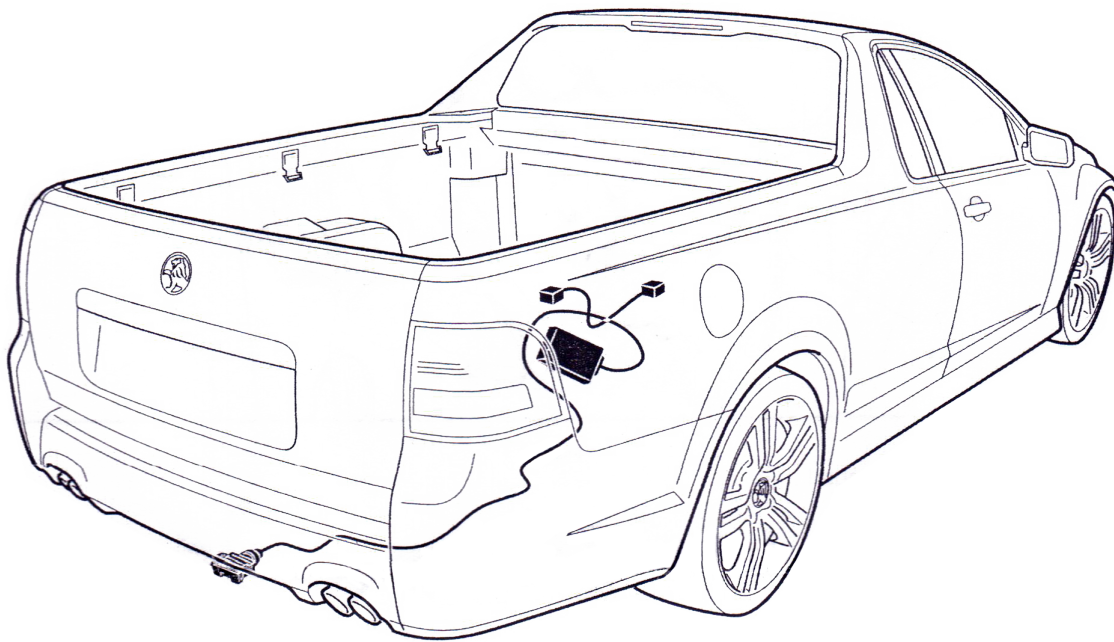

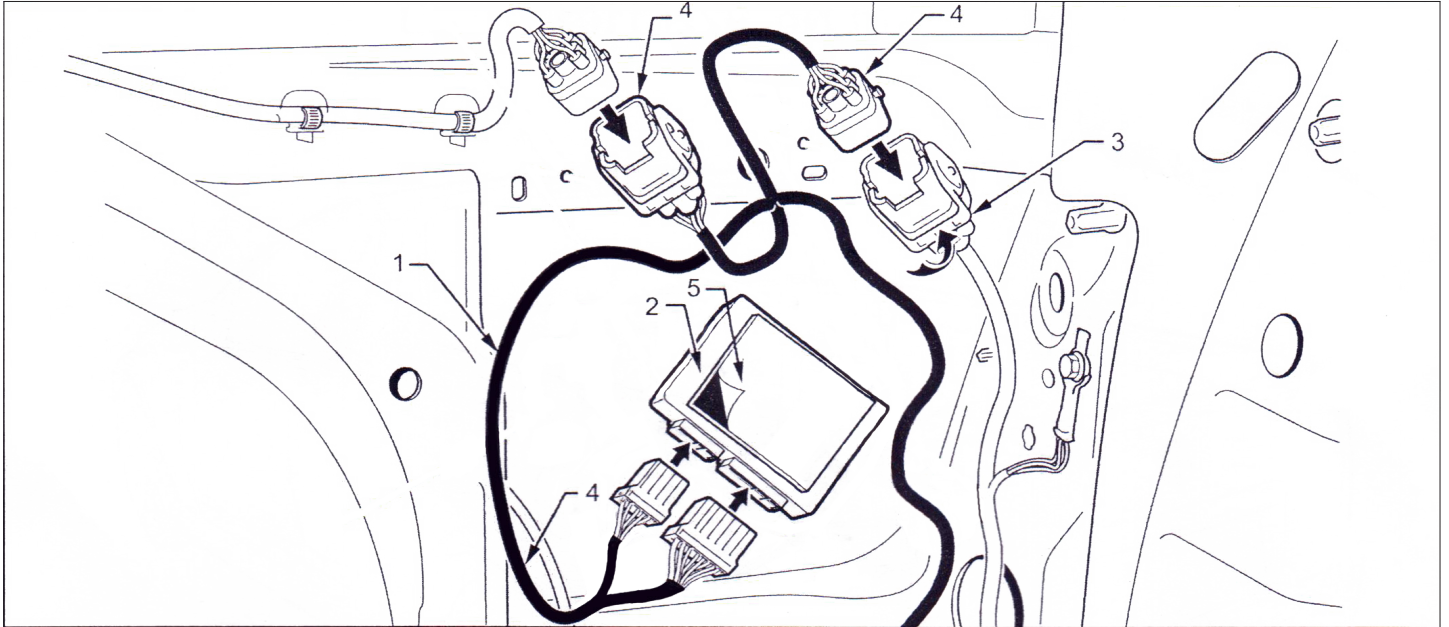


1. Open the rear RHS access cover in the Ute tub liner.
2. Connect the trailer harness (1) into the control box (2).
3. Push the tab to allow the vehicle body harness tail lamp connector locking lever (3) to rotate and separate the two halves of the connector.
4. Connect the trailer harness connector (4) between the two halves of the tail lamp connectors and refit the connector to the vehicle sheet metal.
5. Clean the outer face of the tub inner sheet metal.
6. Remove the backing paper from the adhesive pad (5) and apply it to the vehicle sheet metal, push firmly for 10 seconds to ensure permanent adhesion.

**Note:** If the vehicle wiring is different to the above wiring image please refer to Appendix A.

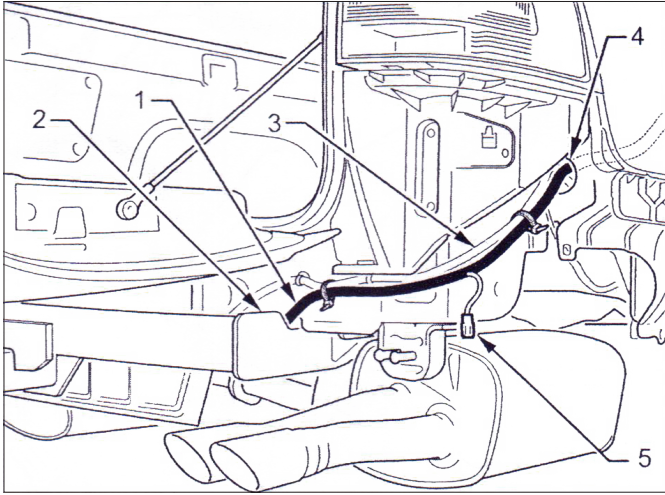


1. Feed the end of the harness (1) up over the top of the RHS towbar end plate (2) and cable tie to the vehicle body harness (3).
2. Follow the body harness around the corner of the panel and up through in the vehicle tub (4).

**Note:** If the vehicle is fitted with Reverse Aid parking system (RPS) connect the round connector (5) to the RPS harness connector.

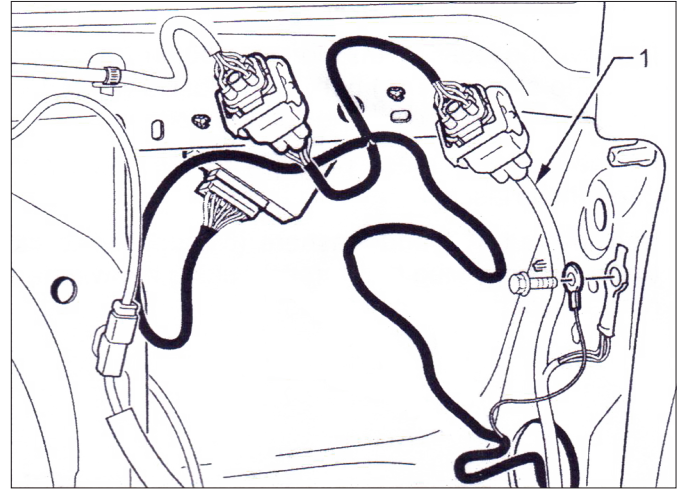

3. Remove the vehicle earthing bolt and add the trailer harness earth to the earthing point.
4. Cable tie the harness to vehicle body harness (3).
5. Refit all parts removed in reverse order.
6. Place the fitting instructions in the glove box of the vehicle.

## APPENDIX A:

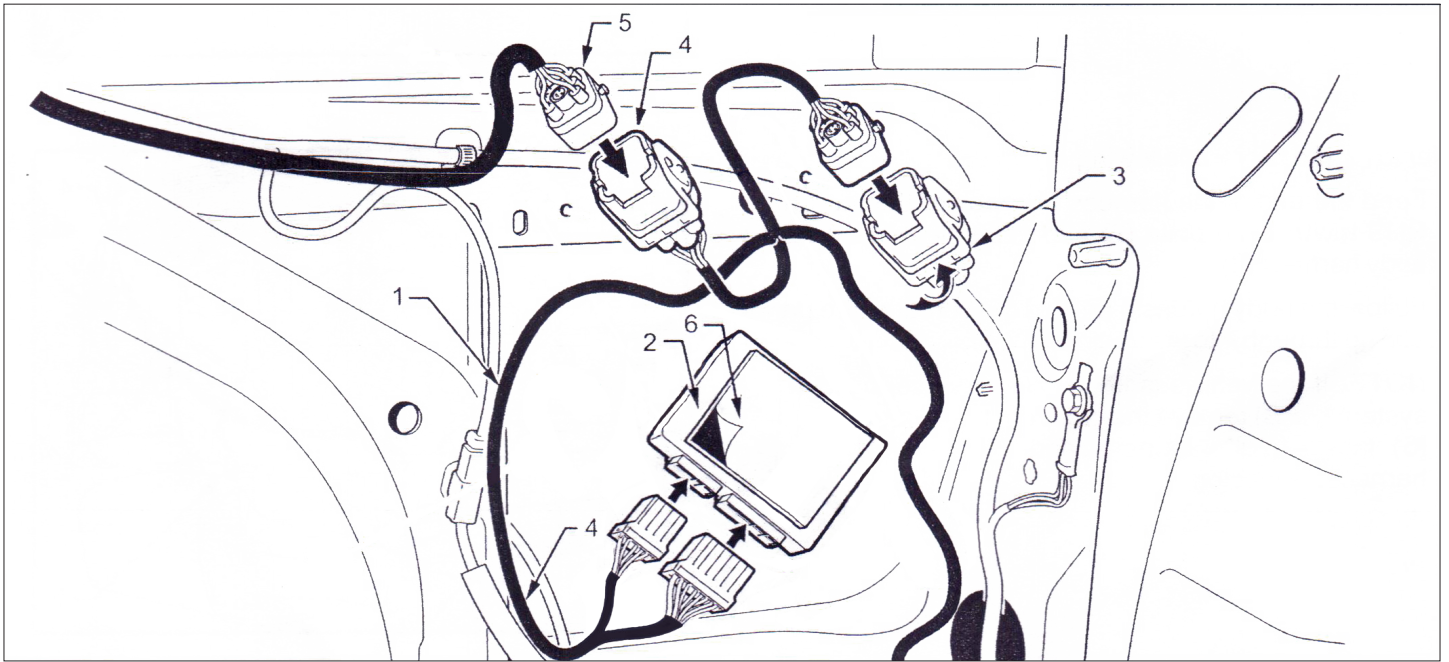

1. Open the rear RHS access cover in the Ute tub liner.
2. Connect the trailer harness (1) into the control box (2).
3. Push the tab to allow the vehicle trailer harness breakout connector locking lever (3) to rotate and separate the two halves of the connector.
4. Connect the trailer harness connector (4) to the breakout connector (5) and fit the breakout connector cover to the spare connector of the trailer harness.
5. Clean the outer face of the tub inner sheet metal.
6. Remove the backing paper from the adhesive pad (6) and apply it to the vehicle sheet metal, push firmly for 10 seconds to ensure permanent adhesion.