

FITTING INSTRUCTIONS




PART NUMBER: **T2C593**

Mitsubishi Lancer Sedan & Hatch – 10/11 onwards

Towing Capacity 1000 Kg / Ball Load 100 Kg

Lug # L264

- 1) Remove 2 clips in underside of rear bar.
- 2) Remove 3 rubber mounts from rear muffler.
- 3) Mark cut-out and cut bumper bar (See Fig 1)

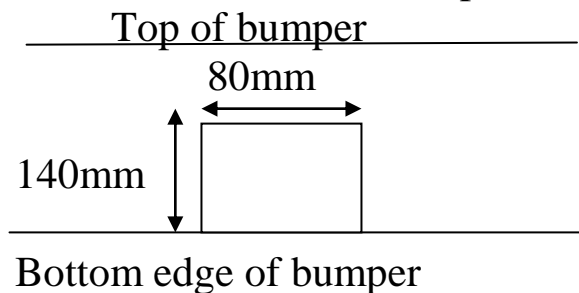

- 4) Remove exhaust and refit clips to bottom of bar.
- 5) Sit towbar against underside of chassis rail at rear of car.
- 6) Fit towbar.
- 7) Slide both 110mmx M12 bolts through chassis rail on both sides.
Fit nuts and washers.
- 8) Fit all 4x M10 35/40mm bolts through bracket upwards into captive nuts.
- 9) Tighten all bolts to torque listing below.
- 10) Fit tongue with bolts supplied.
- 11) Fit door sticker supplied to door.

FITTING INSTRUCTIONS

PART NUMBER: T2C593



RECOMMENDED ASSEMBLY

TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
M6	Nm 9.5
M8	21.7
M10	43.4
M12	77.3
M16	189.8