

FITTING INSTRUCTIONS

Toyota Rav 4 02/2006 – 01/2013 – T2T478



Max Towing Capacity: 1200kg

Towbar Weight: 18kg

Max Ball Load: 120kg


Wiring Harness Part #: UNT258



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T2T478	1	6.	M12 x 1.25 x 35 Bolt	4
2.	Ball Mount – L231	1	7.	M12 Flat Washer	4
3.	3/8" x 1½" Cup head bolt & nut	2	8.	M12 Shakeproof washer	4
4.	3/8" Shakeproof washer	2	9.	M16 x 2 x 40 Bolt	2
5.	Plate 40 x 40	2	10.	M16 Spring Washer	2

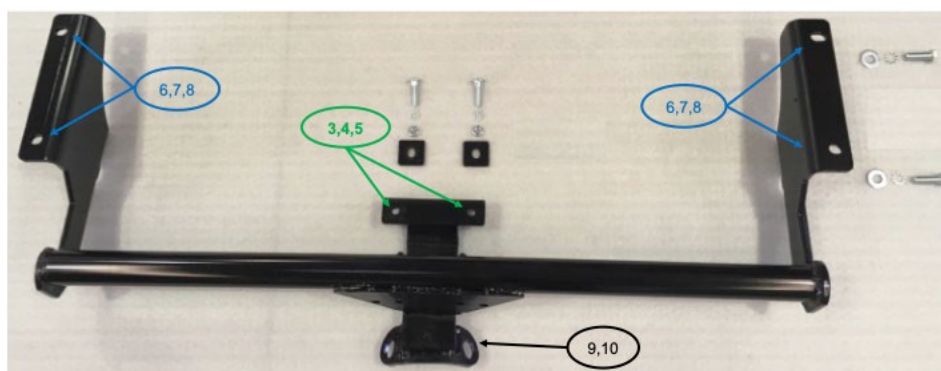

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Toyota Rav 4 02/2006 – 01/2013 – T2T478



Step 1	Remove Shipping Hook/s	
Instructions	Tools	Torque Spec
a. Remove all bolts from towbar, taking note of locations. b. Remove shipping hook/s from vehicle and discard. c. Remove scrivits from centre bottom support tabs. [Retain]	Spanners	

Step 2	Fit Towbar	
Instructions	Tools	Torque Spec
a. Fit towbar in place securing with M12 bolts and washers supplied, into existing captive nuts. b. From inside the vehicle remove trim across back of doorway and fold back floor lining. c. With holes in centre bracket as a guide drill holes into boot space, place cuphead bolts with plates provided through drilled holes and secure with nut and washers from under vehicle.	Spanners Trim Removal Tool Drill	

Step 3	Finishing Up	
Instructions	Tools	Torque Spec
a. Tighten all bolts with torque wrench to specified ratings. b. Refit scrivits to bumper support tabs c. Fit ball mount using M16 Bolts and washers supplied, and tighten. d. Attach Ratings sticker to drivers side door pillar	Torque Wrench	M12-103Nm M16-270Nm

FITTING INSTRUCTIONS

Toyota Rav 4 02/2006 – 01/2013 – T2T478



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com