

FITTING INSTRUCTIONS

Hyundai ix35 (2010-ON) – T2Z533




Max Towing Capacity: 1600kg	Towbar Weight: 17kg
Max Ball Load: 160kg	Wiring Harness Part #: UNT289



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar	1	6.	M16 x 2 x 40 Bolt	2
2.	Ball Mount – L269c	1	7.	M16 Spring Washer	2
3.	M10 x 1.25 x 35 Bolt	8	8.	Compliance Sticker	1
4.	M10 x Shake proof washer	8			
5.	M10 Flat Washer	8			

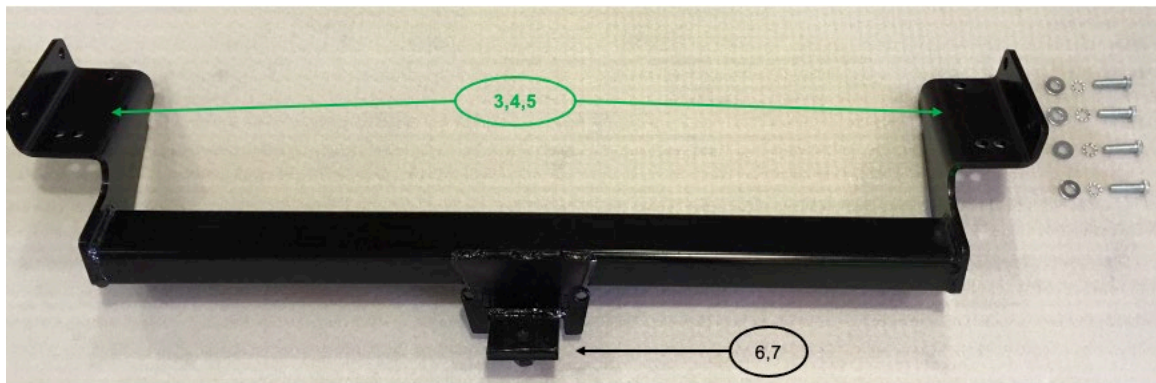

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Hyundai ix35 (2010-ON) – T2Z533



Step 1 Preparing for fitment		
Instructions	Tools	Torque Spec
a. Remove Towing hook b. Remove 2x plastic scrivenets from centre bottom of bumper [Retain]. c. Drop exhaust from rear hangers. d. Remove stickers from underside of vehicle to reveal captive nuts.	Spanner Screwdrivers	N/A

Step 2 Towbar Fitment		
Instructions	Tools	Torque Spec
a. Bolt towbar to vehicle using M10 metric bolts and washers provided. b. Tighten to specified ratings using a torque wrench. c. Refit exhaust and centre scrivenets.	Spanners Sockets Torque Wrench	M10- 60Nm

Step 3 Finishing up		
Instructions	Tools	Torque Spec
a. Fit ball mount with M16 bolts and washers provided b. Tightened to specified torque ratings, c. Attach sticker to drivers side door pillar.	Spanners Torque Wrench	M16-270Nm

FITTING INSTRUCTIONS

Hyundai ix35 (2010-ON) – T2Z533



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com