

FITTING INSTRUCTIONS

Holden Captiva (10/2006- ON) – T4H481




Max Towing Capacity: 2000kg	Towbar Weight: N/A
Max Ball Load: 200kg	Wiring Harness Part #: UNTEC2W



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T4H481	1	9.	M6 X 20 X 1 Bolt	2
2.	Ball Mount – L4120	1	10.	M6 Shake Proof washer	2
3.	M12 x 1.75 x 35 Bolt	6	11.	M6 Flat washer	2
4.	M12 Shake proof washer	8	12.	M6 X 1 Nut	2
5.	M12 Flat Washer	8	13.	Bumper bracket (passenger side)	1
6.	M12 X 40 X 1.75 Bolt	2	14.	Bumper bracket (drivers side)	1
7.	Plate with M12 X 1.75 weld nut – Drivers side has wire	1	15.	Class 4 pin, clip, cover and x 2 d-shackles	1
8.	Plate with M12 X 1.75 weld nut Passenger side no wire	1			

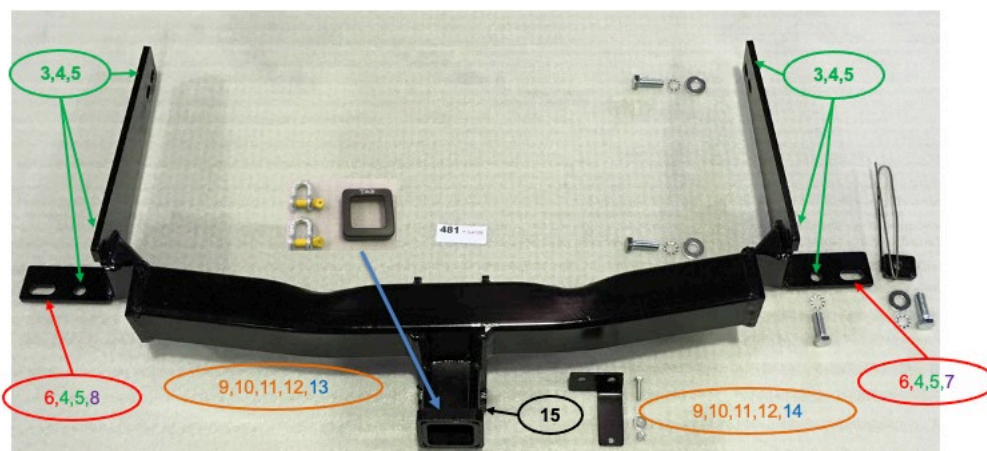

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.

FITTING INSTRUCTIONS

Holden Captiva (10/2006- ON) – T4H481



- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Holden Captiva (10/2006- ON) – T4H481



Step 1 Remove Rear Bumper		
Instructions	Tools	Torque Spec
<p>a. Remove 4 x 7mm bolts from inner rear wheel arch under mud flaps both sides.</p> <p>b. Remove 4 plastic clips from under rear of bumper.</p> <p>c. Remove 6 phillip head screws from rear top of bumper.</p> <p>d. Remove tail lights (2 screws) and pull towards rear of car and unclip bulbs.</p> <p>e. Remove bumper by pulling to unclip sides, then undo the clip under the tail lights and unplug rear sensors on drivers side of car.</p>	<p>Trim tool</p> <p>Sockets</p> <p>Screwdrivers</p>	<p>N/A</p>

Step 2 Preparing for Fitment		
Instructions	Tools	Torque Spec
<p>a. Remove impact beam from car – 6 x 12mm bolts to be removed.</p> <p>b. Remove shipping hook – Passenger side 2 x 18mm bolts</p> <p>c. Drop exhaust by removing 2 rubbers on each side of rear mufflers and one at Y part.</p>	<p>Spanners</p> <p>Sockets</p>	<p>N/A</p>

Step 3 Install Towbar		
Instructions	Tools	Torque Spec
<p>a. Place towbar into place and first put 2x 19mm bolts in from under into captive threads. Then put other 2 in from inside of chassis. Make sure all bolts are finger tight.</p> <p>b. Tighten all bolts to torque settings listed below.</p> <p>c. Drill 2x 12.5mm holes up from bottom at rear of towbar and use 2 x 19mm bolts and threaded plates on wire. Passenger side can be put through rear of chassis but driver's side must be put through a hole under body over the muffler. Then tighten to torque settings.</p>	<p>Spanners</p> <p>Torque Wrench</p> <p>Drill</p>	<p>M12- 77.3Nm</p>


FITTING INSTRUCTIONS

Holden Captiva (10/2006- ON) – T4H481



d. Put back exhaust rubbers.		
------------------------------	--	--

Step 4 | Cut Bumper Bar

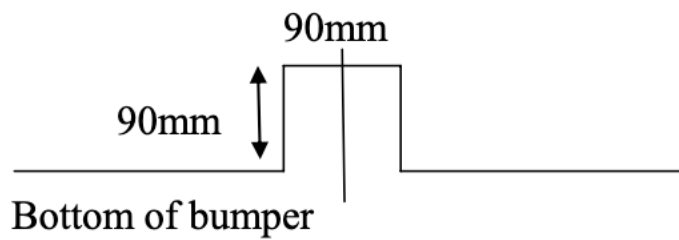

Instructions	Tools	Torque Spec
a. Cut the bumper bar to suit the hitch box with the following dimensions 90mm x 90mm in the centre bottom of bumper. b. Check measurements before cutting.	Air saw	N/A

Step 5 | Finishing Up

Instructions	Tools	Torque Spec
a. Refit bumper by following step 1 in reverse order. b. Fit door sticker supplied to inside of drivers door pillar. c. ECU required for this vehicle and is sold separately.	N/A	N/A

FITTING INSTRUCTIONS

Holden Captiva (10/2006- ON) – T4H481



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com