

# FITTING INSTRUCTIONS

Holden Colorado Style Side – T4H590




<b>Max Towing Capacity:</b> 3500kg	<b>Towbar Weight:</b> kg
<b>Max Ball Load:</b> 350kg	<b>Wiring Harness Part #:</b> 750024EJ



**Tools Required:**

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar- T4H590	1	8.	Top plate 40 x 40 x 14mm hole	2
2.	Ball Mount – L4045	1	9.	M10 x 1.5 Gold flange nut	6
3.	M12 x 1.25 x 35 Bolt	8	10.	M8 x 1.25 x 25 Bolt	2
4.	M12 Shake Proof Washer	10	11.	M8 Shakeproof Washer	2
5.	M12 Flat Washer	6	12.	M8 Flat Washer	2
6.	M12 x 1.25 Nut	4	13.	M8 x 1.25 Nut	2
7.	Top plate 40 x 40, M12 x 1.25 x 35, wire -all welded	2	14.	Class 4 Pin	1

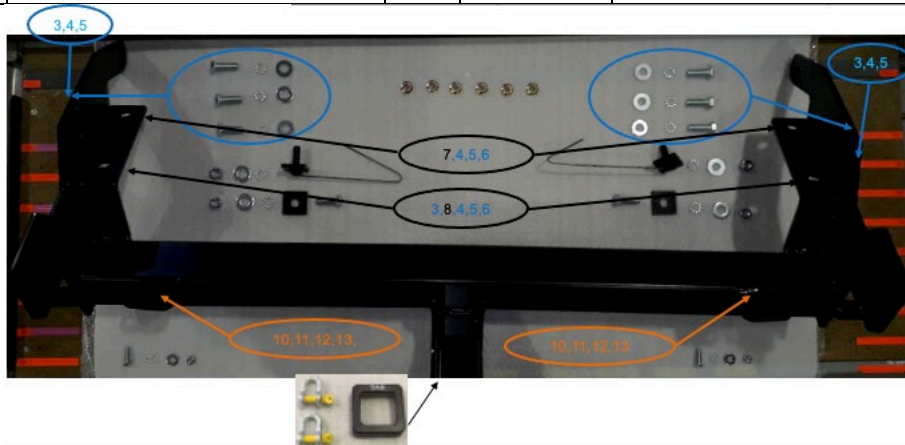

**Warning:**

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

# FITTING INSTRUCTIONS

Holden Colorado Style Side – T4H590



## General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

# FITTING INSTRUCTIONS

Holden Colorado Style Side – T4H590



<b>Step 1   Remove Bumper</b>		
<b>Instructions</b>	<b>Tools</b>	<b>Torque Spec</b>
a. Unplug number plate light b. Remove bumper by removing 3 bolts on each side.	Spanners	N/A

<b>Step 2   Towbar Fitment</b>		
<b>Instructions</b>	<b>Tools</b>	<b>Torque Spec</b>
a. Bolt in towbar using bolts supplied. (Refer torque spec table) b. Remove top plastic cover to access bolts c. Remove brackets from step [Retain 6 main bolts].	Spanners Torque Wrench	M10-43.4Nm M12-77.3Nm

<b>Step 3   Finishing Up</b>		
<b>Instructions</b>	<b>Tools</b>	<b>Torque Spec</b>
a. Re-attach bumper using original bolts and gold nuts supplied. b. Attach side brackets with original bolts as well as ones supplied. c. Replace top plastic trim and connect sensors (if fitted). d. Fit L4045 Ballmount and ball and tighten wiring	Spanners Torque Wrench	M8-21.7Nm

# FITTING INSTRUCTIONS

Holden Colorado Style Side – T4H590



## WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at [warranty@tagtowing.com](mailto:warranty@tagtowing.com)