

# FITTING INSTRUCTIONS

Jeep Grand Cherokee 2011- On – T4P568



**Max Towing Capacity:** 3500kg

**Towbar Weight:** N/A

**Max Ball Load:** 350kg


**Wiring Harness Part #:** UNTEC2W



## Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T4P568	1	5.	½" Shake proof washer	1
2.	Ball Mount – L4045	1	6.	½" UNC Nut	1
3.	½" x 1½" UNC Bolt with wire	1	7.	Class 4 Pin	1
4.	½" Flat washer	1			

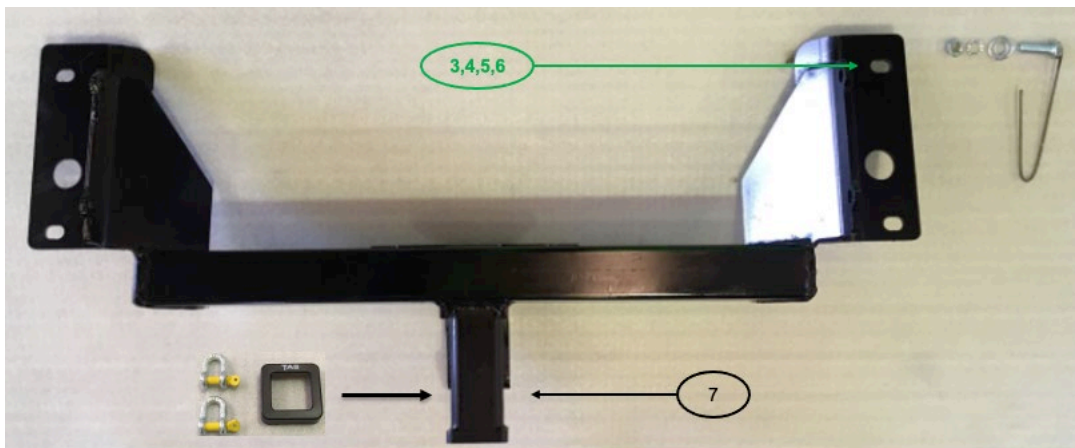

## Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

## General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

# FITTING INSTRUCTIONS

Jeep Grand Cherokee 2011- On – T4P568




Step 1	Preparing for fitment	
Instructions	Tools	Torque Spec
<ul style="list-style-type: none"><li>a. Remove driver's side mud guard by removing 1 x 10mm bolt and 1 x 8mm bolt and 1 x screw</li><li>b. Remove two most rear exhaust rubbers on drivers side and pack exhaust down to allow access to drill forward hole of towbar</li><li>c. On passenger side remove 4 x 21mm bolts holding tow hook in place and the 2 x 18mm bolts holding the tow hook brace, [Discard the towhook and brace]. Remove 3 x 21mm bolts from drivers side chassis [Keep all 21mm bolts]</li></ul>	-Spanners	N/A


Step 2	Towbar Fitment	
Instructions	Tools	Torque Spec
<ul style="list-style-type: none"><li>a. Offer tow bar to vehicle and loosely fit all 21mm bolts that were previously removed - and tighten.</li><li>b. Drill ½" hole in drivers side that does not have the captive nut .</li><li>c. Feed bolt on wire up through hole provided in towbar, fitting flat washer, shakeproof washer and nut then tighten.</li></ul>	<ul style="list-style-type: none"><li>-Spanners</li><li>- Torque Wrench</li></ul>	125Nm

# FITTING INSTRUCTIONS

Jeep Grand Cherokee 2011- On – T4P568

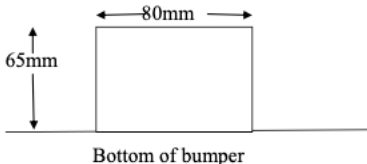

Step 3 Bumper Cut		
		
Instructions	Tools	Torque Spec
a. Using an Air saw, make a bumper cut in the bottom centre of bumper measuring 65mm high x 80mm wide	Air saw	N/A

Step 4 Finishing up		
		
Instructions	Tools	Torque Spec
a. Refit exhaust rubbers and mud guard b. Fit L4045 ball mount c. Place sticker on the inside of drivers side door pillar	N/A	N/A

# FITTING INSTRUCTIONS

Jeep Grand Cherokee 2011- On – T4P568



## WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at [warranty@tagtowing.com](mailto:warranty@tagtowing.com)