

FITTING INSTRUCTIONS

Hyundai Sante Fe & Kia Sorento (09/12 to 03/15)–
T4Z595




Max Towing Capacity: 2500kg	Towbar Weight: kg
Max Ball Load: 150kg	Wiring Harness Part #: Hyundai - UNT332 Kia - UNTEC2W



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T4Z595	1	9.	M12 x 1.5 Nut	8
2.	Ball Mount – L4120	1	10.	M12 x 1.5 x 35 Bolt	4
3.	M10 x 1.25 x 35 Bolt	4	11.	M6 x 1 x 20 Bolt	2
4.	M10 Shake proof washer	4	12.	M6 Spring Washer	2
5.	M10 Flat Washer	4	13.	M6 x 1 Nut	2
6.	M12 x 1.5 x 110 Bolt	4	14.	Bracket	2
7.	M12 Flat washer	8	15.	Class 4 Pin & Clip	1
8.	M12 Shake proof washer	8	16.	Compliance Label	1

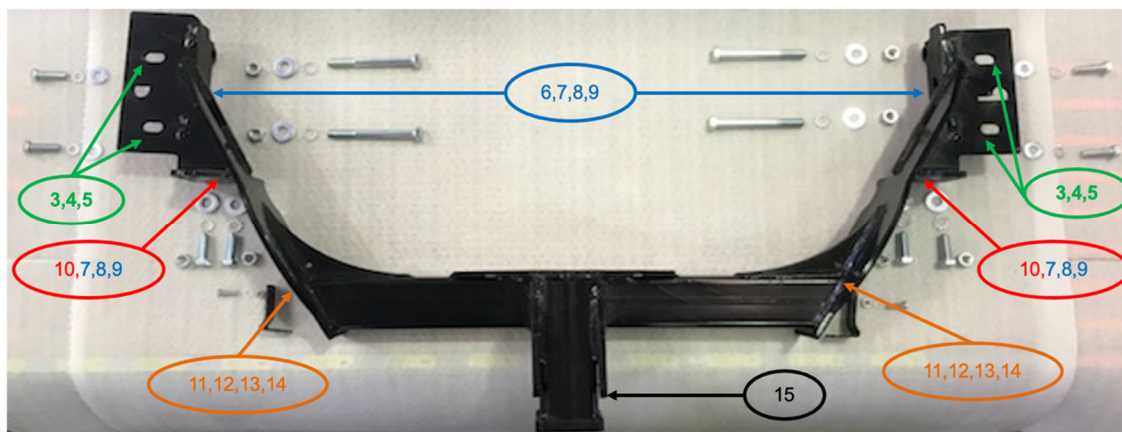

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

FITTING INSTRUCTIONS

Hyundai Sante Fe & Kia Sorento (09/12 to 03/15)–
T4Z595



- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Hyundai Sante Fe & Kia Sorento (09/12 to 03/15)-
T4Z595



Step 1 Removal Of Bumper		
Instructions	Tools	Torque Spec
<ul style="list-style-type: none">a. Remove scrivets and screws from wheel arches.b. Remove 14mm headbolts holding impact beam onto vehicle located behind bumper.c. Remove rear bumper with assistance and impact beam and bumper come off together, as well as disconnecting any wire harness. [Place on Stand].d. Drop exhaust from rear hangers and remove heat shields.	<ul style="list-style-type: none">ScrewdriverSpannersSockets	

Step 2 Towbar Installation		
Instructions	Tools	Torque Spec
<ul style="list-style-type: none">a. Install towbar using 4 x M10 Bolts and washers provided, into captive nuts on the underside of vehicle.b. Fit 4 x M12 Long Bolts, Washers and nuts through sides of subframe.c. Remaining 4 x M12 Bolts, washers and nuts to be installed using existing holes through back of towbar.d. Tighten all bolts to specified torque ratings.	<ul style="list-style-type: none">SpannersSocketsTorque Wrench	<ul style="list-style-type: none">M10-60NmM12-103Nm

Step 3 Bumper Cut		
Instructions	Tools	Torque Spec
<ul style="list-style-type: none">a. Heat shields to be trimmed before reinstallation/refit exhaust onto hangers.b. Remove impact beam from bumper and discard.c. Bumper cut to be done 85 mm wide x 190 mm high from bottom centre of bumper.d. Check measurements to be correct before any cut outs to be done.e. Reinstall bumper/attach wiring harness to towbar with cable ties, secure bumper support tabs.	<ul style="list-style-type: none">Air Saw	

Step 4 Finishing Up		
-----------------------	--	--

FITTING INSTRUCTIONS

Hyundai Sante Fe & Kia Sorento (09/12 to 03/15)–
T4Z595



Instructions	Tools	Torque Spec
a. Install Ball-mount with pin and clip provided. b. Attach rating sticker to drivers side door pillar.		

FITTING INSTRUCTIONS

Hyundai Sante Fe & Kia Sorento (09/12 to 03/15)–
T4Z595



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com