

FITTING INSTRUCTIONS

Toyota Camry Sedan (08/97-6/06)– T2T125




Max Towing Capacity: 1200kg	Towbar Weight: 15kg
Max Ball Load: 120kg	Wiring Harness Part #: UNT214



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T2T125	1	6.	M16 x 2 x 40 Bolt	2
2.	Ball Mount – L262	1	7.	M16 Spring Washer	2
3.	M10 x 1.25 x 30 Bolt	4	8.	3/8" X 1 1/2" Cup Head Bolt	2
4.	M10 Shake proof washer	6	9.	3/8" Nut	2
5.	M10 Flat Washer	4	10.	Plate	1

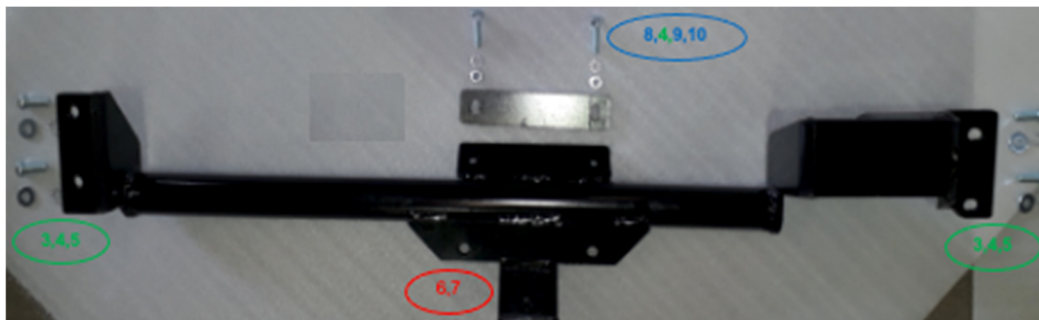

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Toyota Camry Sedan (08/97-6/06)– T2T125



Step 1 Preparing for Fitment		
Instructions	Tools	Torque Spec
a. Remove exhaust rubber from rear hanger. b. bend exhaust bracket on vehicle downwards [approx 15mm]. c. Remove shipping hooks [discard]	Spanners Sockets	

Step 2 Towbar Fitment		
Instructions	Tools	Torque Spec
a. Fit towbar onto vehicle drivers side first, placing over exhaust and exhaust bracket going through large hole in towbar bracket and secure with m10 bolts and washers supplied. b. Secure passenger side with m10 bolts and washers supplied. c. Remove spare wheel. d. Drill 2 holes with centre bracket as a guide and secure using cup head bolts and plate placed from inside of wheel well facing out, nuts and washers fitted underneath.	Sockets Spanners	

Step 3 Finishing Up		
Instructions	Tools	Torque Spec
a. Tighten all bolts to specified ratings. b. Bend exhaust bracket back into place and refit rubber. c. Refit spare wheel d. fit ball mount using m16 bolts and washers and tighten. e. Attach ratings sticker to drivers side door pillar.	Torque wrench	M10-60Nm M16-270Nm UNC 3/8-50Nm

FITTING INSTRUCTIONS

Toyota Camry Sedan (08/97-6/06)– T2T125



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com