

# FITTING INSTRUCTIONS


Renault Master 09/11-on – T7P747



<b>Max Towing Capacity:</b> N/A	<b>Towbar Weight:</b> 25kg
<b>Max Ball Load:</b> N/A	<b>Wiring Harness Part #:</b>



**Tools Required:** Spanners, Sockets, Trim removal tool

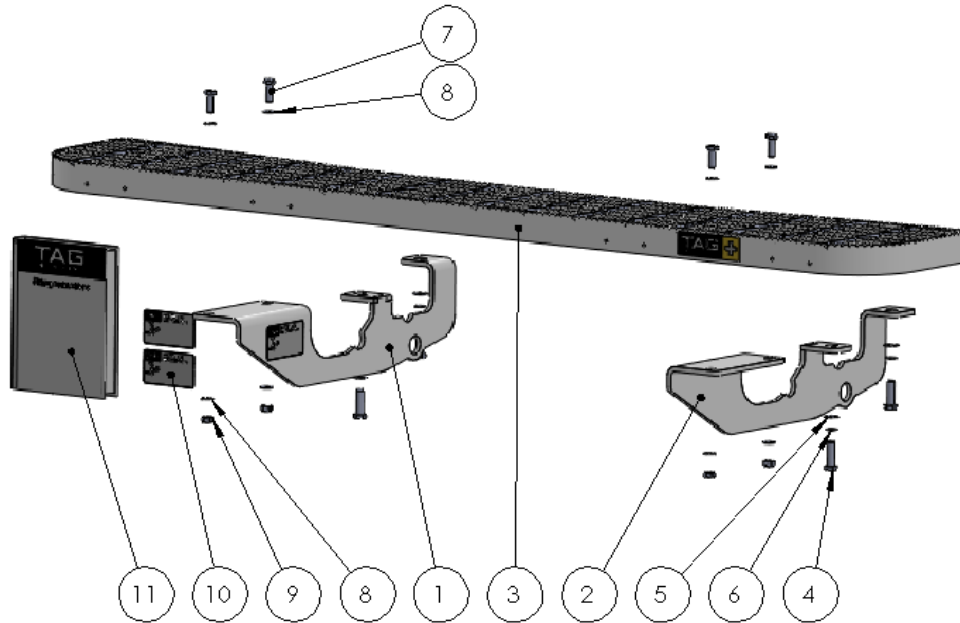

ITEM NO.	DESCRIPTION	QTY.	ITEM NO.	DESCRIPTION	QTY.
1	PS Step Mount Assembly	1	7	M10x1.25x30 Bolt	4
2	DS Step Bracket Assembly	1	8	M10 FLAT WASHER FLAT ROUND	8
3	TAG REAR STEP (NON-TOWBAR)	1	9	M10x1.25 Nut	4
4	M12x1.75x40 Bolt	4	10	TAG Compliance plate	3
5	M12 Flat Washer Zinc Clear	4	11	Fitting Instruction - TSP747	1
6	M12 Shakeproof Washer	4			

# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



## Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

## General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



## Step 1 Remove Tow Hook & Centre Bumper Cover



# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



Instructions	Tools	Torque Spec
<p><b>Note: Removal of the bumper is only necessary if the installation requires the relocation of the factory fitted reverse sensors.</b></p> <ul style="list-style-type: none"><li>a. Remove the factory towing/shipping hook from the PS Chassis if fitted via 4 M12 bolts. Discard tow hook &amp; bolts.</li><li>b. Open rear doors.</li><li>c. Remove Torx head bolts securing bumper cover to body around rubber seal.</li><li>d. Remove plastic scrivenets from bumper cover near rear wheel arch.</li><li>e. Gently pull outer cover outwards.</li><li>f. Unclip the bottom of the centre bumper cover &amp; unplug both (2) reverse sensor harnesses.</li></ul>		

# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



## Step 2 | Fit Step Brackets & Step



### Instructions

- Bolt the towbar end plates up to the chassis using the M12x 1.75x 40 bolts with flat & shake proof washers in rear most vertical holes of the chassis. Leave loose.
- Mount the step to the step bracket assemblies and insert M10x 30 bolts with washers & nuts.
- Tighten all M12 chassis bolts.
- Tighten all M10 step bolts.

### Tools

### Torque Spec

# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



## Step 3 Apply door sticker



Instructions	Tools	Torque Spec
a. Apply extra load rating label to inner DS door pillar & one other to the vehicle owner's handbook.  •		

# FITTING INSTRUCTIONS

Renault Master 09/11-on – T7P747



## WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at [warranty@tagtowing.com](mailto:warranty@tagtowing.com)