# **Fitting Instructions**



SKU

PRODUCT

**T4P568** 

TAG Heavy Duty Towbar to suit Jeep Grand Cherokee (02/2011 - on)





Scan for latest version of these instructions

#### **SPECIFICATIONS**

- Towbar Class: Heavy Duty
- · Towing Capacity: 2268kg

#### IN THIS GUIDE

- · Fitment Instructions
- Torque Settings
- · Warranty Info

## **Towbar Fitting Instructions**



### **Step-By-Step Instructions**

#### Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

#### General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.

Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.

After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure then ask your towbar supplier.

Tighten all bolts as specified on the last page.


- 1. Remove driver's side mud guard by removing 1x 10mm bolt 1x 8mm bolt and 1x screw.
- 2. Remove two rear most exhaust rubbers on driver's side and pack exhaust down to allow access to drill forward hole of tow bar.
- 3. On passenger side remove 4 x 21mm bolts holding tow hook in place and the 2 x 18mm bolts holding the tow hook brace. And discard the tow hook and brace. Remove 3 x 21mm bolts from driver side chassis, keep all 21mm bolts.
- 4. Offer tow bar to vehicle and loosely fit all 21mm bolts that were removed then tighten, drill ½" hole in drivers side that does not have the captive nut. Feed bolt on wire up though hole provided in tow bar fit f/washer and s/washer and nut then tighten.

**Call 1300 326 134** Version 23.01.2022

# **Towbar Fitting Instructions**



#### 5. Bumper cut:

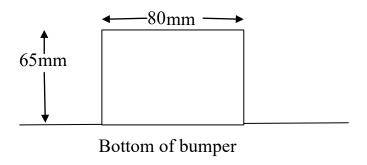

6. Re-fit exhaust rubbers and mud guard.



**Call 1300 326 134** Version 23.01.2022

## **Towbar Fitting Instructions**



## Torque table for bolt tightening

Metric GRADE 8.8
M6 – 9.5 Nm
M8 – 21.7 Nm
M10 – 43.4 Nm
M12 – 77.3 Nm
M16 – 189.8 Nm

### **TAG Warranty Statement**

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au

Call 1300 326 134 Version 23.01.2022