

Fitting Instructions



SKU

PRODUCT

T4S535

TAG Heavy Duty Towbar to suit Subaru Liberty (09/2009 - 01/2015)



Scan for latest
version of these
instructions

SPECIFICATIONS

- Towbar Class: Heavy Duty
- Towing Capacity: 1400kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Step-By-Step Instructions

Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.

Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.

After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure then ask your towbar supplier.


Tighten all bolts as specified on the last page.

1. Remove spare wheel cover and spare wheel.
2. Inside the boot open storage panels and remove plastic grommet plug from both sides of vehicle then remove 1x 10mm screw, both sides.
3. Remove 1x plastic push pull clips from under side of mud flap and 4x plastic push pull clips from under side of bumper.
4. Peel bumper down and out from wheel arches, remove bumper.
5. Undo 6x 12mm nuts from impact beam, remove impact beam and discard.
6. Undo 6x nuts from impact beam supports and remove, leaving bumper support in place.
7. Fit tow bar to vehicle using 8x m8 whiz nuts supplied fit to studs off rear of vehicle leaving loose.
8. Fit 2x m10 x 35mm bolts, with spring washer through top of chassis in boot into captive nuts in towbar.
9. Using the towbar as a guide, drill 1x 11mm hole into spare wheel well. Fit bolt & plate through boot, and nut & washer from underneath.
10. Tighten all bolts and nuts.
11. Cut bumper as follows: From top end of bumper:


Towbar Fitting Instructions



Subaru Liberty Wagon

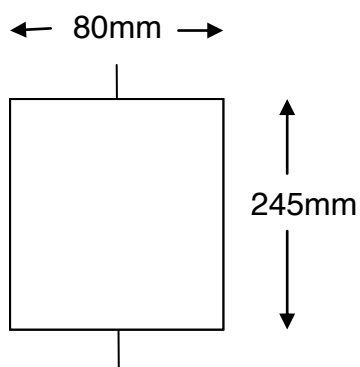

Subaru Outback Wagon

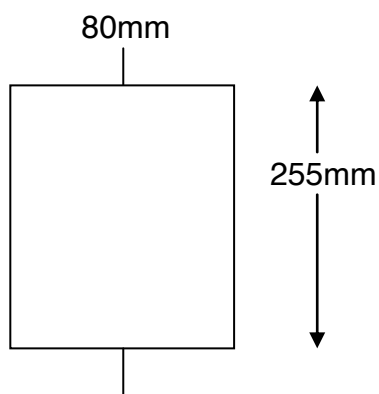

(Note: As bumper profiles can change please check your measurements before cutting to make sure the dimensions are correct)

Torque table for bolt tightening

Metric GRADE 8.8
M6 – 9.5 Nm
M8 – 21.7 Nm
M10 – 43.4 Nm
M12 – 77.3 Nm
M16 – 189.8 Nm

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au