
ERICH JAEGER


Installation instructions

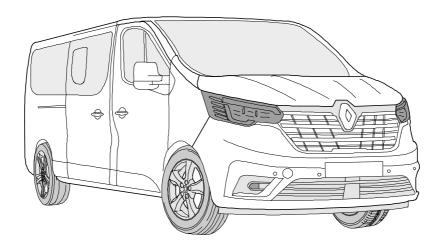


750164

RENAULT Trafic 3

03/21 >>

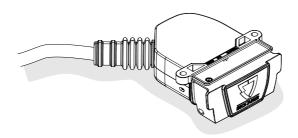











Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.

The installation should be carried out by qualified personnel with the relevant technical knowledge.


The vehicle manufacturers' current technical notices and information on retrofitting must be followed.

The removal and replacement instructions found in the current repair manuals must be followed.


It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

750164-020124B8 1 / 16


OVERVIEW

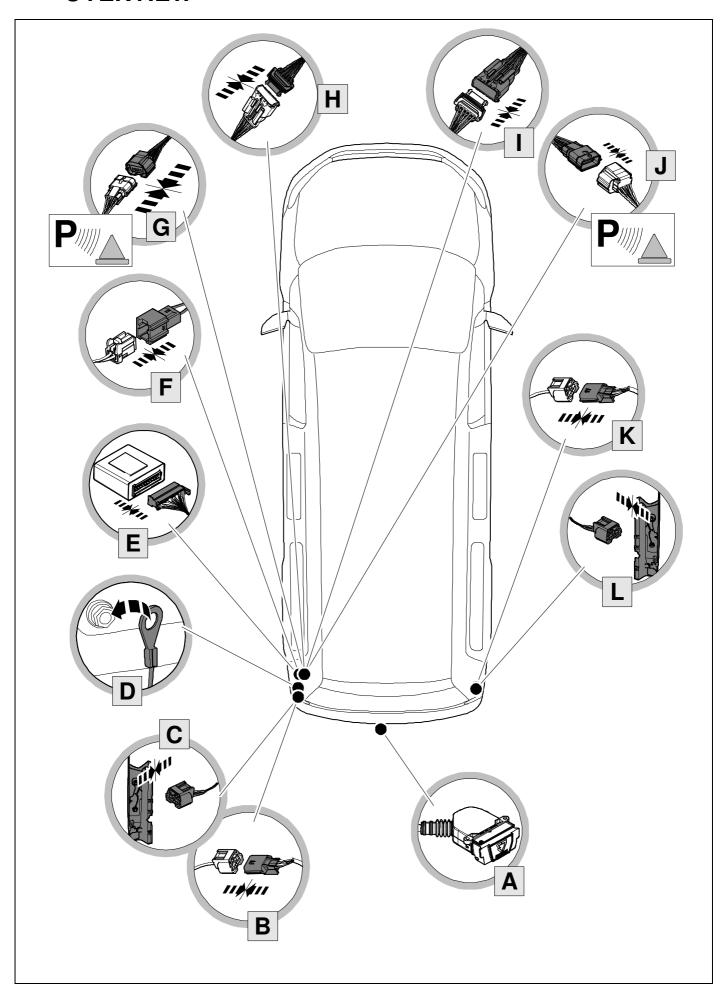


KIT

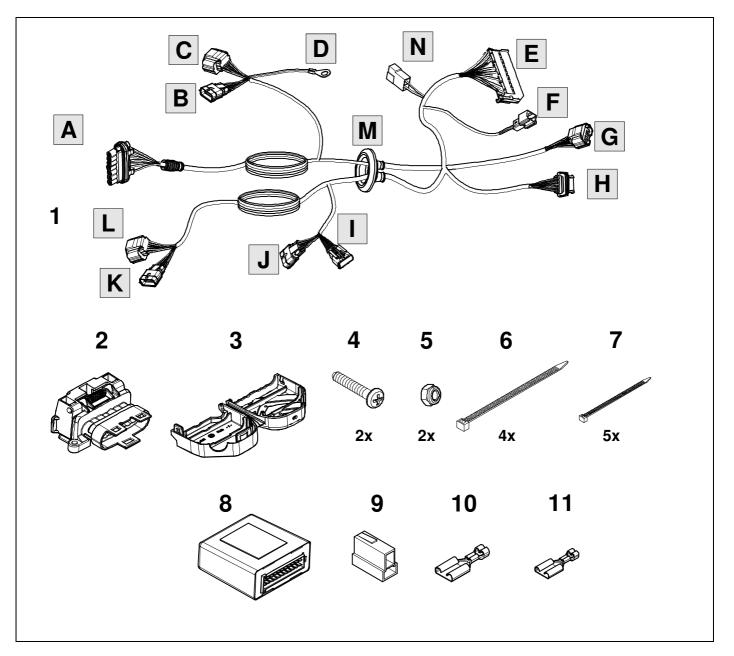



TOOLS

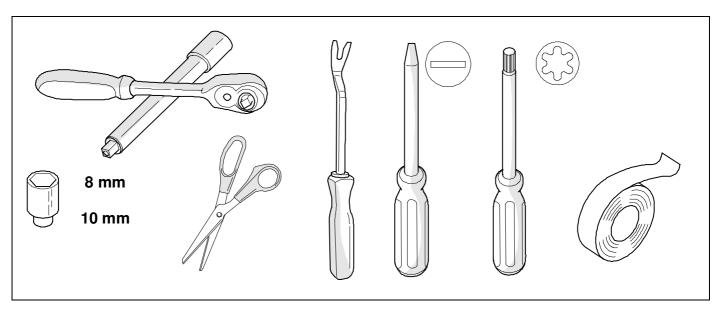


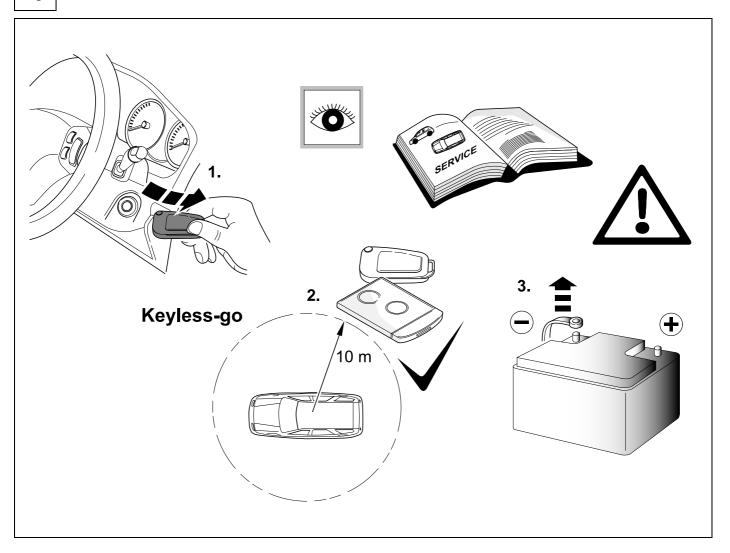


2 REMOVE

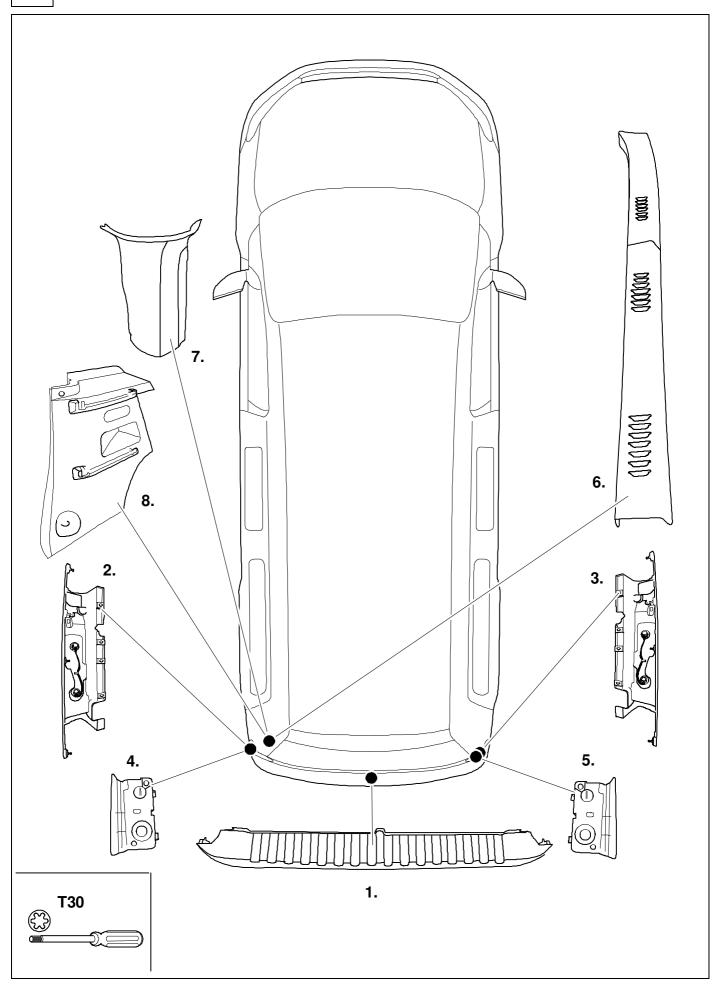


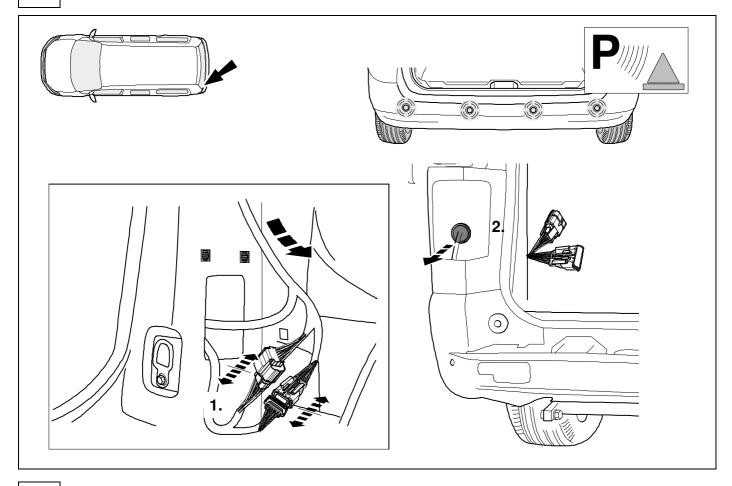


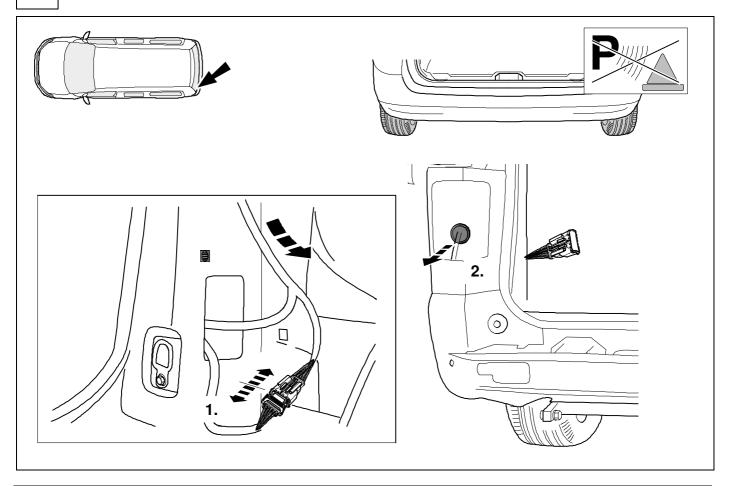


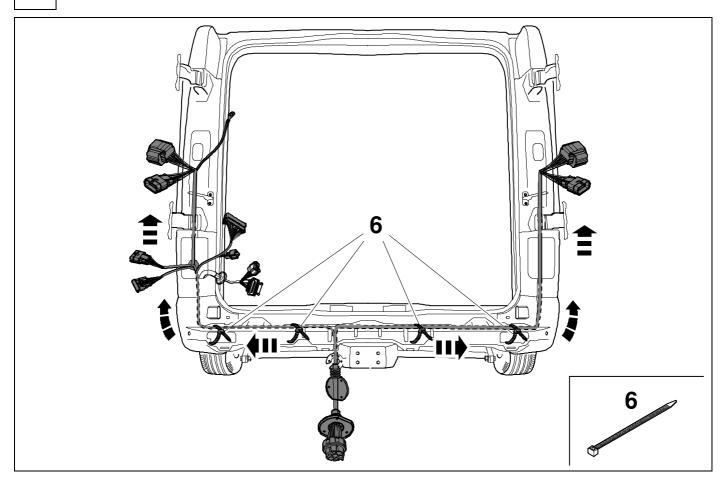





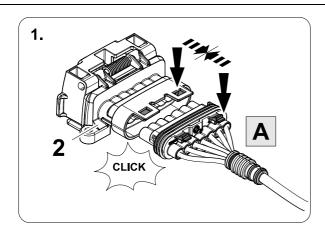


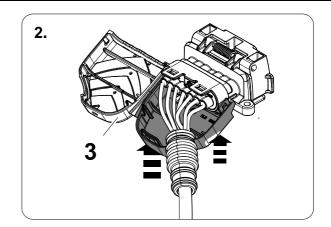

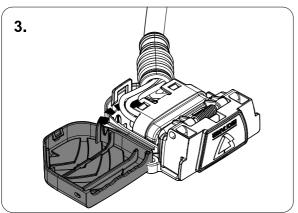

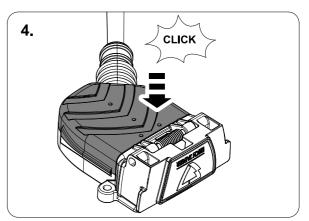

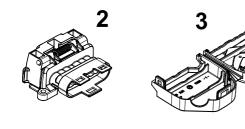


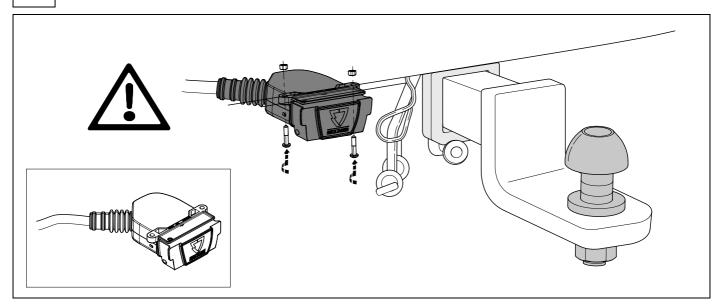






1	ye	\Diamond
2	bk	1 3 2 4 R
3	wh	÷
4	gn	
5	bu	
6	rd	Stop
7	bn	


9	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
GB	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

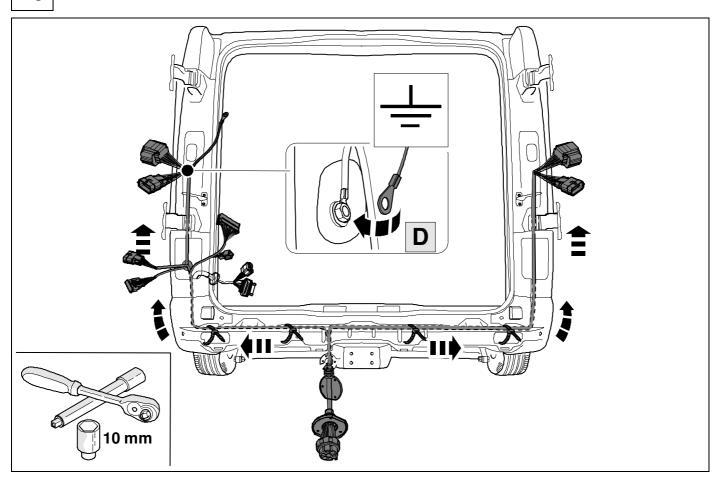


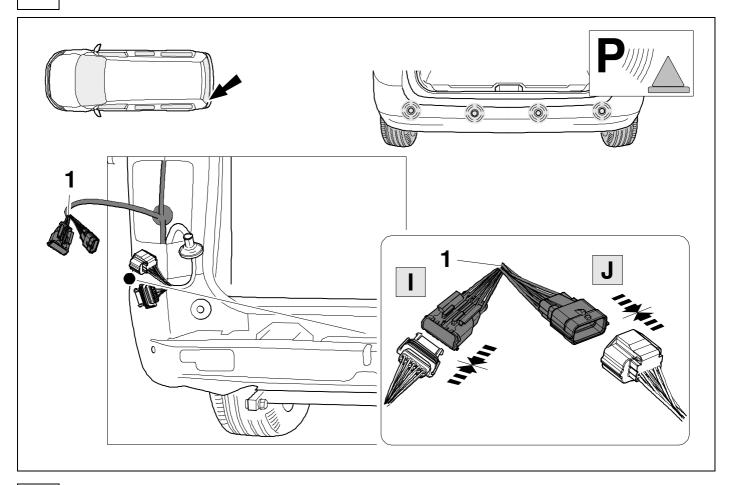


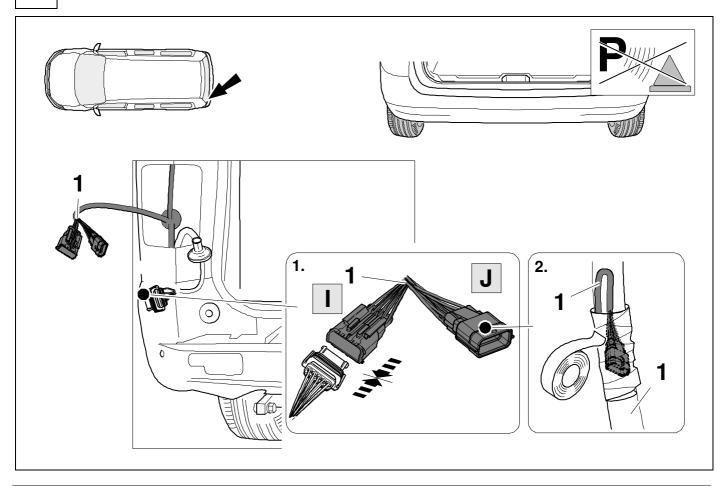


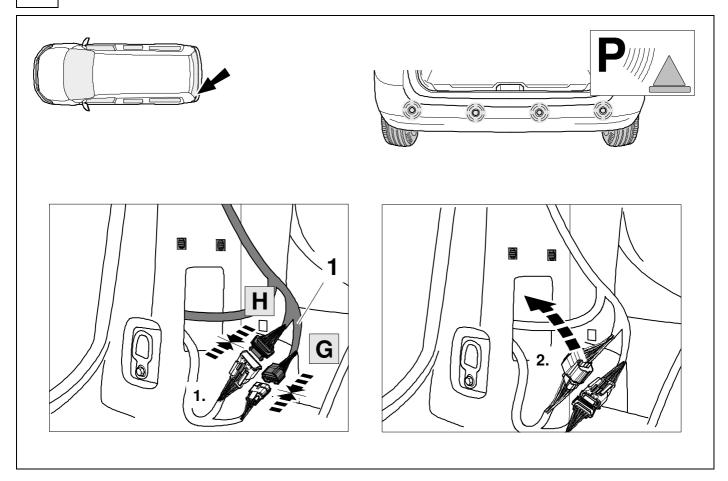


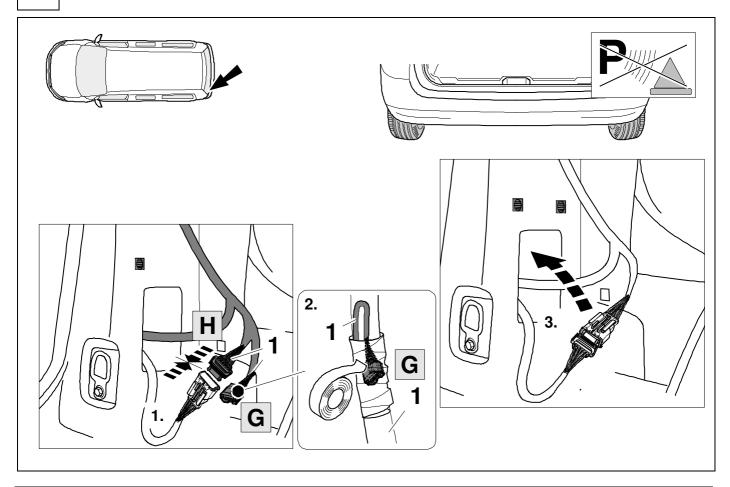

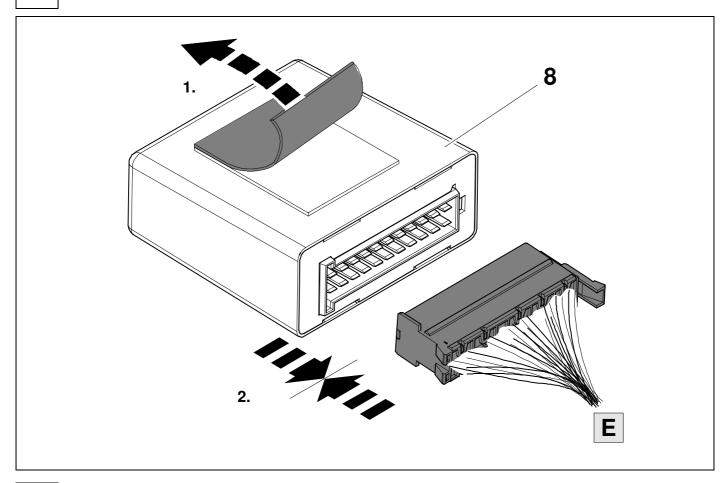

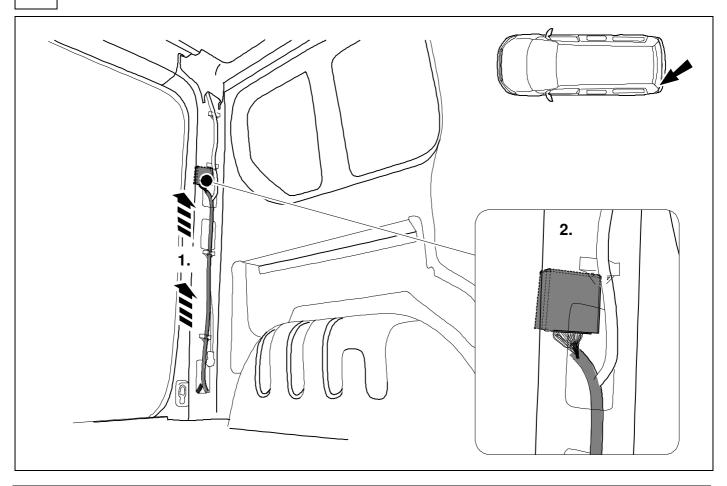

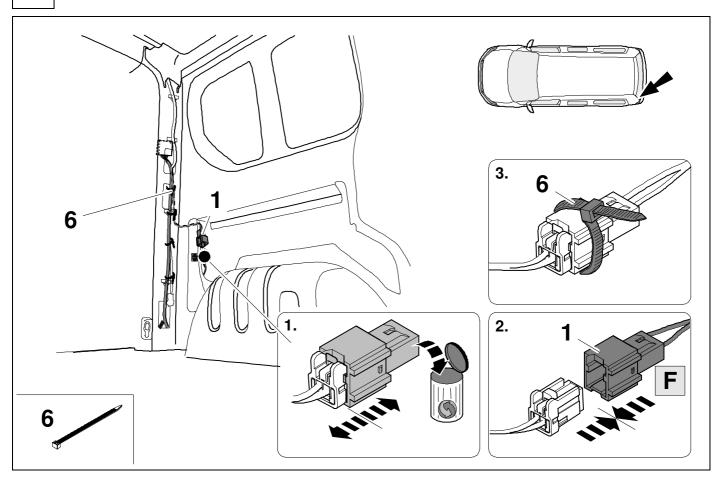

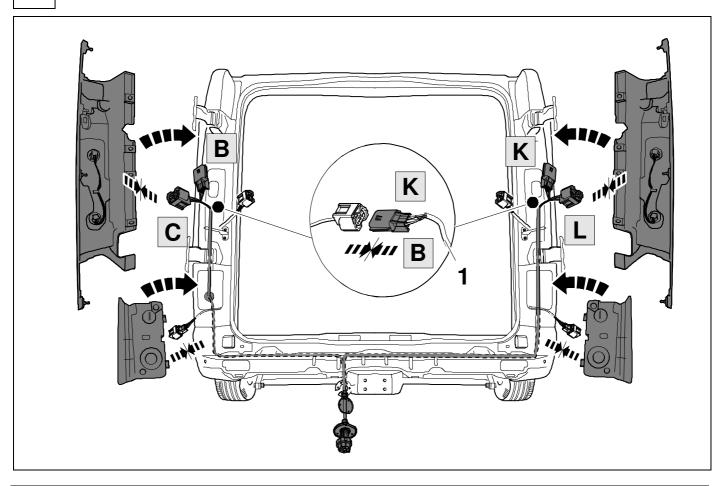


19 OPTIONAL








Trailer Brake Preparation







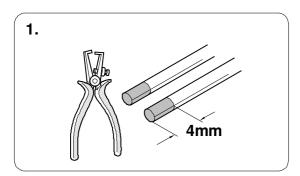

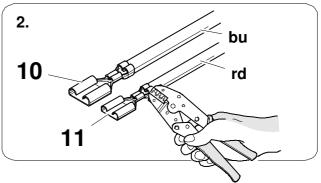


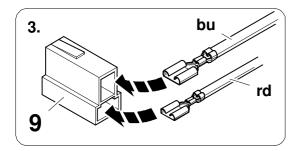

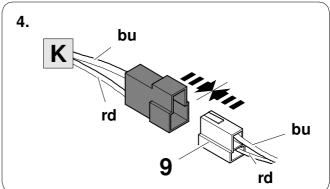




20

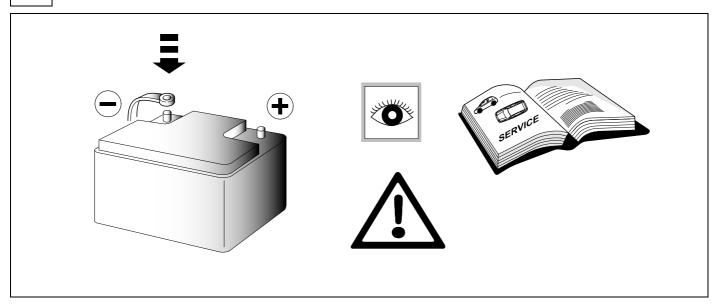


750164-020124B8 14 / 16


21 CHECK ALL LIGHTING FUNCTIONS

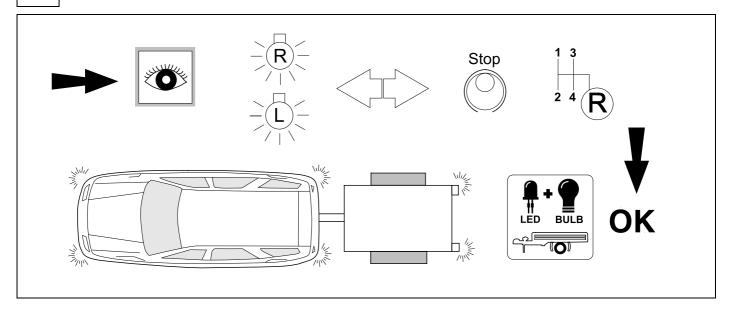


22

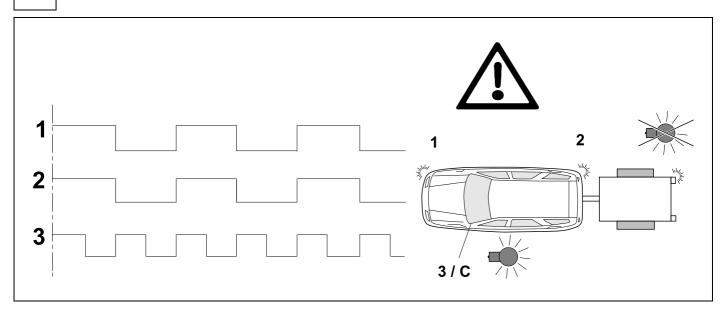

750164-020124B8 15 / 16

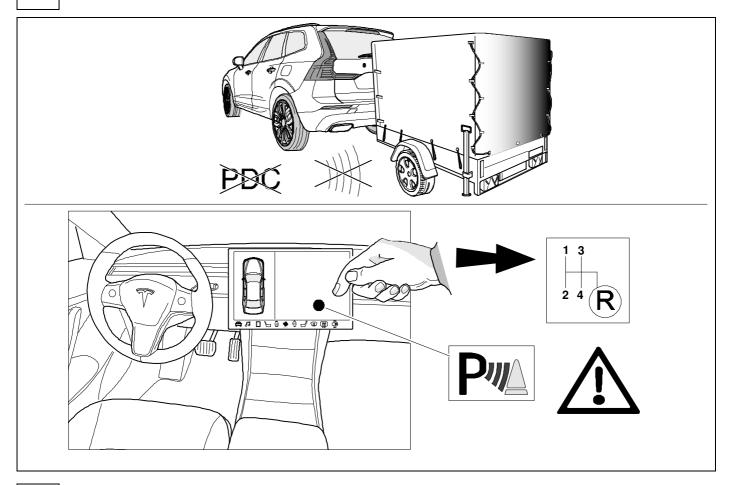

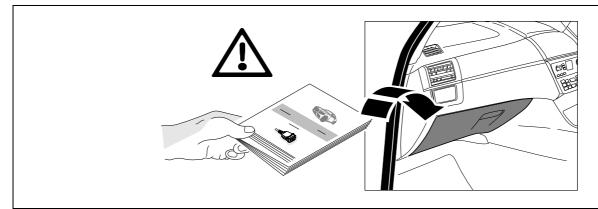

(GB)

Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.