

Z Door

Assembly Instructions




.....RUSTICAHARDWARE®.....




Tools and Parts

INSTALLATION INSTRUCTIONS

Tools Needed

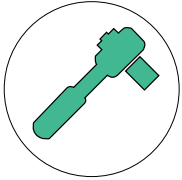


Ratchet with socket

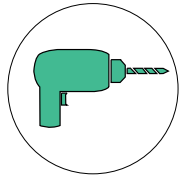

Drill with Phillips bit

If any of the slats have been damaged during shipping, call us at 800-891-8312 and we will expedite a replacement slat. Lay out your Door parts according to the illustration shown below to accurately identify which part needs to be replaced, if any.

Parts Included

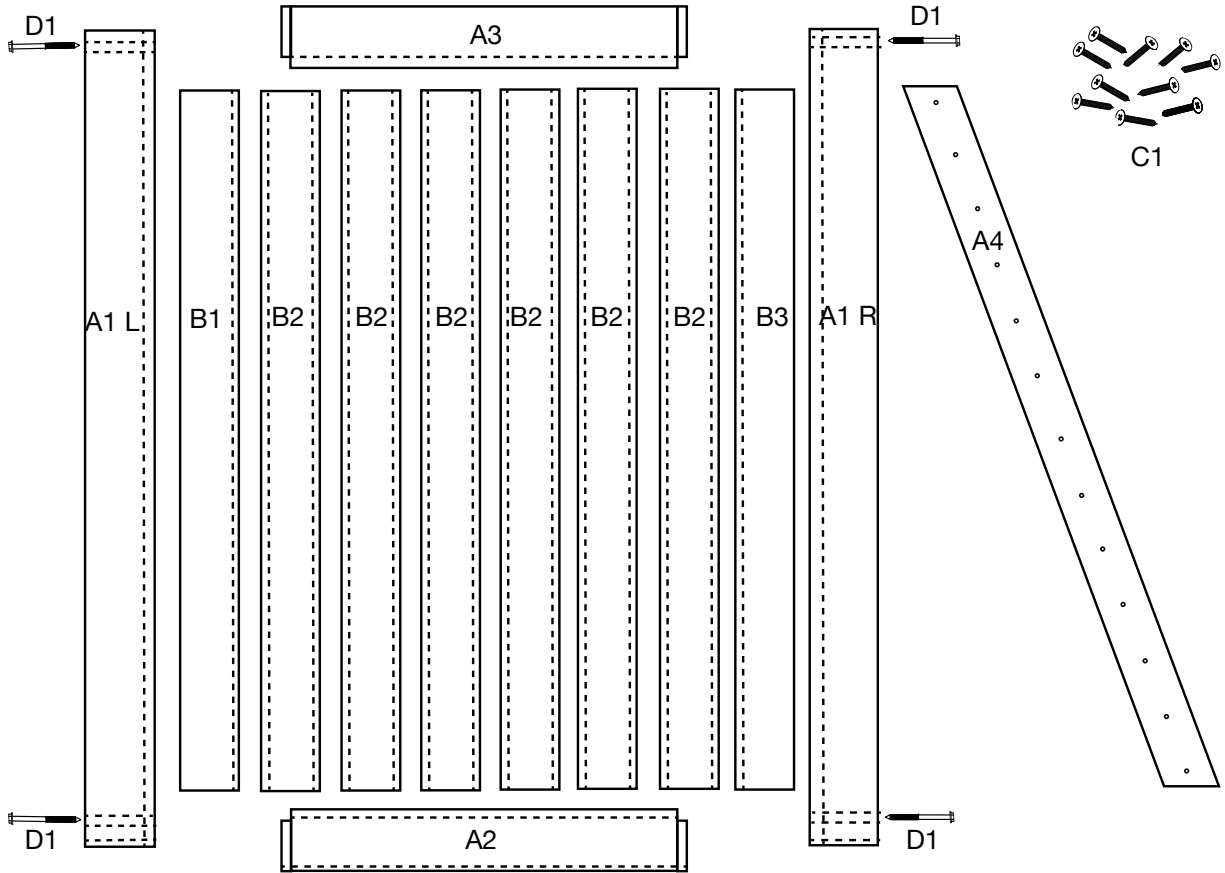

	Description	Qty		Description	Qty
A1	Side Style L	1	B1	Left Side Slats	1
A1	Side Style R	1	B2	Middle Slats	6*
A2	Bottom Rail	1	B3	Right Side Slat	1
A3	Top Rail	1	C1	1-1/4" Grabber Screws	10
A4	Diagonal Z Rail	1	D1	6" Timberlocks	4*

* Quantities will vary depending on Door size. All quantities in this table are for an average single Door order size.




RUSTICAHARDWARE®



Dimensions

INSTALLATION INSTRUCTIONS

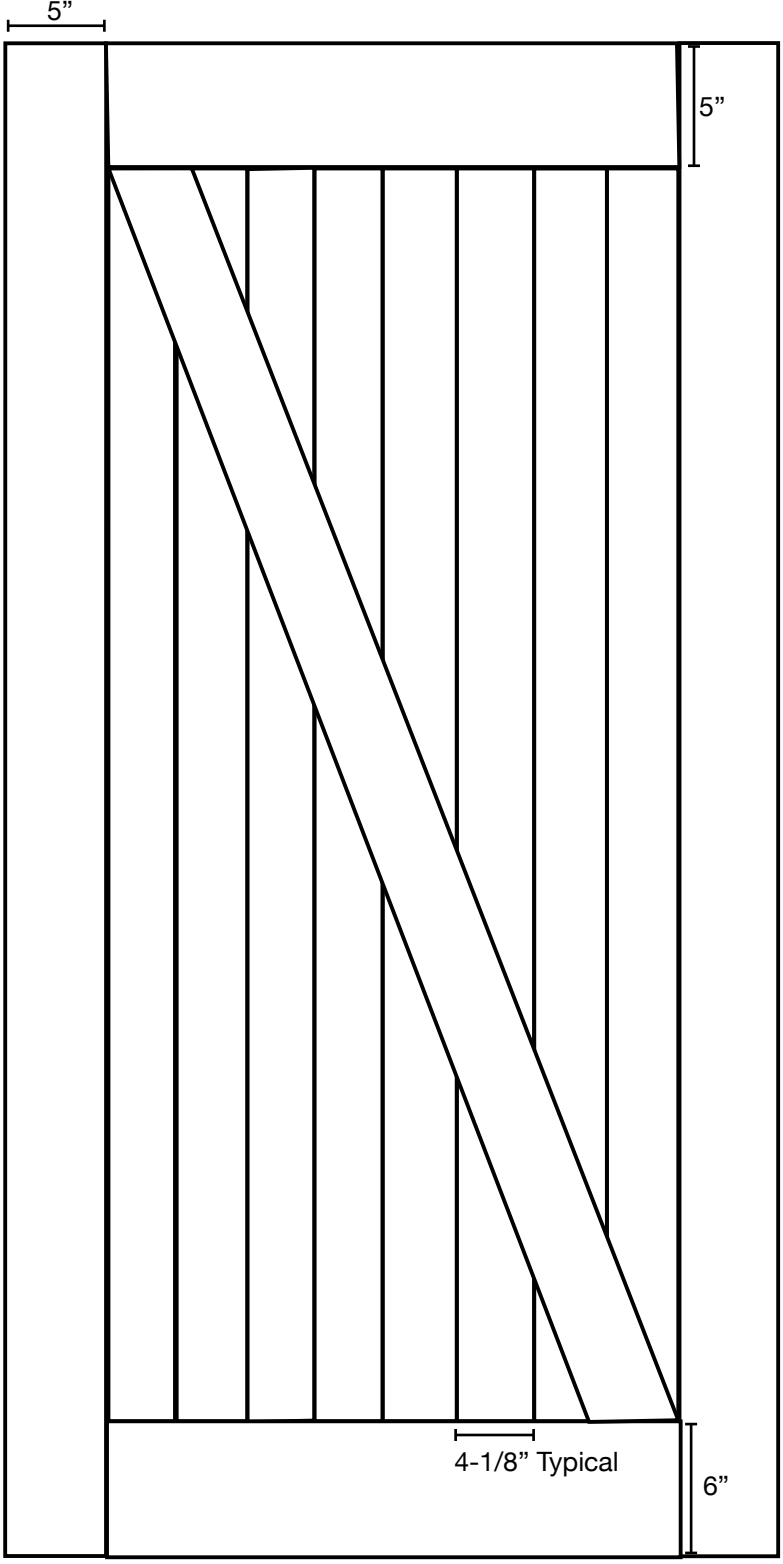

RUSTICAHARDWARE®




Assembly Instructions

Assembling Your Door


We recommend a dry assembly to ensure all parts fit.

PLEASE NOTE: These instructions are specific to a particular door size and type. Adjustments may be needed on your part for changes in specifications and measurements, as well as door types that are different than these.


1. Lay out A1 (L), A2, and A3 with the large mortised grooves facing in and with the small grooves on A1 L and A2 on the bottom edge of the door. Beginning with B1, slide each of the B slats into the one to its right.

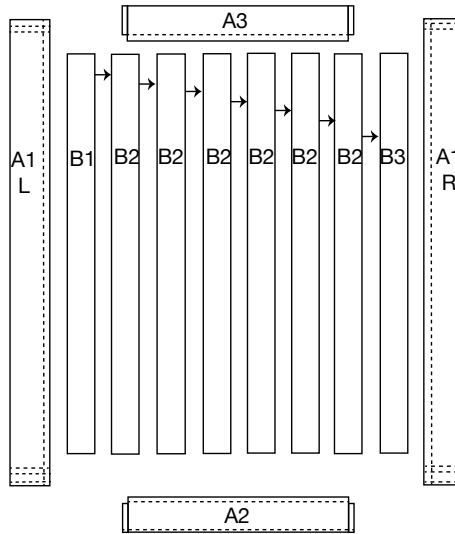


2. Once all the (B) slats are together in position, place the bottom slots (tongues) into the groove along the top of A2.

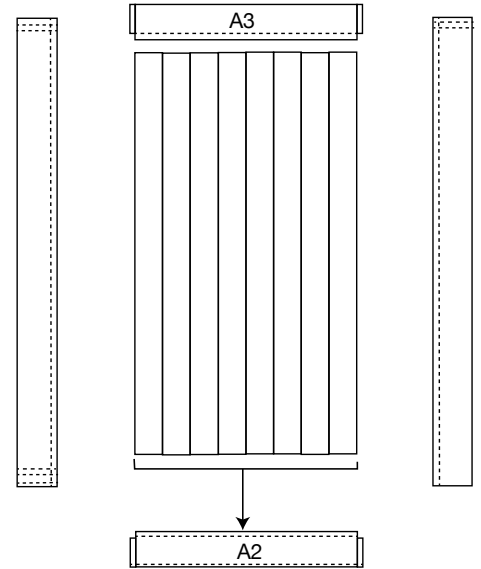


3. Slide slat A3 down to cover the tops of all B slats.

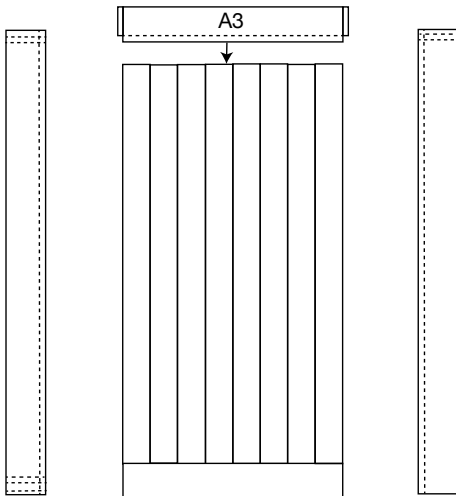

4. Slide slat A1 L to the right.

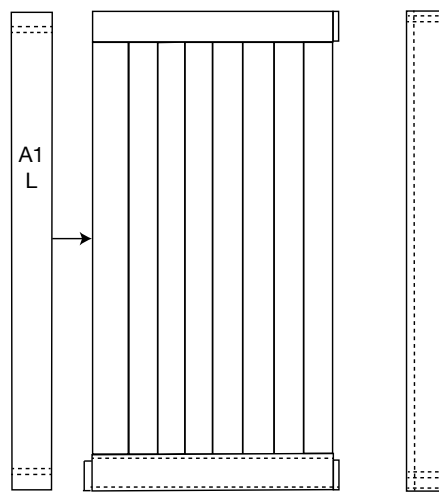


5. Slide slat A1 R to the left.

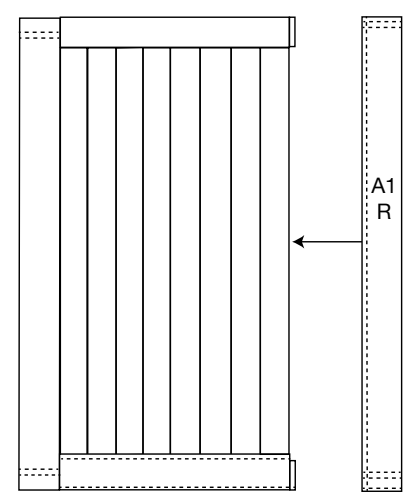


RUSTICAHARDWARE®

Assembly Instructions


6. Use the 6" Timber Locks to fasten A1 L, A1 R, and A2 and A3 together. Use your fingers and a wrench to fasten the Timberlocks, straight in, avoid going in at an angle. Have a partner help keep the rails square as you install the Timberlocks.

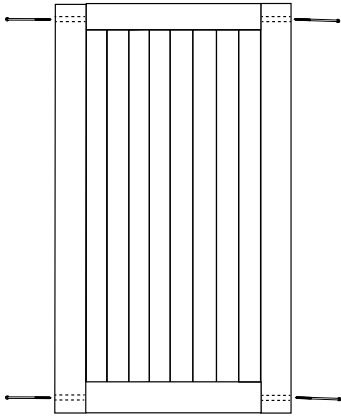

7. Lay A4 over the top of all B slats. Use a drill with a Phillips bit to attach.

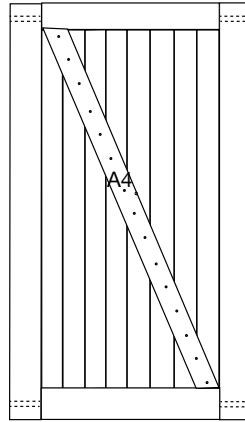

8. Your Door is ready to hang.

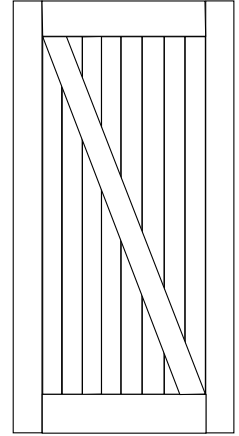

RUSTICAHARDWARE®

