


# True Barn Door

## Assembly Instructions




# Assembly Instructions


## Tools Needed

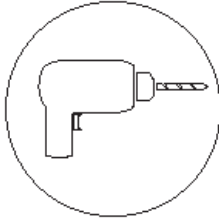

Drill with a  
Phillip's bit and  
a 5/16" socket

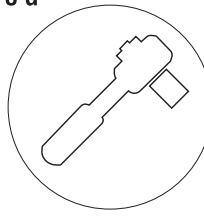


Ratchet  
with  
7/16"  
socket

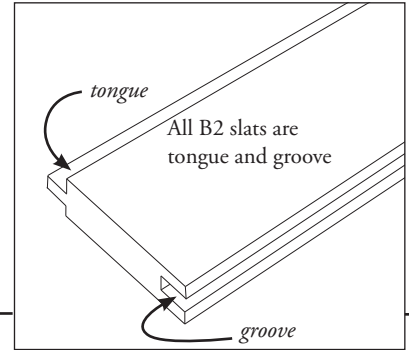

## Parts Included

*Lay all parts out on a flat surface as shown here.*

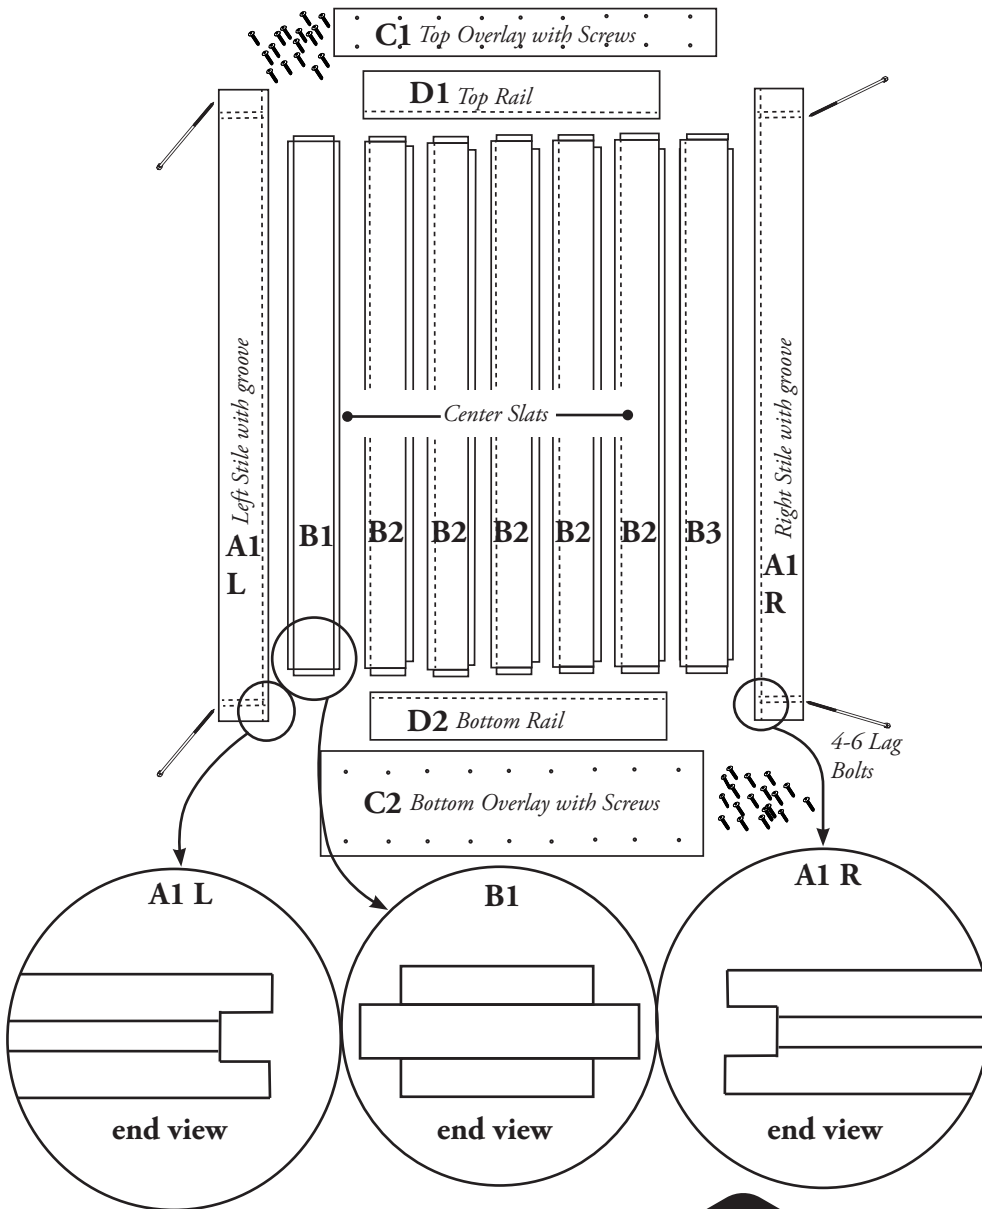

We recommend a dry assembly. It is recommended you not use glue or adhesive of any kind while assembling your Door.


If any of the slats have been damaged during shipping, call us at 800-891-8312 and we will expedite a replacement slat. Lay out your Door parts according to the illustration shown at left to accurately identify which slat, rail, or overlay needs to be replaced, if any.

**PLEASE NOTE:** These instructions are specific to a particular door size and type. Adjustments may be needed on your part for changes in specifications and measurements, as well as door types that are different than these.




# Assembly Instructions


## Assembling Your Door

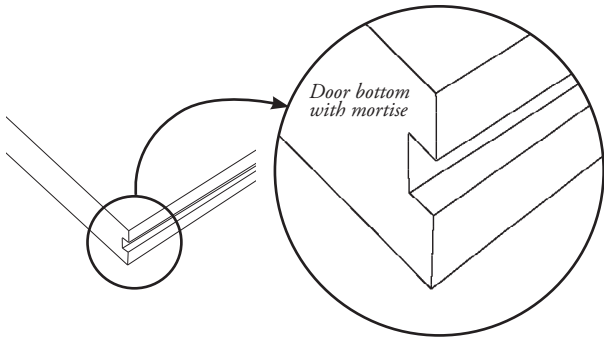


**NOTE:** If you are installing a Floor Mount Door Guide, your door will have a mortise (a groove that runs along the bottom of your door). Make sure this mortise is facing down towards your floor and that you install the Door Hangers on the other end.

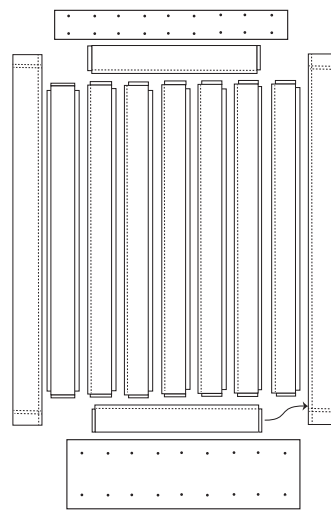


1. Slide Bottom Rail so the tongue inserts into the groove of the Side Stile.

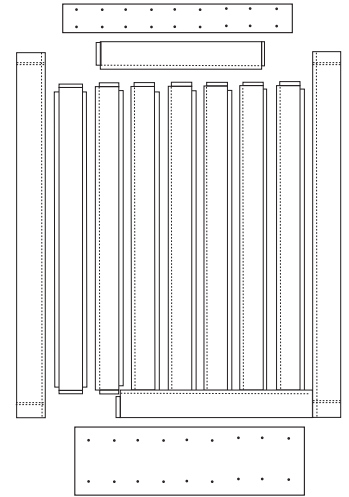


2. The tongues on the bottoms of the Center Slats will fit into the groove of the Bottom Rail.

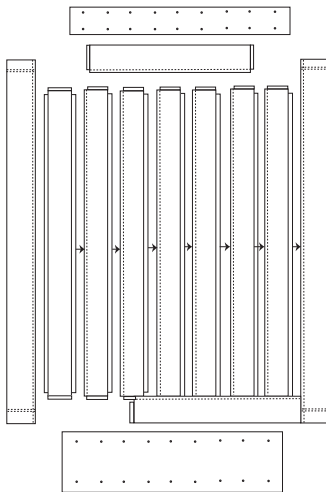

3. Slide each of the remaining Center Slats so the tongue of each slat nests inside the groove in the Slat next to it.

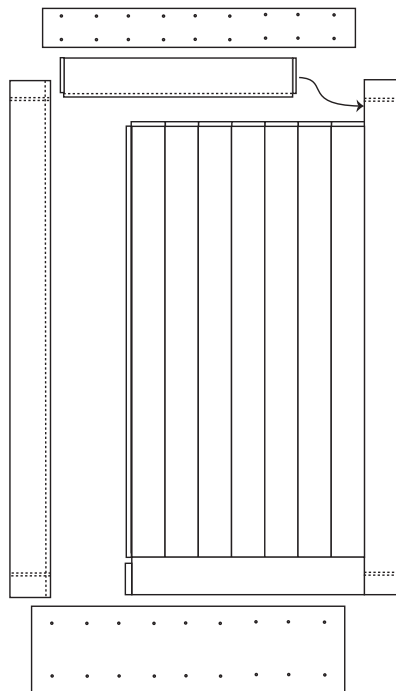


4. Slide the Top Rail so its tongue slides into the groove of the Side Stile, and its groove slides over the top tongues of the Center Slats.

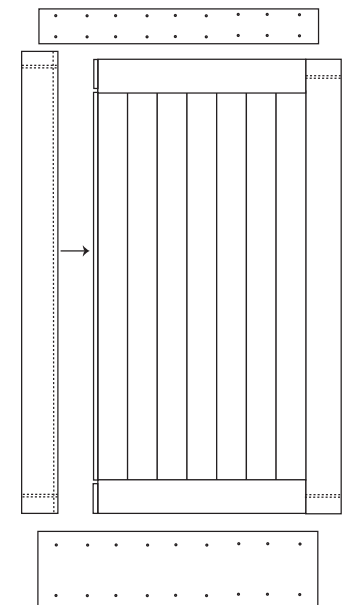

5. Slide the remaining Side Stile so the tongue nests inside the groove in the Center Slat next to it.




# Assembly Instructions

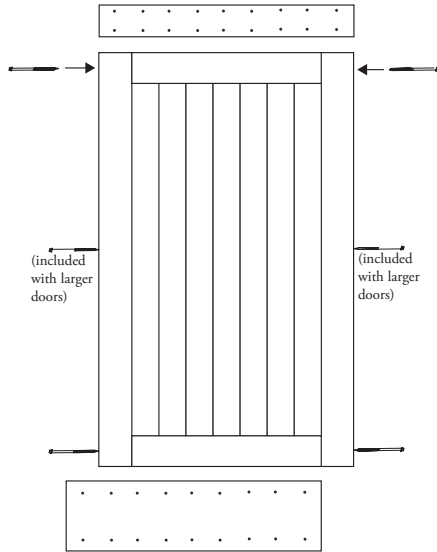

6. Insert the Lag Bolts into the side Stile's pre-drilled holes and tighten by hand. If all slats are in correct position, tighten using your ratchet with a 7/16" socket.



**NOTE:** It is very important that the Lag Bolts remain absolutely horizontal while being drilled into the door's stiles, not at an angle in any direction.

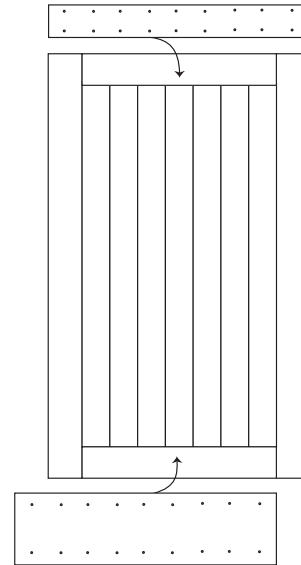

7. Slide the Top and Bottom Overlays into place, aligning with the Door's edges, top and bottom. Attach with Grabber Screws and a drill with a Phillips bit.



*Attach a Door Pull and your Door is ready to hang.*

