

RUSTICA

INSTALLATION
INSTRUCTIONS

"NO SHOW"

BARN DOOR
HANGERS
ON
FLAT TRACK



CONGRATULATIONS ON YOUR DECISION TO BRING HOME AN
AMERICAN MADE PRODUCT OF THE HIGHEST QUALITY.

1-800-891-8312
support@rustica.com
www.Rustica.com


DESIGNED AND CRAFTED ENTIRELY IN THE
U.S.A.




DON'T BE A STRANGER.
FOLLOW US ON SOCIAL MEDIA.




NO SHOW BARN DOOR HARDWARE Installation Instructions

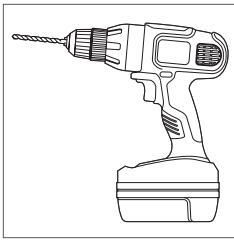


Drill with 3/32",
3/8" and Phillips
Bit or
Screwdriver

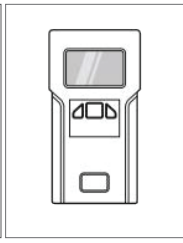


Stud Finder

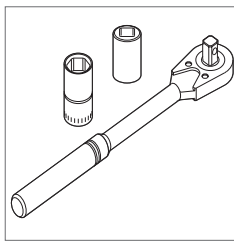


Socket Wrench
with 9/16" & 5/8"
Sockets

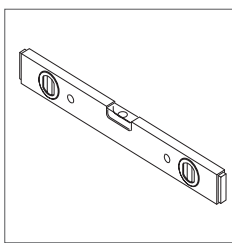


Level

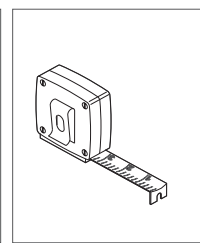

Tape Measure









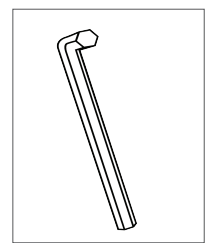


Allen Wrench

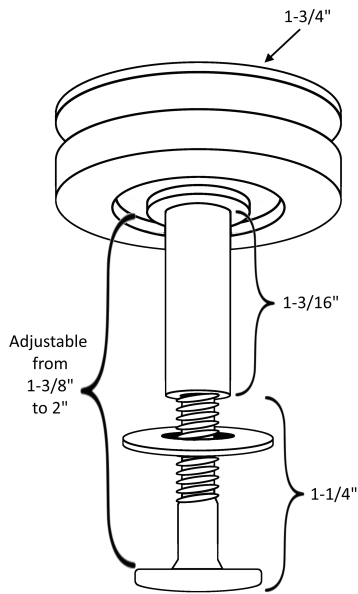

PARTS


- | | |
|--------------------------|--------------------|
| A. Hanger/Wheel Assembly | E. Spacers |
| a. Wheel | a. 1/2" |
| b. Female Bolt | b. 3/8" |
| c. Washer | F. Anti-Jump Block |
| d. Male Bolt | G. Door Stop |
| B. Lag Screw | H. Door Guide |
| C. Washer | I. Phillips Screw |
| D. Track | |

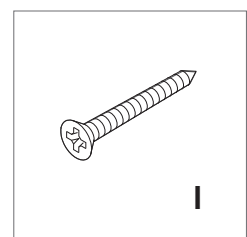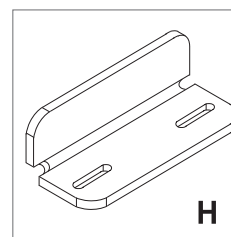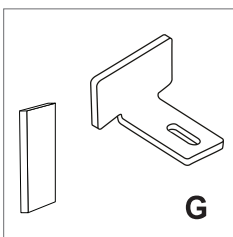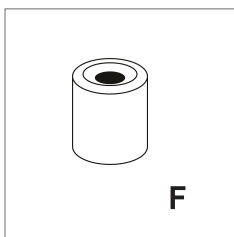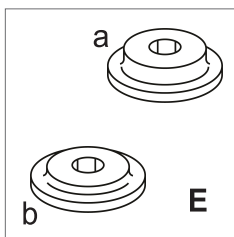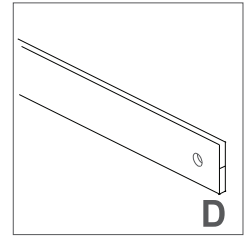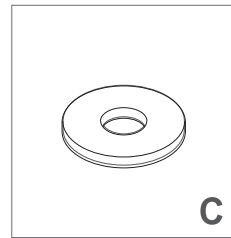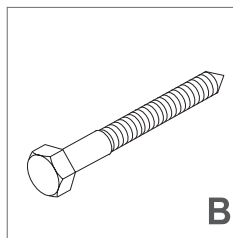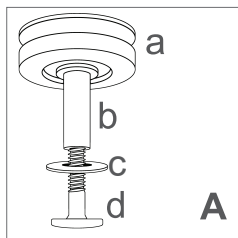


STAG HANGER Assembly Instructions

NOTE:

Doors using Floor Mount Door Guides will have a groove on the bottom. Ensure this groove is on the opposite end of the Door Hanger Installation.

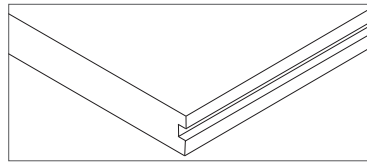

HANGER INSTALLATION

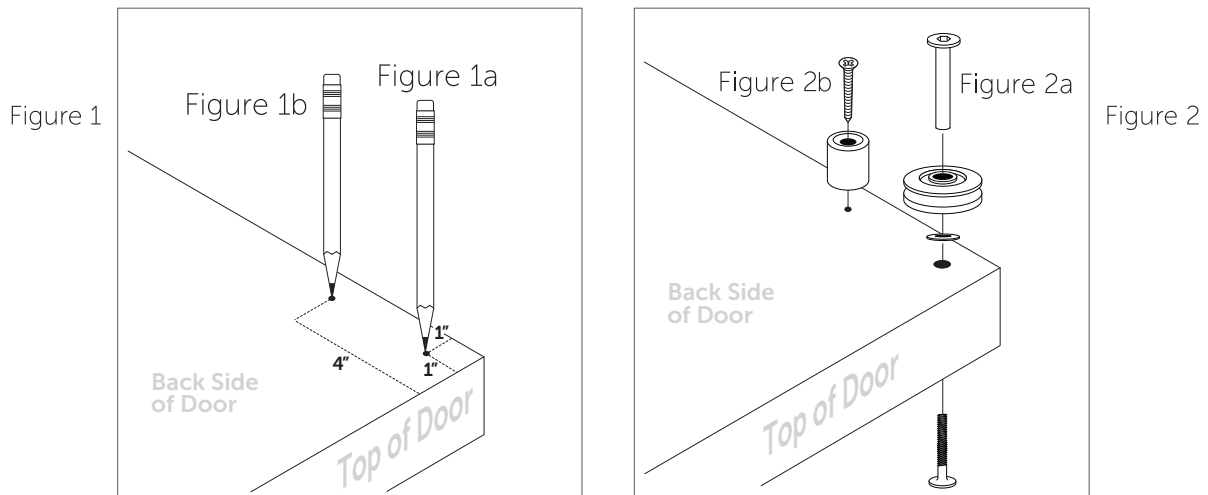

1. Lay the door with the back facing up on a flat, level surface.
2. Measure holes for the wheels 1" in from the top and from each side and mark the location (Figure 1a).
3. Measure location of the anti-jump 1" from each side of the door and 4" from the top of the door (Figure 1b).
4. From the back side, drill a small pilot hole only 1/4" deep for each anti-jump using the 3/32" drill bit. Do NOT drill the pilot hole for the anti-jump all the way through the door. Drill a hole all the way through the door for the wheels at both marked spots using the 3/8" drill bit.
5. Slide the female bolt through the wheel from the narrow side of the wheel. Slide the spacer over the female bolt. Slide the female bolt (with washer and wheel) through the back side of the door. Note the female bolt may not pass all the way through. Slide the male bolt into the female bolt from the front of the door. Hand tighten with Allen wrench (Figure 2a).
6. Place the anti-jumps over the pilot hole and tighten with a Phillips screw into the pilot hole. (Figure 2b).




Use teamwork. We recommend two people for this build.

FIRST THINGS FIRST

Check to see if the floor below the track area is level. If the floor rises more than 1/2" the door may rub or not slide well. If the floor is not level, measure from the highest point of the floor surface to the make sure the door clears the floor.

Ensure the track will be installed onto wall studs or in wall blocking. If wall studs are not lining up with the installation a header will be required to provide the necessary strength and stability for the track and door.

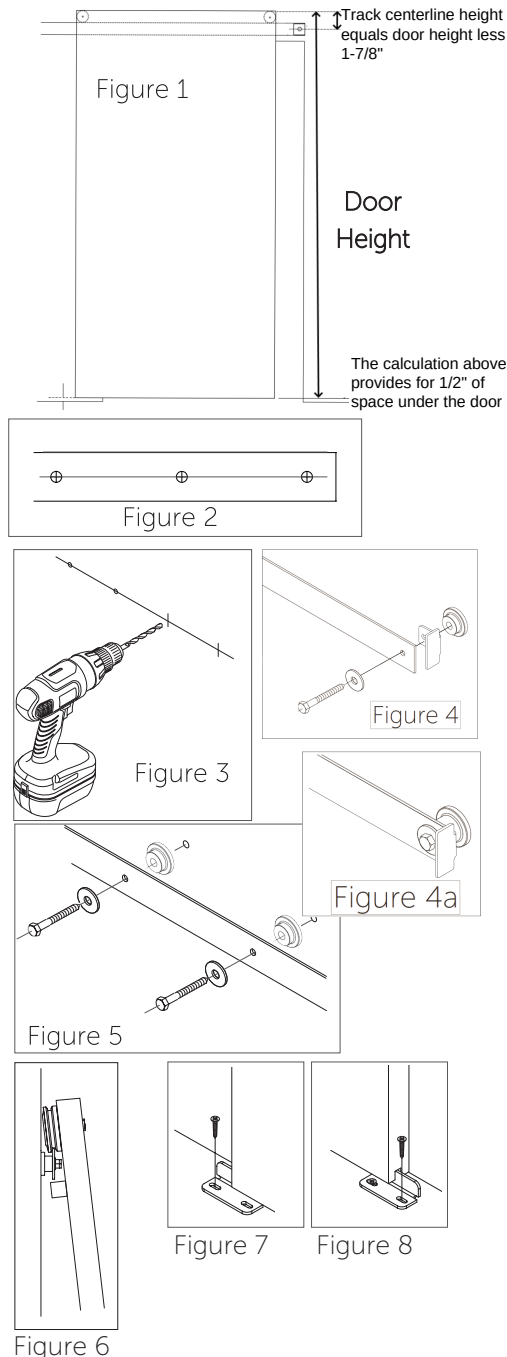

1. The installation is designed to provide 1/2" clearance between the bottom of the door and the floor. Track centerline height = Door Height – 1-7/8". For example, if your door is 84" tall, mark the track centerline at: $84" - 1-7/8" = 82-1/8"$
2. Measure up from the highest point of the floor and mark the calculated track centerline height. Using a level, draw a horizontal line across the wall at this height.
3. Hold the track against the wall with the center of the mounting holes aligned
4. Mark an intersecting line in the center of each hole (Figure 2).
5. Remove the track and drill the required pilot holes using a 1/4" drill bit.(Figure 3).
6. Loosely attach one end of the track using a stop, lag screw, and washer. Do not fully tighten, using a socket wrench with 9/16" socket (Figure 4). Do not tighten.
7. Loosely attach the opposite end of the track in the same manner.
8. Attach the rubber bumper to the inside of the stop. Repeat for the stop on the other end of the track (Figure 4a).
9. Install remaining spacers with lag screws and washers using a 9/16" socket wrench (Figure 5) Tighten all lag screws.
10. Hang the door by angling the bottom away from the wall, slipping the wheel over and onto the track with the ani-jump sliding under the track (Figure 6).

DOOR GUIDE INSTALLATION

11. With the door in the closed position, ensure the door is hanging straight using a bubble level.
12. Position the Door Guide partway into the groove in the bottom of the door (Figure 7).
13. Install the Door Guide using a 1" Phillips screw (provided) and a drill with a Phillips bit.
14. Slide the door toward the open position until the other side of the Door Guide is exposed.
15. Install the second 1" Phillips screw (provided) using a drill with a Phillips bit (Figure 8).

