



# INSTRUCTIONS HOW TO INSTALL TILES

Thank you for your felt right order. We want to ensure you have the best possible installation experience. Before beginning, please take a moment and watch our 3 minute installation video.



#### **1. PEEL CORNER**


Peel one of the adhesive tabs from the branded liner.



### 2. PLACE AND PRESS


Firmly press and rub the whole tab, including the edges, onto the back side of the tile. Place the tabs according to the **Tab Placement**.

Ensure the adhesive tabs are firmly pressed and rubbed onto the tile to ensure proper adhesion.



#### **3. REMOVE LINER**

Remove the backing, leaving the adhesive. If the adhesive removes with the tab as you lift, then press the corner again to re-attach the adhesive to the tile.

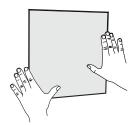

#### 4. LINE UP AND PRESS


Using your phone or a level, place the tile against the surface. Apply pressure against the tile for up to 30 seconds for the best results.



#### SCAN QR CODE


for 3-minute instructional video.

If you have any questions email: support@feltright.com

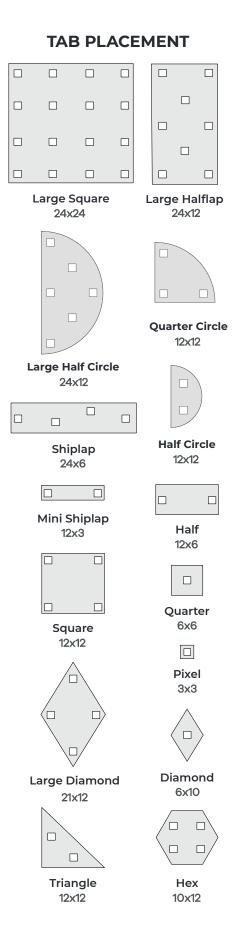



## INSTRUCTIONS HOW TO REMOVE TILES



#### **1. PULL UP CORNER**

Starting with one corner, **SLOWLY** peel the tile from the wall, leaving the adhesive behind. Insert your finger behind the tile and slowly add pressure until the tile releases from one tab.



#### 2. ROLL OFF ADHESIVE

Starting at the corner, roll your thumb across the adhesive to peel it off the wall.