PR2V TOOL-LESS PDU BRACKET


Part Number(s): PR2VPDUB



© Panduit Corp. 2020 INSTALLATION INSTRUCTIONS V00029SZ


PDU BRACKET INSTALLATION

Attach PDU Bracket to PR2V manager by aligning the clips of the PDU Bracket with the keyholes of the manager (see specific page for your PDU/Manager), and push down engaging the spring loaded button with the middle keyhole.

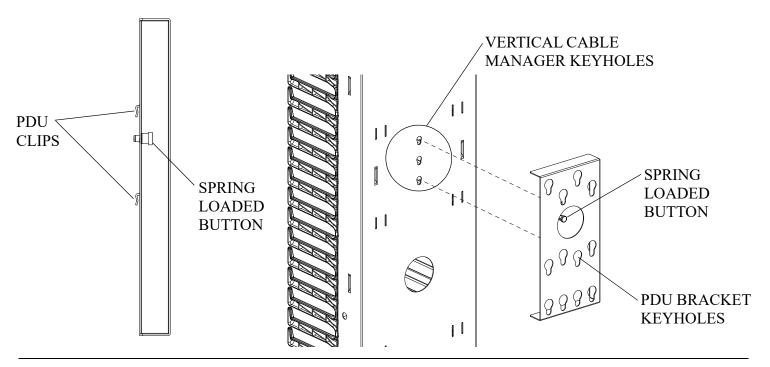


PDU BRACKET REMOVAL

To remove PDU Bracket from Vertical Cable Manager, pull Spring Loaded Button outward, while sliding the PDU Bracket up and out of the keyholes.

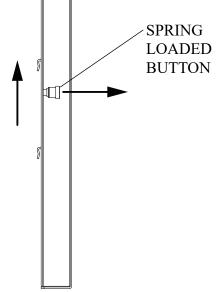

SHORT PDU SPACING


Install PDU Brackets per the spacing below. Insert PDU mounting buttons into the PDU Bracket keyhole based on your specific Vertical Cable Manager height and slide downward. Use the locations that work best for your active equipment. Two PDU's can be installed per bracket.

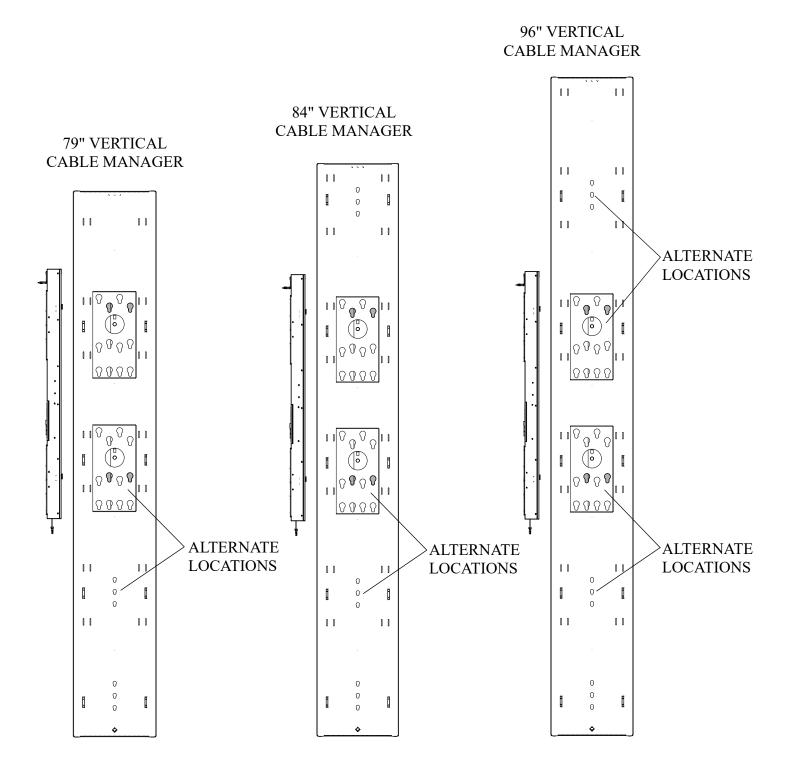

MEDIUM PDU SPACING

Install PDU Brackets per the spacing below. Insert PDU mounting buttons into the PDU Bracket keyhole based on your specific Vertical Cable Manager height and slide downward. Use the locations that work best for your active equipment. Two PDU's can be installed per bracket.

96" VERTICAL CABLE MANAGER

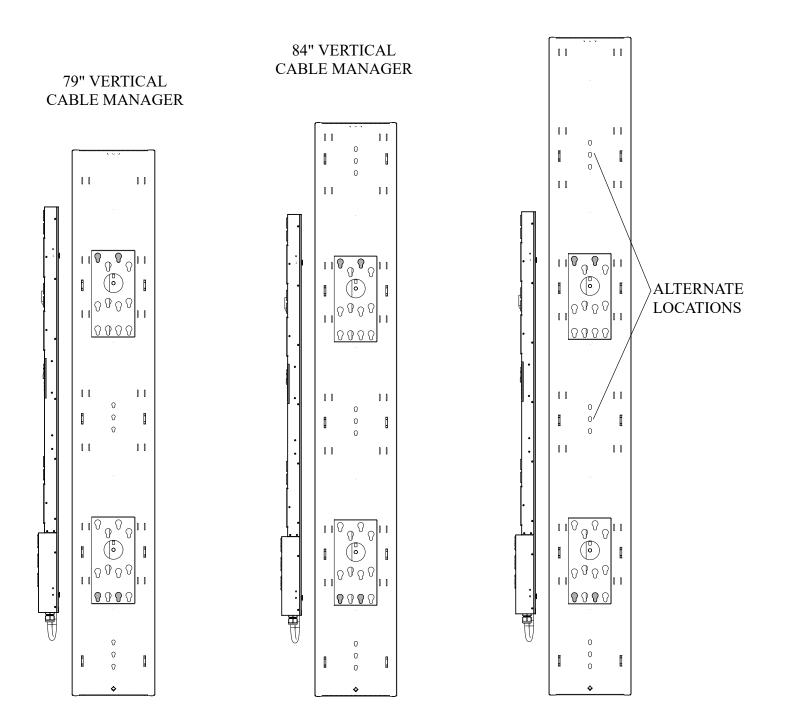


LONG PDU SPACING

Install PDU Brackets per the spacing below. Insert PDU mounting buttons into the PDU Bracket keyhole based on your specific Vertical Cable Manager height and slide downward. Two PDU's can be installed per bracket.

NOTE: Long PDU does not fit on 79" Vertical Cable Manager.

96" VERTICAL CABLE MANAGER

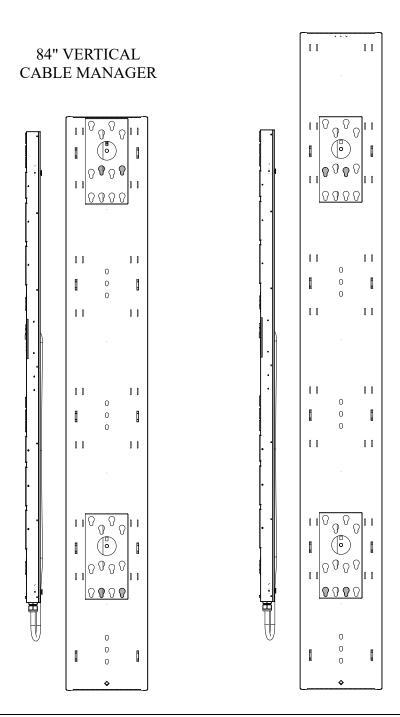

For Instructions in Local Languages and Technical Support:

PANDUIT www.panduit.com

E-mail: techsupport@panduit.com Phone: 866-405-6654