
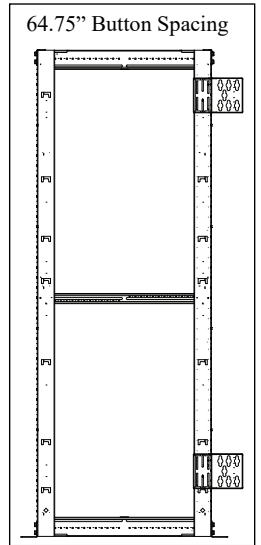
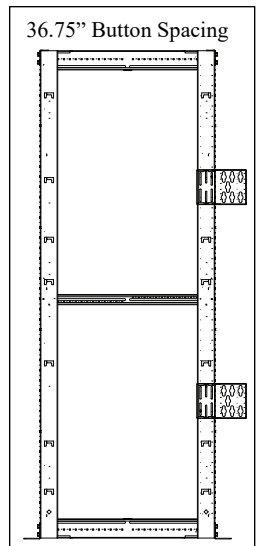
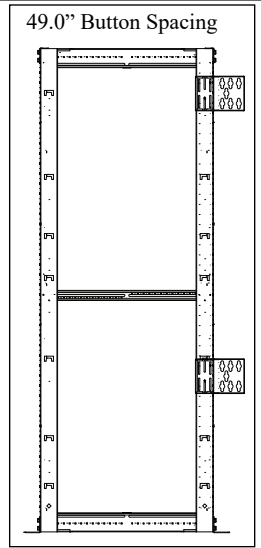



Power Distribution Unit (PDU) Mounting Bracket Locations for Typical Tool-less Mounting Button Spacing

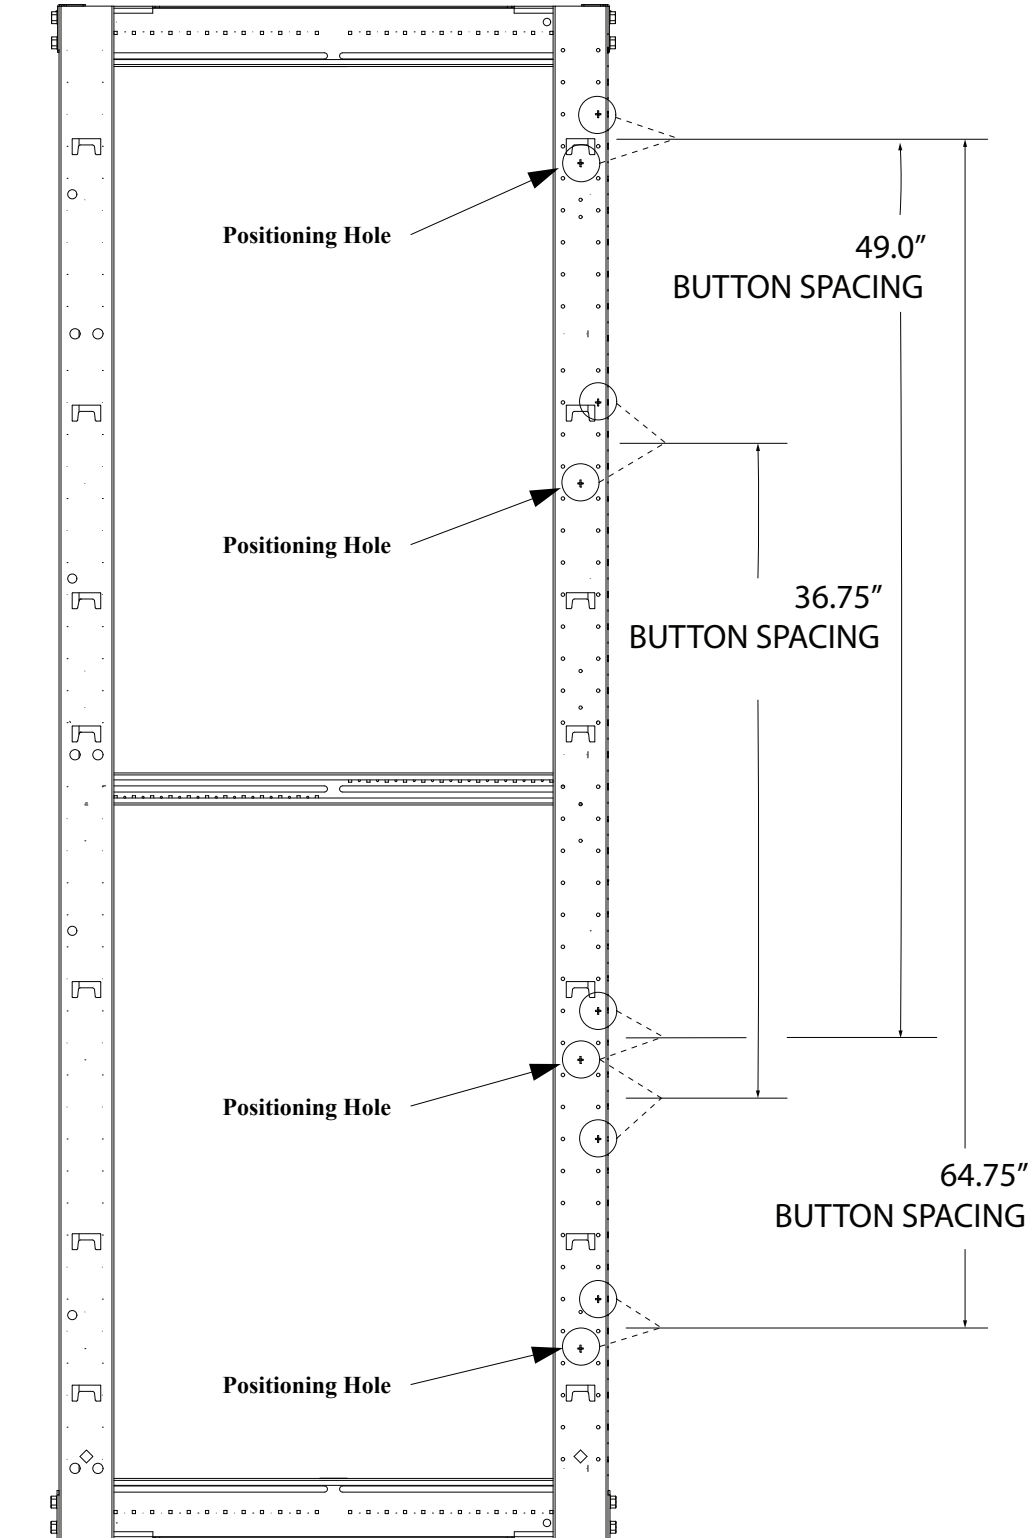


Power Distribution Unit (PDU) Mounting Bracket Locations

Note location of #12-24 positioning screw in each spacing scenario. Install the positioning screw first to help locate the bracket in the correct location and orientation relative to the cabinet frame. See page 3 for bracket and screw installation instructions.


49.0" BUTTON SPACING

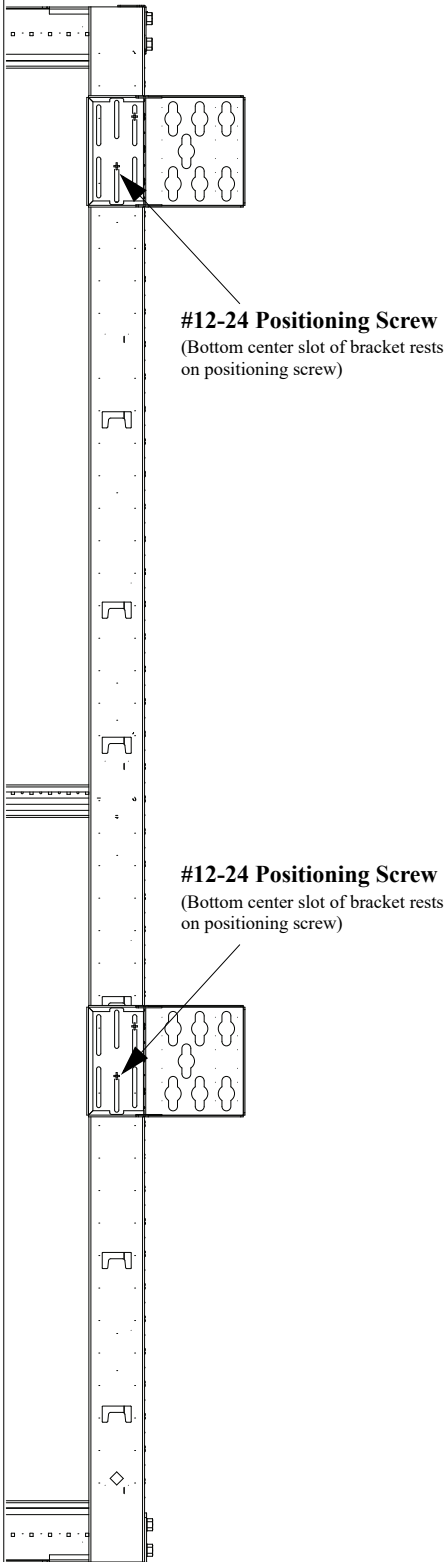

36.75" BUTTON SPACING

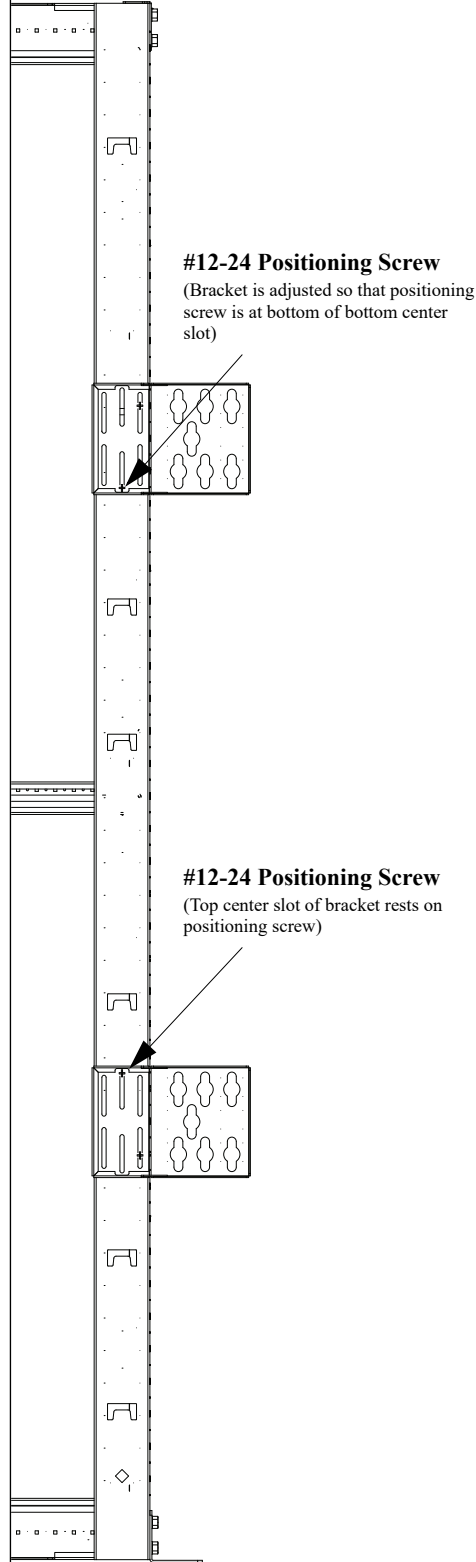


64.75" BUTTON SPACING

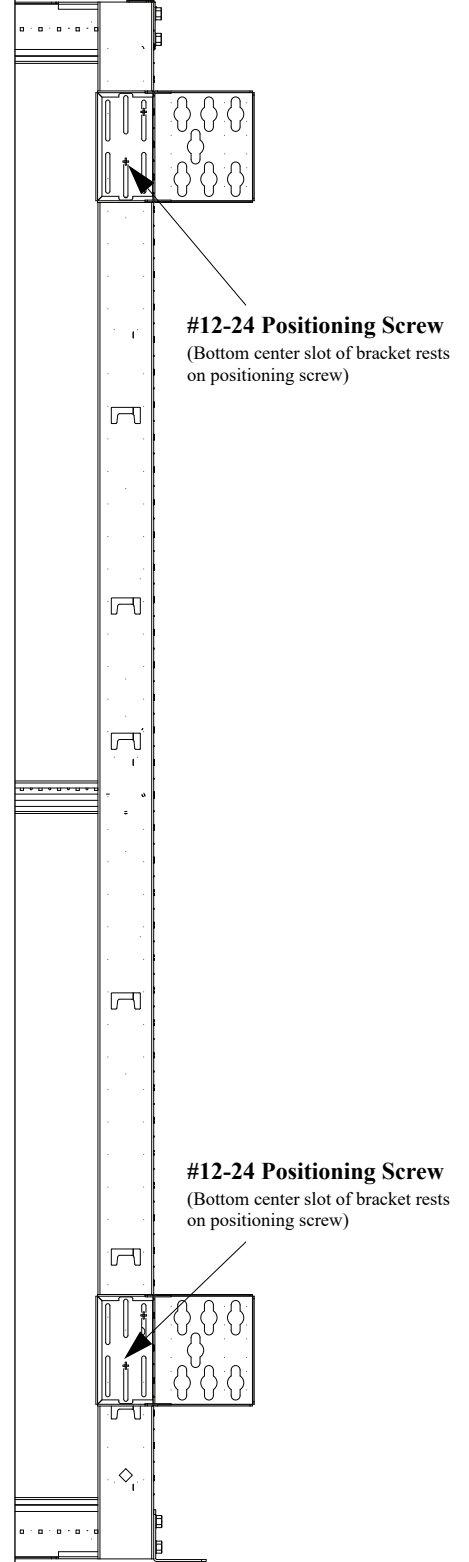

Power Distribution Unit (PDU) Mounting Bracket Installation

Use two (2) #12-24 trilobular screws to mount each CVPDUB bracket to rack. Tighten screws to 45 in-lb (+/- 5 in-lb). Refer to Pages 1 and 2 for hole and slot orientation. Install buttons of Power Distribution Unit (PDU) into CVPDUB bracket as shown.

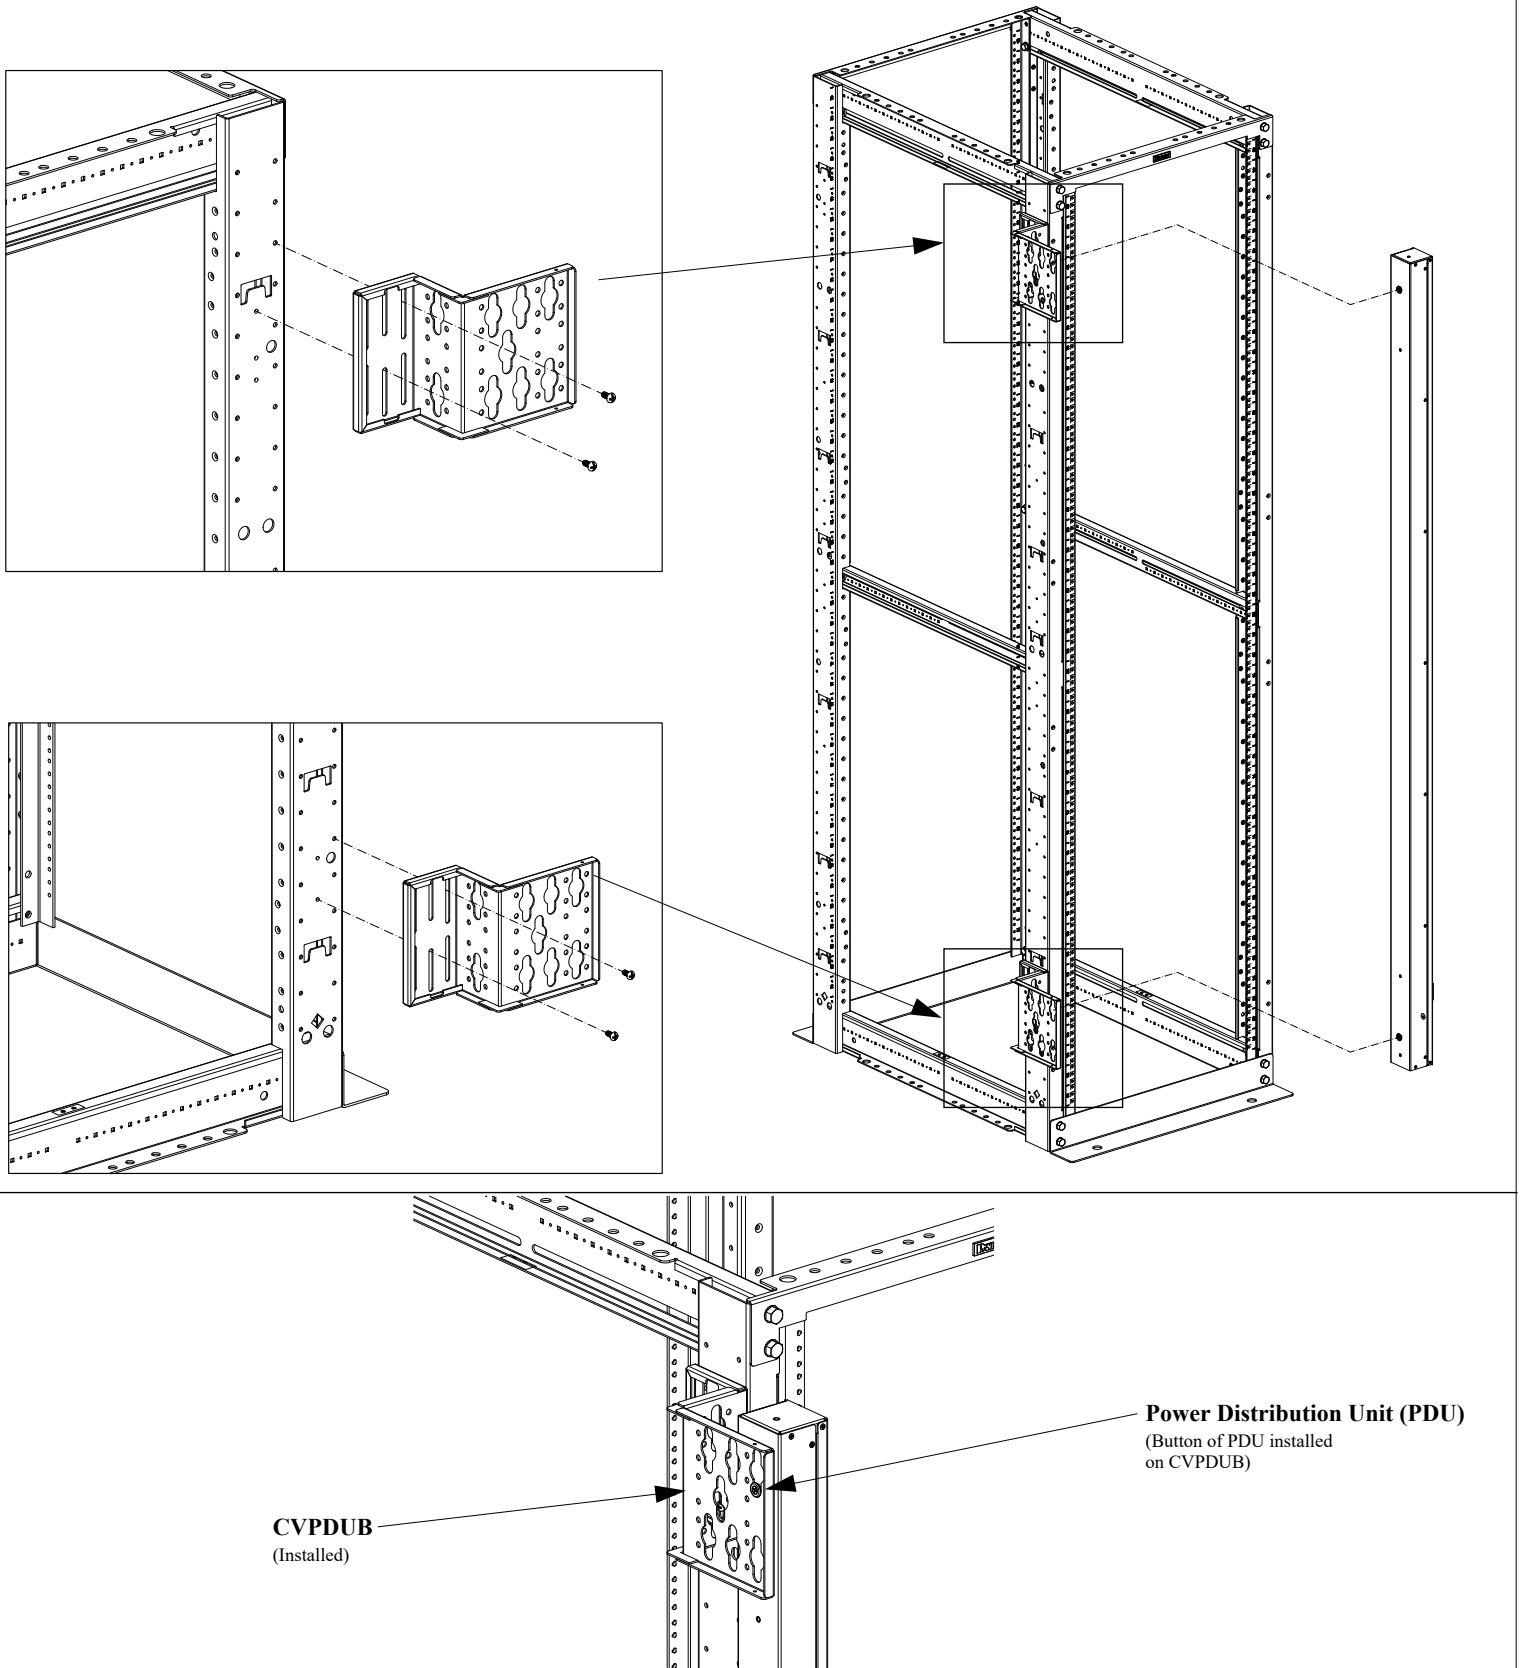

Power Distribution Unit (PDU) Mounting Bracket Installation (*non-typical button spacing*)

