


### Installation of Front Door Switch Sensor Bracket

1. Remove (2) M5x0.8 x 12mm Button Head Torx Screws and Front Cover Plate from Front Fascia Plate
2. Install Magnet to Magnet attachment using (2) M3x0.5 Hex Nut
3. Install Magnet Attachment to back of the Magnet Fascia Bracket using (2) M3x0.5 Hex Nut
4. Install Magnet Fascia Bracket to Front Fascia Plate using (2) M5x0.8 x 12mm Button Head Torx Screws
5. Install Magnetic Switch on the Magnetic Switch Door Bracket using (2) M3x0.5 Hex Nut
6. Position the Magnetic Switch Door Bracket off the edge of the front door so that the sensors will be aligned when the door is closed
7. Install Magnetic Switch Bracket Clamp using (4) M5x0.8 Flange Hex Nut (torque to 5in-lbs) such that brackets are just snug to the front door tube. *Careful not to overtighten*

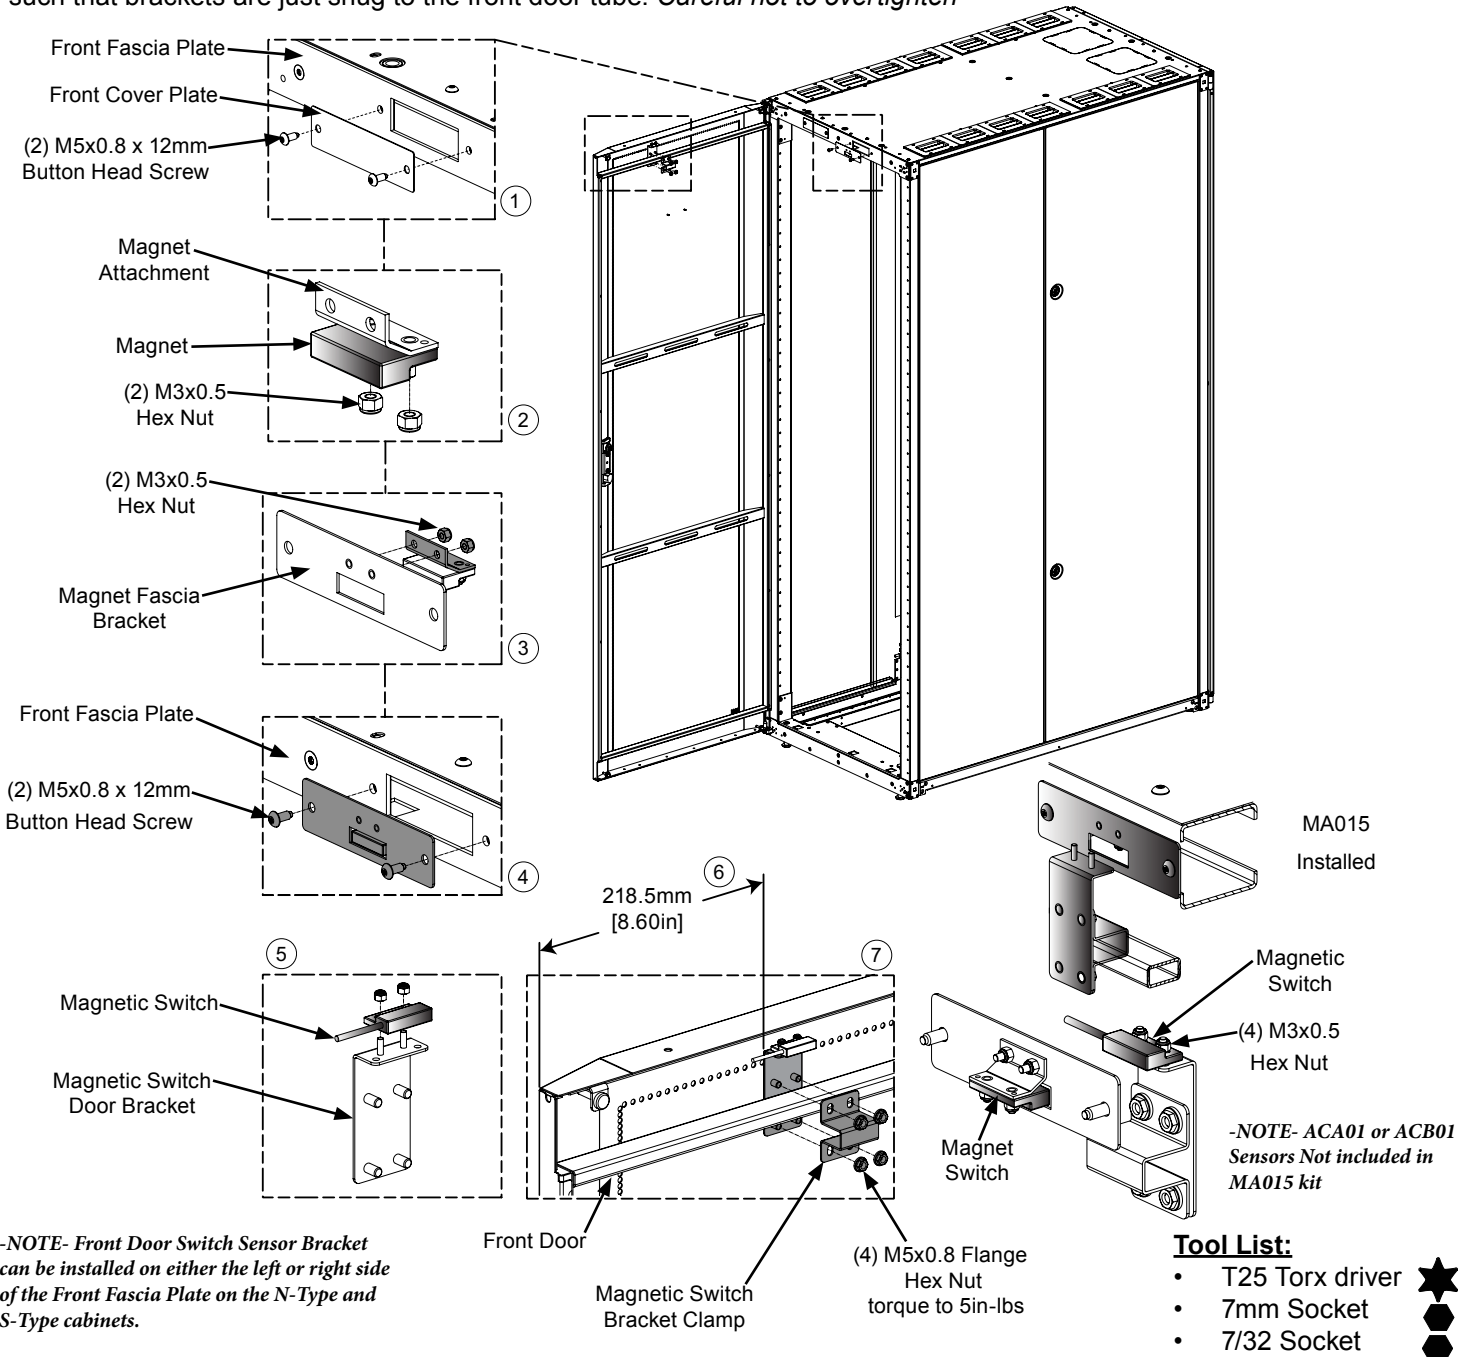

**-NOTE- Front Door Switch Sensor Bracket can be installed on either the left or right side of the Front Fascia Plate on the N-Type and S-Type cabinets.**

For Instructions in Local Languages and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

# PANDUIT

[www.panduit.com](http://www.panduit.com)

E-mail: [techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone: 866-405-6654