


WMPV45EPB1 Installation Instructions

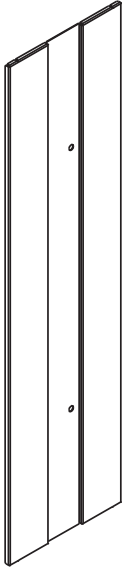

WMPV45EPB1

- (2) End Panels
- (4) .375-16 Acorn nuts
- (4) .375 -16 Bolts

Assembly:

Step 1:

Insert bolt into mounting location one.

Step 2:

Place End Panel over the bolt and hand tighten nut.


Step 3:

Insert bolt into location two and secure with acorn nut. Tighten acorn nut in location one.

Step 4:

Repeat steps 1-3 for upper End Panel


Note: Install lower end panel first when using a stacked configuration.

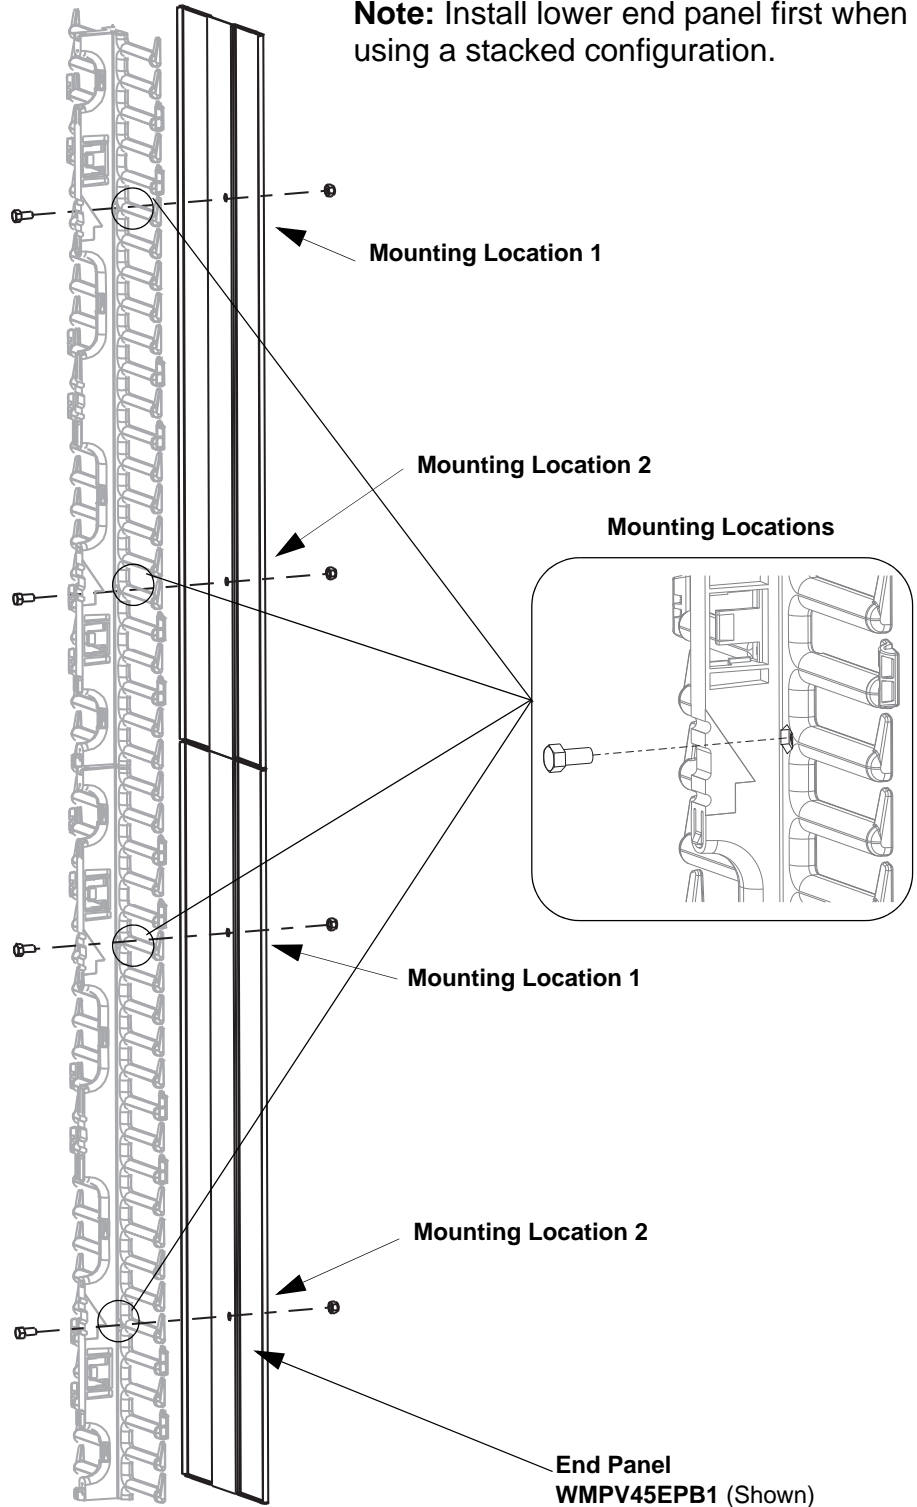

Geometry modified for clarification: Not all molded fingers are shown


NREPB1 Installation Instructions

Note: Install lower end panel first when using a stacked configuration. Determine knockouts to be removed by lining up panel against manager.

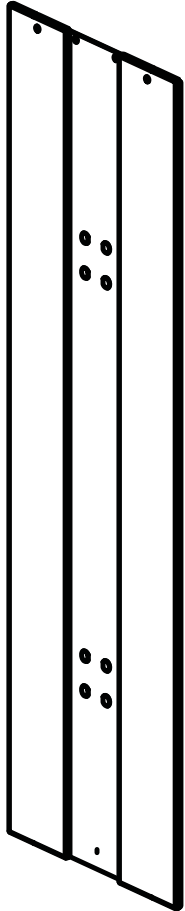

NREPB1

- (2) End Panels
- (4) 3/8-16 Acorn Nuts
- (4) 3/8 Bolts
- (2) 1/4" Washers
- (2) 1/4-20 X 3/8" Screws
- (2) 1/4-20 Nuts

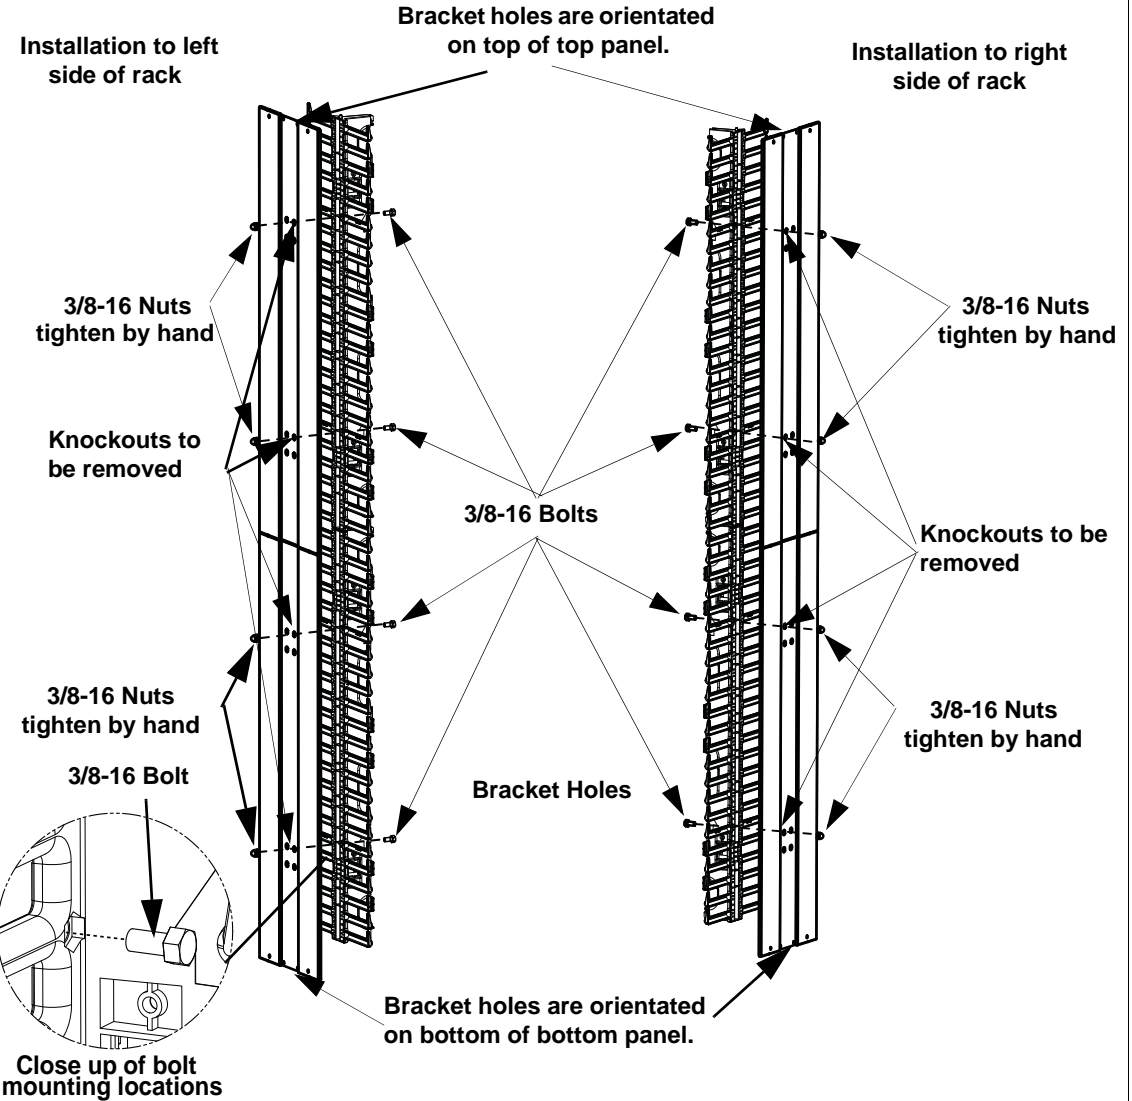

1/4-20 Bolts and Washers

1/4-20 Nuts

Bracket may be anchored to floor using these slots (Hardware not included). Bracket may be orientated on either inside or outside of panel. **Note:** Bracket must be mounted outward when Cool Boot is used.

For instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail: cs@panduit.com
 Fax: (708)444-6448