


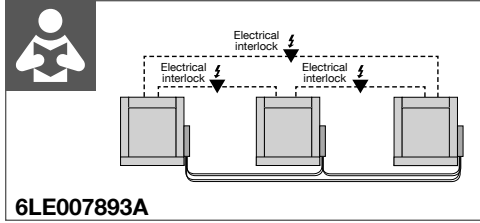
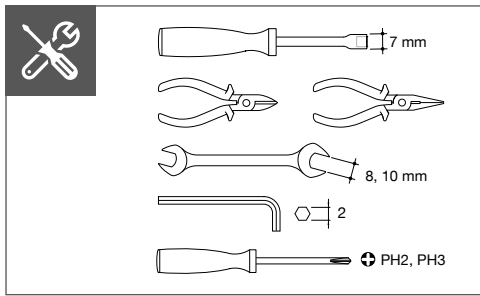
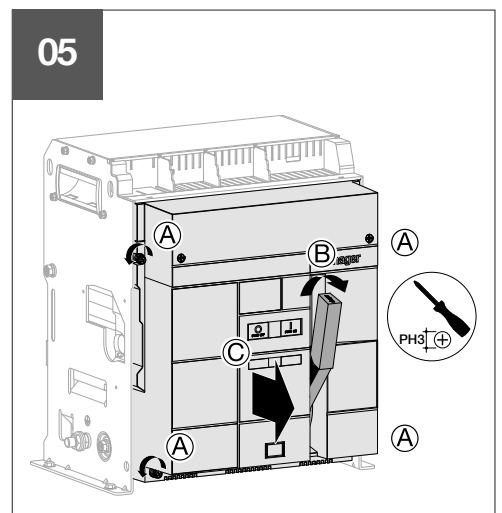
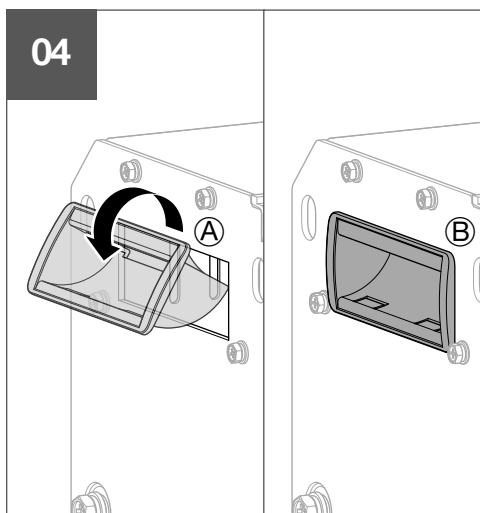
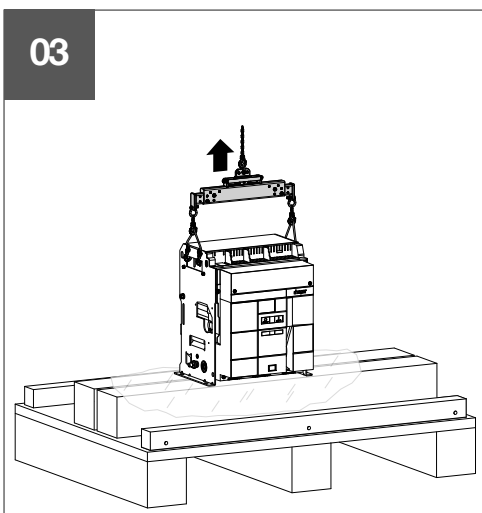
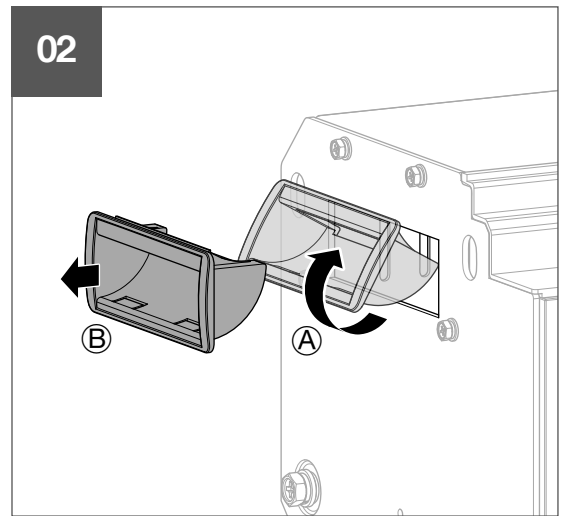
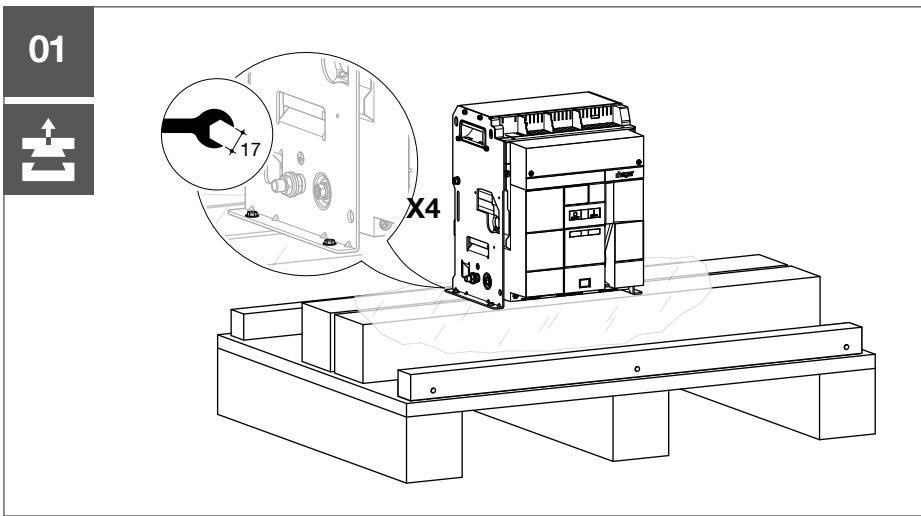
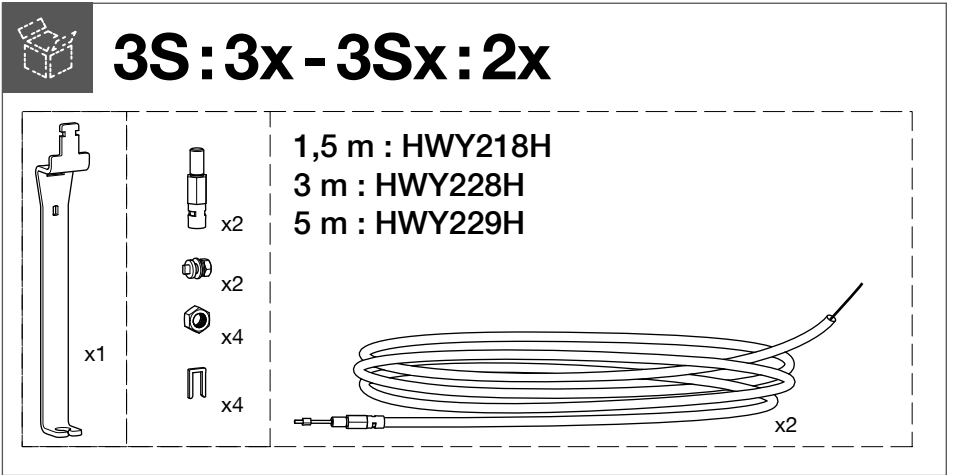
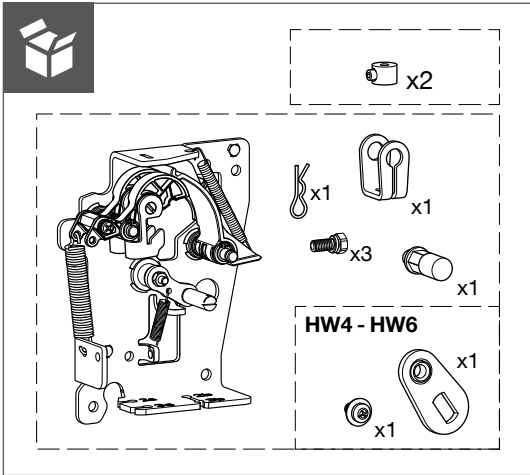
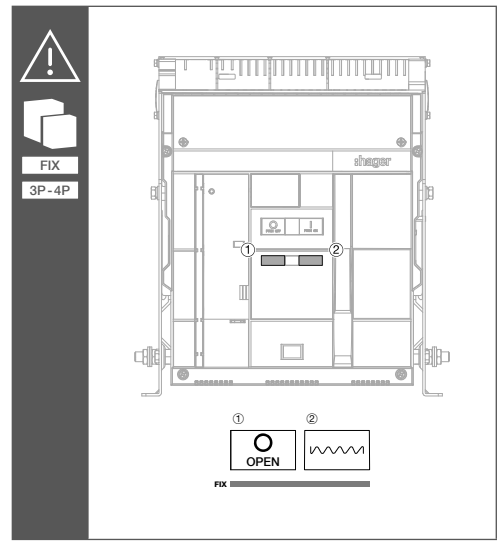
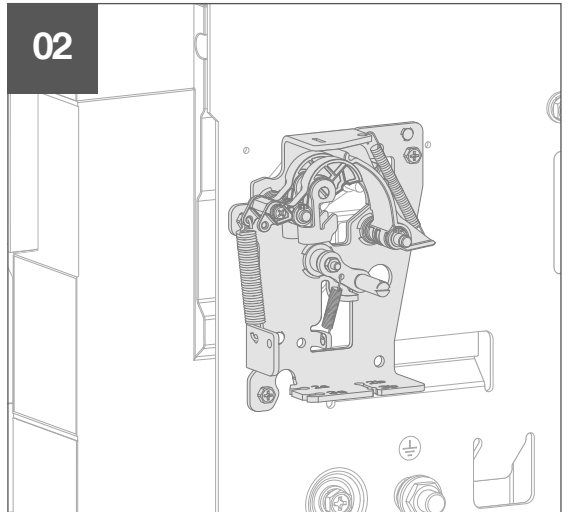
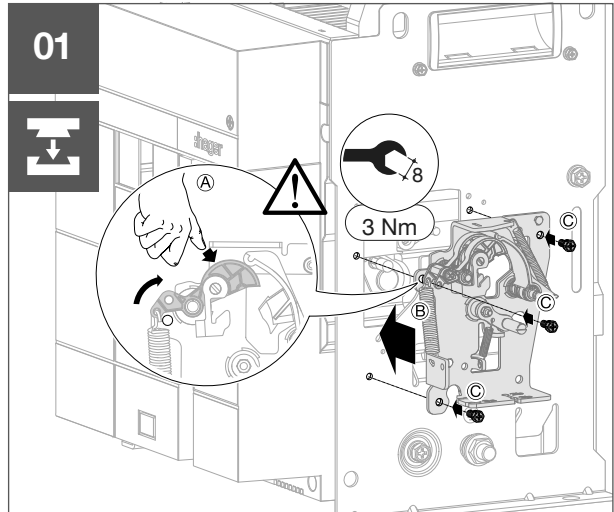
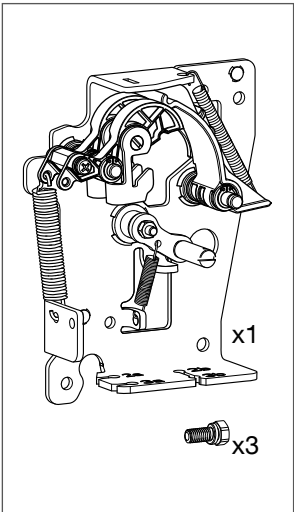
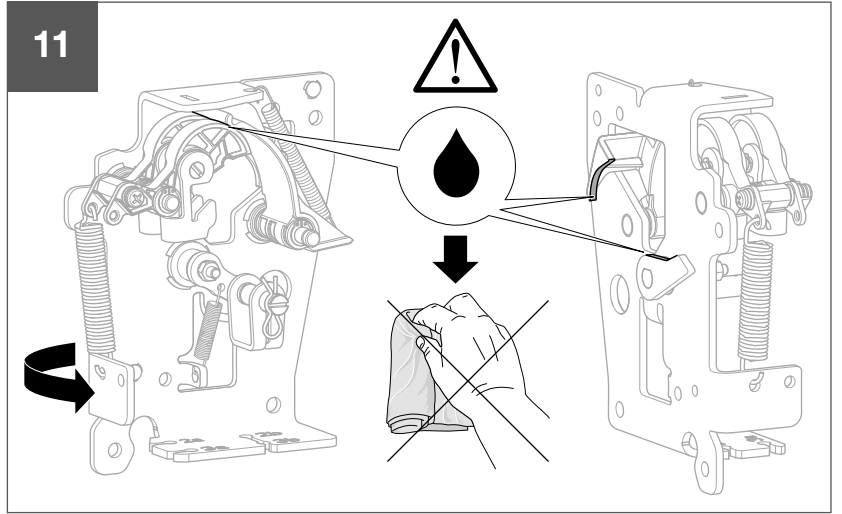
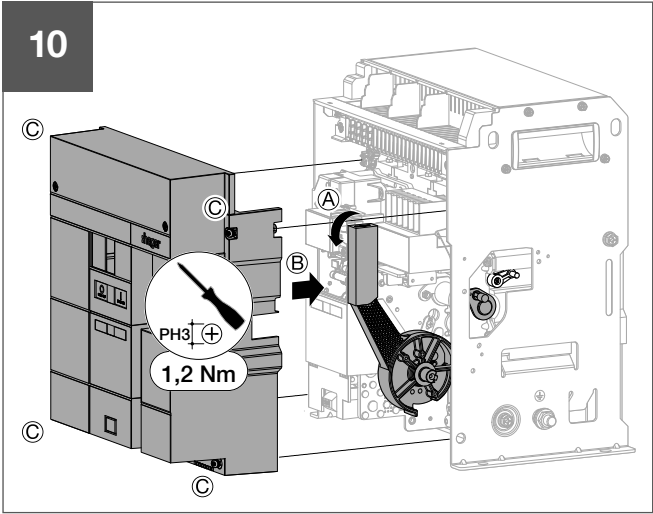
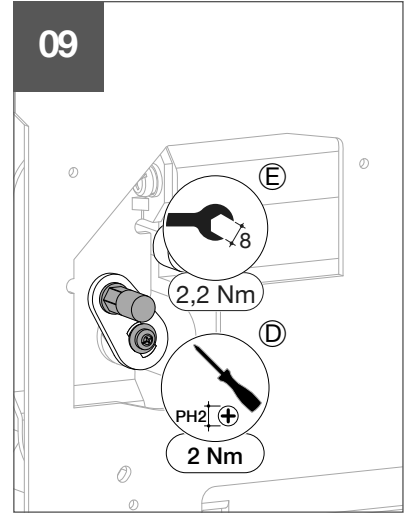
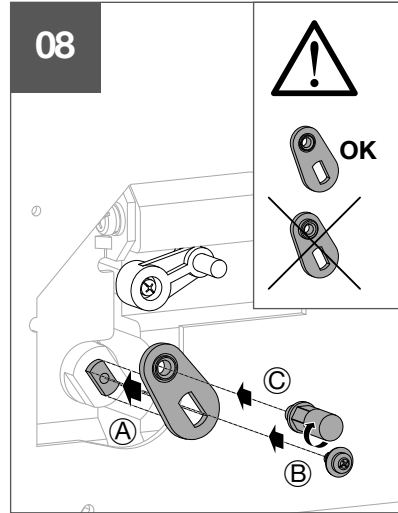
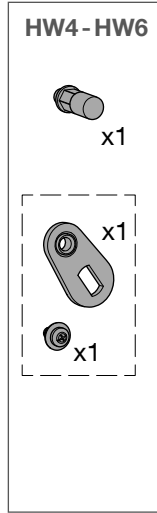



HWY236H

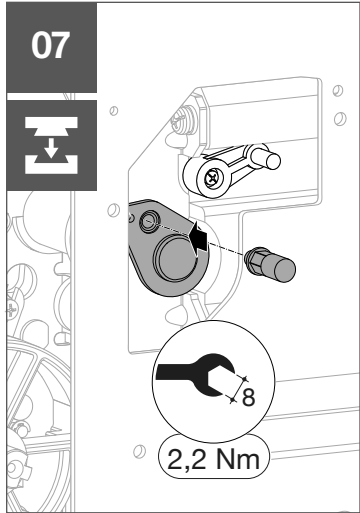

6LE007893A

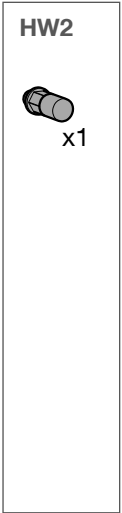

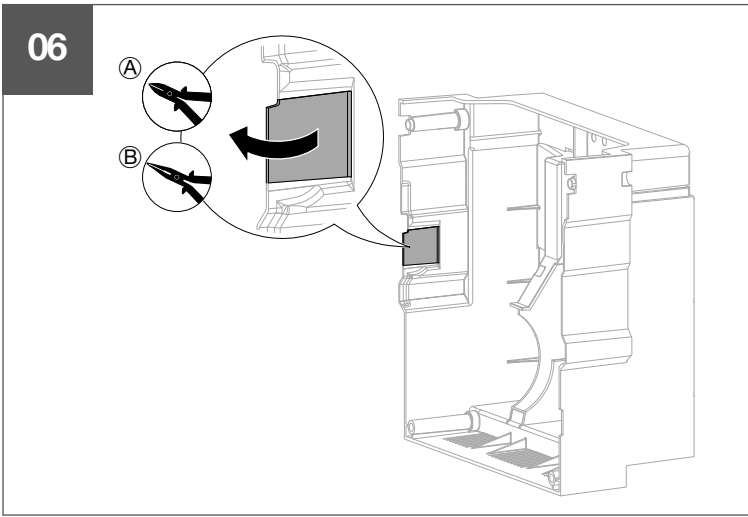

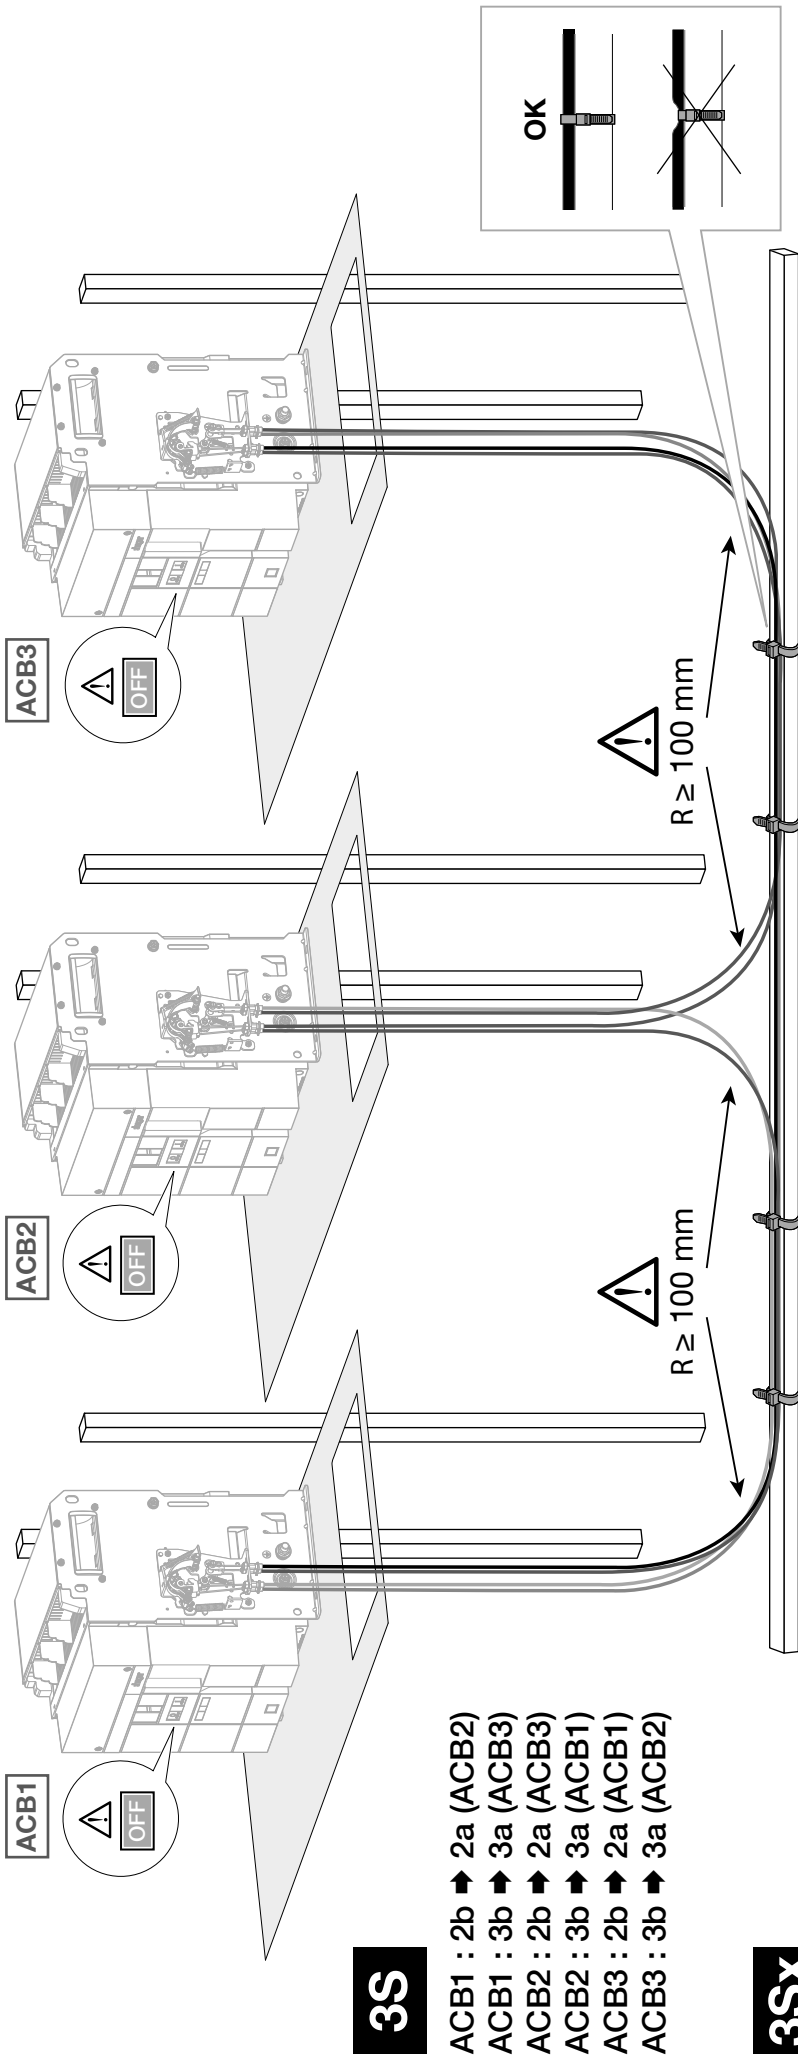



3S














- ACB1 : 2b → 2a (ACB2)
- ACB1 : 3b → 3a (ACB3)
- ACB2 : 2b → 2a (ACB3)
- ACB2 : 3b → 3a (ACB1)
- ACB3 : 2b → 2a (ACB1)
- ACB3 : 3b → 3a (ACB2)



3Sx















- ACB1 : 2b → 2a (ACB2)
- ~~ACB1 : 3b → 3a (ACB3)~~
- ACB2 : 2b → 2a (ACB3)
- ACB2 : 3b → 3a (ACB1)
- ~~ACB3 : 2b → 2a (ACB1)~~
- ACB3 : 3b → 3a (ACB2)








Warning !
After setting, if cable management is changed, setting must be redo.





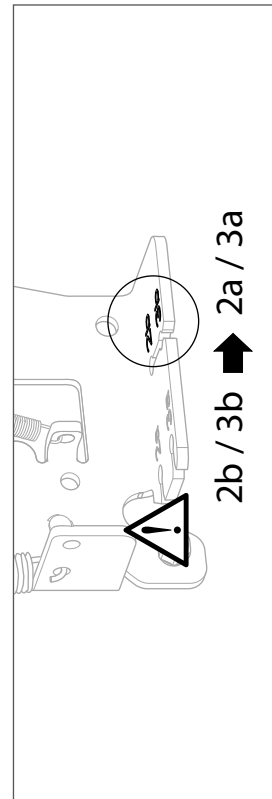
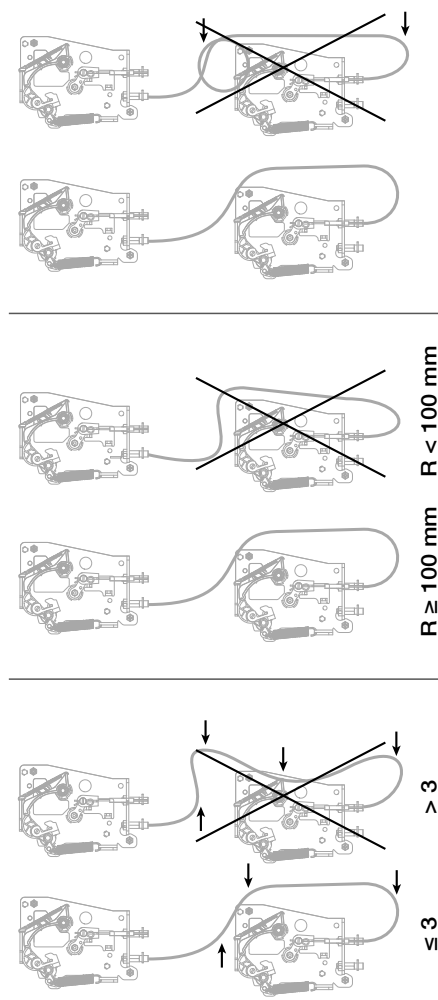


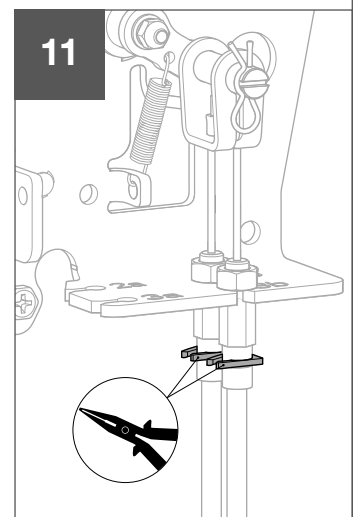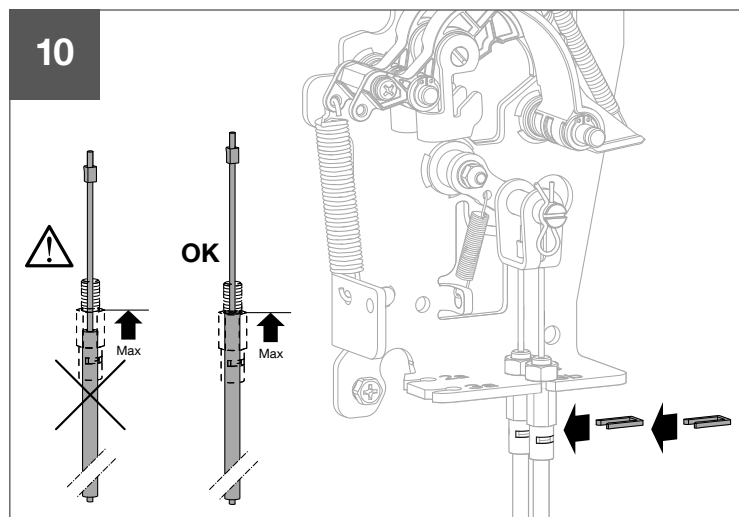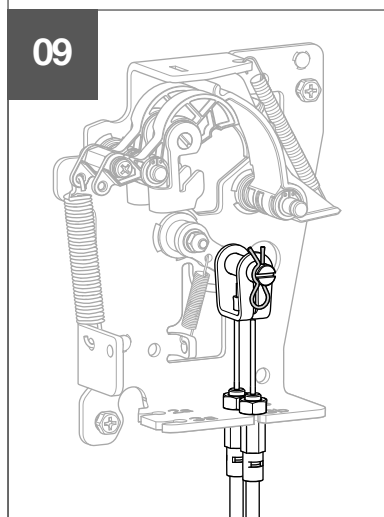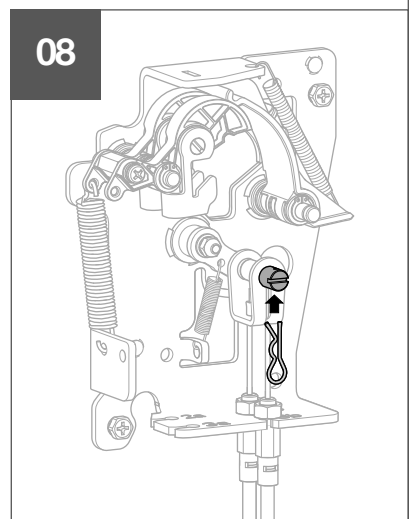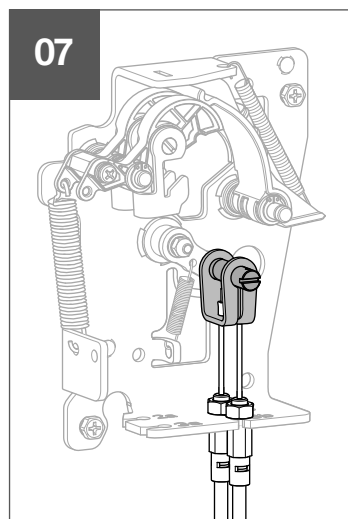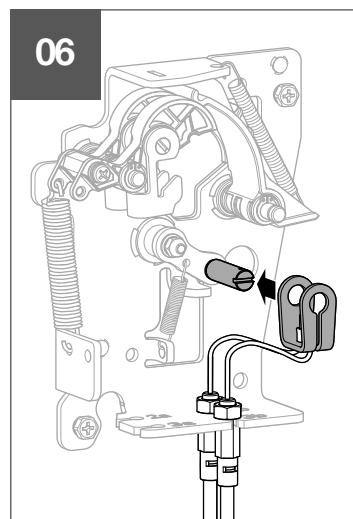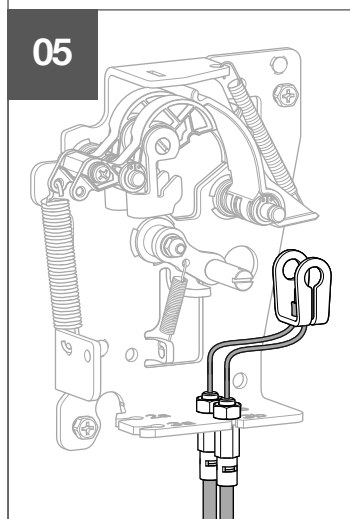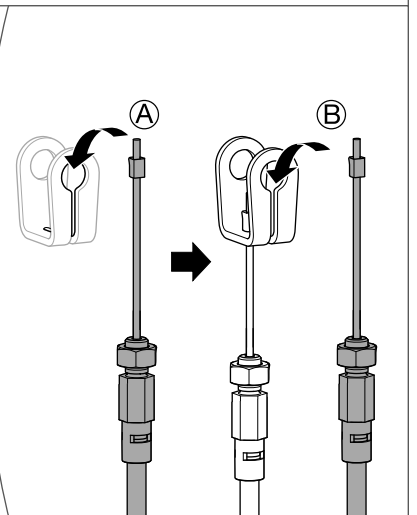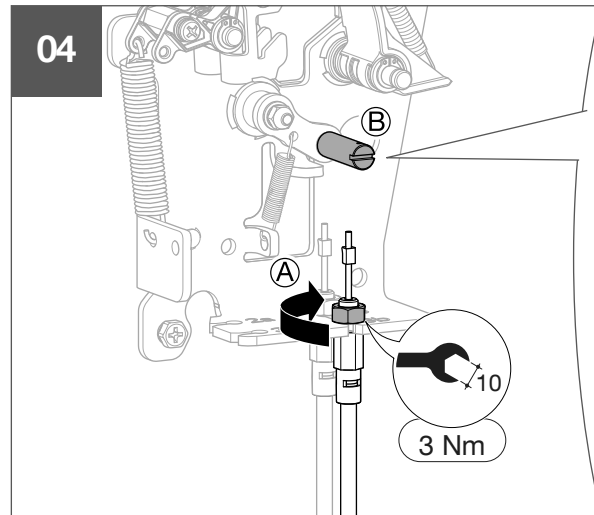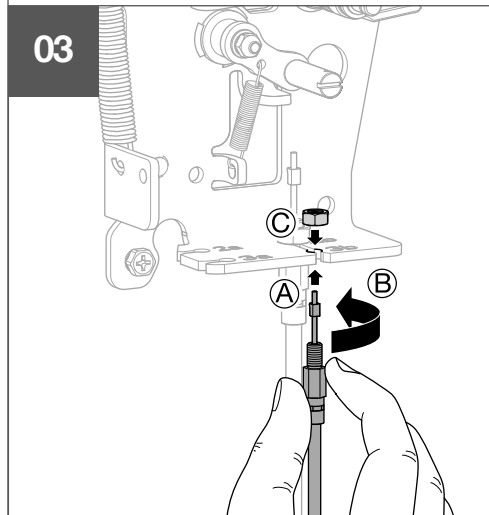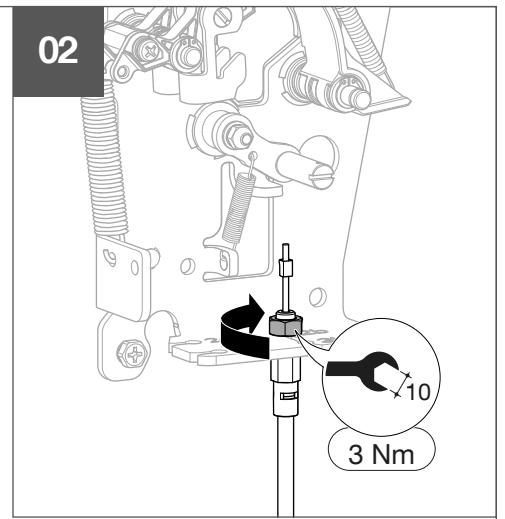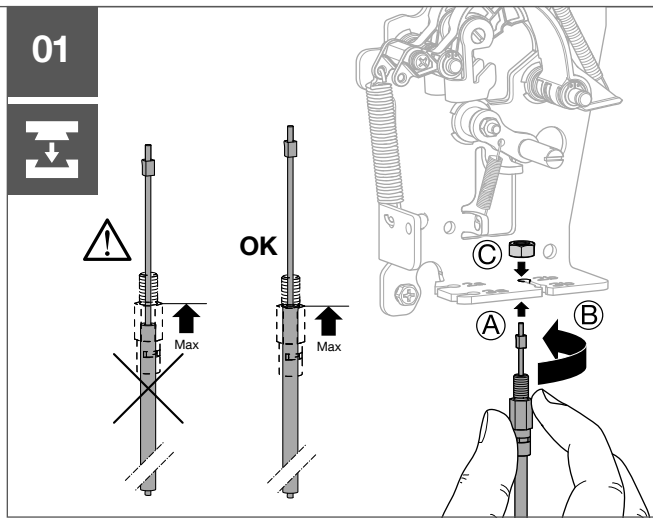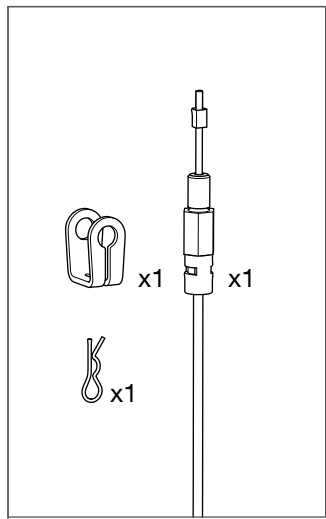

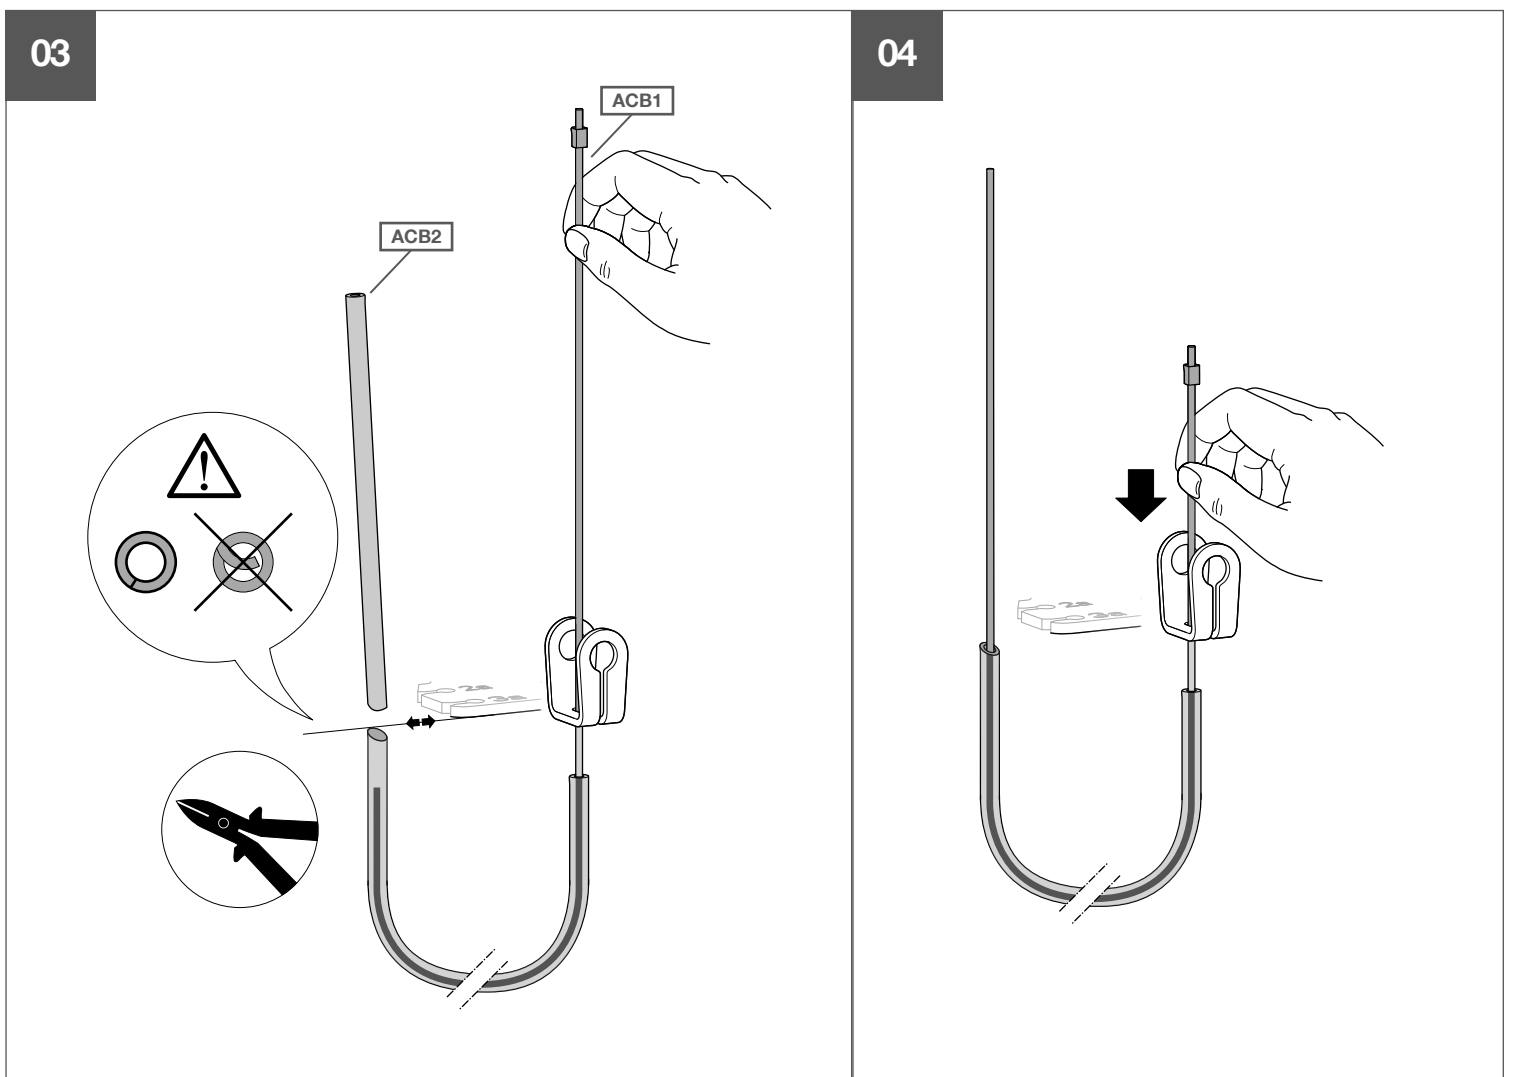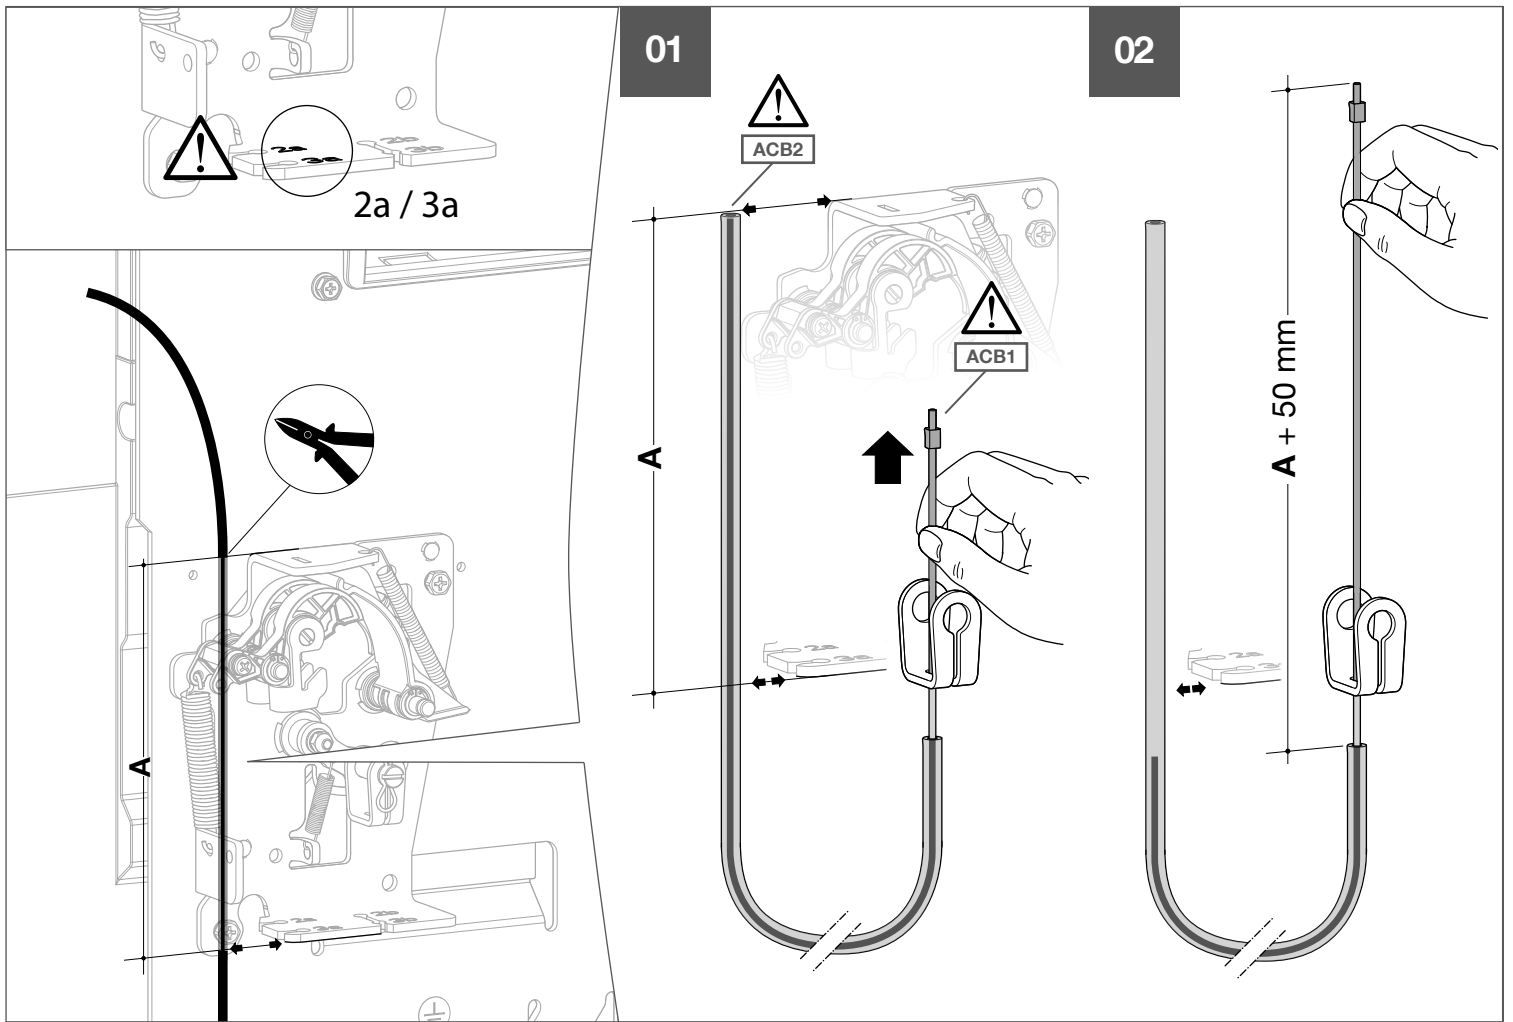

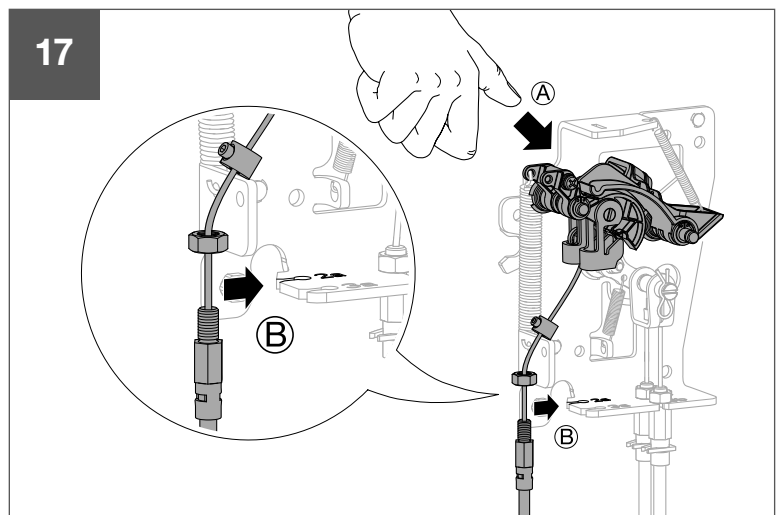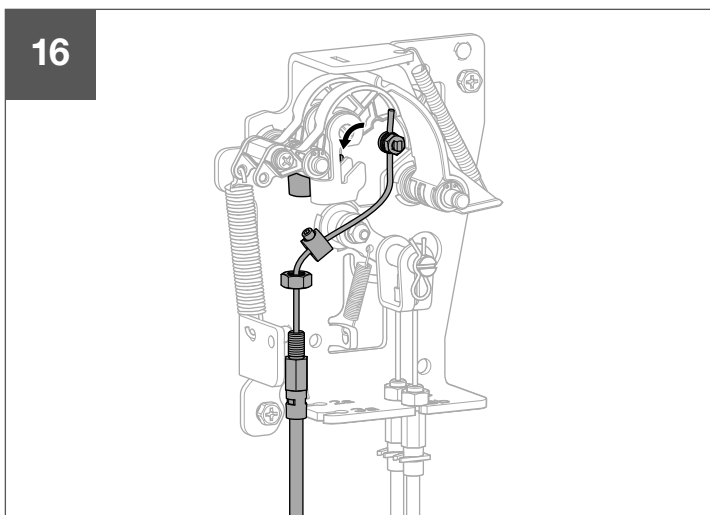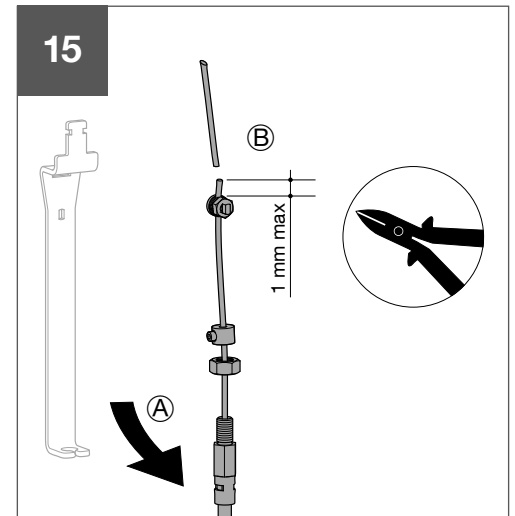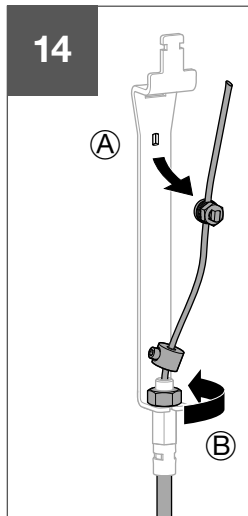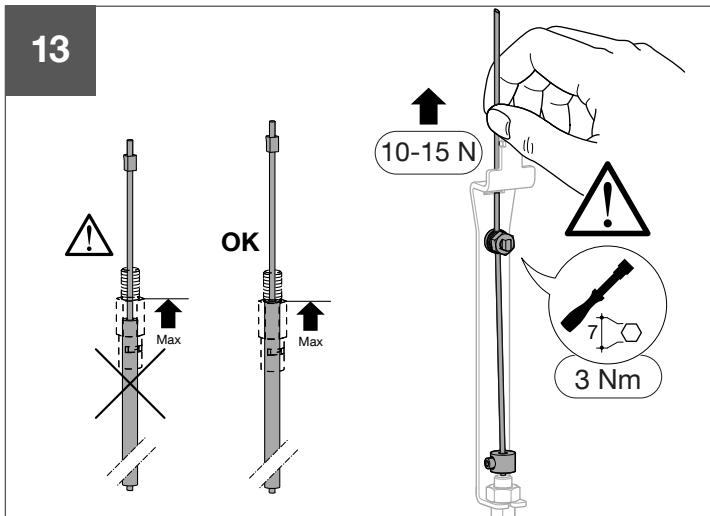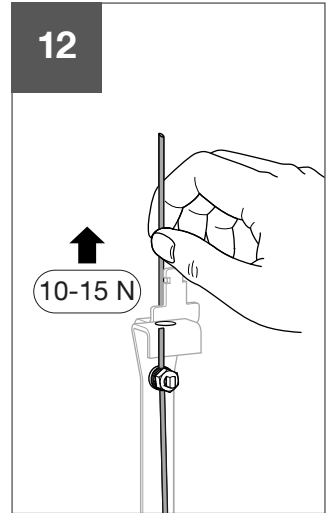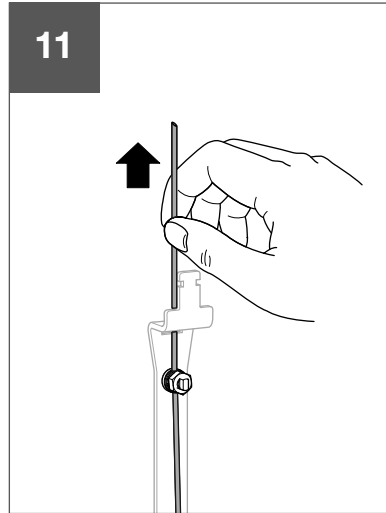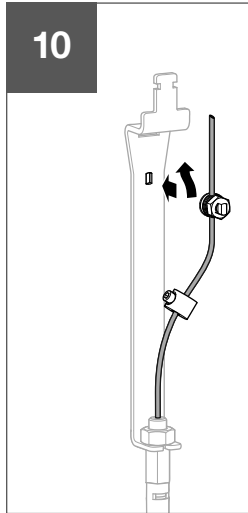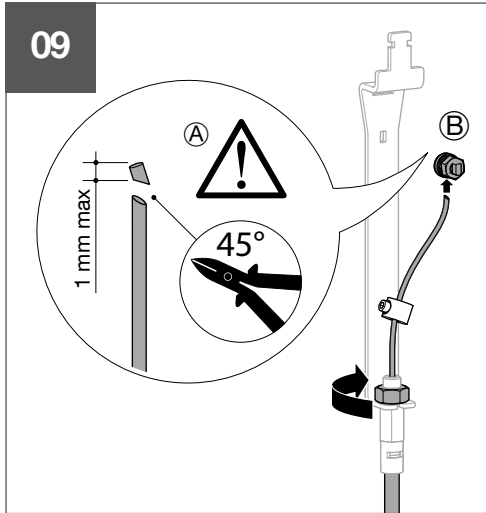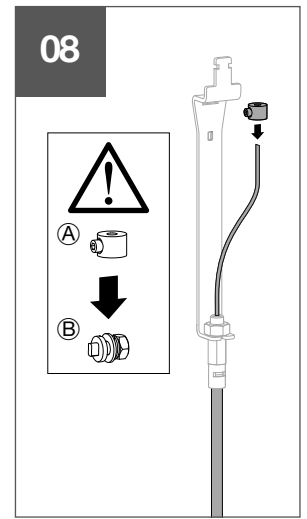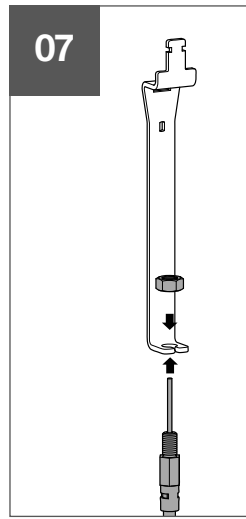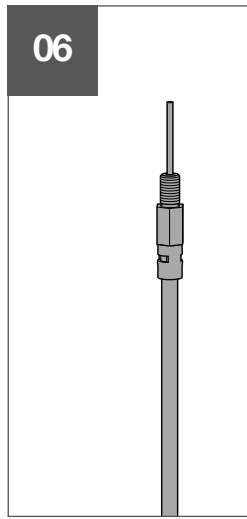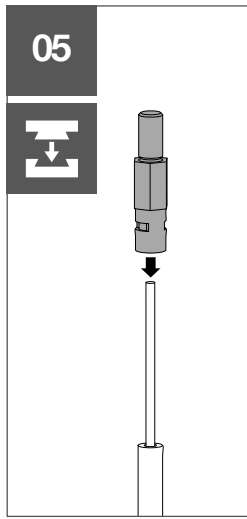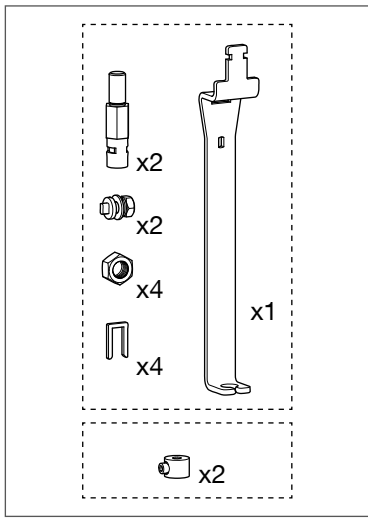

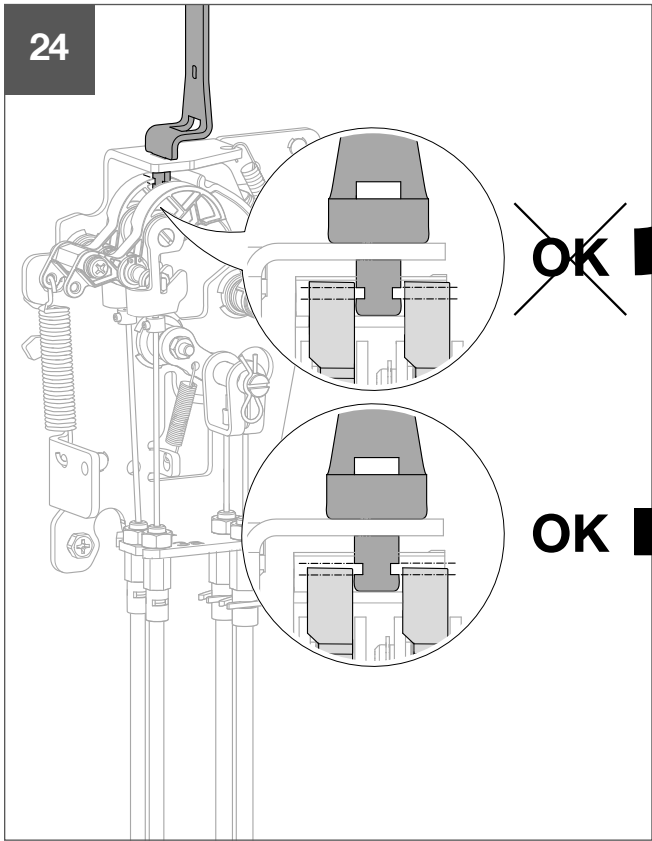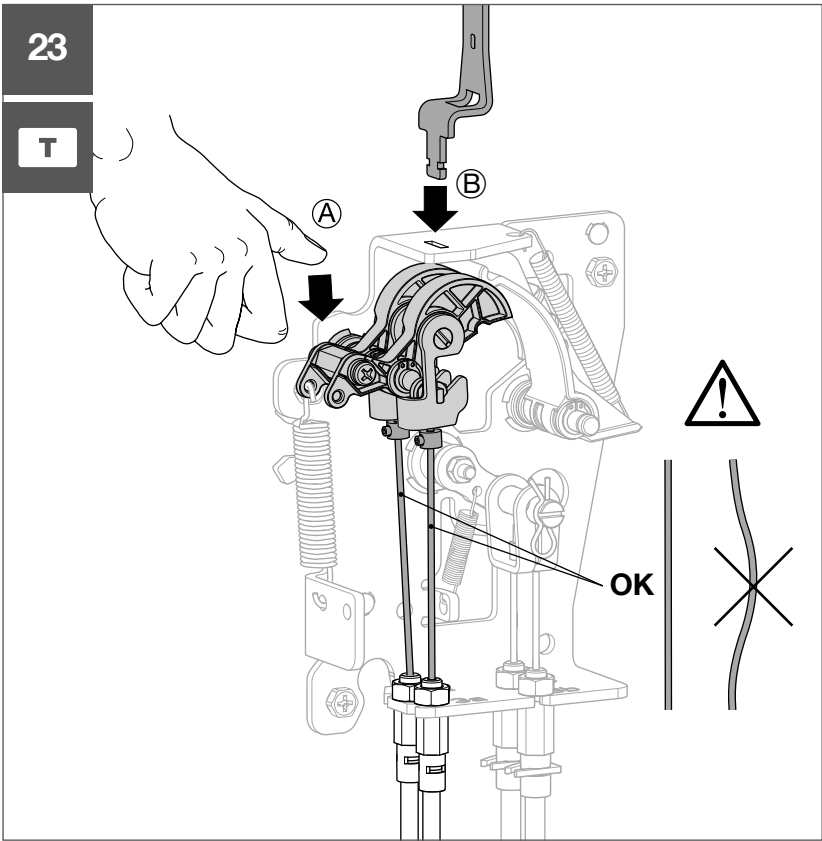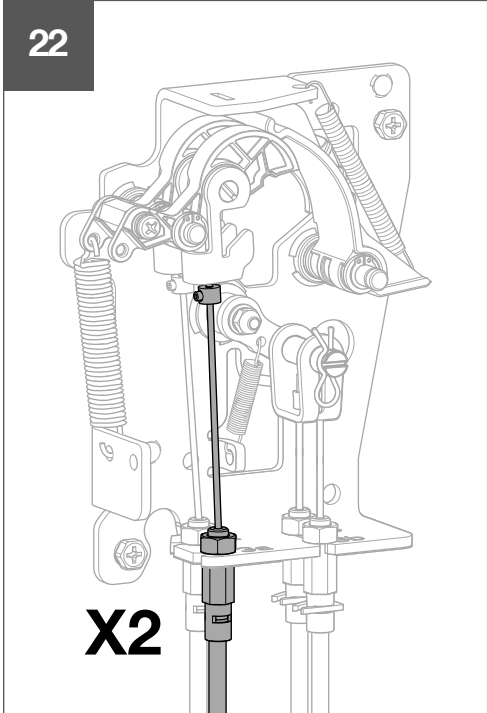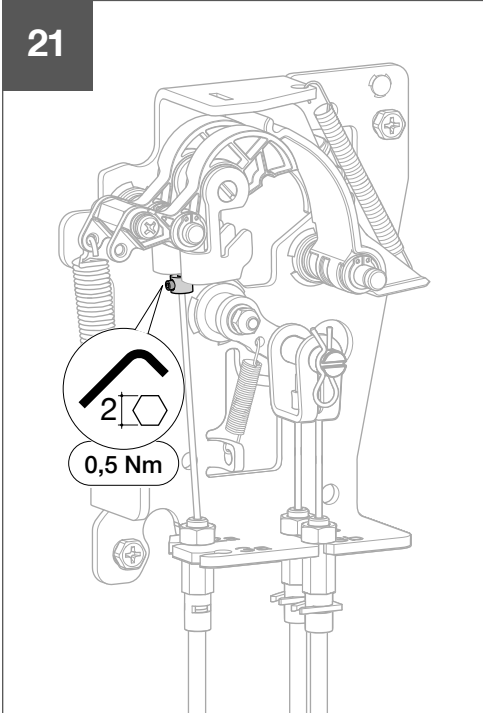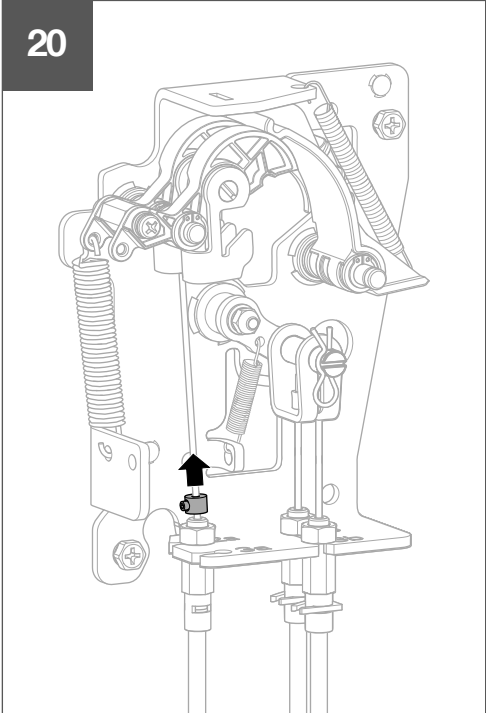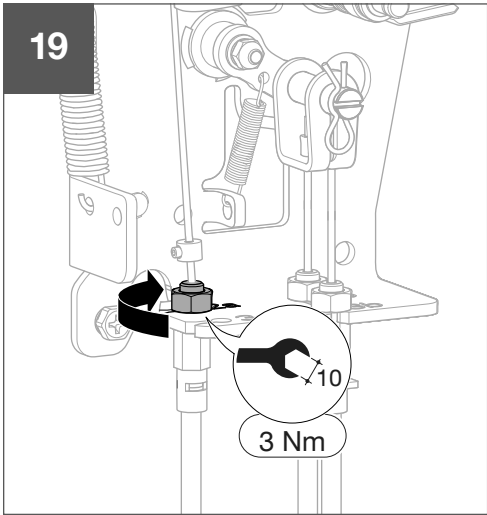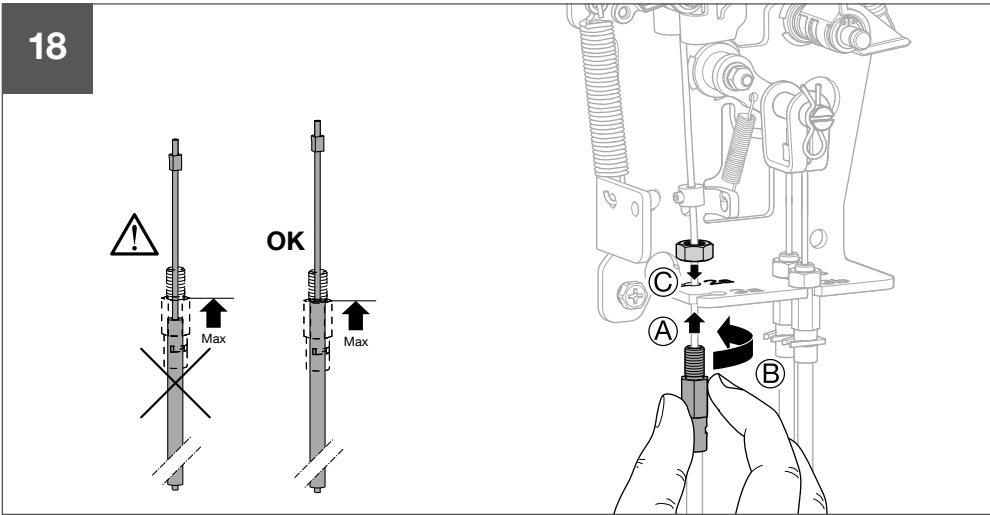

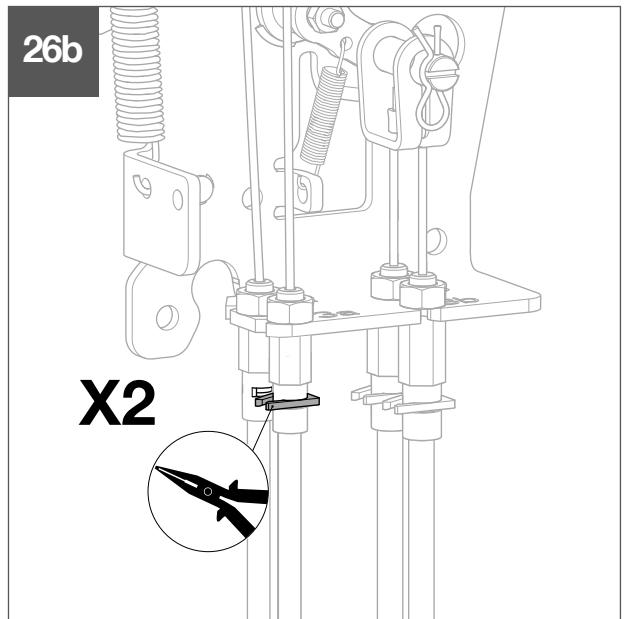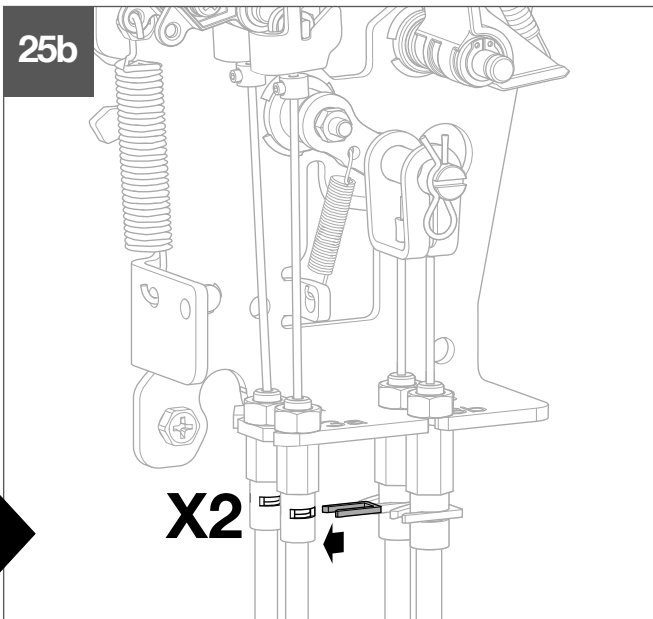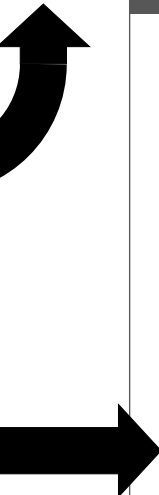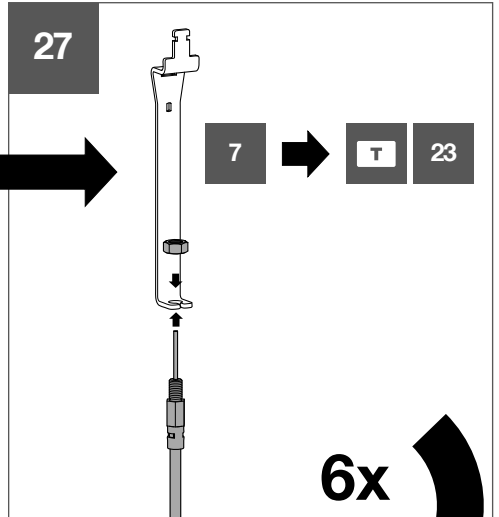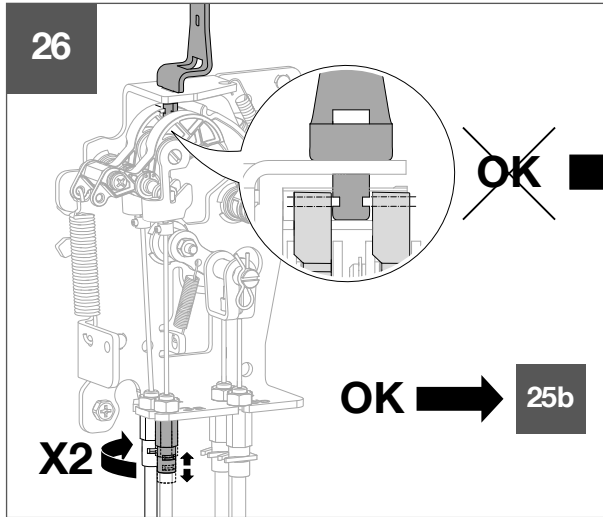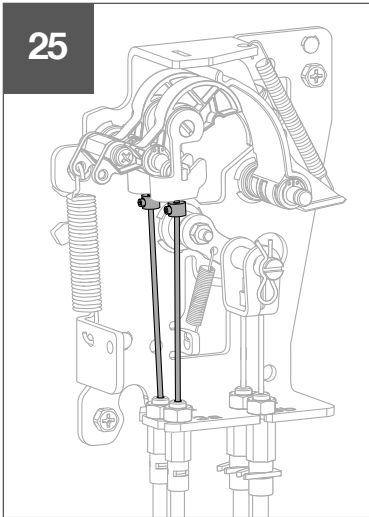

T

TEST WARNING → **6LE009728Aa**