


# 24 Port Consolidation Point Box

Part Numbers: CUFMB24BL, CUFF-KIT

INSTALLATION INSTRUCTIONS **PN263A** 

© Panduit Corp. 2002

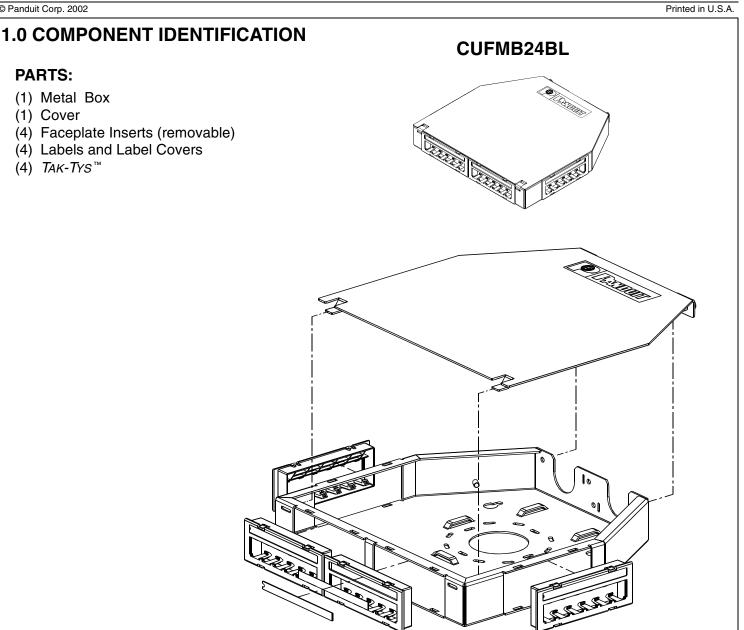

# FIBER CONVERSION KIT (Sold Separately)

**CUFF-KIT** 

### PARTS:

- (2) Spools with Adhesive Backing
- (2) Strain Relief Clips
  - (1) Grounding Lug
  - (1) Fiber Laser Beam Warning Label
  - (4) Wire Saddles

- (1) Fiber Caution Label
- (1) Spiral Wrap 24" long
- (4) Panduit Cable Ties
- (2) Rubber Grommets


Notes: 1. Kit works with both CUFB48BL and CUFMB24BL.

2. Depending on the product being assembled for use with fiber, some kit components may be left over.

#### FOR TECHNICAL SUPPORT CALL: 866-405-6654


## 2.0 Box Assembly

- 2.1 Set box on flat work surface. Snap the (4) Faceplate Inserts in place. Label slots should be located above modules.
- 2.2 Terminate copper modules. (See PN120\*). Then snap modules into Faceplate Inserts.
- 2.3 Use  $T_{AK-TYS}^{T}$  to secure the cables to the raised tabs in the floor of the box.

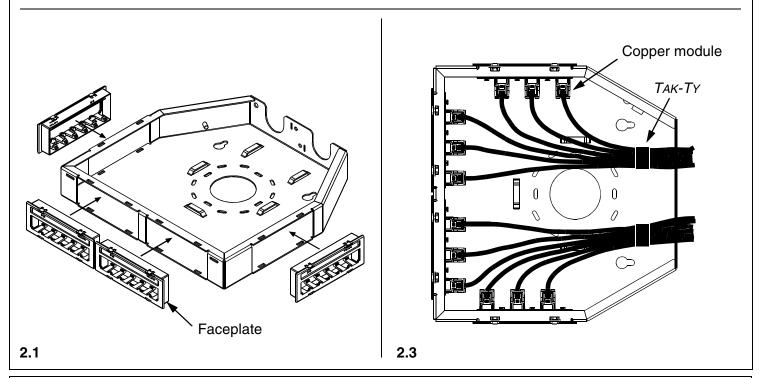

# 3.0 Cover Assembly

3.1 To install the cover, slide the cover tabs into slots, then twist both thumb screws to secure the cover. To remove the cover, unscrew both thumb screws, then slide and lift cover out.

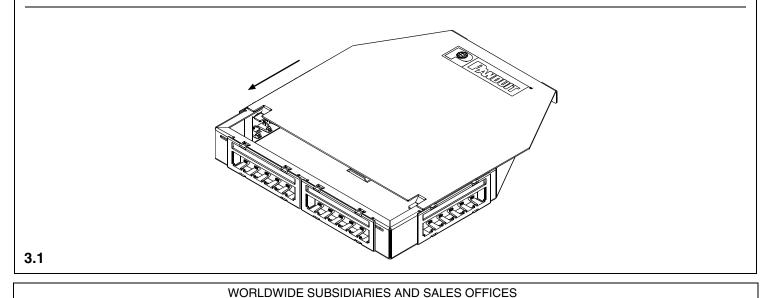



10500 West 167th Street Orland Park, Illinois 60467

Technical Support: 866-405-6654 Fax: 708-444-6993 E-mail: ncginfo@panduit.com Web site: www.panduit.com/ncg

Page 2 of 2