


UBK-P

Description:

The UBK is used to attach Maglock L brackets, Architectural Z & L brackets and various lock housings to glass doors and transoms.

Example:

The UBK P would be used for the L bracket above the door and a UBK U for the armature on the door for an outward opening door (A), however for an inward opening door (B) a second UBK P would be required to fit the Z bracket too.

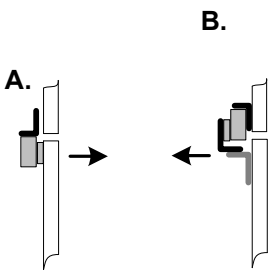

Clamping Plate (2)

Protection Rubber (1)


3mm

MIN GAP = 6.5MM

Various fixing holes (taped M4) for fitment of lock housings, architectural Z brackets, L brackets etc

Clamping screws x 8 per bracket

Glass size from 8mm to 15mm

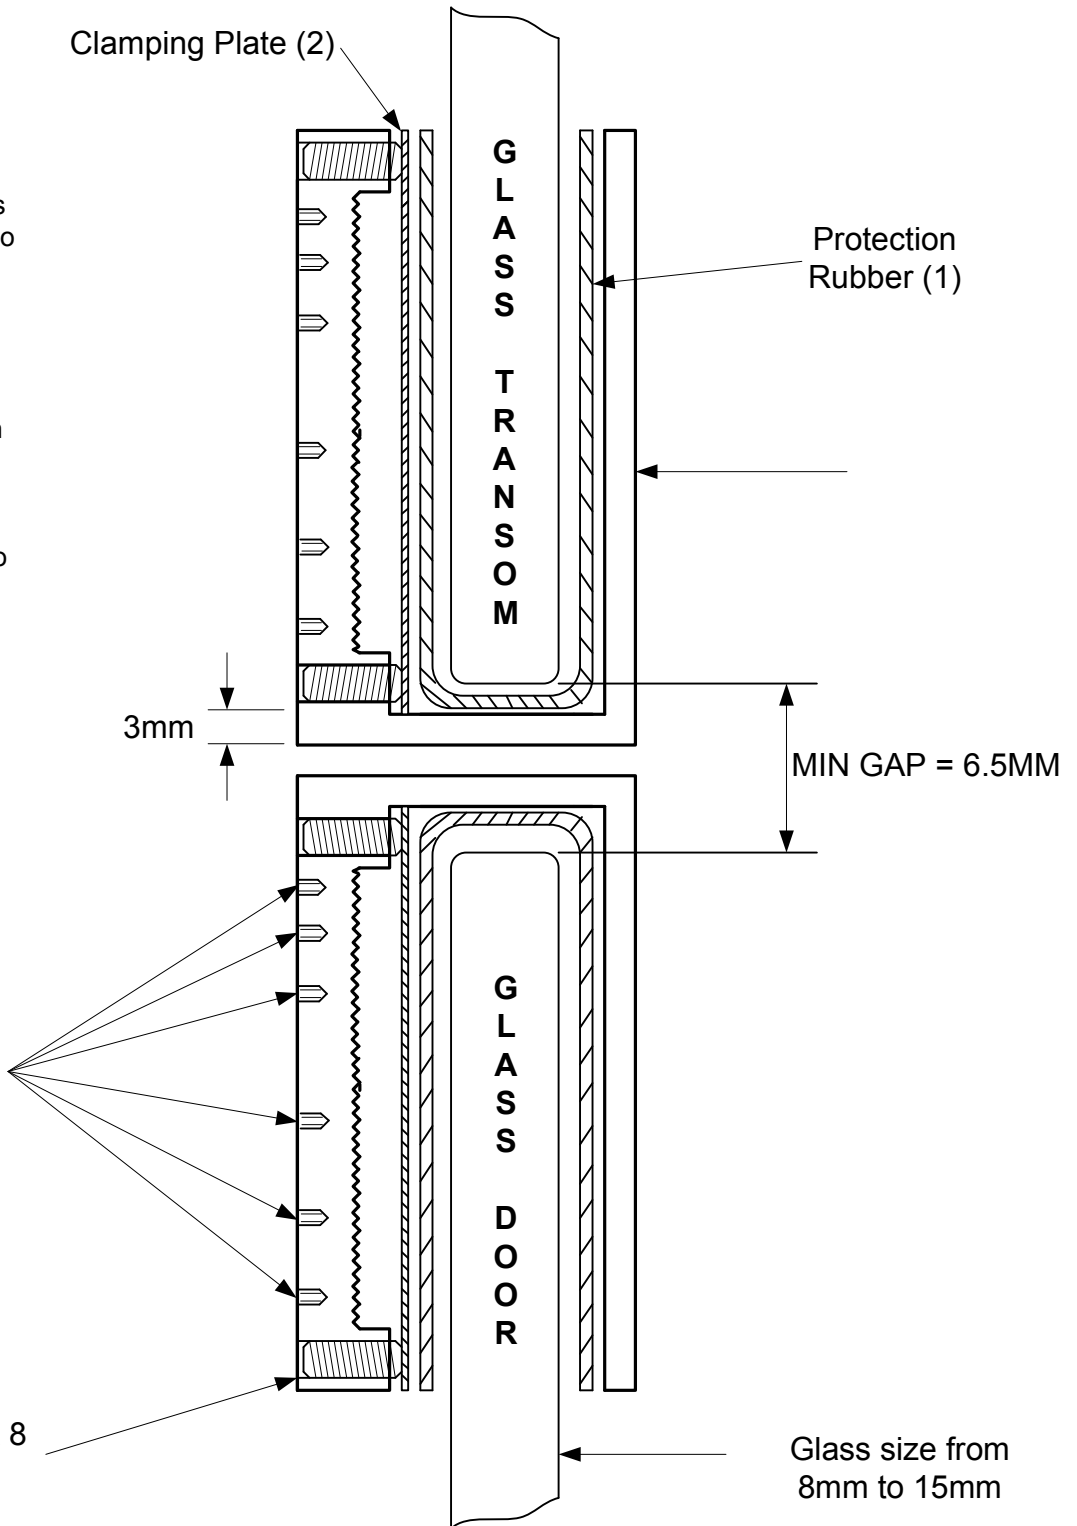

UBK P Fitting Instructions:

Place the rubber sheet over the top of the door, checking placement. This protects the glass from damage. The rubber sheet should be adhered to the door to make installation easier. Use the self adhesive on the clamping plate and fix to rubber as per diagram. The bracket can now be placed over the rubber and plate and clamped into position using the 8 grub screws. The bracket is now ready to fix accessories too.